Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

COSTWAY French Door Toaster Oven

COSTWAY 26.4 QT French Door Toaster Oven Air Fryer User Manual

Model: French Door Toaster Oven (B0H9RTT8YC)

Introduction

Thank you for purchasing the COSTWAY 26.4 QT French Door Toaster Oven Air Fryer. This manual provides important information for the safe operation, installation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before use and retain it for future reference.

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.

- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

Product Overview

The COSTWAY French Door Toaster Oven Air Fryer is a versatile countertop appliance designed for various cooking tasks. It features a 26.4 QT (25 L) capacity, 1500W power, and 11 preset cooking modes.



Image: The COSTWAY French Door Toaster Oven Air Fryer showcasing its 360° hot air circulation, dual heating elements, 450°F maximum temperature, and 1500W high power. A whole chicken and french fries are visible inside.

Key Features:

- **26.4 QT / 25 L Capacity:** Accommodates a 12" pizza, 6 lbs whole chicken, 1 lbs French fries, 6 slices of toast, or 20 cupcakes.
- **11 Preset Modes:** Toast, Bagel, Pizza, Bake, Roast, Broil, Cookies, Dehyd, Defrost, Ferment, and Warm.
- **360° Hot Air Circulation:** For faster and crispier results with up to 99.5% less oil.

- **Dual Heating Elements:** Promotes even cooking performance.
- **450°F / 230°C Maximum Temperature:** For effective browning and crisping.
- **LED Display & 24-Hour Timer:** For precise control and monitoring.
- **French Door Design:** Offers easy access and a stylish appearance.
- **Cool-Touch Handles:** Enhances safety during operation.
- **Dishwasher-Safe Accessories:** Includes baking tray, baking rack, crumb tray, and oven tray clip for easy cleaning.

Setup and Installation

1. **Unpacking:** Carefully remove the toaster oven and all accessories from the packaging. Retain packaging for future transport or storage if needed.
2. **Inspect for Damage:** Check the appliance for any signs of damage during transit. Do not operate if damaged.
3. **Placement:** Place the oven on a stable, flat, heat-resistant surface. Ensure there is adequate clearance (at least 4 inches/10 cm) on all sides and above the oven for proper ventilation. Do not place near flammable materials.
4. **Initial Cleaning:** Before first use, wipe the exterior with a damp cloth. Wash the baking tray, baking rack, crumb tray, and oven tray clip in warm, soapy water, then rinse and dry thoroughly.
5. **First Use Burn-Off:** It is recommended to run the oven empty for about 15 minutes at 400°F (200°C) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure the area is well-ventilated.
6. **Power Connection:** Plug the power cord into a standard 120V, 60Hz electrical outlet.

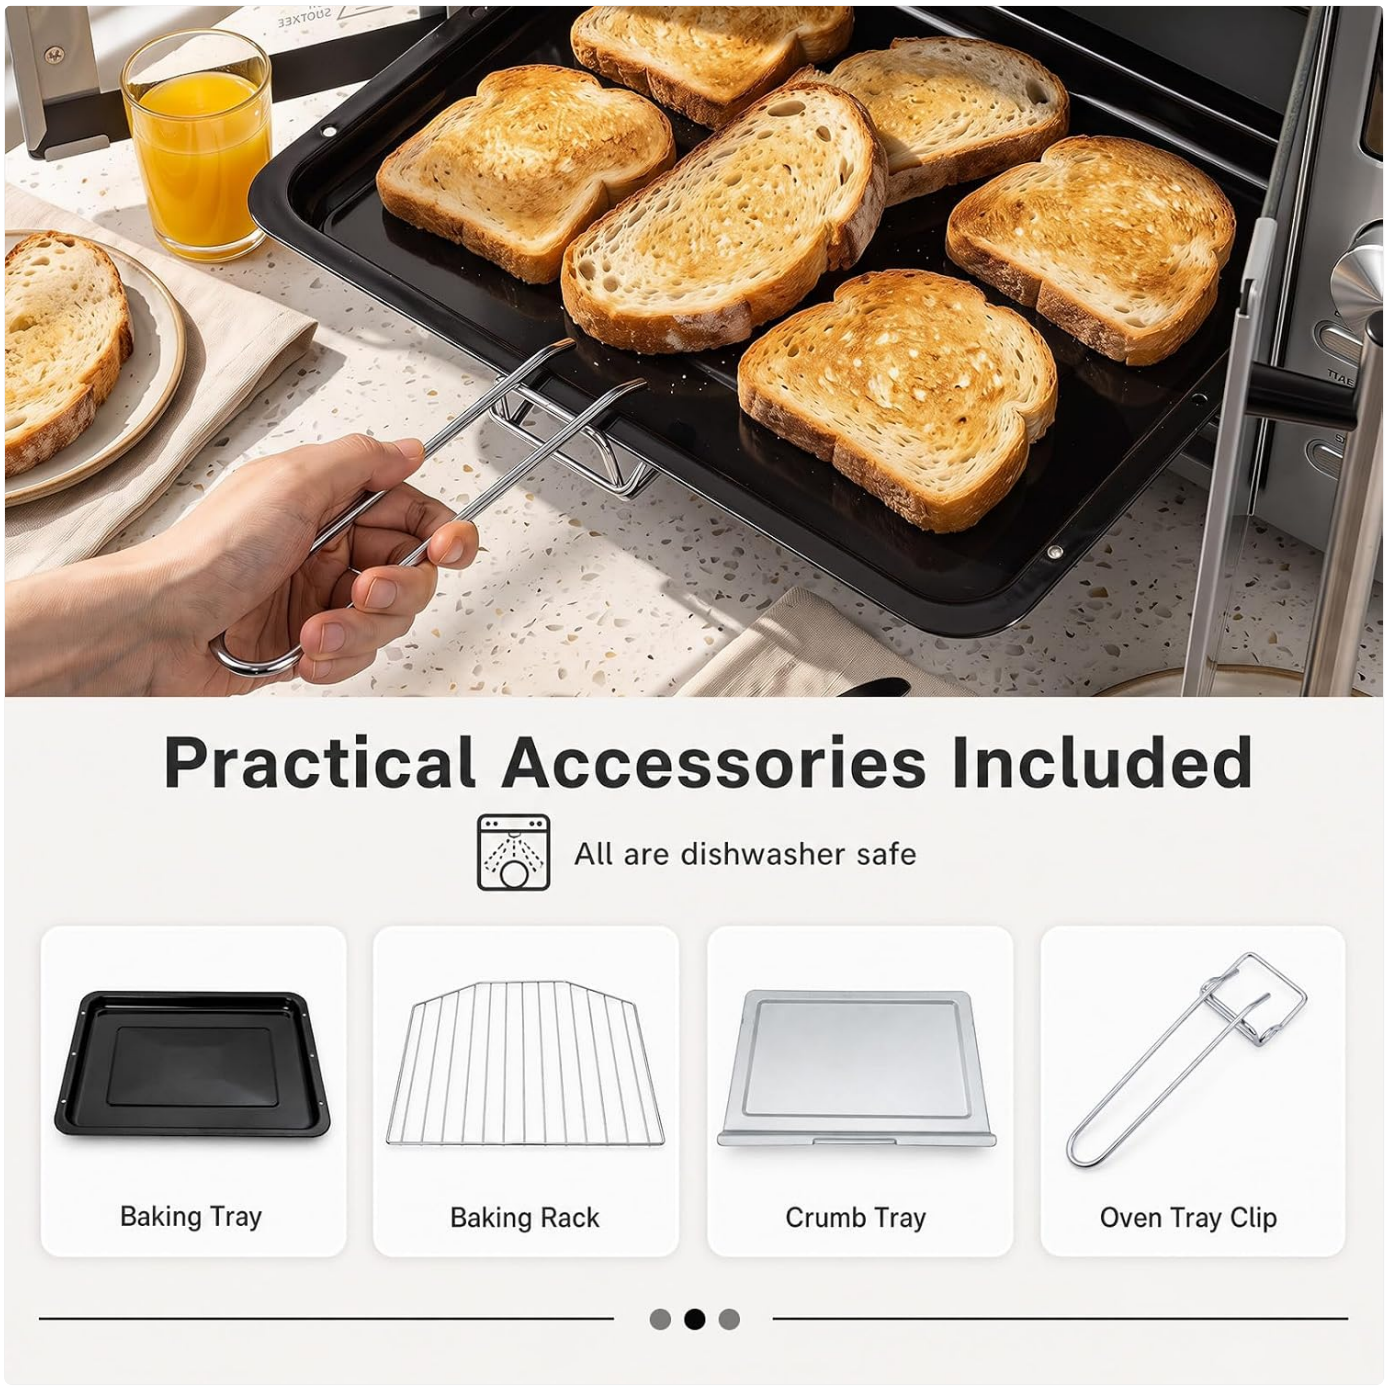


Image: The COSTWAY French Door Toaster Oven Air Fryer with its French doors open, revealing the interior cooking racks and the included baking tray. This illustrates the easy access provided by the door design.

Operating Instructions

Control Panel Overview:



Image: A close-up of the COSTWAY French Door Toaster Oven Air Fryer's control panel, highlighting the LED display, selector knob, and the list of 11 preset cooking modes (Toast, Bagel, Pizza, Bake, Roast, Broil, Cookies, Dehyd, Defrost, Ferment, Warm).

- **LED Display:** Shows selected mode, temperature, and time.
- **Selector Knob:** Rotate to choose cooking mode, adjust temperature, or set time.
- **MODE Button:** Press to cycle through cooking modes.
- **TIME Button:** Press to adjust cooking time.
- **TEMP (°C/°F) Button:** Press to adjust temperature or switch between Celsius and Fahrenheit.
- **START/CANCEL Button:** Press to start or cancel a cooking cycle.

General Operation Steps:

1. **Prepare Food:** Place food on the appropriate accessory (baking tray, rack) and insert into the oven.
2. **Close Doors:** Ensure both French doors are securely closed.
3. **Select Mode:** Turn the Selector Knob or press the MODE button to choose one of the 11 preset cooking modes (Toast, Bagel, Pizza, Bake, Roast, Broil, Cookies, Dehyd, Defrost, Ferment, Warm).

4. **Adjust Settings:**
    - Press the TIME button and rotate the Selector Knob to set the desired cooking time (1 minute to 24 hours).
    - Press the TEMP button and rotate the Selector Knob to set the desired temperature (85°F to 450°F / 30°C to 230°C).
5. **Start Cooking:** Press the START/CANCEL button to begin the cooking cycle. The oven will preheat if necessary, and the timer will begin counting down.
6. **Monitor Progress:** The tempered glass doors allow you to monitor cooking progress without opening the doors and losing heat.
7. **End of Cycle:** The oven will beep when the cooking cycle is complete. Carefully remove food using oven mitts and the oven tray clip.

Air Convection Mode:

The air convection mode utilizes 360° circulating hot air to cook food faster and more evenly, resulting in crispy textures with significantly less oil. This mode is ideal for air frying items like French fries, chicken wings, and other fried favorites.



Image: A visual comparison showing the air convection mode of the COSTWAY oven producing crispy food with 99.5% less oil, contrasted

with traditional deep frying. French fries and chicken wings are shown cooking inside the oven.

Care and Maintenance

1. **Always Unplug:** Before cleaning, always unplug the oven from the power outlet and allow it to cool completely.
2. **Exterior Cleaning:** Wipe the exterior surfaces with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
3. **Interior Cleaning:** Wipe the interior walls with a damp cloth. For stubborn food residue, a non-abrasive cleaner can be used. Ensure the interior is dry before next use.
4. **Crumb Tray:** The crumb tray should be emptied and cleaned regularly to prevent grease buildup and potential fire hazards. Slide out the crumb tray from the bottom front of the oven, empty crumbs, and wash with warm, soapy water.
5. **Accessories:** The baking tray, baking rack, crumb tray, and oven tray clip are dishwasher safe for convenient cleaning.
6. **Do Not Immerse:** Never immerse the main unit of the oven, its cord, or plug in water or any other liquid.



Image: The four practical, dishwasher-safe accessories included with the COSTWAY oven: a baking tray, baking rack, crumb tray, and

oven tray clip, laid out for easy identification.

Troubleshooting

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the power cord is securely plugged into a working outlet. Check circuit breaker.
Food not cooking evenly.	Overcrowding; incorrect temperature/time; food placement.	Avoid overcrowding the oven. Ensure correct temperature and time settings. Rotate food halfway through cooking if necessary.
Excessive smoke during cooking.	Food residue/grease buildup; fatty foods.	Clean the interior and crumb tray thoroughly. Use less oil or trim excess fat from food. Ensure proper ventilation.
French doors do not close properly.	Obstruction; misalignment.	Check for any food debris or accessories obstructing the doors. Ensure the oven is on a level surface.

Specifications

Feature	Detail
Brand	COSTWAY
Model Name	French Door Toaster Oven
Capacity	26.4 Quarts / 25 Liters
Rated Power	1500W
Voltage	120V
Frequency	60Hz
Temperature Range	85-450°F / 30-230°C
Product Dimensions (L x W x H)	18.5" x 16" x 11.5" (47 x 40 x 29 cm)
Internal Dimensions (L x W x H)	13.5" x 11" x 9.5" (34 x 28.5 x 24 cm)
Net Weight	14.5 lbs / 6.5 kg
Material	Metal, Tempered Glass, Stainless Steel, Galvanized Sheet
Control Type	Touch Control
Included Components	Baking Tray, Baking Rack, Crumb Tray, Oven Tray Clip



Image: Diagram illustrating the external dimensions (18.5" W x 16" D x 11.5" H) and internal dimensions (13.5" W x 11" D x 9.5" H) of the COSTWAY French Door Toaster Oven Air Fryer.

Warranty and Support

Specific warranty information and customer support contact details are not provided in the available product data. Please refer to the product packaging or the manufacturer's official website for warranty terms and customer service contact information.

© 2023 COSTWAY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0H9RTT8YC

More documents and user manuals: **https://manuals.plus/**