Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Nordivale H21430

Nordivale 70-Inch Farmhouse Fireplace TV Stand (Model H21430)

Instruction Manual

Introduction

Thank you for purchasing the Nordivale 70-Inch Farmhouse Fireplace TV Stand, Model H21430. This manual provides essential information for the safe assembly, operation, and maintenance of your new entertainment center. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

Safety Information

- Always follow all assembly instructions precisely.
- Do not exceed the maximum weight capacities for the tabletop and shelves.
- Ensure the TV stand is placed on a level and stable surface.
- Keep children and pets away from the electric fireplace when it is in operation.
- Do not block the air vents of the electric fireplace.

Package Contents

The Nordivale 70-Inch Farmhouse Fireplace TV Stand is shipped in **two separate packages**. These packages may arrive on different days. Please ensure both cartons have been delivered before you begin the assembly process.
Upon receipt, verify that all parts and hardware listed in the included assembly guide are present and undamaged. If any parts are missing or damaged, please contact customer support immediately.

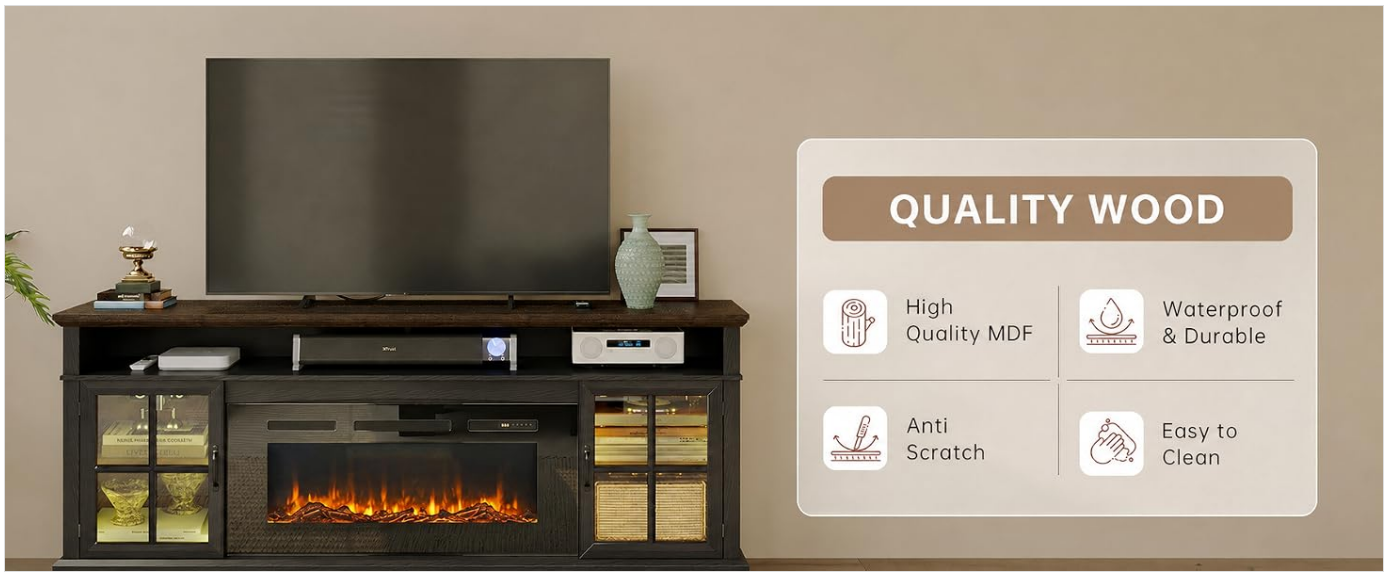


Image: Illustration of the two-package delivery process and key features of the TV stand.

Setup and Assembly

Assembly of the TV stand requires careful attention to the provided step-by-step instructions. It is recommended to have at least two people for assembly due to the size and weight of the components.

Pre-Assembly Checklist:

- Clear a spacious area for assembly.
- Gather necessary tools (e.g., screwdriver, hammer, drill for fireplace installation).
- Verify all parts are present and undamaged against the parts list.

Assembly Steps:

1. Follow the detailed, illustrated instructions included in your package for assembling the TV stand frame.
2. Once the main structure is complete, carefully install the 36-inch electric fireplace insert into the designated opening. Note that some fireplace installations may require drilling pilot holes if not pre-drilled.
3. Attach the glass-front cabinet doors and adjust hinges for proper alignment.

Placement Guidelines:

- Place the TV stand on a flat, stable surface to prevent tipping.
- Ensure adequate clearance around the electric fireplace for proper ventilation.
- The entertainment center supports TVs up to 80 inches. Position your television centrally on the tabletop.
- Utilize the built-in cable management openings to keep cords neat and organized, preventing tripping hazards and improving aesthetics.



Image: The TV stand accommodating a large television, demonstrating its capacity for TVs up to 80 inches.



Image: Detailed view of the TV stand's design elements, including cable management and storage.

Operating Instructions

The integrated 36-inch electric fireplace offers customizable ambiance and heating functions. It can be controlled via the front panel buttons or the included remote control.

Fireplace Controls:

- **Power:** Press to turn the fireplace ON or OFF.
- **Flame:** Cycle through 12 flame colors and 5 brightness levels. The flame effect can be used independently without heat.
- **Temperature:** Adjust the heat output. The fireplace can warm rooms up to 400 sq. ft.
- **Timer:** Set an automatic shut-off timer from 0 to 8 hours.



Product Details



1 Elegant & Comfortable Handle

2 Large Cable Holes

3 Open Storage Compartments

4 Magnetic Stopper Buffer impact & Reduce noise

Image: Remote control and features of the electric fireplace, including heating methods and flame effects.



Image: Visual representation of the 12 flame color options and 5 brightness levels.

Maintenance

Regular maintenance will help preserve the appearance and functionality of your TV stand and electric fireplace.

Cleaning the TV Stand:

- Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- Promptly clean up any spills to prevent damage to the wood finish.

Electric Fireplace Care:

- Ensure the fireplace is turned OFF and unplugged before cleaning.
- Gently wipe the glass panel with a soft, lint-free cloth.
- Periodically check the air intake and exhaust vents for dust accumulation and clean as needed to maintain optimal performance.

Troubleshooting

If you encounter issues with your Nordivale Fireplace TV Stand, refer to the following common solutions:

- **Assembly Difficulties:** Double-check the included assembly instructions. Ensure all parts are correctly oriented and fasteners are tightened. If a part is missing or defective, contact customer support.
- **Fireplace Not Turning On:** Verify the power cord is securely plugged into a functional outlet. Check if the circuit breaker has tripped. Ensure the power button on the unit or remote is pressed.
- **No Heat Output:** Confirm the temperature setting is above the ambient room temperature. Ensure the heat function is activated. Check for any obstructions in the air vents.
- **Remote Control Not Working:** Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the fireplace sensor.

For issues not resolved by these steps, please contact Nordivale customer support for further assistance.

Specifications

Feature	Detail
Model Number	H21430
Brand	Nordivale
Product Dimensions (W x D x H)	70.08" x 14.17" x 33.46"
Material	Wood (MDF)
Finish Type	Painted
Item Weight	130 pounds
Maximum Compatible TV Size	Up to 80 inches
Tabletop Weight Capacity	150 lbs
Shelf Weight Capacity	33 lbs
Middle Wood Weight Capacity	44 lbs
Fireplace Size	36 inches
Fireplace Features	12 Flame Colors, 5 Brightness Levels, Adjustable Temperature (62°F-82°F), 0-8H Timer



Image: Detailed product dimensions and weight capacities.

Warranty and Support

Nordivale products are designed for quality and durability. This product is covered by a**30-day easy returns policy**. For specific warranty details, please refer to the documentation included with your purchase or contact Nordivale customer service.

Customer Support:

For assistance with missing, damaged, or replacement parts, or any questions regarding your Nordivale Fireplace TV Stand, please contact Nordivale-service. Our support team is available to help.
Contact information for Nordivale-service can typically be found on your purchase receipt or the product packaging.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0HBV8RRHH

More documents and user manuals: **https://manuals.plus/**