Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

COLORROOM K10

COLORROOM Android16 Tablet K10 User Manual

Model: K10

1. Introduction

This manual provides comprehensive instructions for the setup, operation, and maintenance of your COLORROOM Android16 Tablet K10. Please read this manual thoroughly before using your device to ensure proper functionality and longevity.



Image 1.1: The COLORROOM Android16 Tablet K10, showcasing its display with a scenic view, highlighting its design and the Android 16 operating system.

2. What's in the Box

Verify that all items are present in the package:

- COLORROOM Android16 Tablet K10
- Protective Case
- Screen Protector (pre-applied or separate)
- USB Charging Cable



Image 2.1: Visual representation of the items included in the product packaging: the A30 Tablet, a USB charging cable, and a tablet case.

3. Setup

3.1 Initial Charging

Before first use, fully charge the tablet. Connect the provided USB cable to the tablet's charging port and a compatible 10W or 18W power adapter (not included). Do not use 20W or 30W adapters. A full charge typically takes over 2 hours.

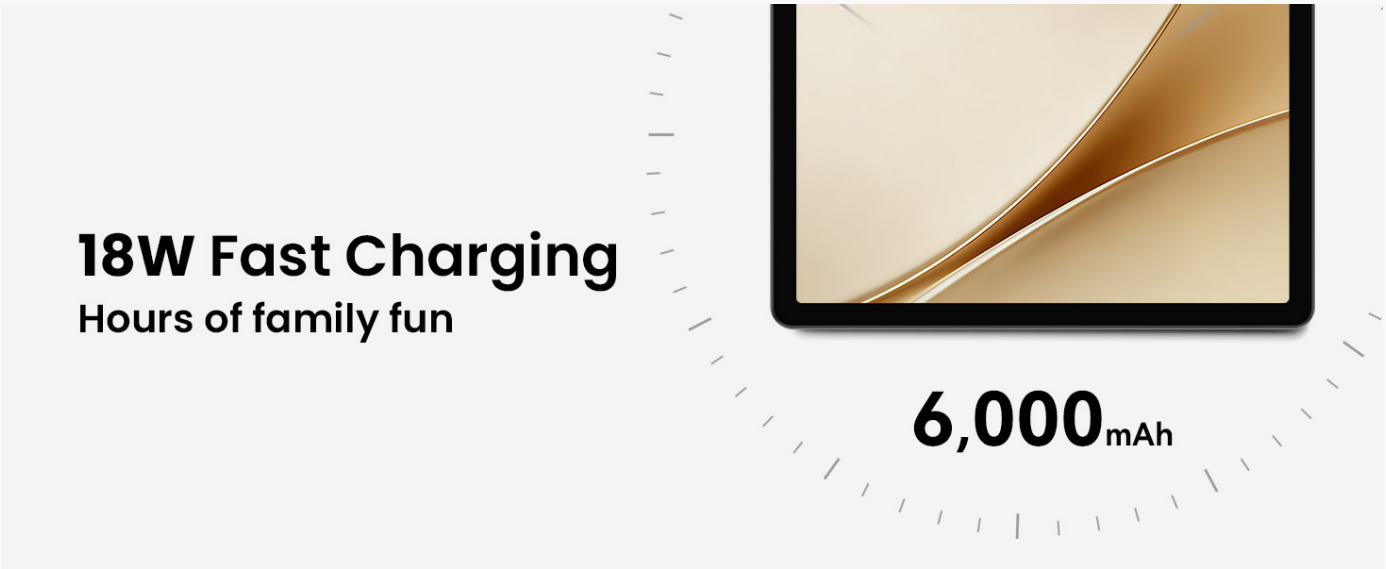


Image 3.1: An illustration highlighting the tablet's 6000mAh battery capacity and support for 18W fast charging.

3.2 Power On/Off

- **To Power On:** Press and hold the Power button until the COLORROOM logo appears.
- **To Power Off:** Press and hold the Power button, then select 'Power off' from the options on the screen.
- **To Restart:** Press and hold the Power button, then select 'Restart' from the options.

3.3 Network Connection

Wi-Fi:

1. Go to Settings > Network & internet > Wi-Fi.
2. Toggle Wi-Fi ON.

3. Select your desired network from the list and enter the password if prompted.

The tablet supports the newest AX WiFi module for reliable speeds.
Bluetooth:

1. Go to Settings > Connected devices > Connection preferences > Bluetooth.
2. Toggle Bluetooth ON.
3. Select a device from the 'Available devices' list to pair.

3.4 Google Account Setup

Upon first boot or after a factory reset, you will be guided through setting up your Google account. This is essential for accessing Google Play Store, Gmail, and other Google services.

3.5 Storage Expansion

The tablet features 64GB of internal storage and supports expandable storage up to 512GB via a microSD card (not included). Insert the microSD card into the designated slot to expand your storage capacity.



Image 3.2: The tablet screen displaying multiple images, illustrating the device's Octa-core CPU performance and its substantial storage capabilities, including 24GB RAM (4GB+20GB) and 64GB ROM with 512GB expansion.

4. Operating the Tablet

4.1 Basic Navigation

The 10.1-inch touchscreen allows for intuitive navigation:

- **Tap:** Select an item.
- **Swipe:** Scroll through pages or lists.
- **Pinch-to-Zoom:** Enlarge or reduce content.
- **Long Press:** Access contextual menus or move icons.

4.2 Google Kids Space & Parental Controls

The tablet comes pre-installed with Google Kids Space, offering educator-endorsed apps for children aged 3 and above. Parents can manage content and usage:

1. Access Google Kids Space from the home screen or app drawer.
2. Set up parental controls through the Family Link app on your own device to filter content, establish educational

targets, and set time restrictions.

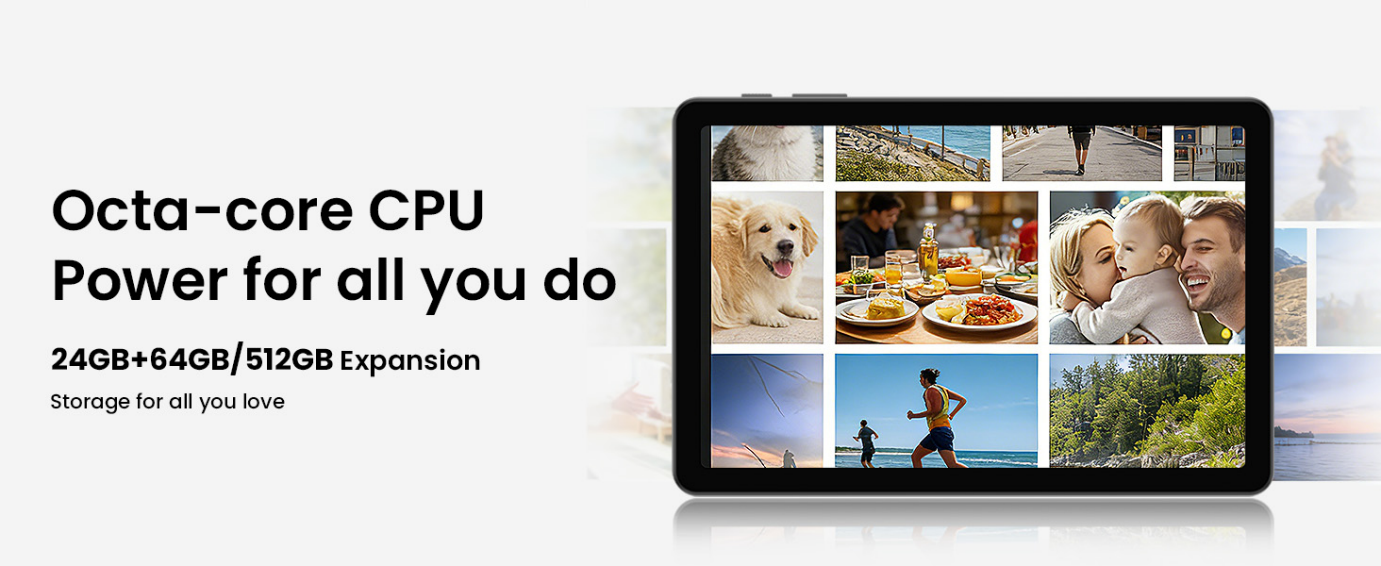


Image 4.1: Two tablets displayed, one showcasing the Google Kids Space interface, emphasizing the tablet's suitability for children and parental control capabilities.

4.3 Media Consumption

The tablet supports Widevine L1, allowing high-quality streaming from services like Amazon Prime Video, Disney+, and Hulu. Note that some services like Netflix may impose device-specific restrictions, potentially resulting in Widevine L3 quality.

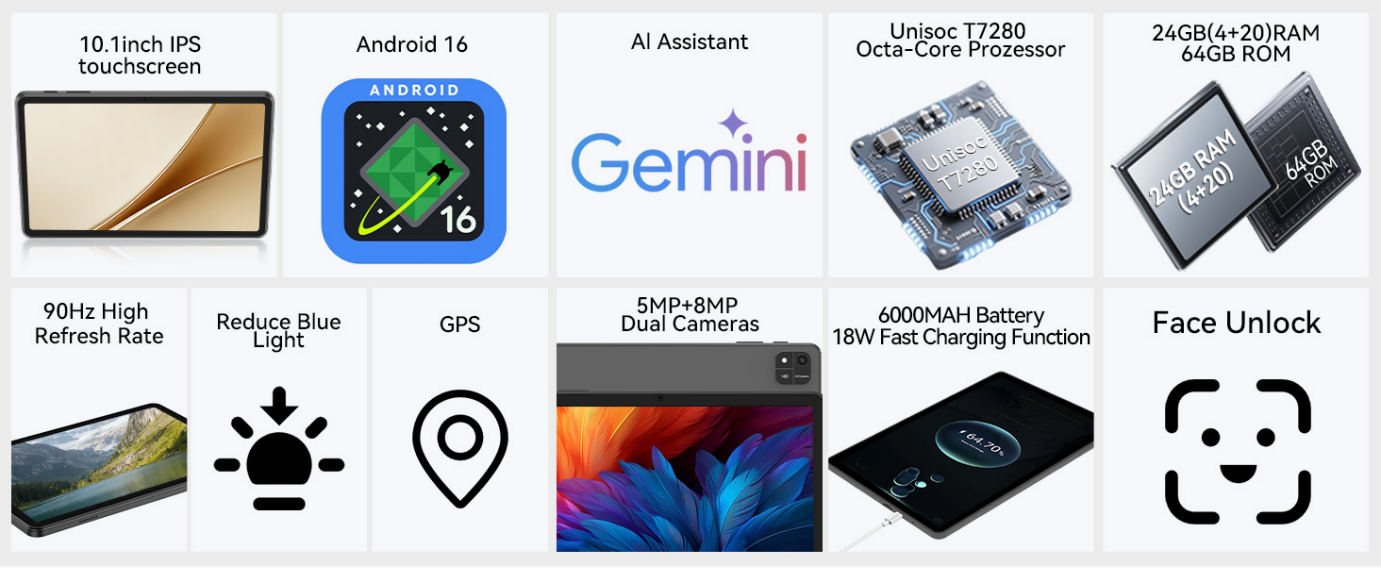


Image 4.2: The tablet screen showing a video playback, highlighting its 10.1-inch eye-protection touchscreen for an enhanced viewing experience.

4.4 Camera Usage

The tablet is equipped with dual cameras (5MP rear, 8MP front). Open the Camera app to capture photos and videos. Video capture resolution supports 720p and FHD 1080p.

5. Maintenance

5.1 Battery Care

- Avoid extreme temperatures.

- Do not let the battery completely drain frequently.
- Use only compatible 10W or 18W chargers.

5.2 Cleaning

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid harsh chemicals or abrasive materials.

5.3 Software Updates

Regularly check for system updates in Settings > System > System update to ensure optimal performance and security.

6. Troubleshooting

- **Tablet not turning on:** Ensure the battery is charged. Connect to a charger for at least 30 minutes before attempting to power on.
- **Apps crashing:** Clear the app's cache (Settings > Apps > [App Name] > Storage & cache > Clear cache). If the issue persists, reinstall the app.
- **Wi-Fi connection issues:** Restart your Wi-Fi router and the tablet. Forget the network and reconnect.
- **Slow performance:** Close unnecessary background apps. Clear cache and temporary files. Consider a factory reset if issues persist (Settings > System > Reset options > Erase all data).

7. Specifications

Feature	Specification
Model Name	K10
Operating System	Android 16
Processor	MediaTek Octa-Core 2.0GHz
RAM	4GB (24GB total with virtual RAM)
Internal Storage	64GB
Expandable Storage	Up to 512GB (microSD)
Screen Size	10.1 inches
Display Resolution	1280x800 pixels
Battery Capacity	6000mAh
Charging	18W Fast Charging (10W/18W adapter recommended)
Wireless Connectivity	Dual WiFi (802.11ax), Bluetooth 5.2
Cameras	Rear: 5MP, Front: 8MP
Headphones Jack	3.5 mm
Special Features	GMS Certified, Google Kids Space, Parental Control, Widevine L1, Eye-Protection Screen

8. Warranty and Support

Most items can be returned for a refund or replacement/exchange within 30 days of delivery, provided they are in original or unused condition. For further support or warranty claims, please refer to your purchase documentation or contact COLORROOM customer service.

© 2026 COLORROOM. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0HC32XMMG

More documents and user manuals: **https://manuals.plus/**