Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VASAGLE ULNT187B201

VASAGLE 78.7" Height Adjustable Console Table with Power Outlet

Model: ULNT187B201

Thank you for choosing a VASAGLE product. Please read this manual carefully before assembly and use.

Safety Information
Package Contents
Setup & Assembly
Operating Instructions
Maintenance
Troubleshooting
Specifications
Warranty & Support

1. Safety Information

Please read and understand all instructions before assembling and using this product. Failure to follow these instructions may result in injury or damage.

- Keep all packaging materials away from children.
- Assemble the product on a soft, clean surface to prevent scratches.
- Ensure all parts are securely fastened before use. Periodically check and re-tighten fasteners.
- Do not exceed the maximum weight capacity of 66 lbs (30 kg).
- Use the included anti-tip kit to secure the table to a wall, especially if placed in areas with children or pets.
- The power outlet is rated for 125V/12A. Do not overload the outlets.
- This product is intended for indoor use only.
- Keep liquids away from the power outlet to prevent electrical hazards.

2. Package Contents

Verify that all components listed below are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- 1 x Console Table
- 1 x Power Strip (with 2 AC outlets, 1 USB-A, 1 USB-C)
- 1 x Anti-Tip Kit
- 1 x Instructions Manual (this document)

3. Setup & Assembly

For detailed visual instructions, please refer to the official Installation Manual PDF provided by VASAGLE, or watch the assembly video below.

General Assembly Steps:

1. Unpack all components and lay them out on a clean, soft surface.
2. Identify all parts according to the included parts list.
3. Attach the table legs to the tabletop panels using the provided hardware. Ensure all screws are tightened securely.
4. Connect the two tabletop panels if applicable, ensuring a stable and seamless surface. This model features two one-piece panels for enhanced stability.
5. Install the detachable power outlet into your desired position on the tabletop.
6. Adjust the height of the table legs to your preferred setting (see Operating Instructions).
7. Attach the anti-tip kit to the table and secure it to a wall as per the anti-tip kit instructions.
8. Place the table in its desired location, ensuring it is stable and level using the adjustable feet.

Assembly Video Guide

Your browser does not support the video tag.

Video: VASAGLE Console Table Setup. This video demonstrates the assembly process for the VASAGLE console table, guiding users through each step to ensure correct and secure setup.

Key Design Features



Image: Two one-piece console table panels. This image highlights the design of the table using two single, unspliced panels for increased stability compared to multi-piece designs.

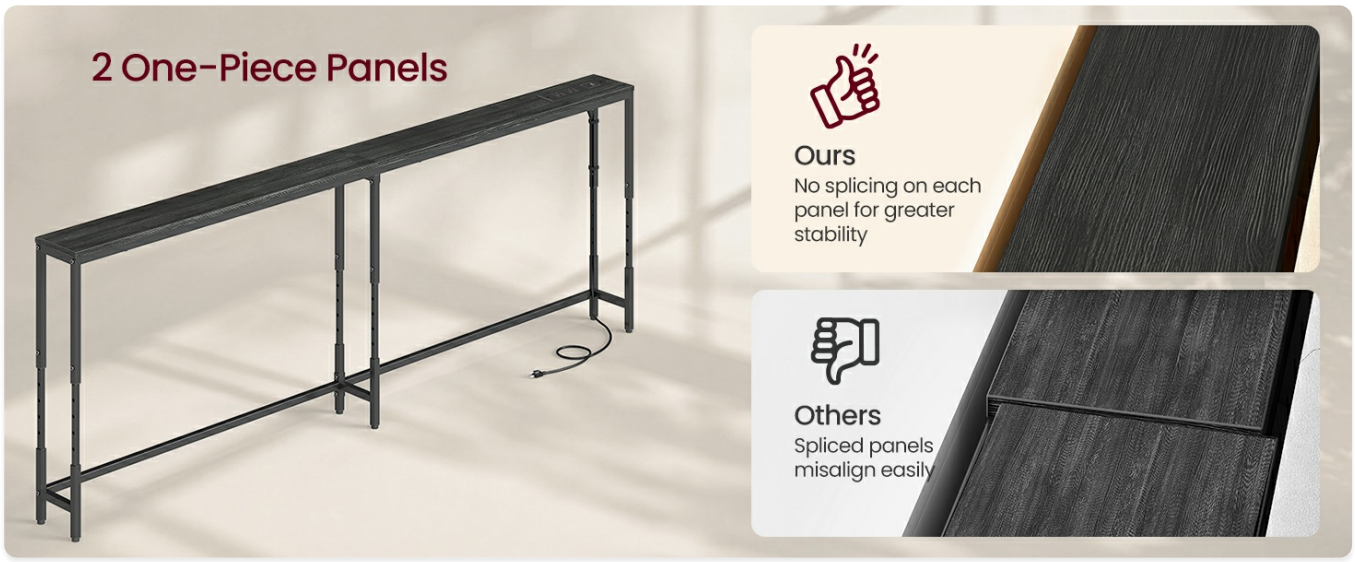


Image: Anti-tip kit and adjustable feet. This image illustrates the anti-tip kit for securing the table to a wall and the adjustable feet for leveling on uneven floors.

4. Operating Instructions

4.1 Height Adjustment

The console table features a push-button system for adjusting its height. This allows for a customized fit with various sofa or bed heights.

- Locate the push-buttons on the table legs.
- Press the buttons and slide the leg extensions to one of the 6 available height settings, ranging from 25.2 inches (64 cm) to 35.2 inches (89.4 cm).
- Ensure both sides of the table are adjusted to the same height and the buttons are fully engaged in the desired holes for stability.



Image: Height adjustment mechanism. This image illustrates the 6 height settings available for the console table, showing the range from 25.2 inches to 35.2 inches.

4.2 Detachable Power Outlet Usage

The table includes a flexible power strip with multiple charging options for your convenience.

- The power strip features 2 AC outlets (125V/12A), 1 USB-A port (5V/2A), and 1 USB-C port (5V/2A).
- To change the power outlet's position, carefully detach it from its current slot.

- The tabletop is designed with 4 possible outlet positions. You can select your preferred position by swapping and flipping the tabletop panels during assembly or reassembly.
- Insert the power strip into the desired slot until it is securely seated.
- Plug the table's main power cord into a wall outlet.



Image: Multiple charging options. This image shows the integrated power strip with 2 AC outlets, 1 USB-A port, and 1 USB-C port, demonstrating devices charging.



Image: 4 outlet positions. This diagram illustrates the four different locations where the detachable power outlet can be installed on the console table by flipping the tabletop.

5. Maintenance

Proper care will extend the life and appearance of your console table.

- **Cleaning:** Wipe the table surface with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Dusting:** Regularly dust with a dry, soft cloth.
- **Spills:** Clean spills immediately to prevent staining.
- **Fasteners:** Periodically check all screws and bolts to ensure they remain tight. Re-tighten as necessary.
- **Power Outlet:** Ensure the power outlet remains dry and free of dust. Do not attempt to disassemble or repair the power strip yourself.

6. Troubleshooting

If you encounter issues with your console table, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Table is wobbly.	Uneven floor; loose fasteners; height not evenly adjusted.	Adjust the leveling feet at the bottom of the legs. Ensure all assembly screws are tightened. Verify both sides of the table are set to the same height.
Power outlets are not working.	Power cord not plugged in; wall outlet not active; power strip not fully seated.	Ensure the table's power cord is securely plugged into a functional wall outlet. Check if the power strip is correctly inserted into the tabletop slot. Test the wall outlet with another device.
Difficulty adjusting height.	Buttons not fully pressed; obstruction in leg mechanism.	Ensure the push-buttons are fully depressed when attempting to slide the legs. Check for any debris or obstructions in the adjustment holes.

7. Specifications

Feature	Detail
Brand	VASAGLE
Model Number	ULNT187B201
Dimensions (D x W x H)	5.9"D x 78.7"W x 25.2-35.2"H (Adjustable)
Item Weight	17.9 pounds
Maximum Weight Recommendation	66 pounds (30 kg)
Frame Material	Steel
Top Material	Engineered Wood (Particleboard)

Feature	Detail
Color	Charcoal Gray + Matte Black
Power Outlet	2 AC Outlets (125V/12A), 1 USB-A (5V/2A), 1 USB-C (5V/2A)
Power Cord Length	59 inches (150 cm)
Special Features	6 Height Adjustable Ranges, Detachable Power Outlet, Anti-Tip Kit, Adjustable Feet

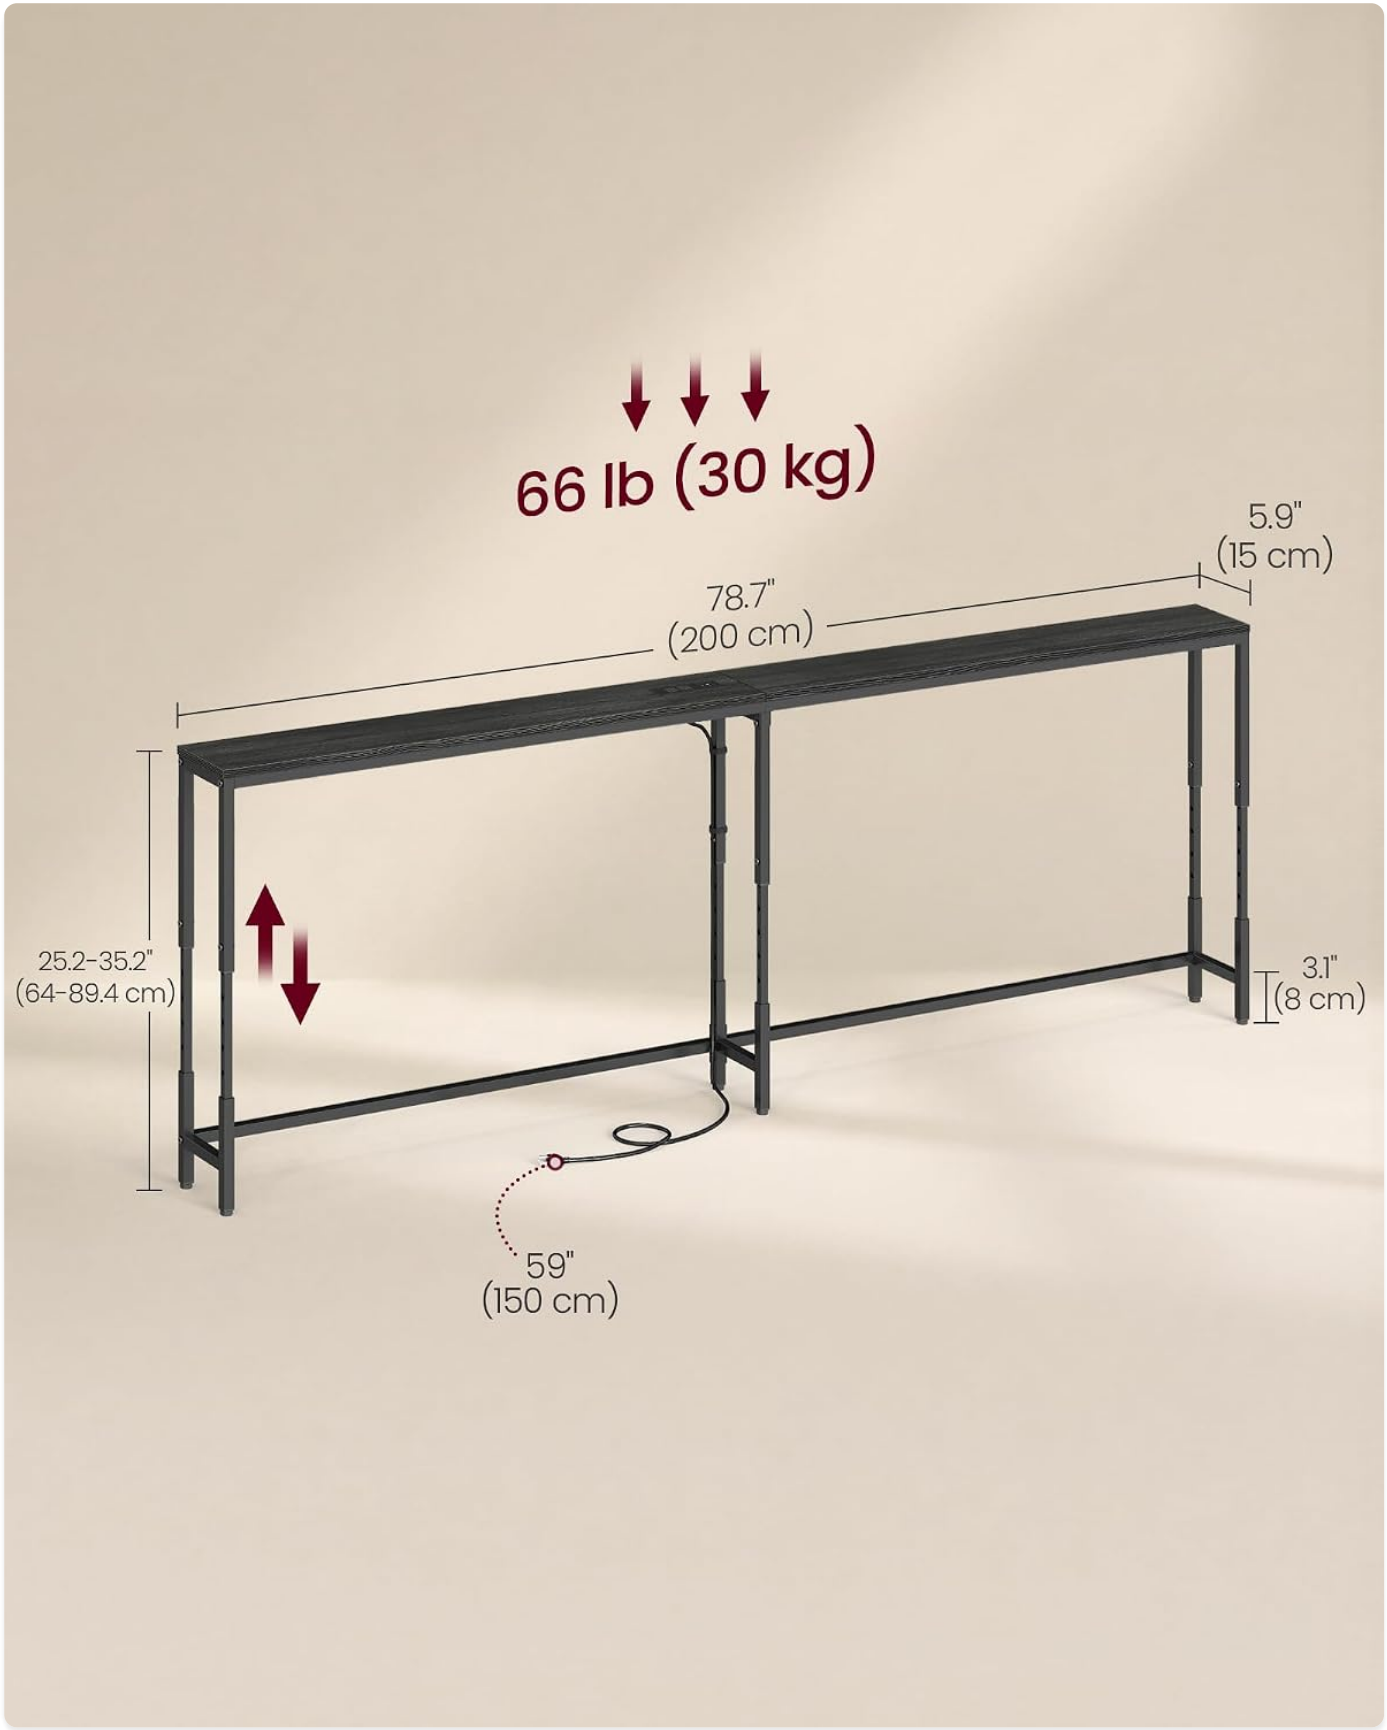


Image: Product dimensions and weight capacity. This diagram provides a visual representation of the table's dimensions (length, depth, height range) and its maximum weight capacity of 66 lbs (30 kg).

8. Warranty & Support

VASAGLE products are designed for quality and durability. For specific warranty details, please refer to the warranty card included with your purchase or visit the official VASAGLE website.

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact VASAGLE customer support:

- **Website:** www.vasagle.com
- **Email:** Refer to your purchase documentation for specific contact email.
- **Phone:** Refer to your purchase documentation for specific contact number.

Please have your model number (ULNT187B201) and purchase information ready when contacting support.

© 2023 VASAGLE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0HC5JS59K

More documents and user manuals: **https://manuals.plus/**