Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Homirxan UB

Homirxan 3.4 Cuft Digital Fireproof Safe Box

Model: UB - User Manual

1. Introduction

Thank you for choosing the Homirxan 3.4 Cuft Digital Fireproof Safe Box. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new security safe. Please read this manual thoroughly before using the product and retain it for future reference.

2. Safety Information

To ensure proper operation and prevent injury or damage, please observe the following safety precautions:

- **Do not** store the emergency keys inside the safe. Keep them in a secure, separate location.
- **Do not** expose the safe to extreme temperatures or humidity.
- Ensure the safe is installed on a stable, level surface or securely mounted to a wall/floor.
- Keep children away from the safe, especially during operation.
- If the safe is damaged, do not attempt to repair it yourself. Contact customer support.

3. What's in the Box



Image: Contents of the Homirxan 3.4 Cuft Digital Fireproof Safe Box package.

Please check the package contents carefully. If any items are missing or damaged, contact customer support immediately.

- 1 x Homirxan 3.4 Cuft Digital Fireproof Safe Box
- 2 x Emergency Spare Keys
- 1 x User Manual (this document)
- 4 x Expansion Screws (for mounting)
- 1 x USB Cable (for emergency power)
- 1 x Felt Mat (for interior protection)

4. Product Overview & Features

The Homirxan 3.4 Cuft Digital Fireproof Safe Box is designed to protect your valuables with advanced security features and durable construction.

Key Features:

- **Large Capacity:** 3.4 cubic feet of storage space for documents, electronics, jewelry, and other valuables.
- **Solid Steel Construction:** Anti-pry, anti-drilling, and anti-collision design with enhanced live steel locking bolts (3 x 25mm).
- **Dual Access System:** Digital keypad with programmable password and emergency keys for backup access.
- **Anti-Theft Alarm System:** Activates after 3 incorrect password entries, locking the safe for 20 seconds.
- **Silent Mode:** Allows discreet access without audible keypad tones.
- **Removable Shelf:** Adjustable interior space for organizing various-sized items.
- **Built-in LED Light:** Illuminates the interior for better visibility.

- **Mounting Capability:** Pre-drilled holes for securing the safe to a wall or floor.



Image: Overview of the Homirxan Fireproof Safe Box, highlighting its anti-drilling, anti-prying, and anti-collision features.



Image: Detailed view of the safe's robust locking mechanism, featuring thick steel bolts and reinforced door for maximum security against forced entry.



Image: Illustration of the safe's sturdy steel and multilayer alloy steel construction, emphasizing its durability and resistance to tampering.

5. Setup and Installation

Mounting the Safe (Wall or Floor)

For enhanced security, it is recommended to bolt the safe to a wall or floor. The safe has pre-drilled holes on the back and bottom.



Image: Visual guide for wall or floor mounting installation. The image shows the safe's back with pre-drilled holes, indicating where to secure it.

1. **Step 1: Position the Safe.** Choose a suitable location on a solid wall or floor. Mark the drilling points through the pre-drilled holes on the safe.
2. **Step 2: Drill Holes.** Using an appropriate drill bit for your wall/floor material, drill holes at the marked positions.
3. **Step 3: Secure the Safe.** Align the safe with the drilled holes. Insert the expansion screws through the safe's holes and into the wall/floor. Tighten the screws firmly to secure the safe in place.

6. Operating Instructions

6.1. Initial Setup: Setting Your Passcode

When you first receive the safe, it will be in its factory default state. You will need to use the emergency key to open it for the first time and set your personal passcode.

1. Insert the emergency key into the keyhole, turn it clockwise, and then turn the knob clockwise to open the safe door.

2. Locate the red reset button on the inside of the safe door (usually near the hinge). Press the reset button. You will hear a beep, and the indicator light on the keypad will flash.
3. While the light is flashing, enter your desired 3-8 digit passcode on the keypad, then press the '#' key to confirm. You will hear a confirmation beep.
4. Test your new passcode with the door open. Enter your passcode, press '#', and turn the knob. If successful, the bolts should retract.

6.2. Opening the Safe

There are three methods to open your Homirxan safe:



Image: Visual representation of the three methods to open the safe: using a personal code, emergency keys, or a USB charge cable with a personal code.

- **Method 1: Using Your Personal Code**
  Enter your 3-8 digit passcode, then press '#'. The indicator light will turn green. Within 5 seconds, turn the knob clockwise to open the door.
- **Method 2: Using Emergency Keys**
  This method is for initial opening, forgotten passcodes, or dead batteries. Insert the emergency key into the keyhole, turn it clockwise, then turn the knob clockwise to open the door.
- **Method 3: Emergency Power with USB Cable**
  If the batteries are dead and you don't have the emergency key, connect a USB power source (e.g., power bank) to the USB port on the keypad. The keypad will power on. Enter your passcode, press '#', and turn the knob clockwise to open the door.

6.3. Anti-Theft Alarm System

The safe is equipped with an alarm system to deter unauthorized access.



Image: The safe displaying an alarm icon, illustrating its smart alarm system that activates after three incorrect passcode entries.

- If an incorrect passcode is entered 3 consecutive times, the alarm will sound, and the safe will lock for 20 seconds.
- During the alarm period, the keypad will be unresponsive. Wait for the alarm to stop before attempting to enter the passcode again.

6.4. Silent Mode

To operate the safe without audible keypad tones, activate silent mode:

- While the safe is closed, press and hold the '0' key for 3 seconds. The keypad will beep once to confirm silent mode is activated.
- To deactivate silent mode, press and hold the '0' key for 3 seconds again. The keypad will beep twice to confirm silent mode is deactivated.

6.5. Internal LED Light

The safe is equipped with an internal LED light for better visibility of contents. The light automatically turns on when the door is opened and turns off when the door is closed.

6.6. Removable Shelf

The safe includes a removable shelf to customize the interior storage space according to your needs.

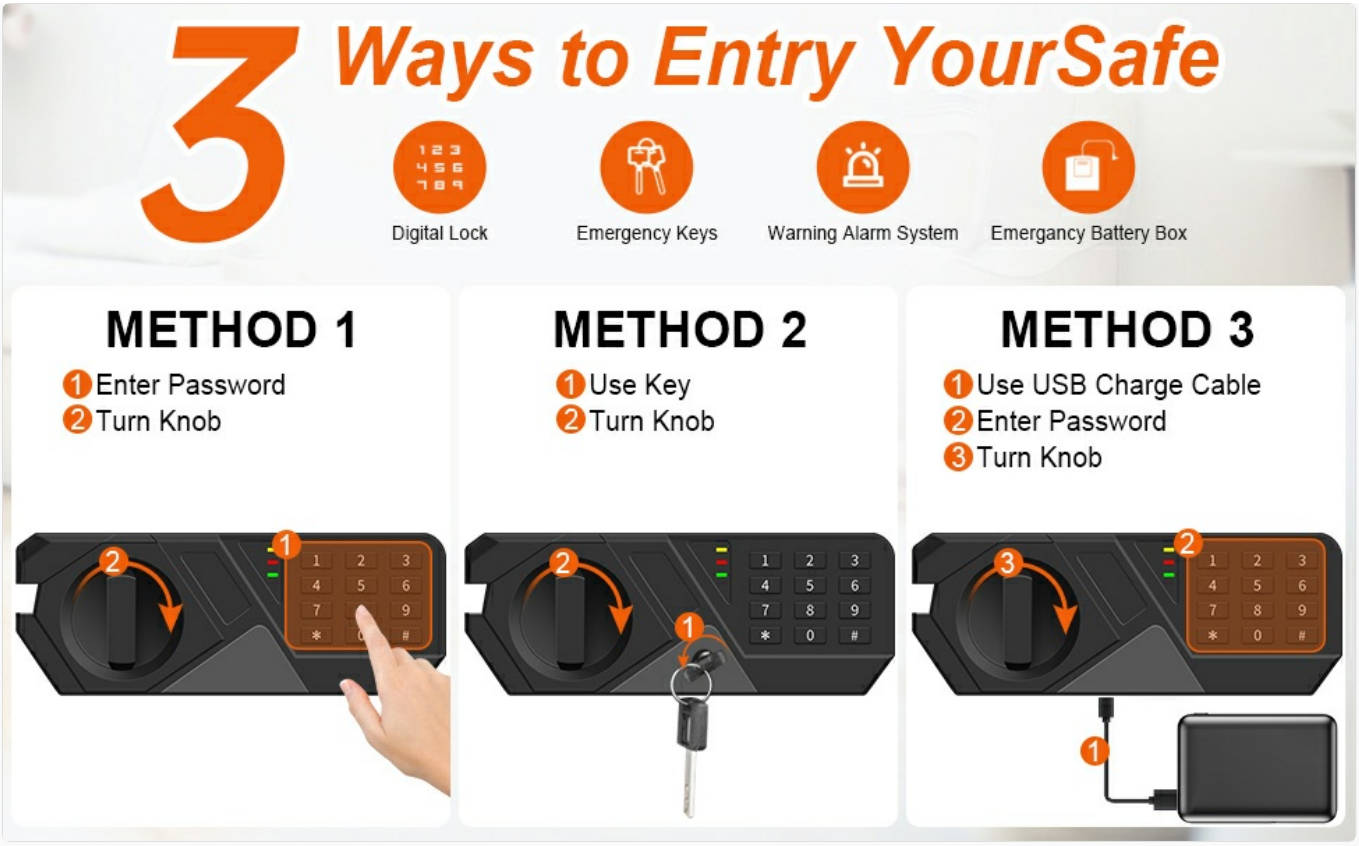


Image: The safe's interior demonstrating the flexibility of the removable shelf, allowing for organized storage of smaller items or accommodating larger objects when removed.

- To remove the shelf, simply lift it slightly and pull it out.
- To reinsert, align the shelf with the support brackets and slide it into place.

7. Maintenance

- **Cleaning:** Wipe the exterior of the safe with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** When the keypad battery is low, the indicator light will flash red after entering a correct code. Replace the batteries promptly. The battery compartment is usually located inside the safe door.
- **Key Maintenance:** Keep emergency keys clean and dry. Do not lubricate the keyhole.

8. Troubleshooting

Problem	Possible Cause	Solution
Safe does not open with passcode.	Incorrect passcode entered; batteries are low/dead; keypad malfunction.	Re-enter passcode carefully. Replace batteries. Use emergency key or USB power.
Keypad is unresponsive.	Batteries are dead; alarm is active; keypad malfunction.	Replace batteries. Wait for alarm to reset. Use USB power.
Alarm sounds frequently.	Incorrect passcode attempts; safe is being tampered with.	Ensure correct passcode is used. Check for unauthorized access attempts.
Emergency key does not work.	Key is damaged; lock mechanism is jammed.	Ensure key is fully inserted and turned correctly. Do not force. Contact support.

9. Specifications

Feature	Detail
Brand	Homirxan
Model Number	UB
Capacity	3.4 cubic feet
Product Dimensions (D x W x H)	13.17"D x 13.78"W x 17.72"H
Lock Type	Electronic Combination Lock, Key
Material	Alloy Steel
Color	Black
Item Weight	31 pounds
Special Features	Alarm System, Combination Lock, Fire Resistant, Removable Shelf, Sensor Light
Mounting Type	Wall Mount, Floor Mount

10. Warranty and Support

Homirxan provides a **1-year warranty** for this product from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

For warranty claims, technical support, or any questions regarding your Homirxan safe, please contact our customer service team. Please have your purchase details and model number (UB) ready when contacting support.

Customer Support: Please refer to your purchase platform or the Homirxan official website for contact information.

© 2023 Homirxan. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0HCMZXT6J

More documents and user manuals: **https://manuals.plus/**