Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

GOLDEN HOUR GH-1313

GOLDEN HOUR Ultra-Thin Minimalist Sports Waterproof Digital Watch

Model: GH-1313 User Manual

Introduction

Thank you for choosing the GOLDEN HOUR Ultra-Thin Minimalist Sports Waterproof Digital Watch, Model GH-1313. This manual provides detailed instructions to help you understand and utilize all the features of your new watch. Please read this manual carefully before use and keep it for future reference.

This digital watch features an ultra-thin design, a clear wide-angle display, and multiple functions including time, date, day, alarm, stopwatch, and EL backlight. It is designed for durability and is suitable for various sports and daily activities.

Setup

Your watch has four buttons for operation:

- **MODE:** Cycles through display modes (Time, Stopwatch, Alarm).
- **LIGHT:** Activates the EL backlight.
- **ST/STOP:** Starts/stops stopwatch, adjusts settings.
- **RESET:** Resets stopwatch, adjusts settings.

Setting Time and Date

1. From the normal time display, press the**MODE** button three times to enter time setting mode. The seconds will flash.
2. Press the **RESET** button to cycle through the settings: Seconds → Hour → Minute → Month → Date → Day of Week.
3. Use the **ST/STOP** button to adjust the flashing value.
4. Press the **MODE** button once to exit setting mode and return to normal time display.

Setting 12/24 Hour Format

In time setting mode (seconds flashing), press the**ST/STOP** button when the hour is flashing to toggle between 12-hour (A/P indicator) and 24-hour formats.

Adjusting the Strap

The soft rubber strap is adjustable to fit various wrist sizes. Use the tang buckle to secure the watch comfortably on your

wrist. Ensure it is snug but not too tight to allow for proper circulation.



Image: The watch display showing clear digits and the ultra-thin case design.



Image: Detailed dimensions of the watch, including the 7.5mm case thickness and strap length.

Operating Instructions

Using the Stopwatch

1. From the normal time display, press the**MODE** button once to enter stopwatch mode. The display will show '00:00:00'.
2. Press the **ST/STOP** button to start the stopwatch.
3. Press the **ST/STOP** button again to pause the stopwatch.
4. Press the **RESET** button to reset the stopwatch to '00:00:00'.
5. To exit stopwatch mode, press the**MODE** button.

Setting the Alarm

1. From the normal time display, press the**MODE** button twice to enter alarm setting mode. The hour digits will flash.
2. Press the **ST/STOP** button to adjust the hour.
3. Press the **RESET** button to switch to minute setting. The minute digits will flash.
4. Press the **ST/STOP** button to adjust the minute.
5. Press the **MODE** button to exit alarm setting mode.
6. To turn the alarm ON/OFF, in normal time display, press and hold**RESET** and then press **ST/STOP**. An alarm icon will appear/disappear.

Using the EL Backlight

Press the **LIGHT** button at any time to illuminate the display for a few seconds, allowing for clear visibility in low-light conditions.

Water Resistance (5ATM / 50M)

This watch is rated 5ATM (50 meters) waterproof. This means it is suitable for swimming in shallow water and cold showers. It is resistant to sweat and rain. However, it is **not** suitable for diving, snorkeling, or prolonged underwater activities. Avoid exposure to hot water, steam, or pressing buttons underwater, as this can compromise the water resistance seal.



Image: The luminous display ensures readability even in dimly lit places.

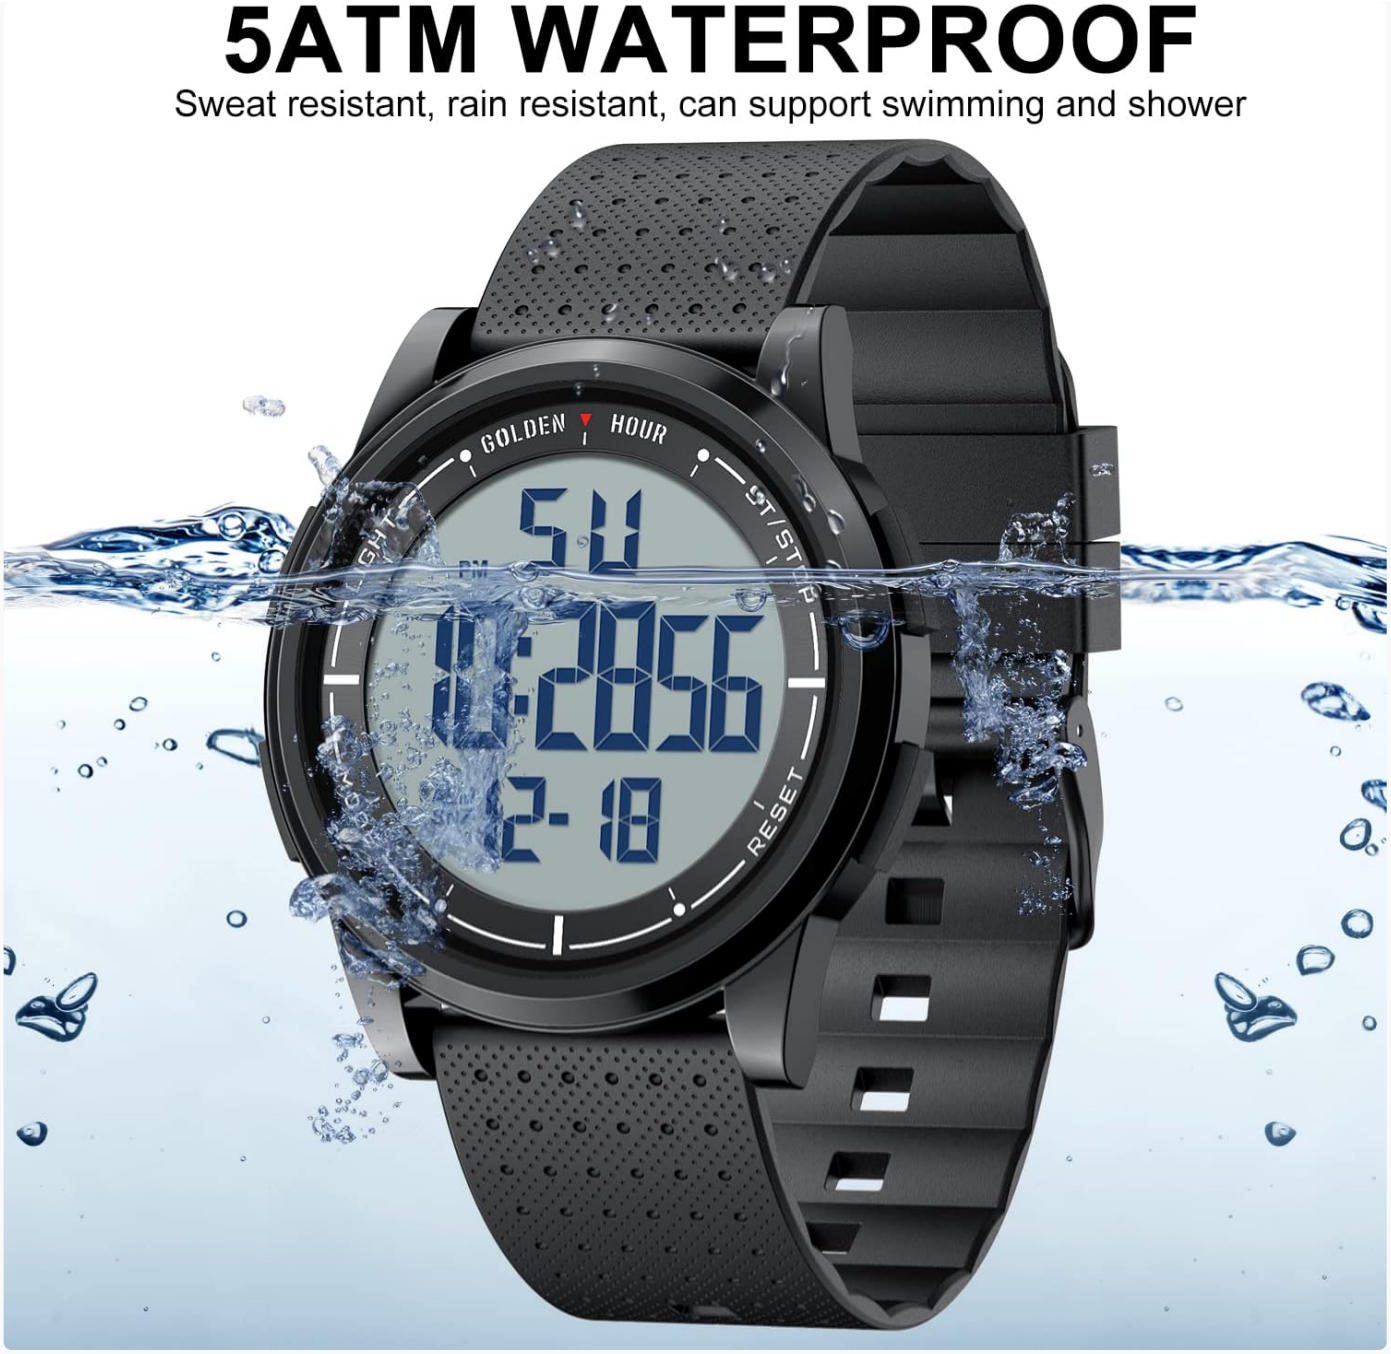


Image: The watch is shown to be water-resistant, suitable for swimming and showering.

Maintenance

Cleaning Your Watch

To clean your watch, wipe it gently with a soft, damp cloth. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch case, strap, or display. For stubborn dirt, a mild soap solution can be used, followed by rinsing with clean water and drying thoroughly.

Water Resistance Care

While your watch is waterproof, proper care is essential to maintain its integrity. Avoid exposing the watch to extreme temperature changes (e.g., hot showers followed by cold water) as this can cause seals to expand and contract, potentially leading to water ingress. Do not press any buttons while the watch is submerged in water.

Battery Replacement

The watch is powered by a nonstandard battery. When the display becomes dim or the watch stops functioning, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure

the water resistance seal is properly maintained.

Troubleshooting

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Time is incorrect.	Time not set correctly or accidental button press.	Refer to the "Setting Time and Date" section to reset the time.
Watch is fogging up internally.	Water ingress due to compromised seal or extreme temperature change.	Stop using the watch immediately. Seek professional repair to prevent further damage.
Buttons are unresponsive.	Temporary software glitch or water ingress.	Try pressing all buttons firmly. If unresponsive, allow the watch to dry completely if exposed to water. If problem persists, contact support.

Specifications

Model Name: GH-1313

Display Type: Digital

Watch Movement Type: Japanese Quartz

Case Material: Plastic

Band Material: Rubber

Clasp Type: Tang Buckle

Case Diameter: 1.69 inches (43mm)

Case Thickness: 0.31 inches (7.5mm)

Band Width: 0.86 inches (22mm)

Band Length: 9.84 inches (250mm)

Item Weight: 2.08 ounces (59g)

Water Resistance Depth: 50 meters (5ATM)

Power Source: Battery Powered (1 Nonstandard Battery required)

Additional Features: Alarm, Glow In The Dark (EL Backlight), Stopwatch, 12/24H Format, Date, Day



Image: The GOLDEN HOUR GH-1313 Digital Watch.

Warranty Information

Your GOLDEN HOUR watch comes with a **Lifetime Warranty** against manufacturing defects. Additionally, we offer **12-month after-service** for any issues you may encounter. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by improper use, accidents, unauthorized repairs, or normal wear and tear.

Please retain your purchase receipt as proof of purchase for warranty claims.

Customer Support

If you have any questions about your GOLDEN HOUR watch, require assistance with setup or operation, or need to make a warranty claim, please contact GOLDEN HOUR customer support. Refer to the contact information provided with your purchase or visit the official GOLDEN HOUR website for support details.

We are committed to providing excellent service and ensuring your satisfaction with our products.

© 2023 GOLDEN HOUR. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0HDP95FZ3

More documents and user manuals: **https://manuals.plus/**