Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Potaroma Potaroma-YLPPDZT-HL2Pcs

Potaroma Flapping Butterfly Interactive Cat Toys User Manual

Model: Potaroma-YLPPDZT-HL2Pcs

Introduction

Thank you for choosing the Potaroma Flapping Butterfly Interactive Cat Toys. These touch-activated toys are designed to stimulate your cat's natural hunting instincts, providing engaging and enriching playtime. This manual provides instructions for setup, operation, maintenance, and troubleshooting to ensure optimal use of your new cat toys.

Package Contents

Please verify that all items listed below are included in your package:

- 2 x Flapping Butterfly Cat Toys (one yellow, one blue)
- 2 x Catnip Pouches
- 1 x Type-C Charging Cable
- 1 x Elastic Hanging Cord with Suction Cup



Figure 1: Included components of the Potaroma Flapping Butterfly Cat Toys.

Setup

1. Charging the Toy

The butterfly toys are USB rechargeable. Before first use, or when the toy's flapping motion becomes weak, charge the toy using the provided Type-C cable.

1. Gently remove the plush cover from the butterfly toy to expose the charging port.
2. Connect the Type-C cable to the toy's charging port and to a USB power source (e.g., computer, wall adapter).
3. A red light indicates charging. The light will turn green when fully charged.
4. Once charged, carefully reattach the plush cover.

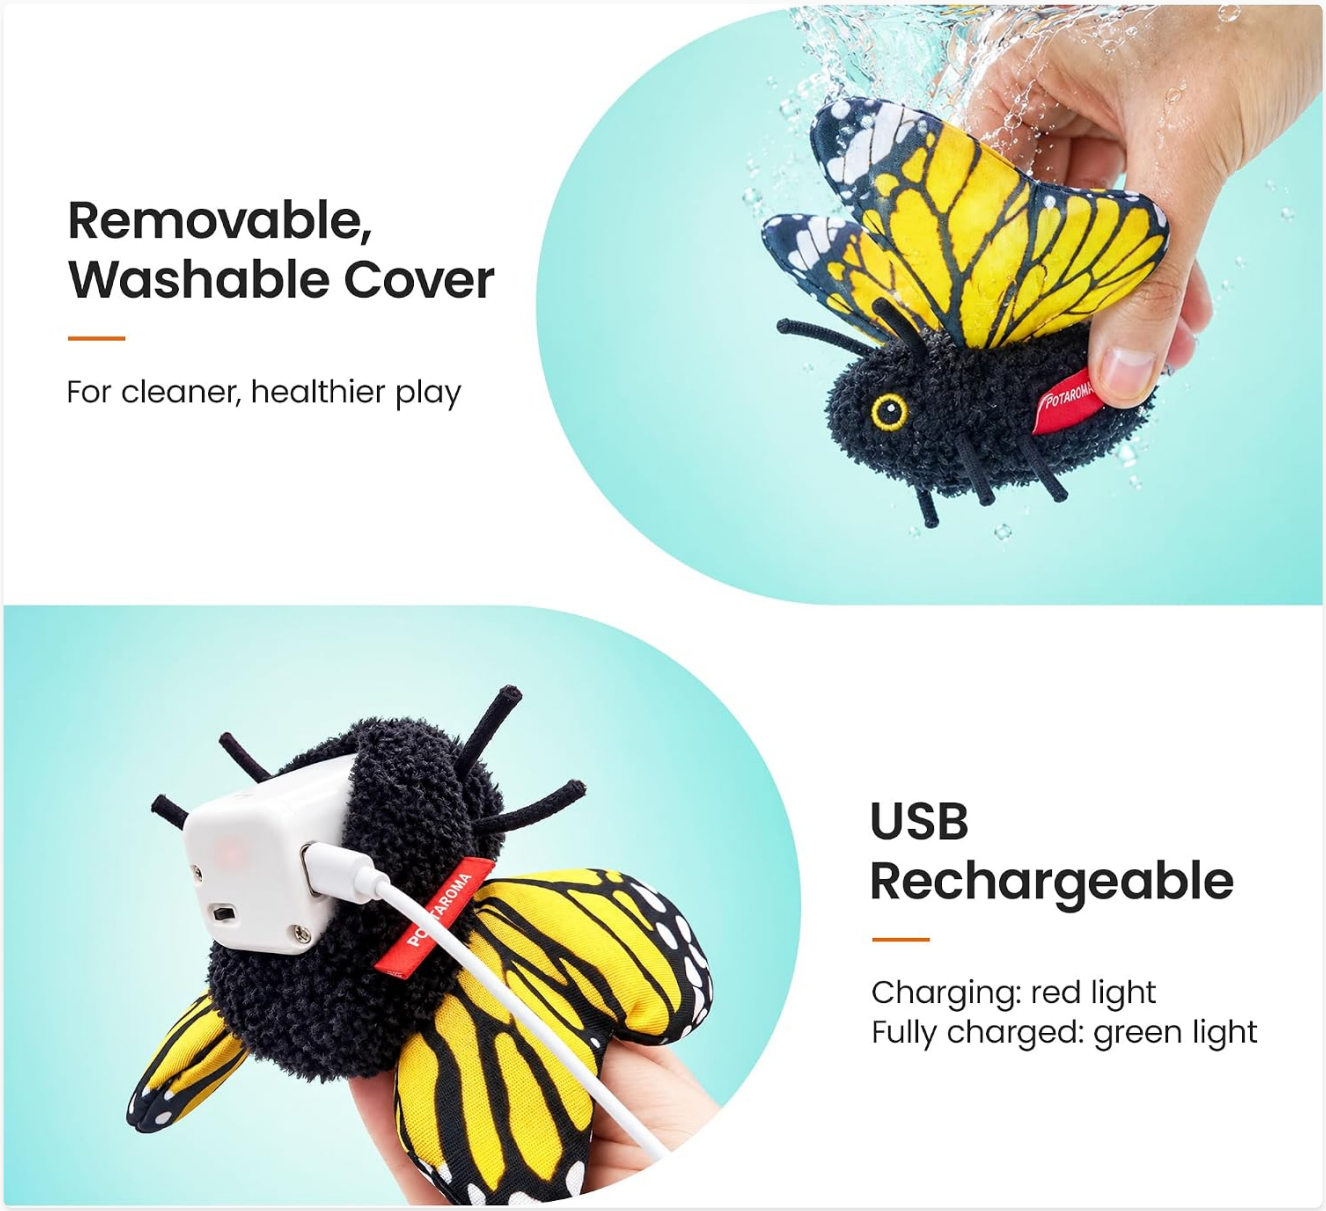


Figure 2: USB charging and removable cover for the butterfly toy.

2. Inserting the Catnip Pouch

To enhance your cat's interest, you can insert a catnip pouch into the toy.

1. Locate the small pouch opening on the butterfly toy.
2. Insert one of the provided catnip pouches into the opening.
3. Ensure the pouch is securely placed within the toy.



Figure 3: Inserting the catnip pouch into the butterfly toy.

Operating Instructions

1. Activating and Changing Flapping Modes

The butterfly toy is touch-activated and features three distinct flapping modes:

- **Fast:** Rapid flapping motion.
- **Intermittent:** Flaps with pauses.
- **Intense:** Stronger, more erratic flapping.

To activate the toy or switch modes, simply tap the butterfly. The toy will enter standby mode after each cycle, requiring a tap to reactivate and cycle through the modes.



Figure 4: The three touch-activated flapping modes.

Your browser does not support the video tag.

Video 1: Demonstration of the electric flapping butterfly toy in action, showcasing its movement and how it engages cats.

2. Multiple Play Ways

The Potaroma Flapping Butterfly toys offer versatile play options:

- **Independent Play:** Place the toy on the floor for your cat to interact with directly.
- **Hanging Play:** Use the elastic cord and suction cup to hang the toy from a smooth surface, allowing it to dangle and swing.
- **Handheld Play:** Hold the toy by hand to engage in interactive play with your cat.
- **Cat Wand Play:** Attach the elastic cord to a compatible cat wand (not included) for extended reach and dynamic play.



Figure 5: Various interactive play methods using the elastic cord.

Maintenance

1. Cleaning the Plush Cover

The plush cover of the butterfly toy is removable and washable to ensure hygienic play for your pet.

1. Gently remove the plush cover from the toy's internal mechanism.
2. Hand wash the cover with mild soap and water, or machine wash on a delicate cycle.
3. Allow the cover to air dry completely before reattaching it to the toy.

2. Recharging

Refer to the "Charging the Toy" section under Setup for detailed recharging instructions. Regular charging ensures continuous playtime.

Troubleshooting

Problem	Possible Cause	Solution
Toy does not flap or flaps weakly.	Low battery.	Recharge the toy fully using the provided USB cable.
Toy does not respond to touch.	Toy is in standby mode or battery is depleted.	Tap the toy to wake it up. If it still doesn't respond, recharge the battery.
Wings do not move correctly or seem stuck.	Obstruction or improper reassembly of the plush cover.	Ensure the plush cover is correctly aligned and not obstructing the wing mechanism. Check for any debris. Note that the openings beneath the wings are part of the design for freer movement and are not defects.
Cat shows no interest in the toy.	Lack of stimulation or catnip scent.	Ensure a fresh catnip pouch is inserted. Try different play modes or interactive play methods (hanging, handheld). Some cats may take time to adjust to new toys.

Note: The butterfly toy is designed to flap its wings and move on the ground or when suspended; it is not designed to fly.

Specifications

- **Product Dimensions:** 2.2 x 2.2 x 2.2 inches
- **Item Weight:** 3.88 ounces (per toy)
- **Model Number:** Potaroma-YLPPDZT-HL2Pcs
- **Power Source:** USB Rechargeable
- **Pet Type:** Cat
- **Toy Type:** Interactive Plush
- **Recommended Use:** Indoor, Boredom Buster
- **Water Resistance Level:** Not Water Resistant

Important Safety Information

- Always supervise your pet during playtime to prevent accidental ingestion of parts.
- Inspect the toy regularly for damage. Discontinue use if any part becomes loose or detached.
- Keep the charging cable and small parts out of reach of pets and children.
- This toy is not water resistant. Avoid exposure to water or excessive moisture.

Warranty and Support

Potaroma products are designed for quality and durability. For any questions, concerns, or support needs regarding your Flapping Butterfly Interactive Cat Toys, please contact Potaroma customer service. Please refer to your purchase documentation for specific warranty details and contact information.
You can also visit the official Potaroma Store on Amazon for more information: Potaroma Store

© 2026 Potaroma. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0HF8272C1

More documents and user manuals: **https://manuals.plus/**