Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Mr. Coffee 2247137

Mr. Coffee 12-Cup Programmable Coffee Maker User Manual

Model: 2247137

Introduction

This manual provides instructions for the safe and efficient operation, maintenance, and troubleshooting of your Mr. Coffee 12-Cup Programmable Coffee Maker. Please read all instructions carefully before using the appliance and retain this manual for future reference.



Image: The Mr. Coffee 12-Cup Programmable Coffee Maker in Reflection color, showcasing its sleek design.

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions before using this product.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not place cord, plug, or appliance in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
8. Do not use outdoors.

9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Carafe is designed for use with this appliance only. It must never be used on a range top.
14. Do not place a hot carafe on a wet or cold surface.
15. Do not use a cracked carafe or a carafe having a loose or weakened handle.
16. Do not clean carafe with cleansers, steel wool pads, or other abrasive materials.
17. Scalding may occur if the lid is removed during the brewing cycles.

Package Contents

Verify that all components are present in the packaging:

- Mr. Coffee 12-Cup Programmable Coffee Maker Unit
- Glass Carafe
- Coffee Scoop
- Cool Brew Warming Plate Cover for Iced Brewing
- Filter Basket (removable)



Image: The coffee scoop and the Cool Brew Warming Plate Cover, which are included accessories.

Setup

1. **Unpack:** Carefully remove all components from the packaging. Remove any stickers or promotional materials from the coffee maker.
2. **Clean Before First Use:** Wash the carafe, filter basket, coffee scoop, and Cool Brew Warming Plate Cover in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffee maker with a damp cloth.
3. **Position:** Place the coffee maker on a flat, stable surface away from the edge of the counter. Ensure there is adequate clearance above the unit for the lid to open fully.
4. **Initial Cleaning Cycle:** Before brewing coffee for the first time, run a full brewing cycle with only water to clean the internal components. Fill the water reservoir to the 12-cup mark, place the empty filter basket and carafe in position, and press the BREW/STOP button to start. Discard the water after the cycle.



Image: The coffee maker's control panel, showing programmable settings and buttons for various brew options.

Operating Instructions

Setting the Clock

1. Plug in the coffee maker. The display will flash.
2. Press the 'HR' button to set the hour. Press and hold to advance quickly.
3. Press the 'MIN' button to set the minutes. Press and hold to advance quickly.
4. The clock is set when the flashing stops.

Brewing Hot Coffee (Regular or Decaf)

1. **Fill Water Reservoir:** Open the lid and fill the water reservoir with cold, fresh water to the desired level, indicated by the cup markings. Do not exceed the 12-cup MAX line.
2. **Add Coffee Grounds:** Place a paper filter (basket style) into the filter basket, or use a permanent filter. Add the desired amount of ground coffee. A general guideline is 1 tablespoon of coffee per cup (5 fl oz).
3. **Select Brew Type:** For regular coffee, no special button press is needed. For decaf coffee, press the **DECAF** button. The indicator light will illuminate. This adjusts the brewing time for decaffeinated grounds.
4. **Small Batch Brewing (1-4 Cups):** If brewing 1 to 4 cups, press the **1-4 CUPS** button. This optimizes the brewing process for smaller quantities to ensure full flavor.
5. **Start Brewing:** Press the **BREW/STOP** button to begin the brewing cycle. The indicator light will illuminate.
6. **Keep Warm:** The warming plate will keep the coffee hot for 4 hours after brewing, then automatically shut off.



Image: The coffee maker displaying its various brew options, including hot, iced, regular, and decaf settings.

Brewing Iced Coffee

1. **Prepare Carafe:** Fill the carafe with ice cubes up to the 'MAX ICE' line.
2. **Place Cool Brew Cover:** Position the Cool Brew Warming Plate Cover over the warming plate. This cover helps keep the iced coffee chilled during brewing.
3. **Fill Water Reservoir:** Fill the water reservoir with cold, fresh water to the desired level, typically corresponding to the amount of iced coffee you wish to make.
4. **Add Coffee Grounds:** Place a paper filter (basket style) into the filter basket, or use a permanent filter. Add the desired amount of ground coffee.
5. **Select Iced Brew:** Press the **ICED** button. The indicator light will illuminate.
6. **Start Brewing:** Press the **BREW/STOP** button to begin the brewing cycle.

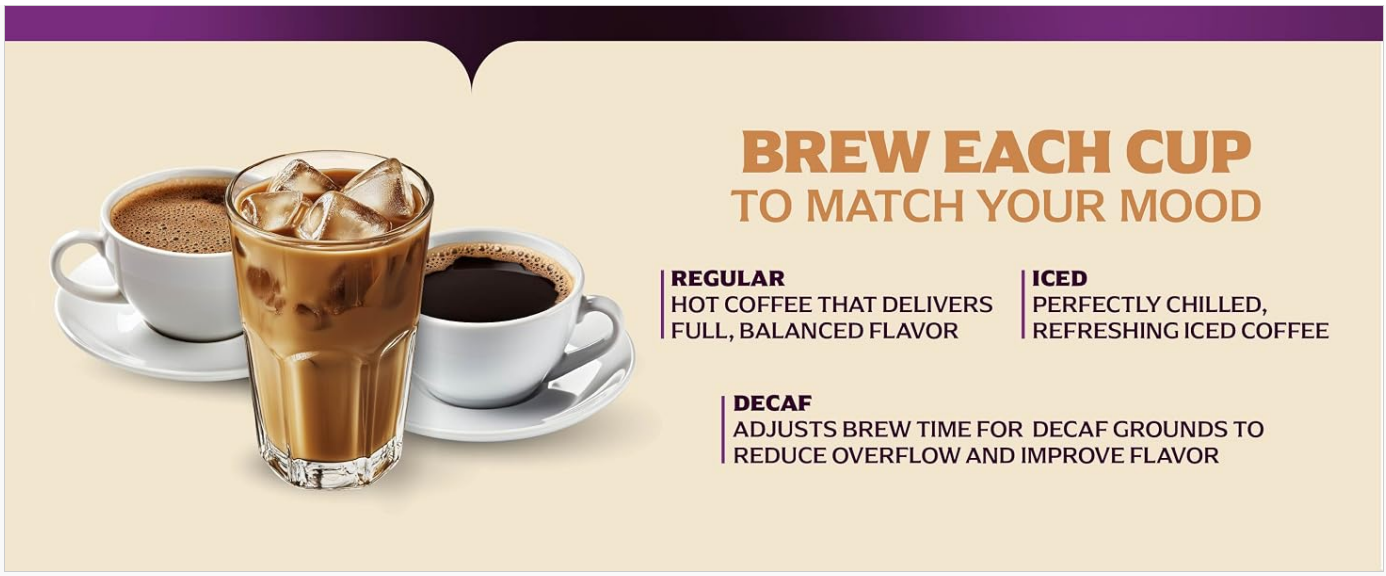


Image: A visual representation of hot and iced coffee options, highlighting the versatility of the machine.

Programmable Brewing (Brew Later)

1. Prepare the coffee maker for brewing as described above (water, grounds, filter).
2. Press the **BREW LATER** button. The indicator light will flash.
3. Use the 'HR' and 'MIN' buttons to set the desired brew time.
4. Once the time is set, press the **BREW LATER** button again to confirm. The indicator light will stop flashing and remain illuminated, indicating the timer is set.
5. The coffee maker will automatically start brewing at the programmed time.



Image: The coffee maker's digital display showing a programmed time, illustrating the 'Brew Later' function.

Maintenance and Cleaning

Regular cleaning ensures optimal performance and taste.

1. **Daily Cleaning:** After each use, discard used coffee grounds and paper filter. Wash the carafe, filter basket, coffee scoop, and Cool Brew Warming Plate Cover in warm, soapy water. These parts are also top-shelf dishwasher safe.
2. **Exterior Cleaning:** Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
3. **Descaling (Clean Cycle):** Mineral deposits from water can build up over time and affect performance. The coffee maker features an automated clean function.

   To descale:
   a. Fill the water reservoir with 4 cups of undiluted white vinegar.
   b. Place an empty paper filter in the filter basket and close the lid.

c. Place the empty carafe on the warming plate.
d. Press the **CLEAN** button. The indicator light will illuminate.
e. The cleaning cycle will run automatically. When complete, the light will turn off.
f. Run 2-3 full brewing cycles with fresh water only to rinse out any remaining vinegar taste.



Image: A hand pressing the 'CLEAN' button on the coffee maker's control panel, indicating the start of the automated cleaning cycle.

Troubleshooting

Problem	Possible Cause	Solution
Coffee does not brew.	Coffee maker not plugged in; power outage; BREW/STOP button not pressed; water reservoir empty.	Ensure unit is plugged in. Check power. Press BREW/STOP. Fill water reservoir.

Problem	Possible Cause	Solution
Coffee tastes weak.	Not enough coffee grounds; incorrect grind size; water reservoir overfilled.	Use more coffee grounds. Use a medium grind. Ensure water level matches desired cups.
Coffee overflows from filter basket.	Too many coffee grounds; filter basket not seated correctly; clogged filter.	Reduce coffee grounds. Ensure filter basket is properly seated. Use a fresh filter. Clean the unit if mineral buildup is suspected.
Iced coffee is not cold enough.	Not enough ice in carafe; Cool Brew Cover not used.	Ensure carafe is filled to 'MAX ICE' line. Use the Cool Brew Warming Plate Cover.
Display shows incorrect time.	Power interruption; clock not set.	Reset the clock using the 'HR' and 'MIN' buttons.

Specifications

- **Model Number:** 2247137
- **Capacity:** 12 Cups (approx. 60 fl oz / 1.774 L)
- **Dimensions (D x W x H):** 12.12" x 10.15" x 14.64"
- **Voltage:** 120 volts
- **Wattage:** 1100 watts
- **Operation Mode:** Fully Automatic
- **Coffee Input Type:** Ground coffee
- **Special Features:** Adjustable Brew Strength, Decaf Brew Selector, Iced Coffee Brew, Small Batch Setting, Programmable Brewing, Automated Clean Function, 4-Hour Auto Shut-off.



Image: A diagram illustrating the dimensions (depth, width, height) of the Mr. Coffee 12-Cup Programmable Coffee Maker.

Warranty Information

This product is covered by a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the manufacturer's official website. Keep your proof of purchase for warranty claims.

Customer Support

For further assistance, product registration, or to inquire about replacement parts, please contact Mr. Coffee customer service or visit their official website.

Online Support: Visit the official Mr. Coffee Store on Amazon for product information and support resources.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0HGNJDXLZ

More documents and user manuals: **https://manuals.plus/**