Manuals+ — User Manuals Simplified.

BAUHN RETRO Bluetooth Speaker Instruction Manual

Contents

BAUHN RETRO Bluetooth Speaker Instruction Manual

RETRO BLUETOOTH SPEAKER

MANUAL INSTRUCTION

RETRO BLUETOOTH SPEAKER

Thanks for choosing our product.
We hope you will enjoy music.

Security guidance

Before using the speaker, please read our specs clearly and keep it for future reference.

1. Stay away from heat, sharp items, direct sunlight and open fire.
2. Do not insert any metal objects, avoid short circuit.
3. Don't repair the product by yourself, please contact the authorized manufacturer to repair it.
4. Avoid rain, spray and other liquids.
5. If the product is overheated, damaged or falling into the liquid, stop using it.
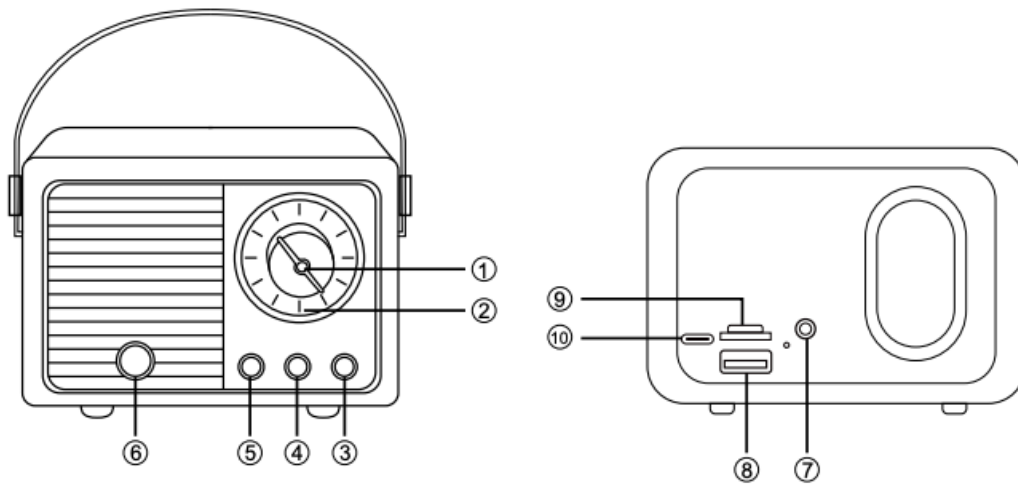6. Use the product according to local standards and regulations.

Technical parameters

Bluetooth	V5.3
Range	10 meters
Power supply	DC 5V/1A
Battery	3.7V 500mAh
Charging time	Approx 1-2 hours
Speaker Output	5W
Operating time	Approx 2-3hours

Accessories

1* Bluetooth speaker
1* USB charging cable
1* Audio cable
1* Manual

Button instruction and Basic Operation

①. Volume adjustment　　②. Volume scale
③. Next song/FM program　④. Power on&off/Play&Pause/Mode Switching
⑤. Previous song/FM program　⑥. Bluetooth indicator light
⑦. AUX audio port　　　⑧. USB drive reading
⑨. TF card　　　　　⑩. Charging port

Button Operation

Button ④

- Power on/off Long press 3~4 seconds
- Play/Pause: short press
- Change Mode: Double press (FM/BLUETOOTH/TF/USB/AUX in)
- When receive calling, short press to answer, double press will refuse the call

Insert audio wire into ⑦ after turn on the speaker, will into AUX mode automatically
Insert USB to ⑧ and TF card to ⑨ to listen music you instore

FM radio: Plug in charging cable firstly (Charging cable acts as an antenna, press ④ twice for FM mode, then press ④ for FM station searching, press again to stop the searching. After the searching, it will automatically enter the first channel.
Short press Button ⑤ for previous music/FM program
Short press Button ③ for next music/FM program
Rotate ① for Volume adjust

Battery charging

1. Insert the charging cable DC 5V, connect the USB to the computer or DC adapter. LED indicator light turns red, it means speaker is charging.

2. When the speaker is fully charged, the red indicator will turn off.

*Remarks:

- The new battery only needs 2-3 hours for the first time to complete the charge and discharge cycles. Avoid overcharging the speaker.
- If speaker is not used for long periods of time, the battery life may shorten slightly.

Bluetooth Pairing

Long press button ④ for 3 seconds to Power on speaker. This will put it in Bluetooth mode directly. Search and select "Bauhn Speaker" on your phone Bluetooth list, when you hear a voice "Connected", it means connection was successful. Indicator light stays on while Bluetooth is active.

REMARKS:

If the speaker was previously paired to another device, remove the connection from the old device before pairing to the new device.

FCC INSTRUCTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Distributed by:
ALDI Inc.
Batavia, IL 60510
www.ALDI.us
Contact: **info@xtremetime.com**
(US)1-**888-204-0934**

Documents / Resources

	BAUHN RETRO Bluetooth Speaker [pdf] Instruction Manual 712774, 2BHCG-712774, 2BHCG712774, RETRO Bluetooth Speaker, RETRO, Bluetooth Speaker, Speaker

References

- [ALDI Grocery Stores - Quality Food. Everyday Low Prices.](#)
- [User Manual](#)