BRAUN Black200 Scouting Cam Small Game Camera User Manual
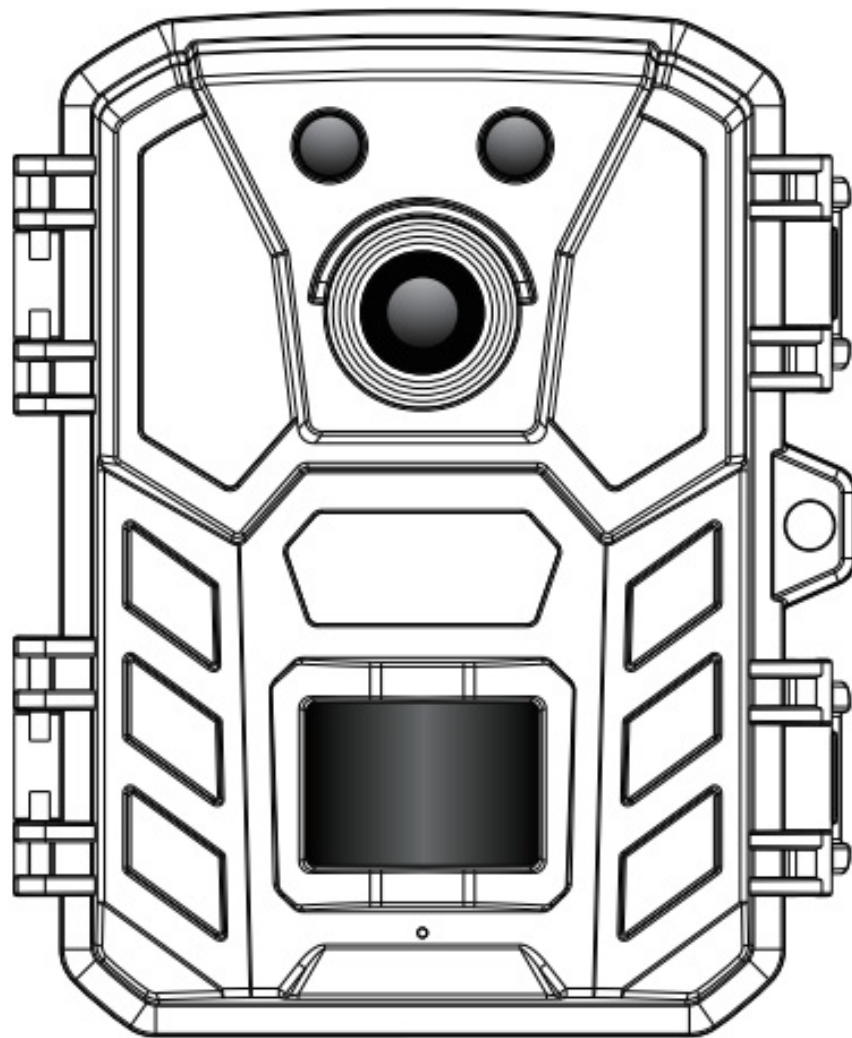
**Black200 Scouting Cam Small Game Camera
User Manual**

**BRAUN Scouting Cam
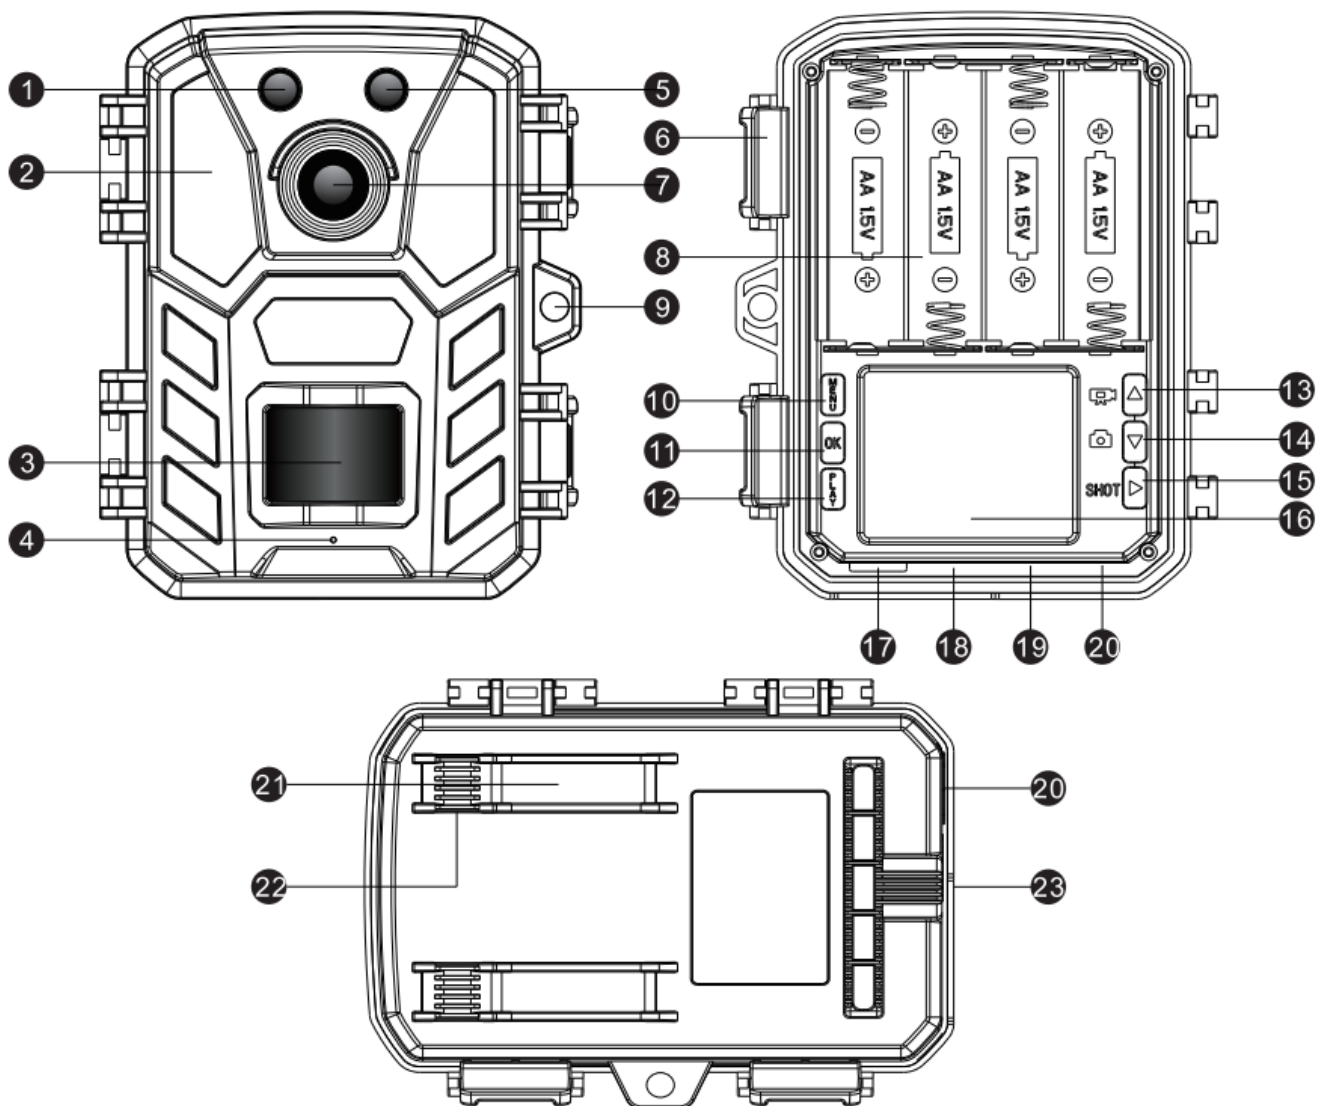BLACK200 WiFi Mini**

Contents

Black200 Scouting Cam Small Game Camera

Camera view

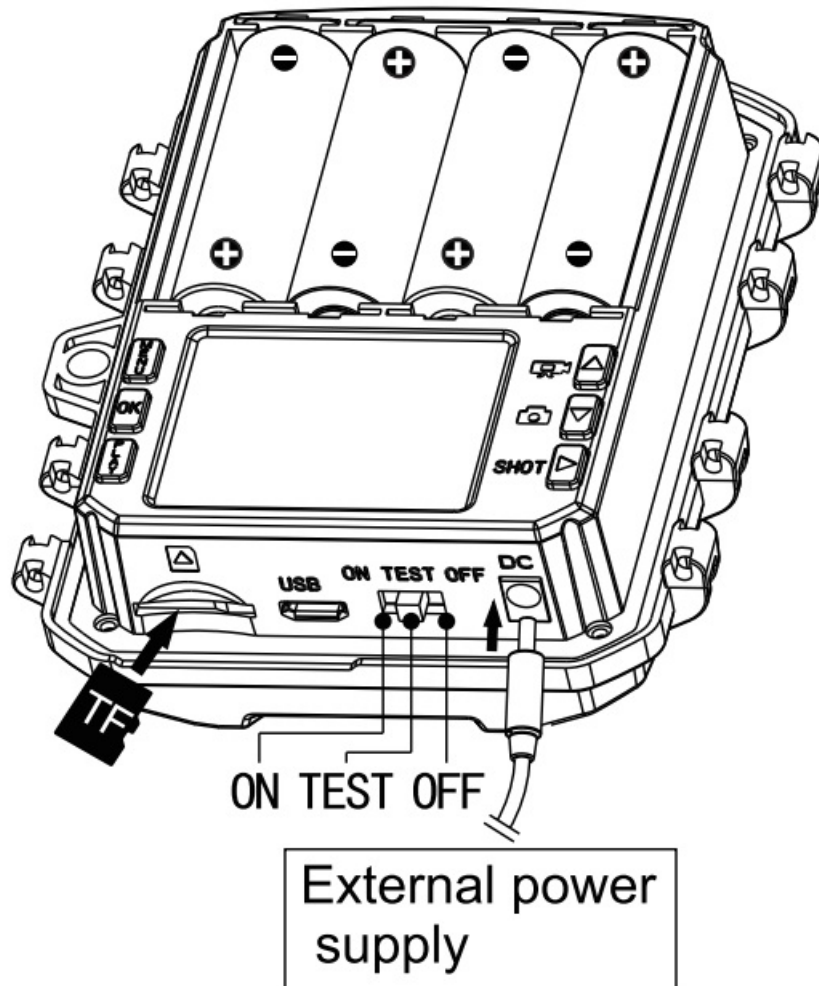|		
1. WiFi LED Indicator 2. Infrared LEDs 3. PIR Sensor 4. Microphone 5. PIR LED Indicator 6. Buckle 7. Camera Lens 8. Battery Compartment	9. Lock Hole 10. Menu Button 11. OK Button 12. Play Button 13. UpNideo Button 14. Down/Photo Button 15. Shot Button 16. LCD Screen	17. Micro SD card sl 18. Micro USB interf 19. Switch (ON/TEST/OFF) 20. DC IN 21. Strap Hole 22. Hole for a Cable 23. Tripod Slot

* Preparation before use

1. Power Supply
This camera support 2 power supply modes: AA battery and external power.
1.1 AA battery: Which need 4 pieces 1.5V AA batteries,and make sure the battery polarityis correct.
1.2 At the bottom of camera, there is external power supply port, which support DC 6V 1.5A power, power plug size is 3.5X1.35mm.
2. Inserting the Memory Card
2.1 Installation of the Class 10 TF(microSD) card with FAT/FAT32. Support up to 32 G Max.

ON TEST OFF

External power supply

3.Switch Function Introduction:

Mode	Description
ON	1. Normal workin
TEST	1. Custom settings ; 2. Manual shooting ; 3. Check and replay
OFF	1.Switch off camera.

* Manually shooting or recording under " TEST " mode

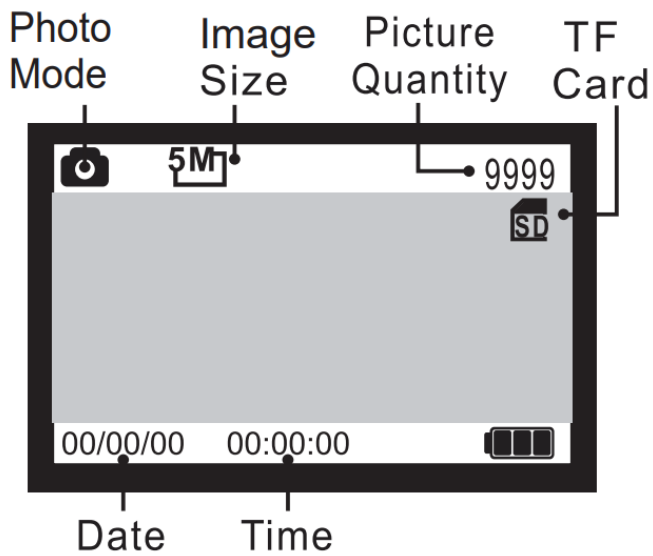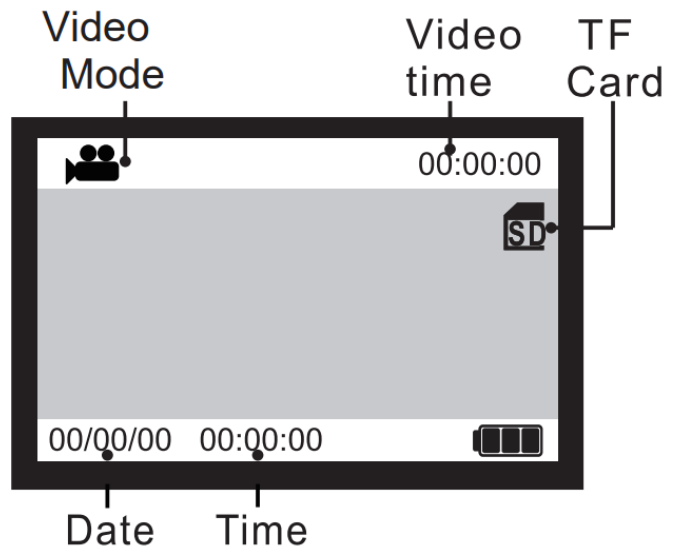| Photo Mode | Image Size | Picture Quantity | TF Card | | Video Mode | Video time | TF Card |

Photo interface

Video interface

• Slide the switch to "TEST" position (the screen is on).
• Press Key ▲or ▼ Key to quickly shift between Photo and Video Mode
• Press Key "SHOT" to take a picture manually or to take a video manually.

* Browse photos/video

Follow steps below to preview photos or videos in your camera:

1. Slide the switch to "TEST" position (the screen is on).
2. Press "PLAY" key to enter the picture or video interface.
3. Press ▲ key and ▼ key to select the photo or video to preview.
4. When playing a video, press "OK" key to play or pause, press ▲ to fast forward the video, press ▼ to fast backward the video.
5. Press "PLAY" key to exit.

* TF card setting
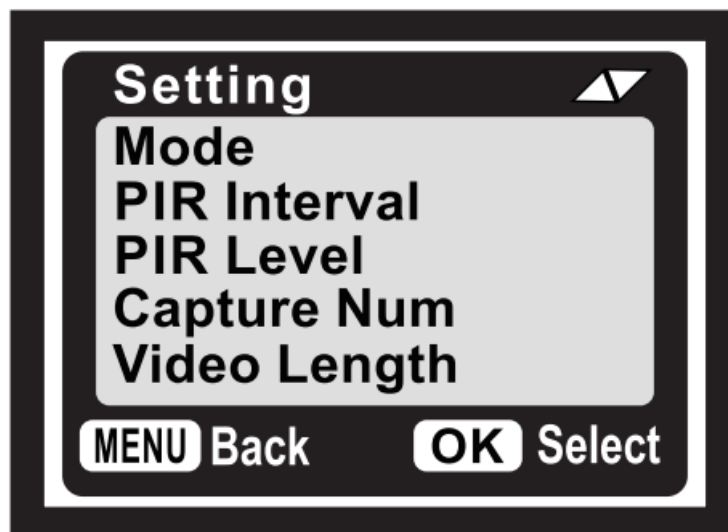
• Slide the switch to "TEST" position (the screen is on);

• Press "PLAY" to enter TF card browsing 4 Press the "MENU" key 4 Press "OK" to enter the delete option 4 Select "One" or "All" and press "Ok" to confirm 4 Press "PLAY" key to exit.

* USB cable connection computer precautions

1. Make sure that the switch is on "Test" mode.
2. The memory card cannot be formatted via USB when connected to computer, only picture/video browsing, copy an delete etc can be done.
3. Before USB connecting, please enter password if a password has been set.

* Menu Overview (Default parameters)

- Slide the switch to "TEST" position (the screen is on);
- Press "Menu" key to enter the setting interface;
- Press ▼, ▲ to scroll through the setting options, and the "OK" button to confirm the setting;
- Press "MENU" key to exit.

Code	MENU	Settings	Code	MENU	Settings
1	Mode	Photo / Video / Photo+Video	12	Audio Recording	ON / OFF
2	PIR Interval	5 seconds – 60 minutes	13	Time Lapse	Normal / TL video / Off
3	PIR Level	Low / Middle / High	14	Timer Setting	ON / OFF
4	Capture Num	1 Photo / 2 Photo / 3 Photo	15	Loop Record	ON / OFF
5	Video Length	3 seconds – 10 minutes	16	Camera Name	ON / OFF
6	Video Size	720P / 1080P /…	17	Security Code	ON / OFF
7	Language	English,	18	Auto WIFI Off	1 Min / 3 Min / 5 Min
8	Set Clock	YY / MM / DD 00:00	19	WIFI SSID	TJ48K1W (Initial)
9	Stamp	Time & date / Date / Off	20	WIFI Password	12345678 (Initial)
10	Photo Size	5M / 8M / 12M / 16M /…	21	Format	NO /Yes (Format TF card)
11	Software	Firmware version number	22	Default	NO / Yes

Note: Loop Recording: When the memory capacity is insufficient, the new recordings will overwrite the old recordings.

* Special function: Setting of "Time Lapse"

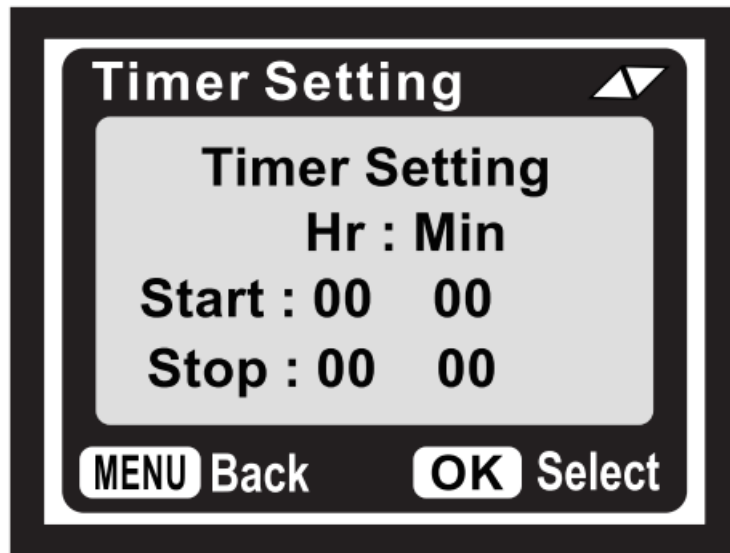If you enable this function, the PIR Sensor of the camera will be deactivated.

* **Normal** : According to the "Mode" setting, the camera will take photos / videos / photo + video in the time interval you set.

* TL video : The camera will take photos at the time interval you set. These photos will be formed to a video.

* Special function: Setting of " Timer Setting "

You can enable it to set a working period for the camera.lt will enter the standby mode if the time is not within the period.

* If the start time is earlier than the current time, the setting will take effect the next day.
* If the start time is later than the current time, the setting will take effect on the same day.

* WIFI APP connection

APP Installation
Before using the WIFI function, please install the APP on the smartphone device.

1. For Android smart phone, please download "Venari" APP first on Google Play and install it. For iPhone, download "Venari" on Apple Store and install it.
2. You can also scan the QR code to get the APP "VENARI".

Android/IOS

http://www.dvplayer.net/venari.html

WiFi Connection
Press "User Guide" button which is in the upper right corner of the "VENARI" APP, please watch the "User Guide" video carefully before connecting.

1. Make sure camera is turned on. (TEST/ON mode both can be connected)
2. Before using the "VENARI" APP, please make sure the phone's Bluetooth and WiFi functions are turned on.

Step 1: Turn on VENARI app, click "Connect device WIFI" Note: During the connection process, VENARI may need to access phone's location, pictures and other files's operation rights. Please all select "ALLOW" or "OK."
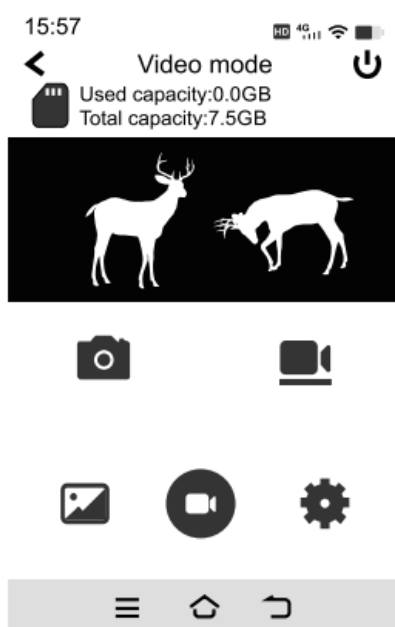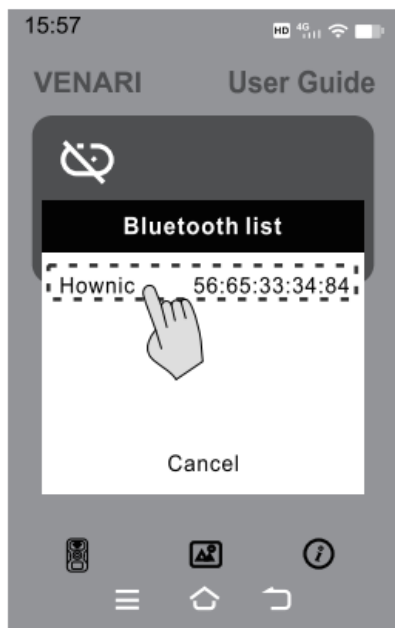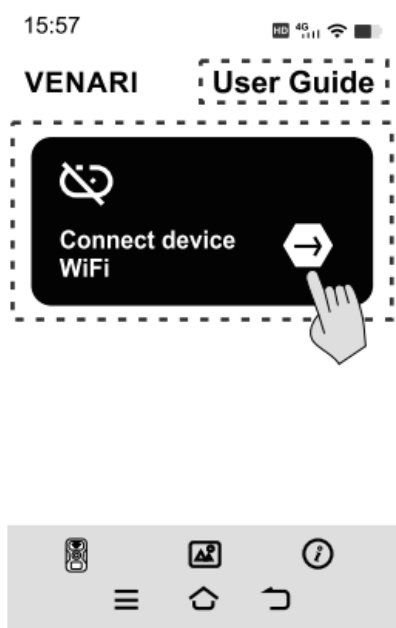**Step 2:** Select camera's Bluetooth name in Bluetooth List.(Hownic)

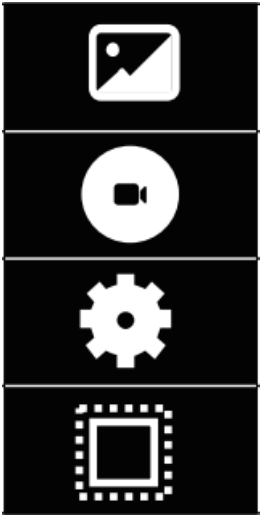**Step 3:** Enter the password and press "OK" to confirm.
Step 4: The APP will automatically complete the connection within 60s.
Step 5: When connecting again, you can quickly connect to the corresponding camera in "Device List".
Note:

1. When the WIFI is waiting for connection, WIFI status LED indicator will flash frequently.

2. When the WIFI connected, the WIFI status indicator will flash once every second.

3. If the connection fails, please turn on the camera again, and exit the APP VENARI at the same time, and then reconnect.
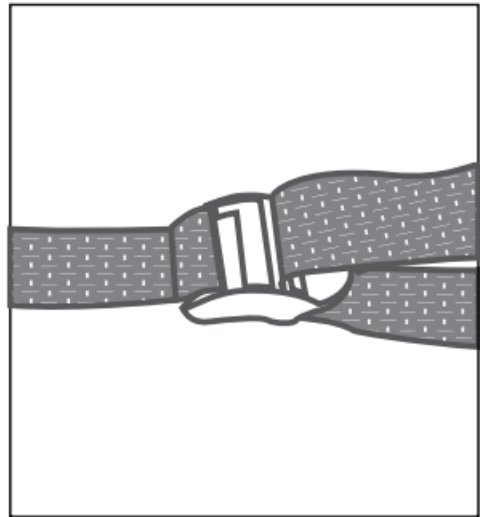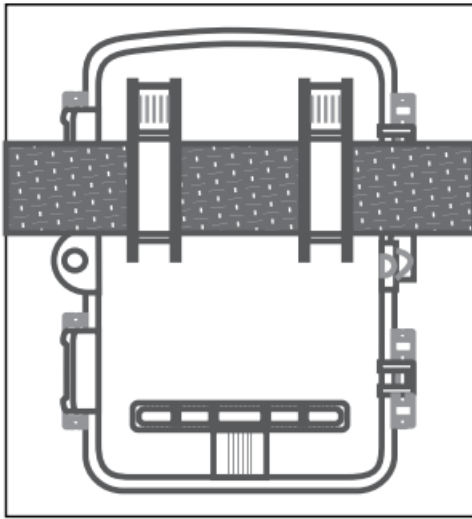
		Exit WiFi connecting
		Battery power of the camera
		Photo mode select
		Video mode select
		File browsing
		Shooting
		Camera Settings
		Muti-select

* Setup the camera outdoor

Once all the settings have been done, the camera is ready for field use:

- Mount the camera about 0.5-2m high with the camera pointed at a slight downward angle.
- Keep the camera facing north or south NOT east or west due to sunrise and sunset could produce false triggers and overexposed images.
- Clear all obstructions in front of camera to avoid obscuring camera lens or PIR sensor. Otherwise, the camera may be triggered by mistake during windy or hot days.
- In order to avoid false triggers, you should adjust PIR sensitivity depending on the object or wild animals size, the speed and distance of the movement.
- Make sure that time and date is correct.
- Make sure that the camera's mode switch is "ON" mode(before you leave).
- Use the securing strap supplied to attach the Wildlife Camera to a tree or another object. The illustrations below demonstrate how to fasten the securing strap.

CE MARKING

The CE marking complies with the European standards and indicates that the product meets the requirements of the applicable EU directives. The complete declaration of conformity can be found on our website **www.braun-phototechnik.de** directly on the product page.

BRAUN PHOTO TECHNIK
GmbH Merkurstr. 8 72184
Eutingen Germany
post@braun-phototechnik.de
www.braun-phototechnik.de

Documents / Resources

BRAUN Black200 Scouting Cam Small Game Camera [pdf] User Manual
Black200, Scouting Cam Small Game Camera, Small Game Camera, Scouting Cam, Game Camera, Camera

References

- 🌐 **BRAUN Photo Technik Germany – Since 1915**