Danfoss Redia Herz Thermostatic Sensors Installation Guide

ENGINEERING
TOMORROW
Danfoss Redial® Hers / 015G3337
Installation Guide
Danfoss Redial® Hers thermostatic sensors series

Contents

1 Installation
2 Blind mark
3 Documents / Resources
4 Related Posts

Installation

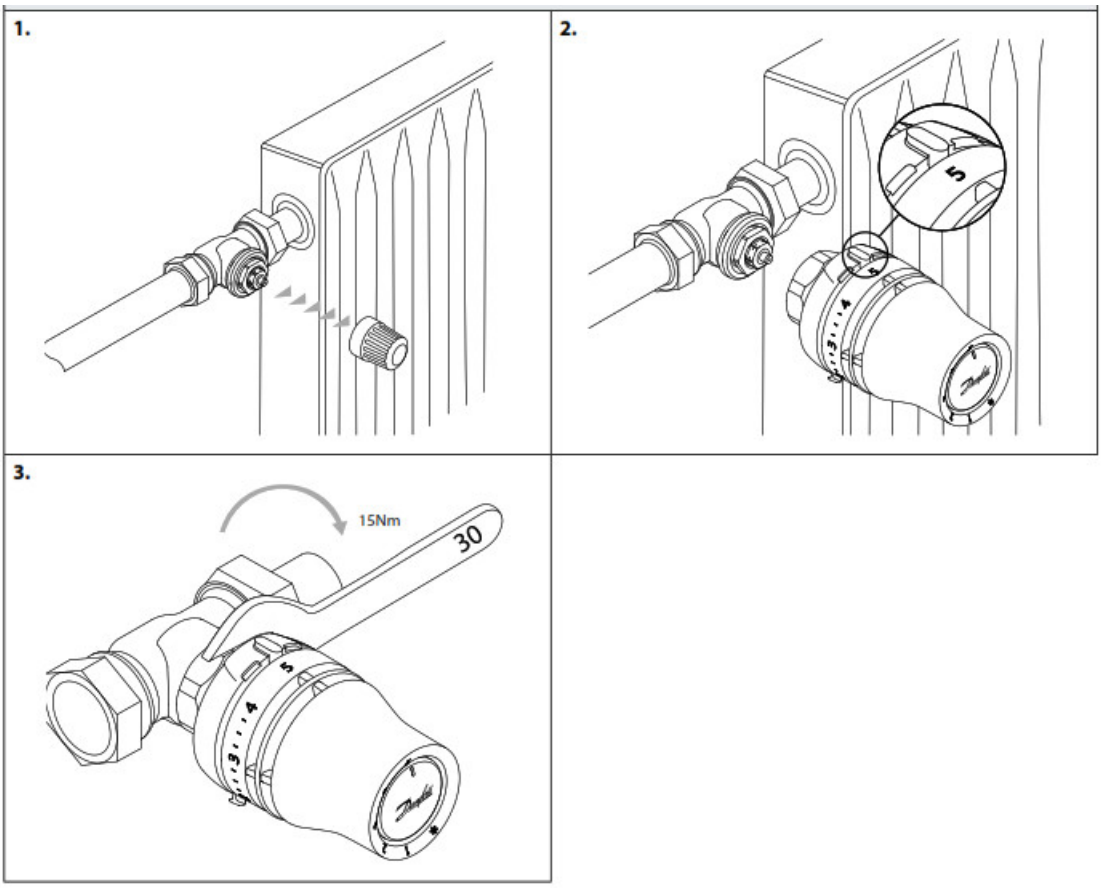

Temperature Limitation

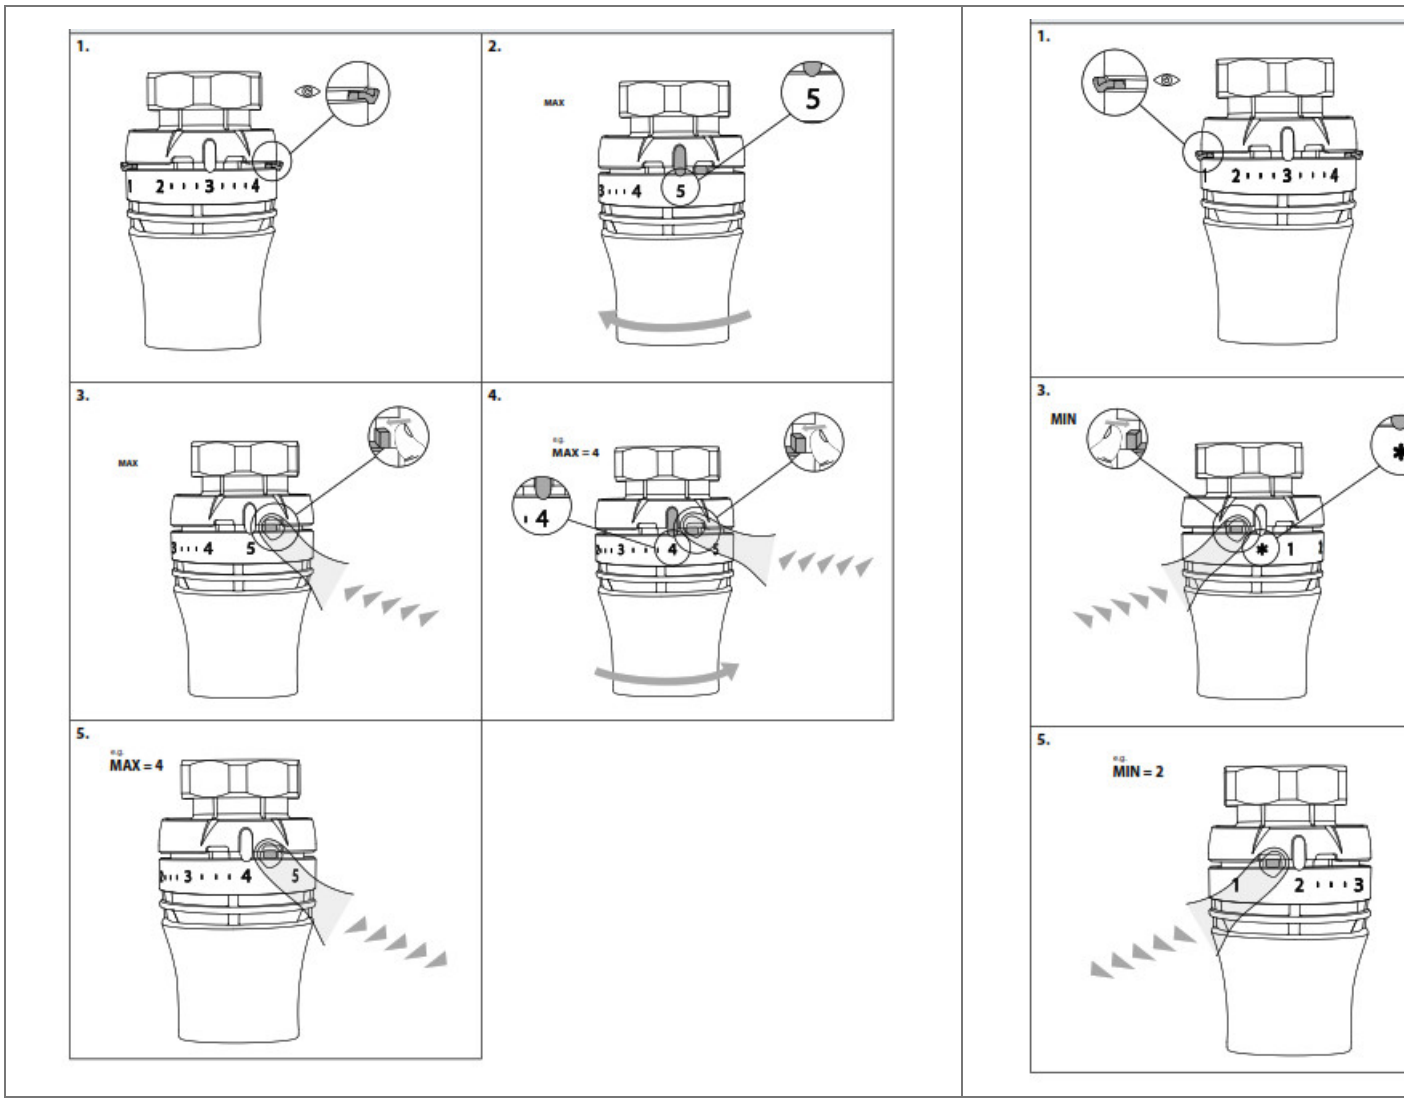

Blind mark

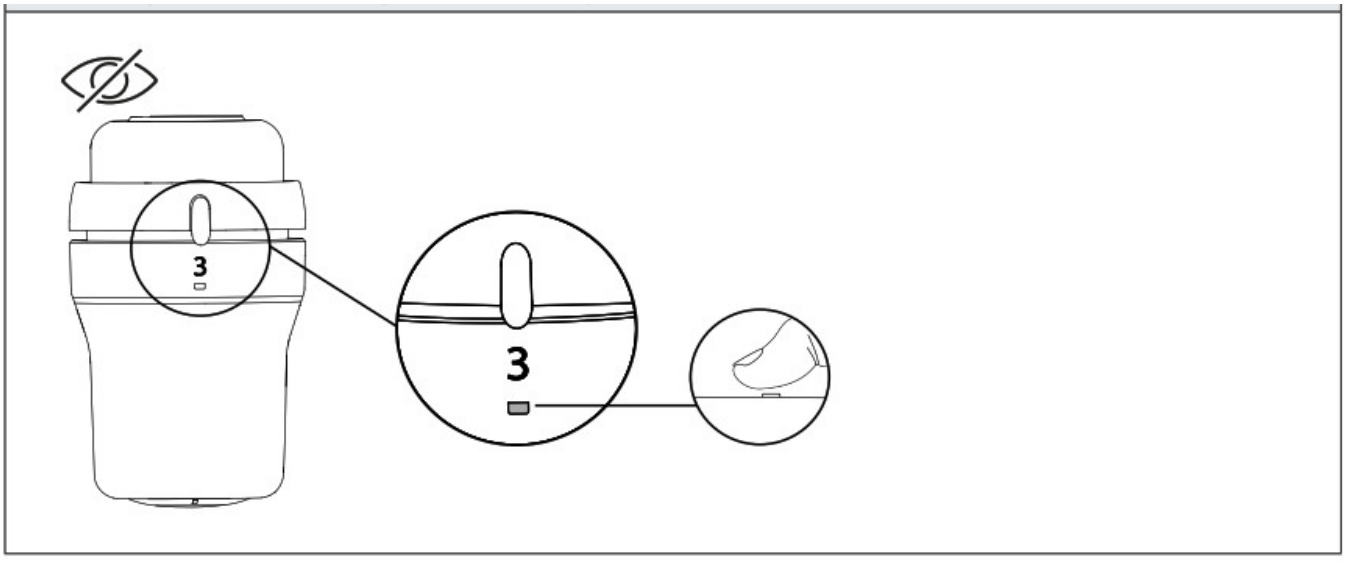

Documents / Resources

	Danfoss Redia Herz Thermostatic Sensors [pdf] Installation Guide AN448535264959en-000101, 015G3337, Redia Herz Thermostatic Sensors, Redia Herz, Thermostatic Sensors, Sensors

Manuals+.