Manuals+ — User Manuals Simplified.

UT 72-UT 73 Universal
Thermostat

Danfoss UT 72-UT 73 Universal Thermostat Installation Guide

Contents

Danfoss UT 72-UT 73 Universal Thermostat

Product Information

Specifications

- Thermostat Types: UT 72 and UT 73
- Model Number: 089 060R9735
- For UK customers: Danfoss Ltd., 22 Wycombe End, HP9 1NB, GB
- Dimensions: 04080, 80, / 168
- Terminal Size: AMP 6.3 x 0.8 mm (0.25 x 0.03 in)
- Electrical Ratings:
    - AC-1: 16 A / 250 V ~
    - AC-3: 7.5 A / 250 V ~
    - AC-15: 1 A / 250 V ~

Product Usage Instructions
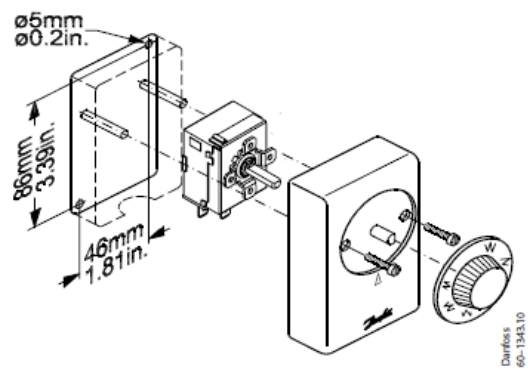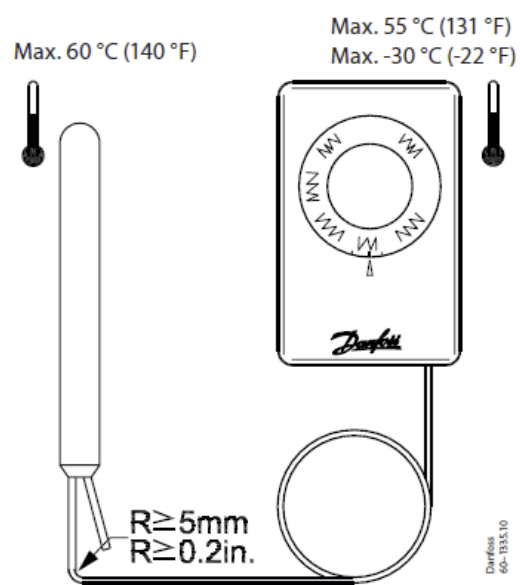
Installation Guide
Follow the installation guide provided in the user manual to correctly set up the thermostat.
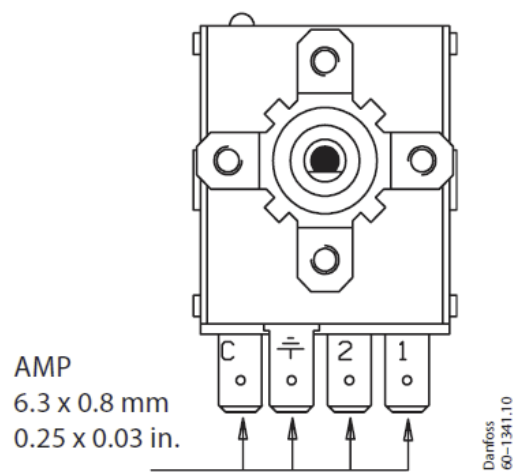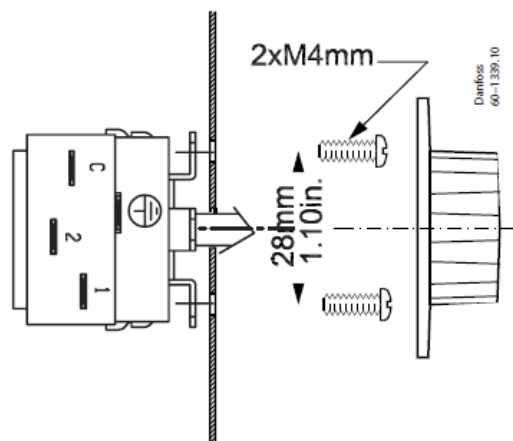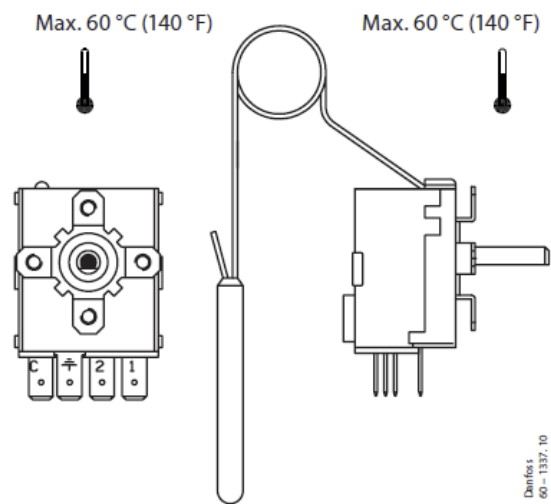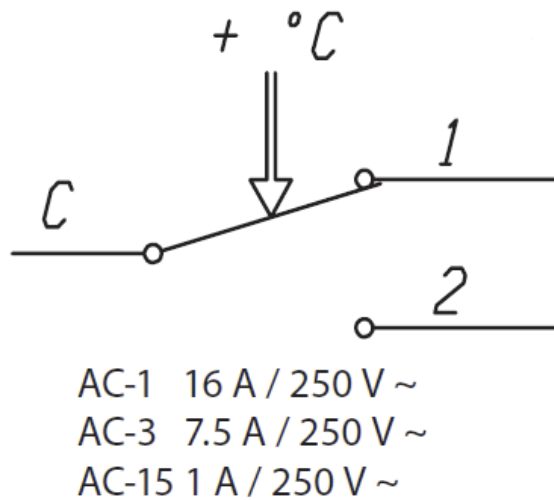
Setting Temperature

1. Use the controls to set the desired temperature on the thermostat.
2. Make sure to set the thermostat to the appropriate mode (heating or cooling) as needed.

Troubleshooting
If you encounter any issues with the thermostat, refer to the troubleshooting section of the user manual for solutions.

Max. 60 °C (140 °F)

Max. 55 °C (131 °F)
Max. -30 °C (-22 °F)

R ≥ 5mm
R ≥ 0.2in.

ø5mm
ø0.2in.

86mm
3.39in.

46mm
1.81in.

Max. 60 °C (140 °F)   Max. 60 °C (140 °F)

C ⏚ 2 1

Danfoss
60 – 1337. 10

2xM4mm

Danfoss
60–1339.10

C
2
1

28mm
1.10in.

C ⏚ 2 1

AMP
6.3 x 0.8 mm
0.25 x 0.03 in.

Danfoss
60–1341.10

+ °C

C   1

2

AC-1   16 A / 250 V ~
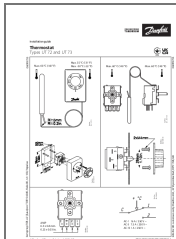AC-3   7.5 A / 250 V ~
AC-15 1 A / 250 V ~

FAQs

Q: How do I reset the thermostat?
A: To reset the thermostat, locate the reset button on the device and press it for a few seconds until the display resets.

Q: Can I program a schedule on this thermostat?
A: Yes, this thermostat allows for programming schedules. Refer to the user manual for detailed instructions on setting up a schedule.

Documents / Resources

Danfoss UT 72-UT 73 Universal Thermostat [pdf] Installation Guide
UT 72, UT 73, UT 72-UT 73 Universal Thermostat, UT 72-UT 73, Universal Thermostat, Thermostat

References

- **User Manual**