Manuals+ — User Manuals Simplified.

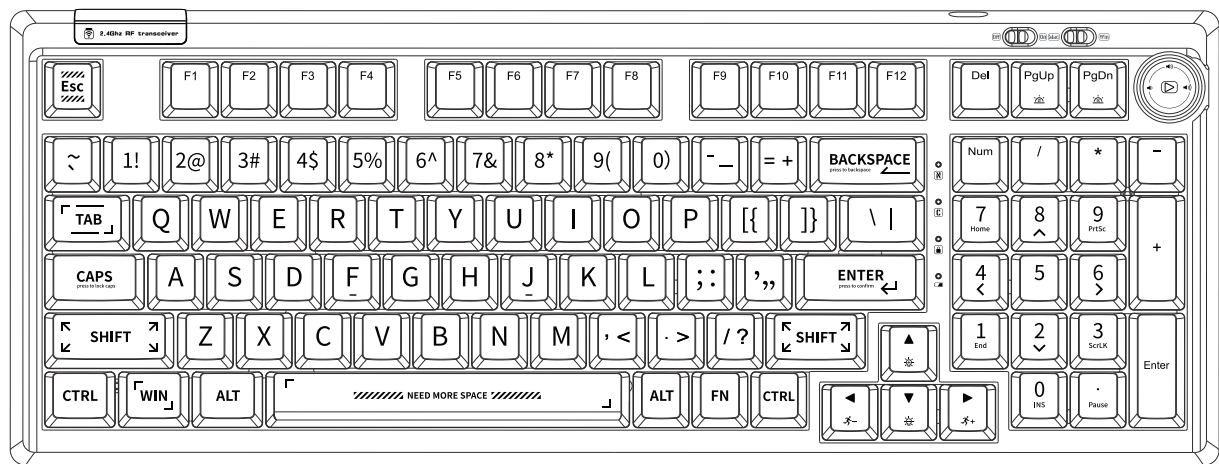# Epomaker RT100 Bluetooth 5.0/2.4G Wireless Wired Mechanical Keyboard User Guide

EPOMAKER RT100
User Guide

Contents

RT100 Bluetooth 5.0/2.4G Wireless Wired Mechanical Keyboard
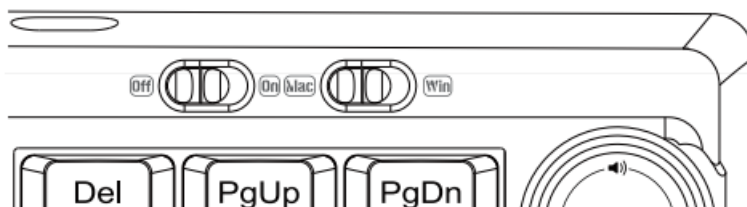
98 Key Layout/Hot Plug Wired/Wireless Mechanical Keyboard

'This Quick Guide is an introduction to the use and functions of EPOMAKER RT100 For in-depth guidance on customizing software functions, please refer to the mainline EPOMAKER RT100

MODEL:	EPOMAKER RT100
Size:	97X UTX 20541 mm
NKRO:	YES
SYSTEM:	Windows XP/VISTA/Z//Olmec
CONNECTION:	USB-C, 2.4GHz Bluetooth 3.0, Bluetooth 5.0.
WEIGHT:	13509
HOTSWAP:	YEB
KEYCAPS:	PBT
LAYOUT:	G7keye

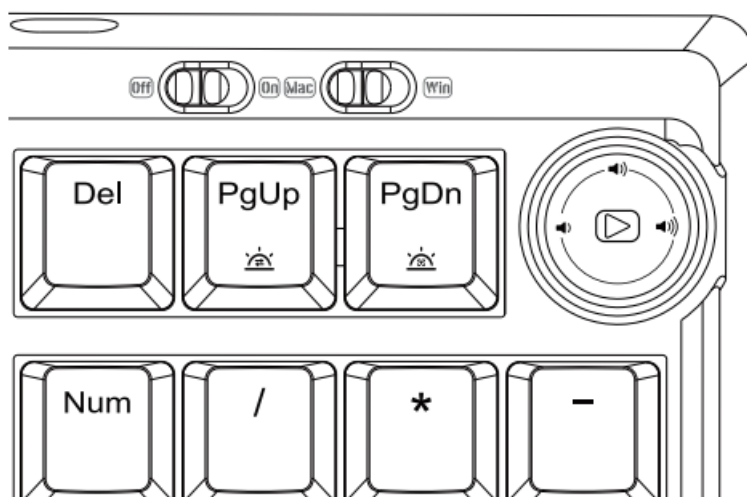| Key Combination	Win Function	Mac Function
FN + ESC	Press and hold for 3s to Restore factory settings	Press and hold for 3s to Restore factory settings
FN + Fl	brightness-	3rightness-
FN + F2	B rightness+	3 rightness+
FN + F3	Vin+tab	art+ 1'
FN + F4	vin+E	Exhale Siri
FN + F5	iail	
FN + F6	Homepage	
FN + F7	Previous song	Previous song
FN + F8	Play/Pause 4	Play/Pause
FN + F9	Next song	Next song
FN + Q FN + W	Short press to switch Bluetooth 1, long press Bluetooth Q to pair Short press to switch Bluetooth 2Long press Bluetooth W to pair	Short press to switch Bluetooth 1Long press Bluetooth Q to pair Short press to switch Bluetooth 2Long press Bluetooth W to pair
FN + E	Short press to switch Bluetooth 3Long press Bluetooth EW to pair	Short press to switch Bluetooth 3Long press Bluetooth EW to pair
FN + R	Sort press to switch 2.4G, long press R To pair	Short press to switch 2.4G, long press R To pair
FN + WIN	1 dock win key	Lock win key
FN + Back Space	Query power (battery power is available in wireless mode)	Query power availabOW e r is available le in wireless mode)

SWITCH PROMPT

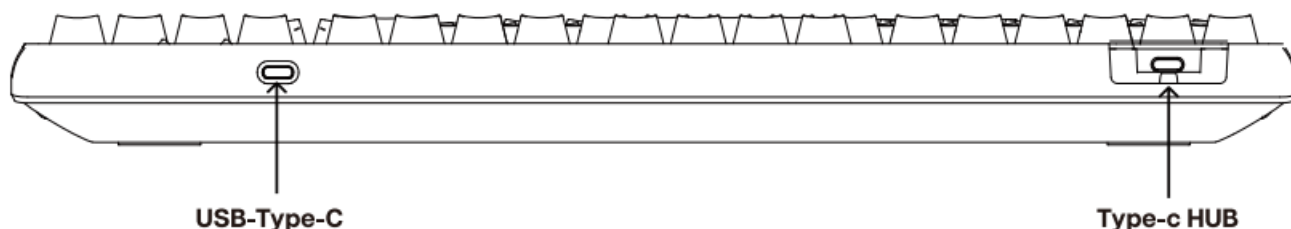| Power switch	OFF power off (wired con section)/ON power on (wireless mode)	OFF power off (wired connection)/ON power on (wireless mode)
Mode switch	iii mac mode/right win mode	Left mac mode/right win mode

Backlight Settings	Win Function	Mac Function
FN +↑	Backlight Brightness +	Backlight Brightness +
FN +↓	Backlight Brightness −	Backlight Brightness −
FN +←	Backlight Effect Speed −	3acklight Effect Speed −
FN +→	Backlight Effect Speed +	Backlight Effect Speed +
FN + DEL	Main backlight effect switching	vain backlight effect witching
FN + PGUP	Toggle monochrome lights	Toggle monochrome lights
FN + PGDN	Battery Save Mode (all lights and TV di splay off)	Battery Save Mode (all lights and TV di splay off}

KNOB MODE

	TURN CLOCKWISE Reduce Volume	
	TURN COUNTER CLOCKWISE Increase Volume	
	PRESS KNOB Play/Pause	
	CUSTOM FUNCTIONS You can also use the software to customize the knob functions.	

Pressing Fn + Del at the same time allows you to switch the RGB effect of

USB-Type-C

Type-c HUB

WIRED OR WIRELESS

Use the connection mode switch on the top of the keyboard.
'OFF means to turn off the power supply. At this time, inserting the cable can realize Wired connection mode and timely charging.
ON means to turn on the power and enter the wireless working mode.

PAIRING BLUETOOTH

FN+QIWIE Long Press for 3 seconds to pair Bluetooth device
FN+QIWIE Short Press to switch to last paired device
Tum the keyboard power switch to ON to enable wireless connection mode.
Long press FN+Q/WIE o start pairing. When pairing, the indicator light flashes quickly.
After pairing is successful the indicator light stays on for a long time, followed by the
Main backlight. If pairing fails within 30 seconds, the indicator light goes out and the
Keyboard enters the sleep mode.

2.4G PAIRING MODE

Switch to 24G wireless connection mode

EN+R

'Tum the keyboard power switch to ON, tum on the wireless connection mode, and long Press FN+R to tum on the 2.4G pairing mode. The indicator light will lash quickly, and Insert the receiver to start pairing. After the pairing is successful, the prompt light wil

Stay on and follow the light effect of the primary key area. If pairing fails within 30 'seconds, The indicator light goes out and the keyboard enters the sleep mode.
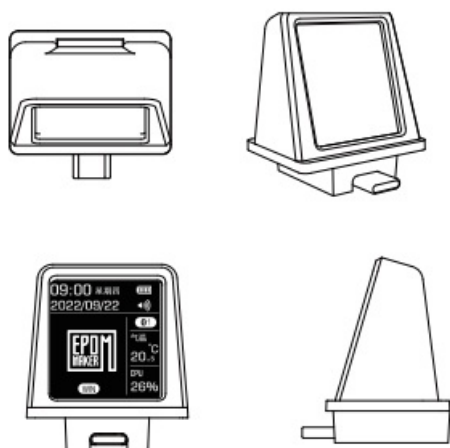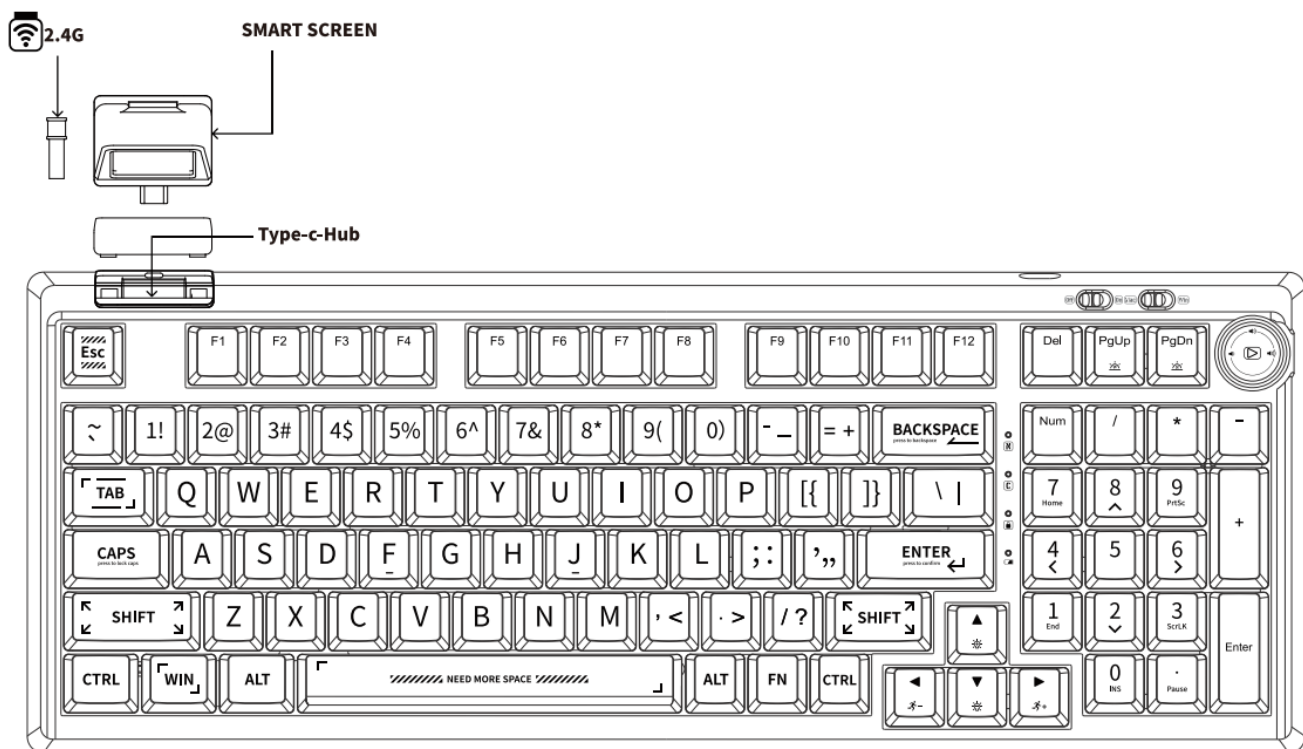
PAIRING WIRED MODE

Turn the keyboard power switch to OFF to enter the wired connection mode, 'and use USB-C wire to connect the keyboard to your device:

MODE SWITCHING

If you need to switch the system or change the connection device of the keyboard, please Adjust the top mode switch of the keyboard to the operating system corresponding to the Computer. The lefts ide is Mac mode, and the right side is Win mode. Otherwise, some shortcut Keys may not work properly.

KEYYBOARD WAKE UP/SLEEP

After the keyboard enters the seep mode, press any key to wake the keyboard. f you are in Bluetooth/24G mode, the keyboard will automatically connect to a Bluetooth/2.4g device.

*Options

HOT PLUG SMART SCREEN:	1.33inches
CONNECTION MODE:	Type-c
DISPLAY CONTENT:	time/date/week/power/current connection mode//volume/weather temperature/ CPU power consumption/health reminder.
DISPLAY PICTURE:	You can choose to change the display picture through the driver. It supports the use of the driver's own drawing board module to make a GIF dynamic background image.

EC REP	**APEX CE SPECIALISTS LIMITED** Unit 3d North Point House, North Point Business Park, New Mallow Road Cork, T23 AT2P, Ireland **Contact:** Wells Tel: +353212066339
UK REP	**APEX CE SPECIALISTS LIMITED** 89 Princess Street, Mancheste, M1 4HT, UK Contact: Wells E-mail: **info@apex-ce.com**

Documents / Resources

	Epomaker RT100 Bluetooth 5.0/2.4G Wireless Wired Mechanical Keyboard [pdf] User Guide RT100 Bluetooth 5.0 2.4G Wireless Wired Mechanical Keyboard, RT100, Bluetooth 5.0 2.4G Wireless Wired Mechanical Keyboard, Wireless Wired Mechanical Keyboard, Mechanical Keyboard, Keyboard

Manuals+,