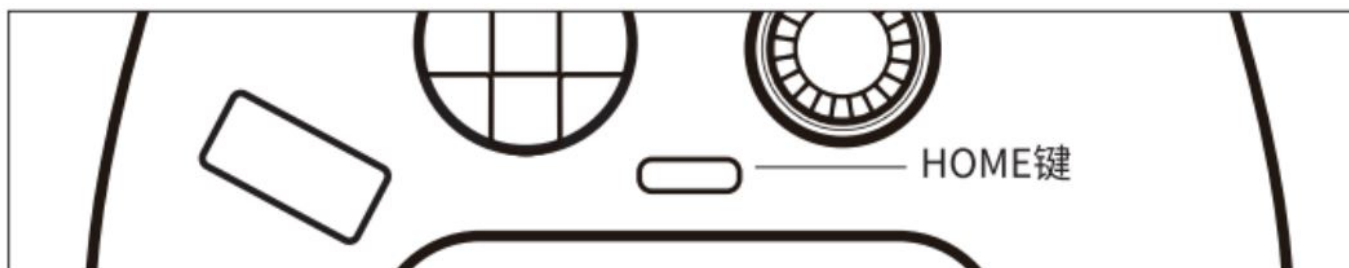# FLYDIGI Apex 3 Elite Gaming Controller User Manual

**FLYDIGI Apex 3 Elite Gaming Controller**



## Connection Controller

Press and hold the HOME button for 3 seconds to enter the Menu, you can set the controller mode, configuration, brightness, etc.



When using on a PC, please change the controller to Xinput mode



Wireless mode                                    Wired mode

**When using on a Android Mobile, please change the controller to Android mode**
**STEP1:** Scan the QR code and download the Android Flydigi Game Center APP
**STEP2:** Enter the APPI – peripheral management, click the connection Controller According to the guide for the controller connection at Android game Center.

When using on Switch, please change the controller to Switch mode Open the Switch, enter the [Handle] option, and long press the HOME button to successfully pair. The button mapping relationship in Switch mode can be

found in the below. If it is paired and connected, when the Switch is in standby state, press the HOME button can wake up the Switch.

| A | B | X | Y | SELECT | START | HOME | - | |
|---|---|---|---|--------|-------|------|---|---|
| B | A | Y | X | - | + | HOME | CAPTURE | **Switch** |

**Force Feedback Triggers Quick Experience**
Flydigi presets 3 force feedback modes, long press the Home button to enter the Menu, enter the [Configuration] page, and you can quickly change it.

**Configuration 1 General Mode**
Force feedback trigger not turned on (factory default).

**Configuration 2 Racing Mode**
Simulate the throttle feel.

**Configure 3 Sniper Mode**
Simulate the hand feel of the gun's paragraph trigger.

**Configure 4 machine gun modes**
Simulation of high-frequency recoil for auto-firing

**Advanced gameplay Open more customization**
Visit Flydigi's official website **www.flydigi.com** download [Flydigi Space Station], you can customize trigger settings, button mapping, lighting effects, etc.

# Flydigi PC Space Station

**Force feedback triggers adjustment**
Adjustable force feedback mode, setting strength, stroke, vibration, etc
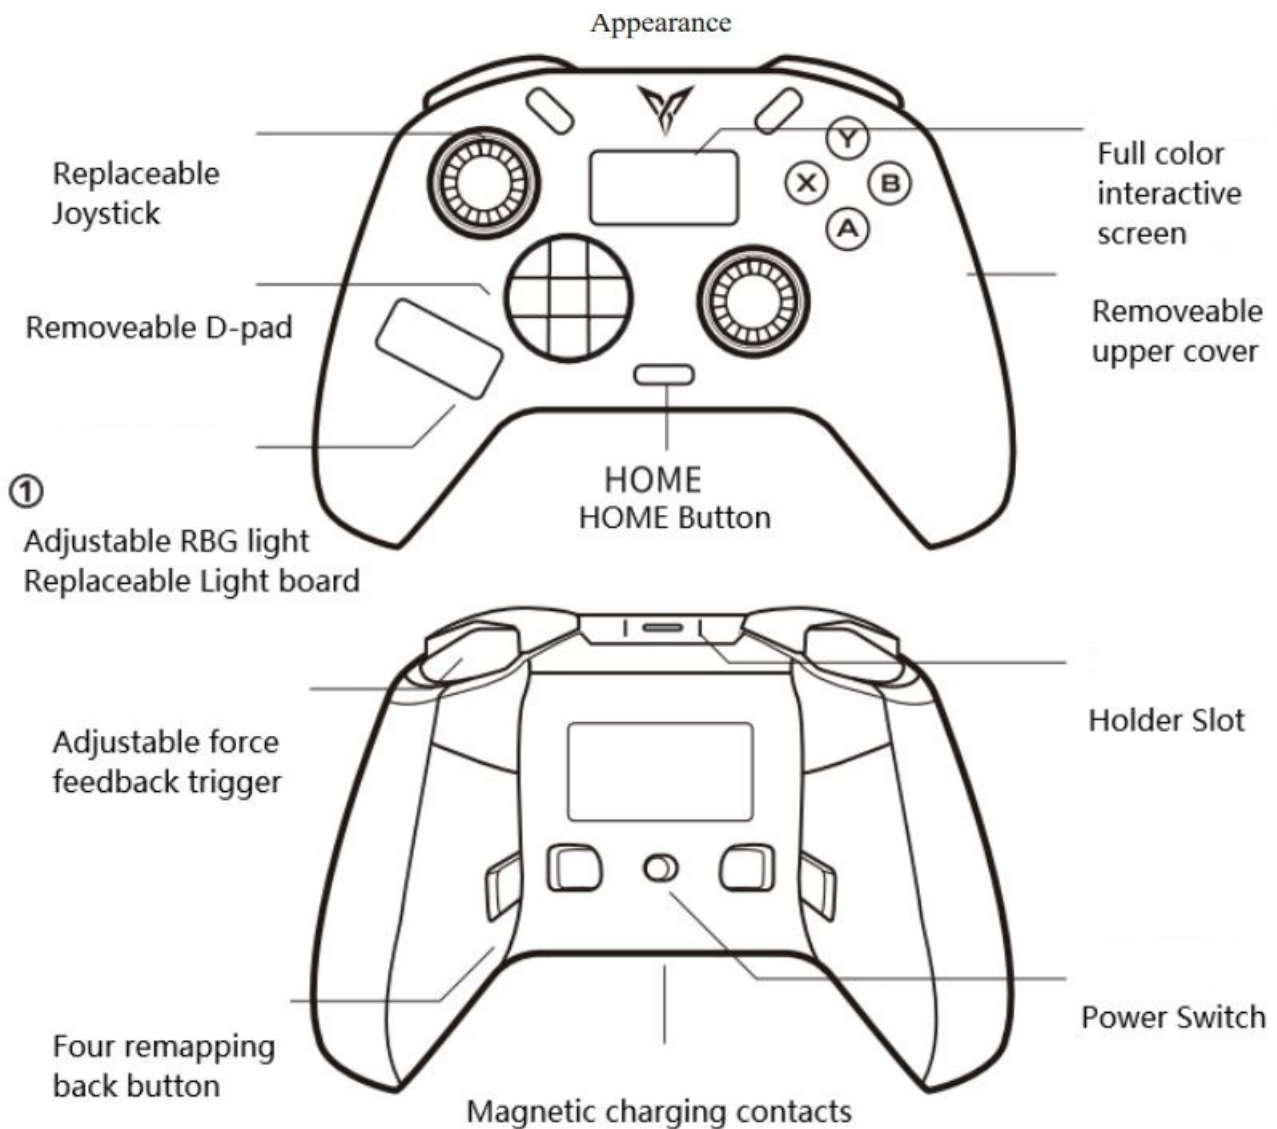
**Lighting adjustment**
Adjustable lighting mode, set light color, brightness, etc

**Button customization**
Adjustable key mapping, setting macro commands and connecting points

**Display picture settings**
Adjustable display animation, set custom pictures

Appearance



Replaceable Joystick

Full color interactive screen

Removeable D-pad

Removeable upper cover

① Adjustable RBG light Replaceable Light board

HOME
HOME Button

Adjustable force feedback trigger

Holder Slot

Four remapping back button

Power Switch
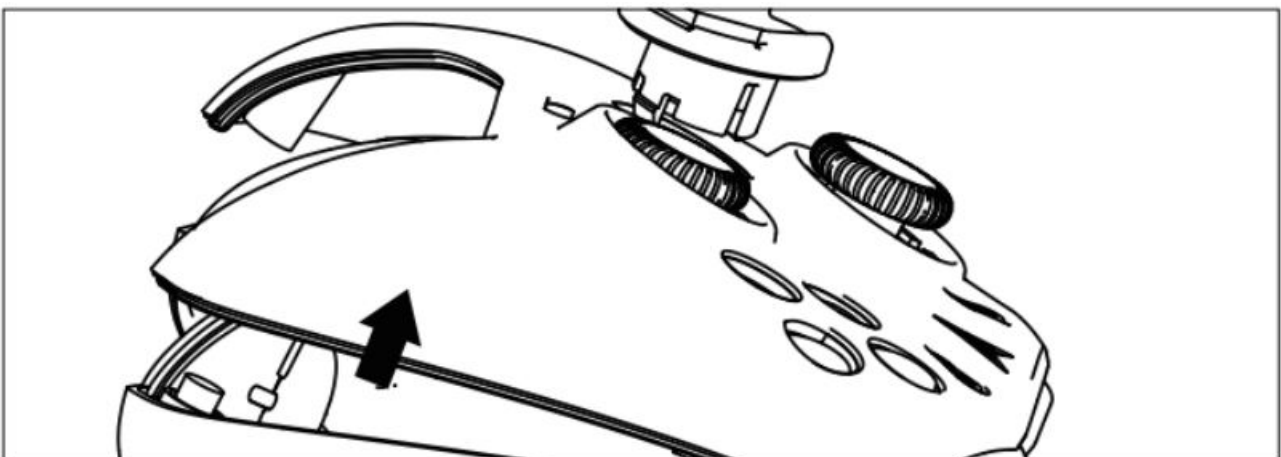
Magnetic charging contacts

**Other accessories**
USB-C cable/USB wireless dongle/Personalized light card/Replacement joysticks/Carring Case/Light card pin/Sticker. Replaceable light plate – comes with an accessory kit, which can be replaced by yourself. For usage, refer to the  instructions for the light plate accessory kit Due to different versions, there may be differences in connotation accessories (Flydigi controller charging base needs to be purchased additionally)
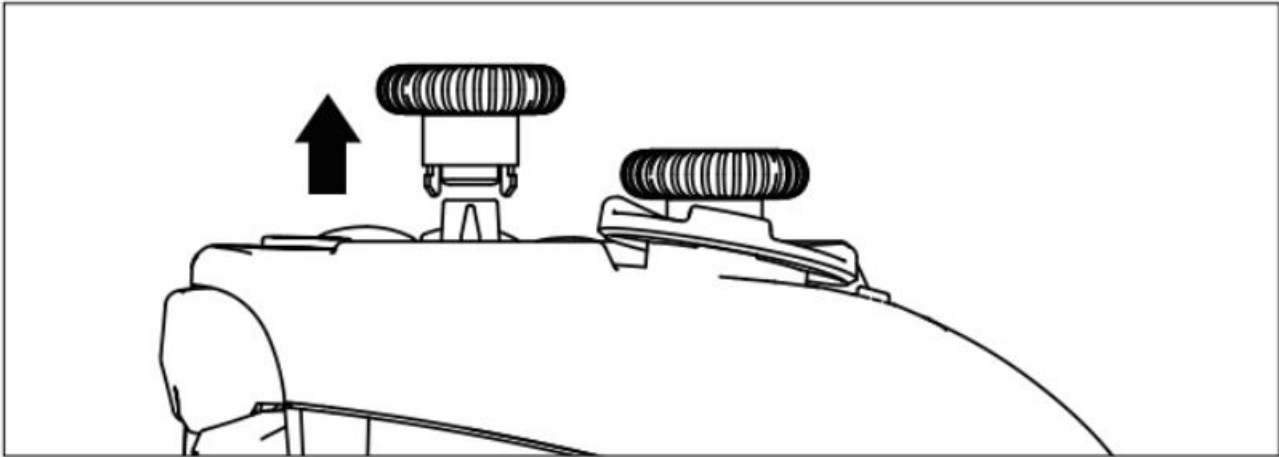
**Parts Description**
Removable upper cover Please remove the D-pad before disassembling, and then lift the gap of the eye handle grip to remove it



**Replaceable Joystick**
Pull it out vertically, you can remove or install the Joystick, and the Joystick of different heights is suitable for

different games



The name and content of harmful substances in the product

## Q&A

**Q: The controller cannot connect to the Dongle and Bluetooth device.**
**A:** Select Pairing in the on-screen menu, it shows Pairing, then turn on the phone's Bluetooth again, or plug the wireless dongle into the device's USB port, keeping the controller close to the receiver.
**Q: The controller connects the device through the wireless dongle, but the button fails.**
**A:** Avoid the receiver being too far away, there is a blockage between the dongle and the controller, and other electronic devices nearby will generate electromagnetic interference.
**Q: The joystick can not return to the center, the trigger is triggered by mistake, and the body sensation is not controlled.**
**A:** Press and hold the SELECT + START + right joystick for three seconds, enter the calibration mode, first leave the controller on the desktop for 5 seconds, then push the left and right joystick to the end and rotate two times, then press the trigger twice, and finally press the SELECT + START + right joystick at the same time to complete the calibration.
**Q: Upgrade the controller firmware.**
**A:** Install the Flydigi game center on the mobile, or install the Flydigi PC space station on the computer, and upgrade the firmware according to the instructions in the software.

## Specifications

| Platform | Mode | Connect way | System Require |
|---|---|---|---|
| PC platform | Xinput/Dinput mode | Wireless Dongler/Wired | Windows 7 and above version system |
| Switch platform | Switch mode | Bluetooth | Switch platform |
| Android platform | Android mode FlashPlaymode | Bluetooth | Android 10 and above |
| iOS platform | Android mode iOS mode | Bluetooth | iOS13 and above version system |

**RF: Bluetooth 5.0, Bluetooth 5.0 BLE**
Operating distance: less than 10 meters Battery information: rechargeable lithium-ion battery, battery capacity 1500mAh, charging time 3~ 4 hours, charging voltage 5V, charging current 1000mA Working current: the current is less than 80mA in use, and the current is less than 0.4mA in standby.
**Product weight:** 310g
**Temperature range:** -5 ℃~ 50 ℃ when in use
**Humidity range:** 20%~ 80% when used

# FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.
**Note:** This equipment has been tested and found to comply with the limits for a class
digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates uses and can radiate radio frequence energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. if this equipmemt does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an autlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

## Documents / Resources



**FLYDIGI Apex 3 Elite Gaming Controller** [pdf] User Manual
APEX3, 2AORE-APEX3, 2AOREAPEX3, Apex 3, Elite Gaming Controller, Apex 3 Elite Gaming Controller

## References

-