KitchenAid Slice and Shred Mixer User Guide

SLICE AND SHRED!

DISCOVER MORE
AT KITCHENAID.COM/QUICKSTART
For exciting recipes, demo videos, product registration, and more, our quick start page has what you need to help you get the most from your new product.

GET STARTED
QUICK START GUIDE
In a few easy steps, you'll be on your way to enjoying something delicious!
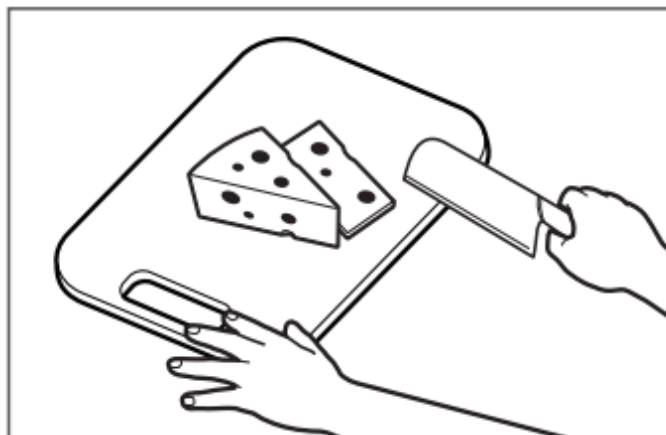For complete instructions and videos, go online to kitchenaid.com/quickstart.

WARNING

Rotating Blade Hazard

Always use food pusher.

Keep fingers out of openings.

Keep away from children.

Failure to do so can result in amputation or cuts.

NOTE: For best results, feed only one item at a time into the feed tube (ex. carrot).

Do not feed items into the feed tube by hand; always use the feed tube pushers.

If food remains in the Fresh Prep Slicer/ Shredder attachment after running, turn the Stand Mixer to "0" (Off), remove the remaining items, and place back into the feed tube to shred or slice again.

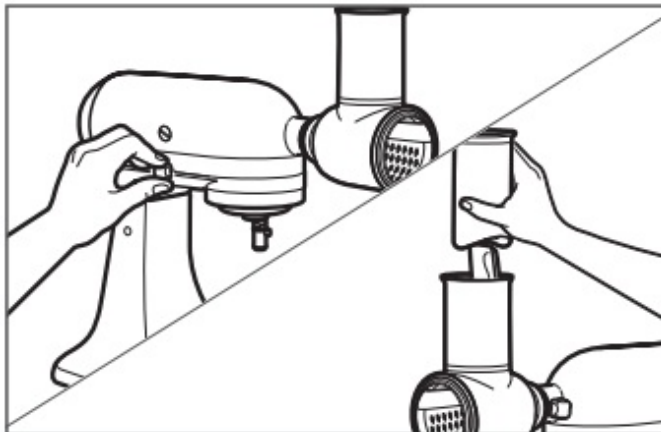1. Place a large bowl under the Fresh Prep Slicer/Shredder attachment to catch food as it comes out.

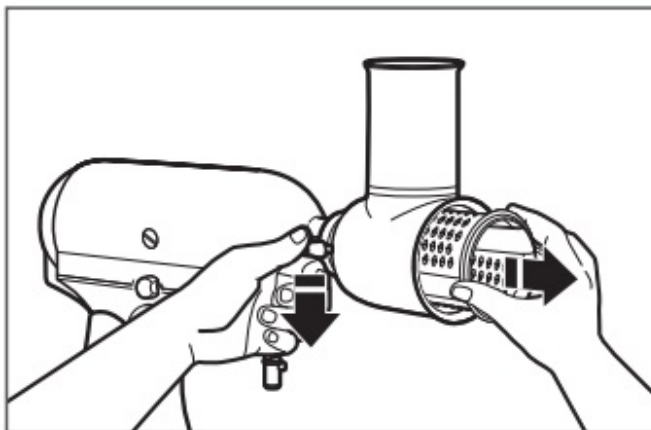2. Cut food so that it fits within the feed tube.

3. Turn the Stand Mixer to Speed 4, then use the appropriate feed tube pusher to feed your food item into the feed

tube.

4. Push down on the release lever and pull out the blade, in order to change to a new blade.

KitchenAid®

Contents [**hide**]

Documents / Resources

	KitchenAid Slice and Shred Mixer [pdf] User Guide Slice and Shred Mixer

References

- **Premium Major & Small Kitchen Appliances | KitchenAid**
- **Kitchen Appliances to Bring Culinary Inspiration to Life | KitchenAid**
- **A Pinch Of Help | KitchenAid**