Manuals+ — User Manuals Simplified.
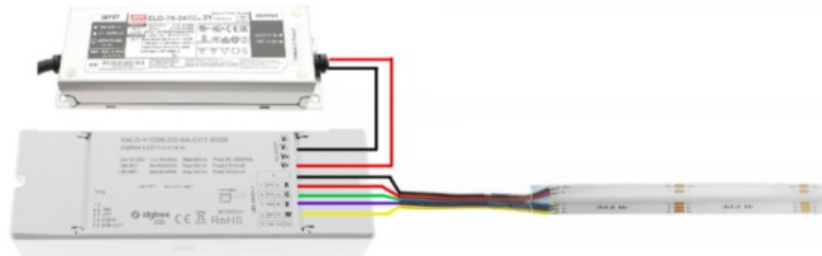

LED Store Connecting A LED Strip Light To A LED Driver User Guide

📄

LED Store Connecting A LED Strip Light To A LED Driver User Guide
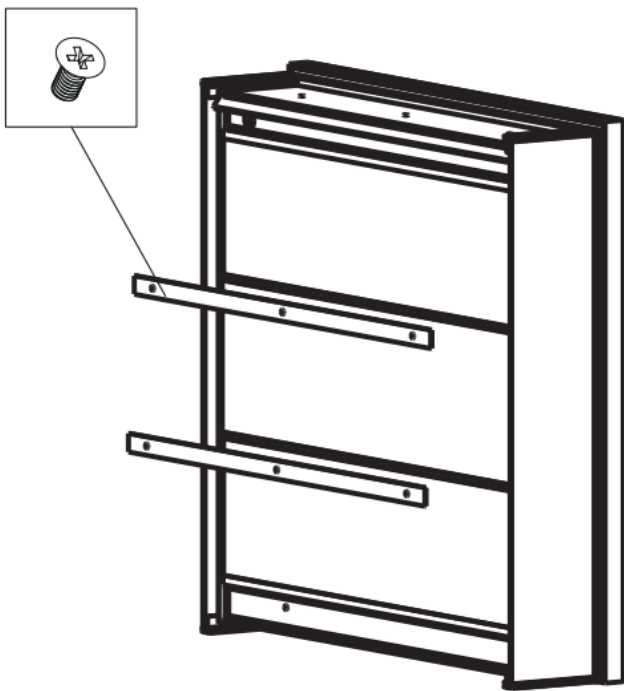

LED driver and LED strip removal instruction manual
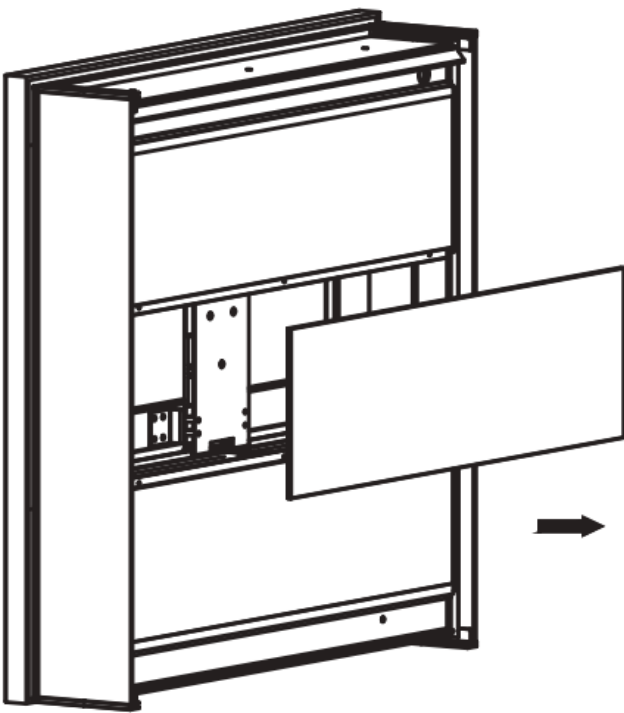This product contains a light resource of energy efficiency class .
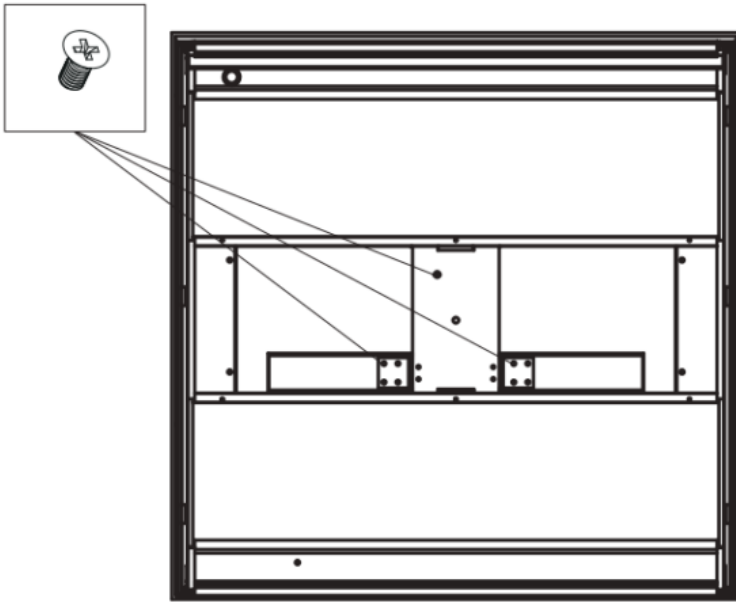
Contents

Remove the LED strip

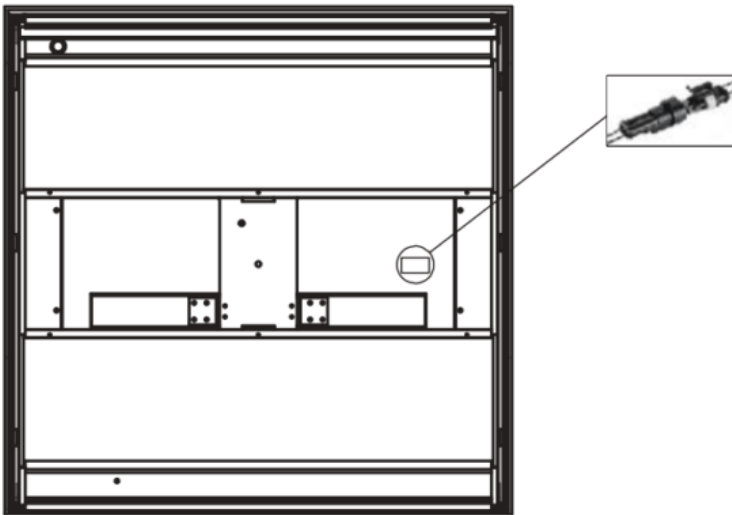1. The cabinet back , remove the screws connecting the cabinet to the back plate.
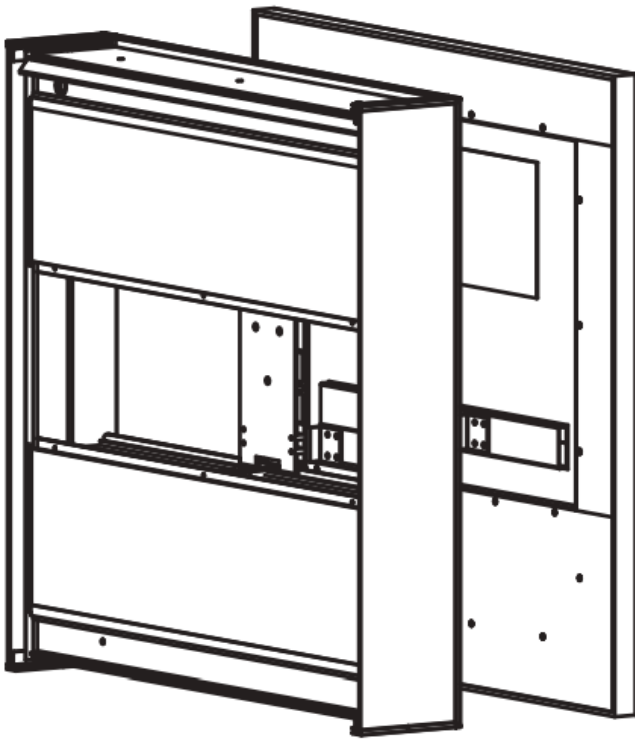
2. Remove the back plate

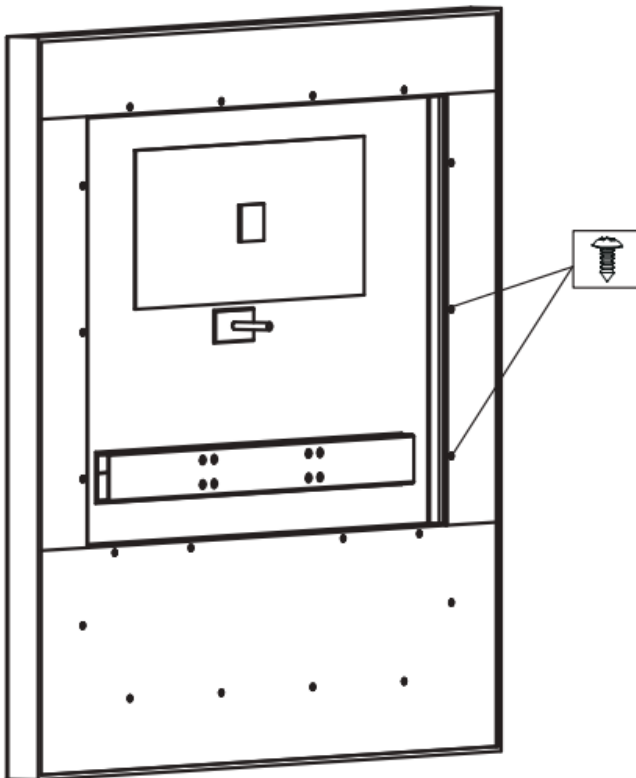3. Remove the screw connecting the cabinet to the door.

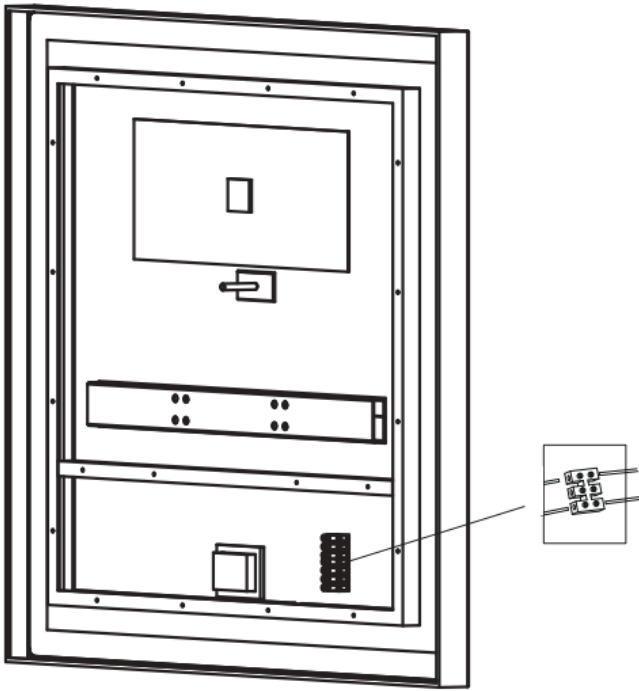4. Disconnect the male and female plug connectors.

5. Take out the cabinet

6. Remove the screw connecting the door to the back plate on the door, take out the back plate.
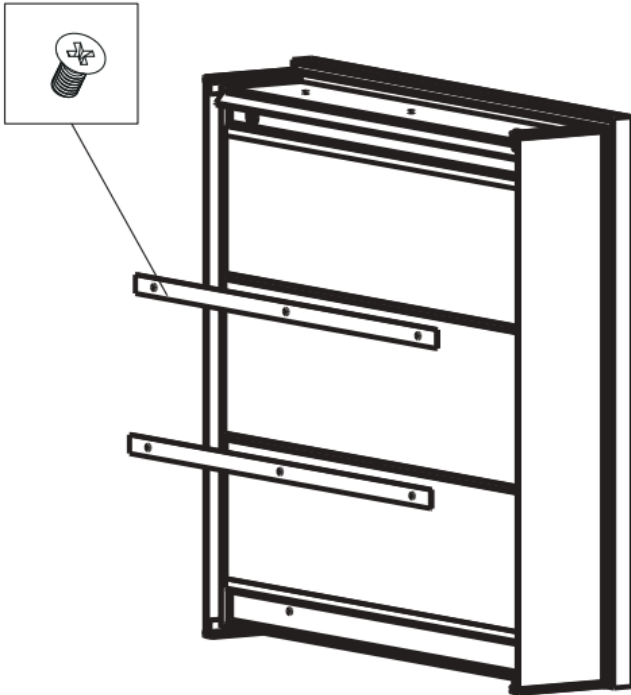

7. Remove the led strip cable from the terminal station and take out the LED strip.
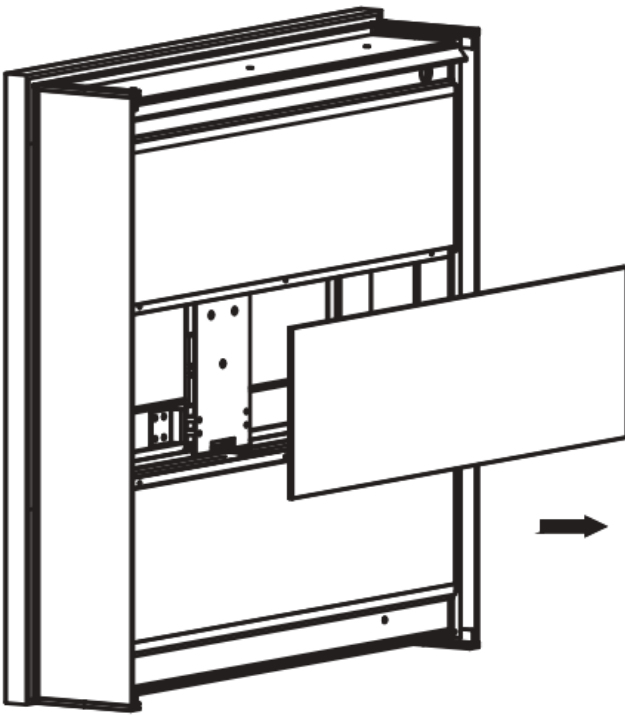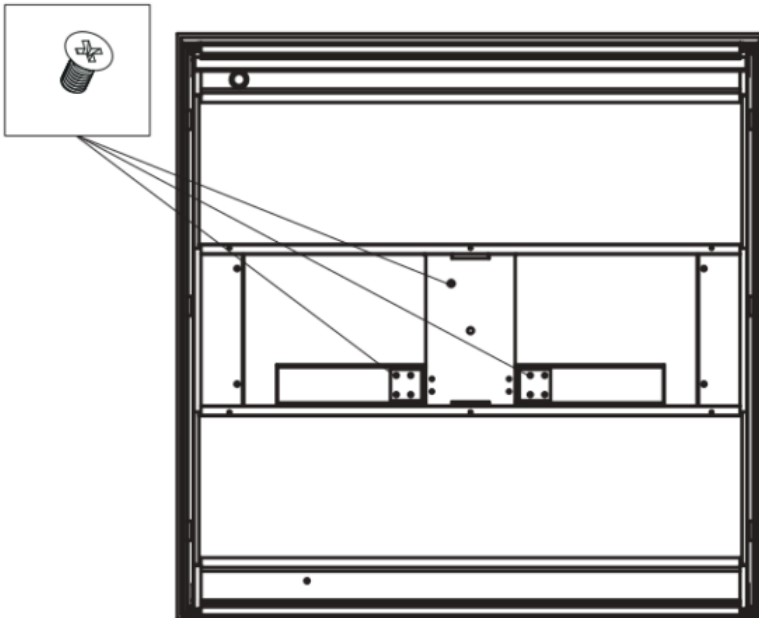
Remove the driver

1. The cabinet back , remove the screws connecting the cabinet to the back plate.
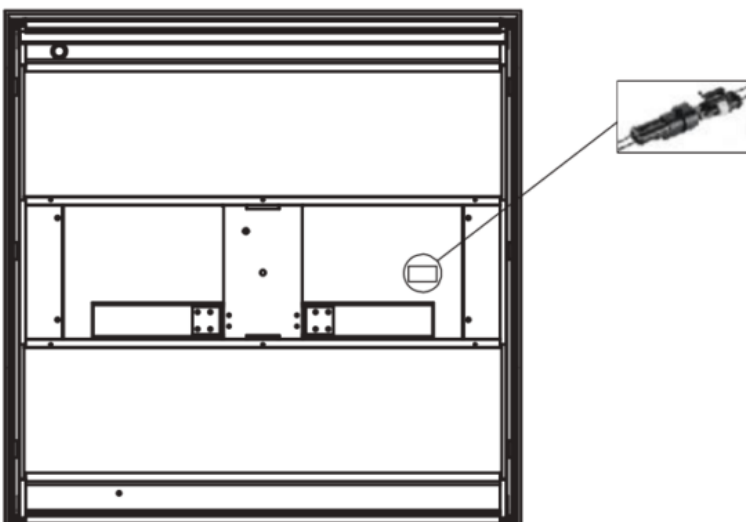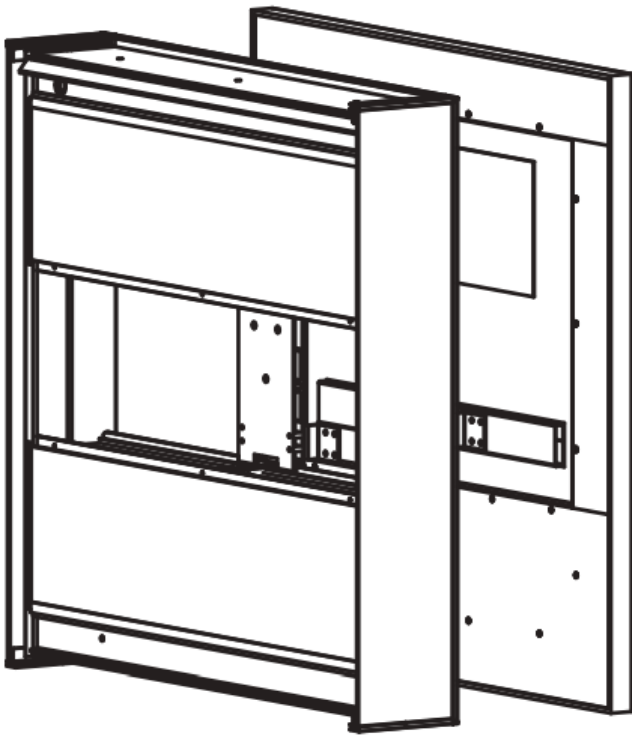

2. Remove the back plate.

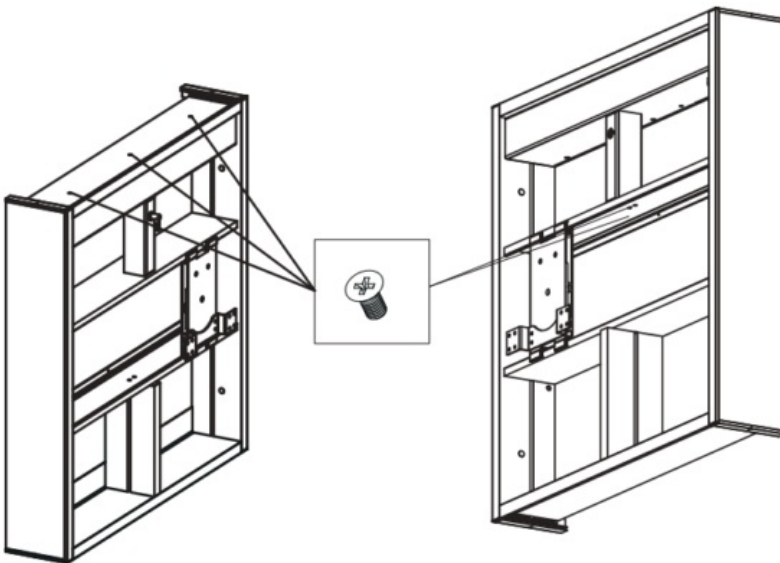3. Remove the screw connecting the cabinet to the door.

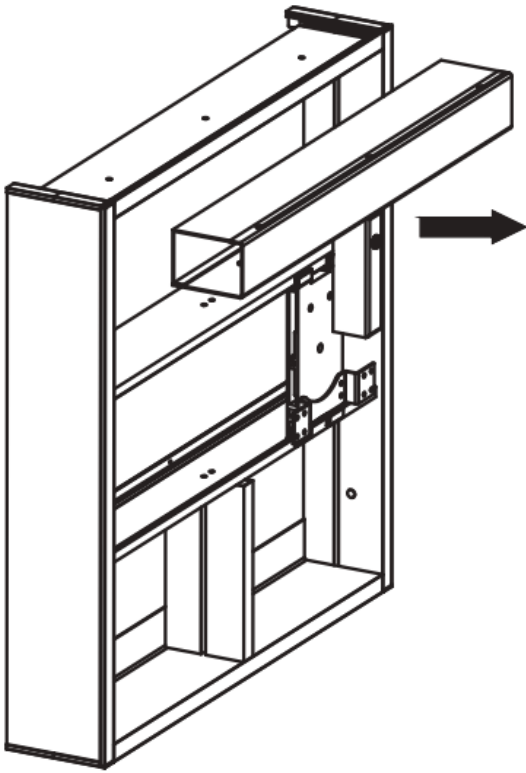4. Disconnect the male and female plug connectors.
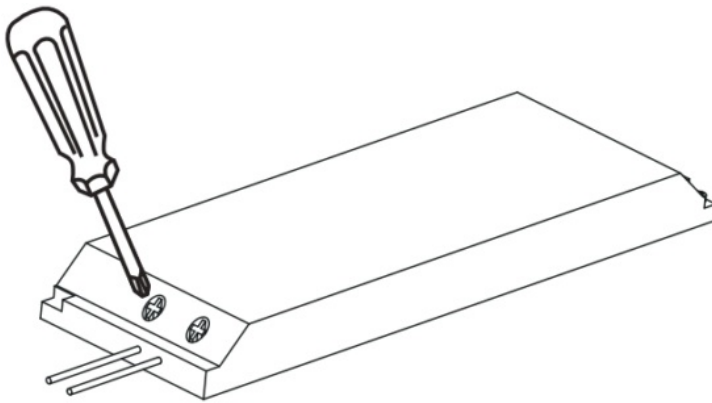

5. Take out the cabinet

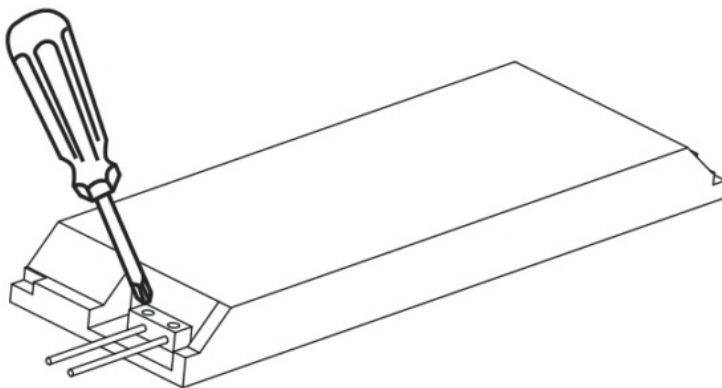6. Remove the screw on electric ail box of the cabinet

7. Take out the electricia box.

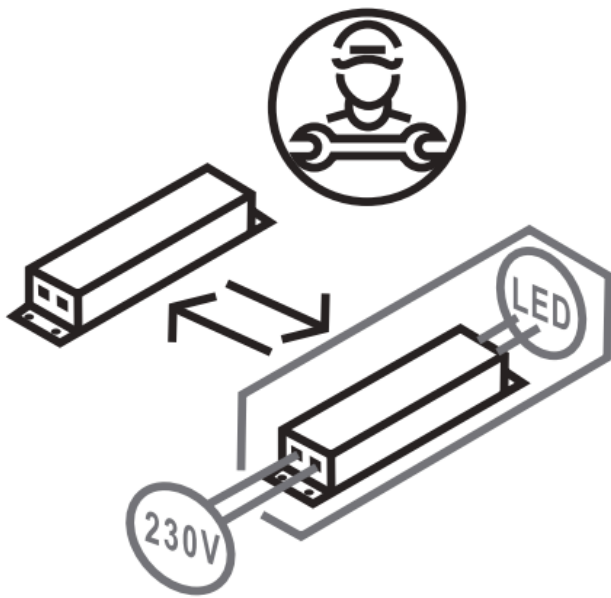8. Unscrew both ends of the led driver cover.

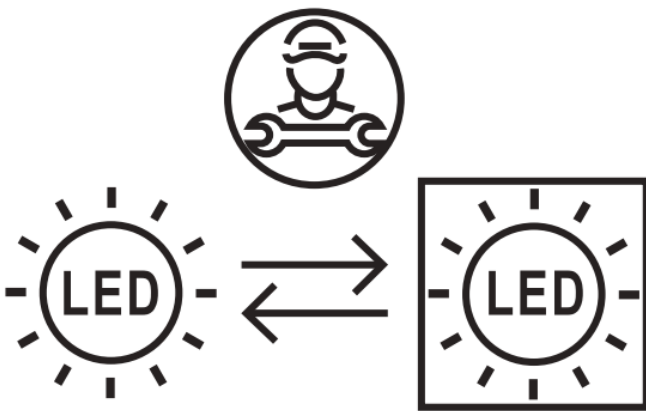9. Remove the wires at both ends of the led driver, Unscrew the led driver base.

Replaceable control gear by a professional

Replaceable (LED only) light source by a professional

Documents / Resources

<table>
<tr>
<td>

LED driver and LED strip removal instruction manual

</td>
<td>

LED Store Connecting A LED Strip Light To A LED Driver [pdf] User Guide
Connecting A LED Strip Light To A LED Driver, Connecting, A LED Strip Light To A LED Driver, Strip Light To A LED Driver, Light To A LED Driver, To A LED Driver, LED Driver, Driver

</td>
</tr>
</table>

References

- **User Manual**