Manuals+ — User Manuals Simplified.

Lepowertec RC-01 Torchiere Lamp User Manual
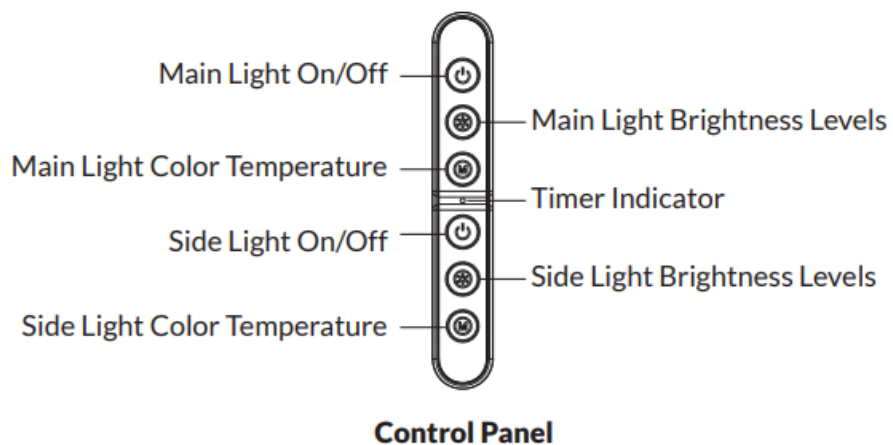
Contents

Lepowertec

Lepowertec RC-01 Torchiere Lamp

Introduction

Package Contents

1. Torchiere Lamp X1
2. Remote Control X1 4. Adapter X1
3. 27A Battery X1
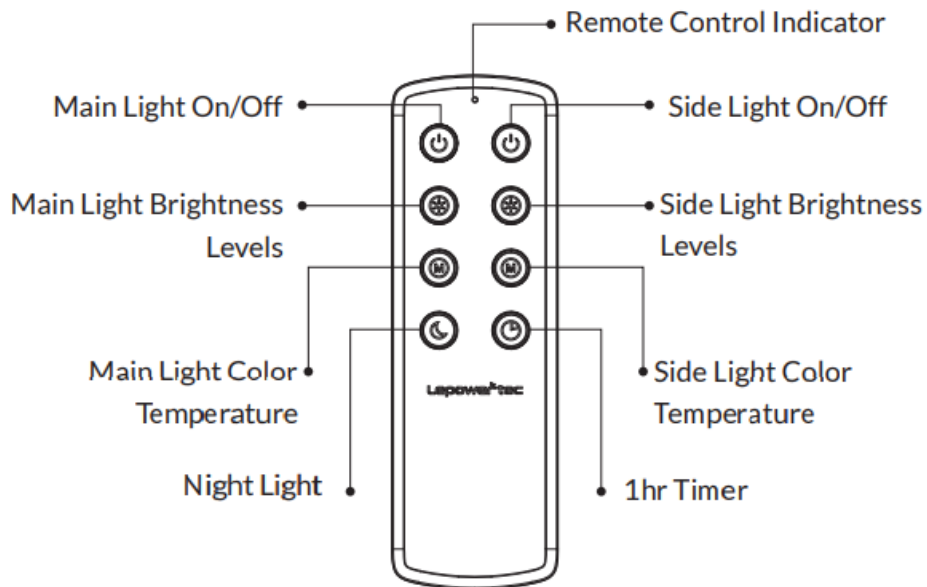4. Wireless Wall Switch X1 5. AAA Battery X2
5. User Manual X1

Specifications

- Model: FM-28
- CRI: >90
- Height: 70.9in
- Adapter: DC24V/1.5A
- Material: Metal + PC
- Cord Length: 78.7in

Controls & Indicators

Main Light On/Off — Main Light Brightness Levels

Main Light Color Temperature — Timer Indicator

Side Light On/Off — Side Light Brightness Levels

Side Light Color Temperature

Control Panel

Remote Control

Wireless Wall

Main Light On/Off — | — Side Light On/Off

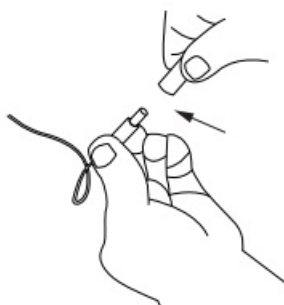**Note:** For all the above, the main light and the side light are controlled separately.

- ⊚ **Timer:** Press to set a 1hr off-timer. Works at the same time on both the main light and the side light.
- ☾ **Night Light:** Press to enter night light mode. Long press to adjust the brightness of the night light (40-200lm).
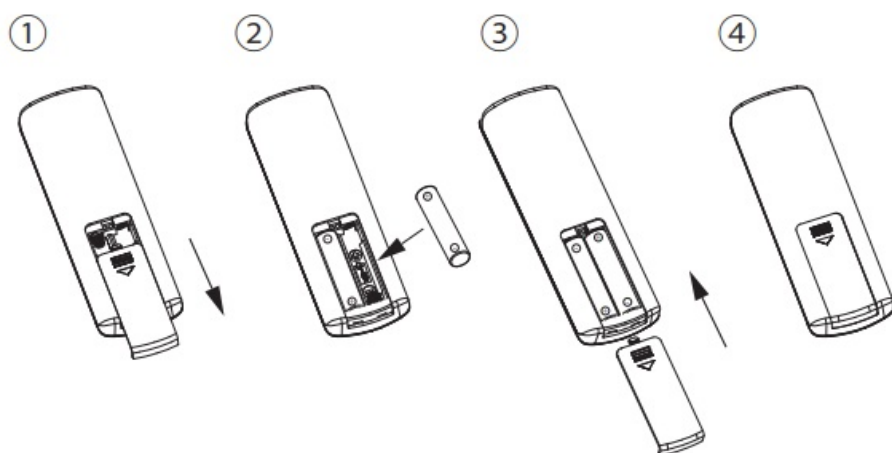
Instructions

1. Unbox the light and all accessories. Check the package content list, and if any part(s) is missing, please contact our customer service team.
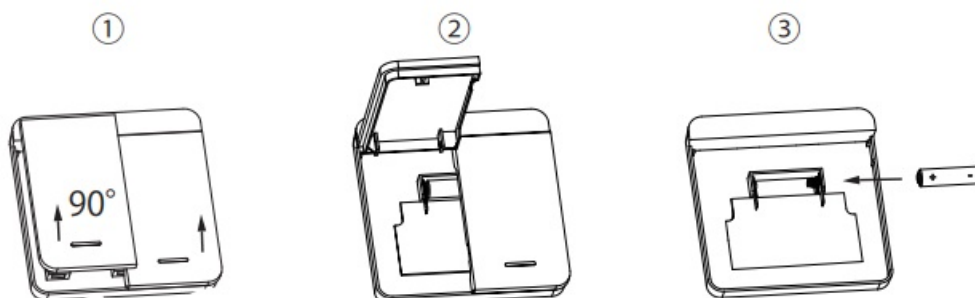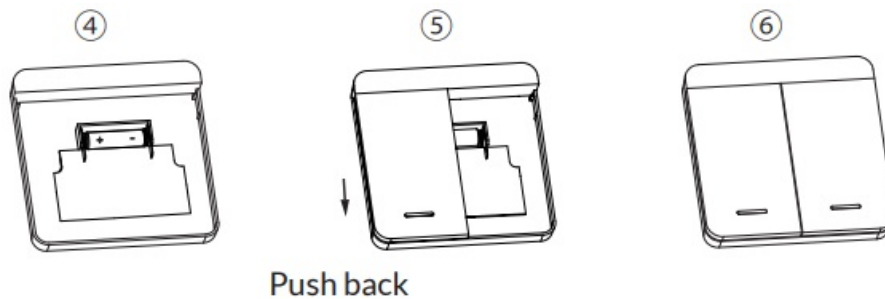2. Tighten the pole clockwise according to the steps.

①
②
③
④
⑤
⑥

3. Plug in.
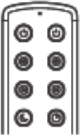
4. Put the AAA battery into the remote control.

①　②　③　④

5. Put the 27A battery into the wireless wall switch.

①　②　③

90°

Push upward until it opens

④　　　　　　⑤　　　　　　⑥

Push back

Troubleshooting

Issues	Solutions
The remote control does not work.	1.Press any button on the remote control. If the indicator does not light up, please switch the battery.
	2.Press any button on the remote control. If the indicator lights up, please repair the remote control to the light: ① While the light is plugged in and powered, press ✳ and Ⓜ of the main light simultaneously for 2s until the main light starts to flash. ②Press any button on the remote control. ③Repair is finished, and the main light should stay on.
The wireless wall switch does not work.	1.Press any side of the wireless wall switch. If the indicator does not light up, please switch the battery.
	2.Press any side of the wireless wall switch. If the indicator lights up, please repair the wireless wall switch to the light:

Issues	Solutions
	①While the light is plugged in and powered, press ⊛ and Ⓜ of the main light simultaneously for 2s until the main light starts to flash. ②Press any side of the wireless wall switch. ③Repair is finished, and the main light should stay on.
What is the control radius of the remote control and the wireless wall switch?	The maximum is 42.8ft when there are no obstacles.
Can the remote control or the wireless switch control more than 1 lamp?	No
Is it compatible with smart plugs?	Yes. It can be used with smart plugs to control on/off, but not for adjusting brightness or changing color temperature.

Cautions

- Please use the adapter included, and do not use others.
- This lamp is not waterproof; please avoid water and splashes.
- The working temperature for this lamp is 14-104°F.
- The light source of this lamp is irreplaceable. If there is a failure, the whole lamp needs to be switched.
- Do not let children assemble or play with the lamp by themselves.
- Please keep from heat source.
- Please keep from potential endangerment.
- Please place this lamp on level surfaces.

Warranty

We provide a 12-month warranty for the light and a 60-day mon-ey-back guarantee for quality problems.

Note: Damages caused by the disregard of this user manual are not subject to warranty.

Contact Us

At LEPOWER-TEC, we value your experience. If you have any ques-tions about our products, click 'ask a question' in our store and email us. Our dedicated team will respond promptly to provide the support you need. Thank you for choosing LEPOWER-TEC, and we look forward to serving you.

Documents / Resources

Lepowertec RC-01 Torchiere Lamp [pdf] User Manual
RC-01, LP-09, FM-28, RC-01 Torchiere Lamp, Torchiere Lamp, Lamp

References

- **User Manual**