Manuals+ — User Manuals Simplified.

logitech G Console Portatile Per Cloud Gaming

logitech G Console Portatile Per Cloud Gaming Instruction Manual

Contents

logitech G Console Portatile Per Cloud Gaming

Product Information
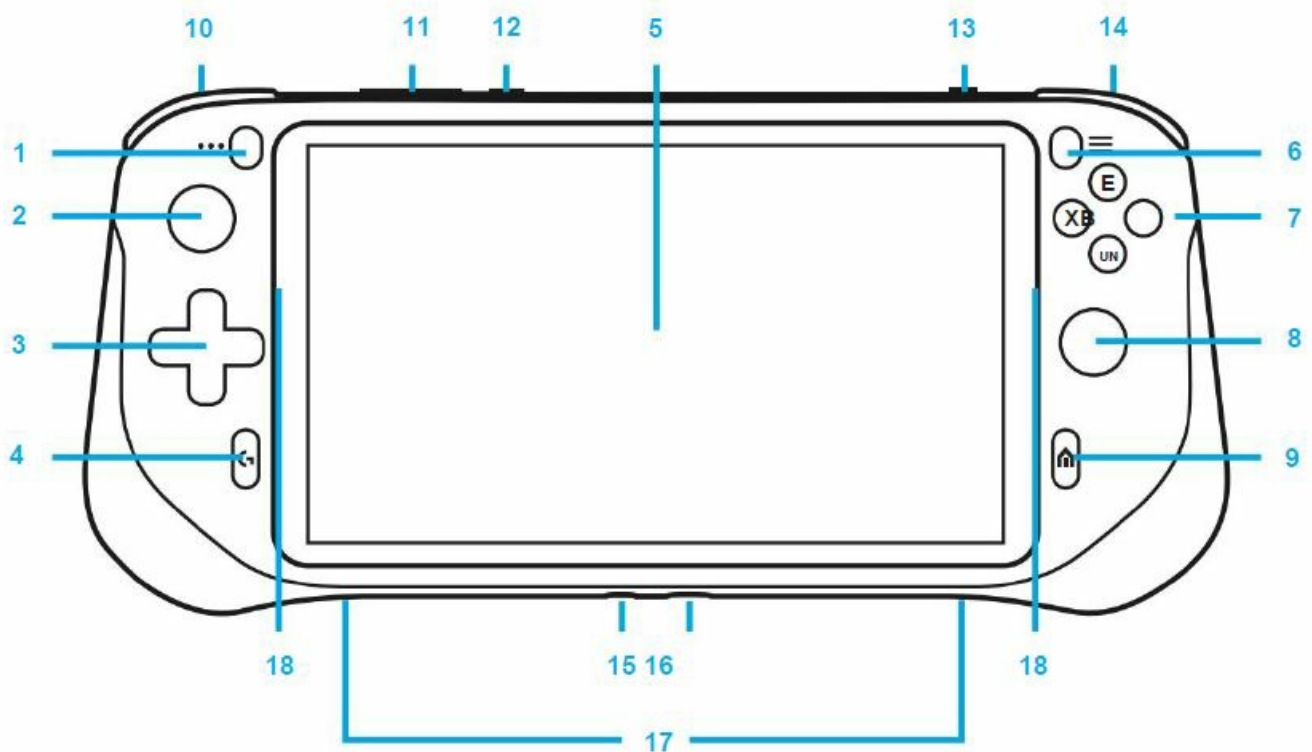
Specifications

- **Device Type:** Portable Cloud Gaming Console
- **Components:**
    - Left Function Button
    - Left Joystick/L3 Button
    - Directional Buttons
    - 4G Button
    - Touch Screen
    - Right Function Button
    - A/B/X/Y Buttons
    - Right Joystick/R3 Button

Frequently Asked Questions

- Where can I find support for the product?
    - You can find support for the product at **logitechG.com/support/cloud**.

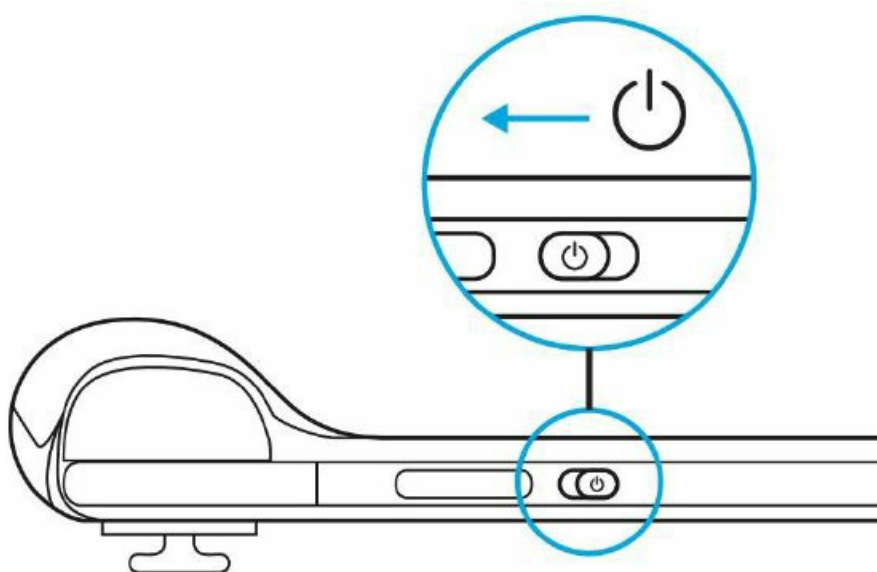# DESCRIPTION OF THE DEVICE

COMPONENT NAMES

1. **1.** left function button
2. **2.** Left joystick/L3 button
3. **3.** directional keys

4. **4.** 4G button
5. **5.** Touch screen
6. **6.** Right function button
7. **7.** A/B/X/Y buttons
8. **8.** Right joystick/R3 button
9. **9.** Home button
10. **10.** Left bumper/trigger (L1, L2)
11. **11.** Volume button
12. **12.** Power switch
13. TF card slots
14. Right bumper/trigger (R1, R2)
15. 3.5mm jacks
16. USB type C/charging port
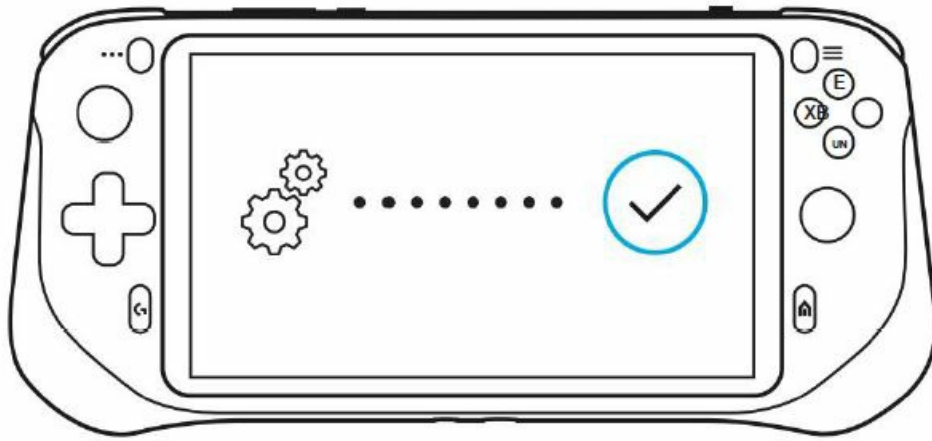17. Dual speakers
18. Double microphone
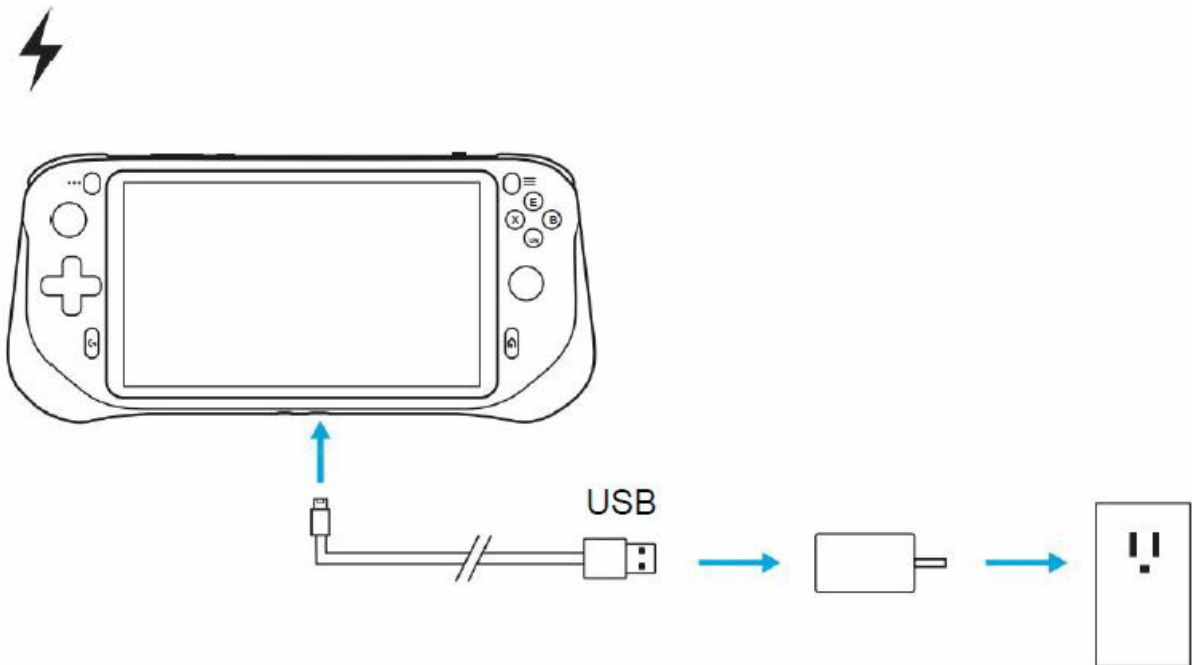
CONFIGURATION INSTRUCTIONS

Power on:

- Slide and hold the switch power to turn on the device

First Configuration

- Follow the setup wizard displayed on the screen to complete the first one device configuration.

Charging

- Connect the end of the USB Type-C cable to the USB Type-C port on the side bottom of the device, connect the end of the USB Type-A cable to the power supply, then connect the power supply to the outlet to charge the device.

REQUESTS?

- **logitechG.com/support/cloud**

Documents / Resources

logitech G Console Portatile Per Cloud Gaming [pdf] Instruction Manual
G Console Portatile Per Cloud Gaming, Console Portatile Per Cloud Gaming, Portatile Per Cloud Gaming, Per Cloud Gaming, Cloud Gaming, Gaming

References

- **Logitech Support + Download**
- **User Manual**