Manuals+ — User Manuals Simplified.

LOREX ACCHM1 Series Wi-Fi Chime User Guide

**ACCHM1 Series Wi-Fi Chime
User Guide**
lorex.com

Contents

What's included
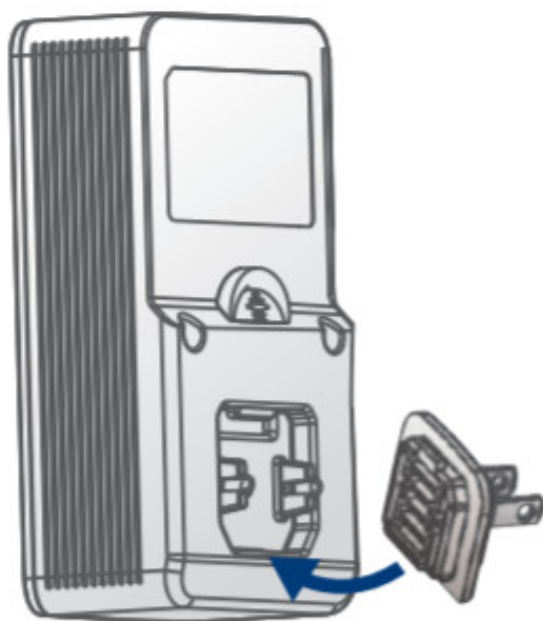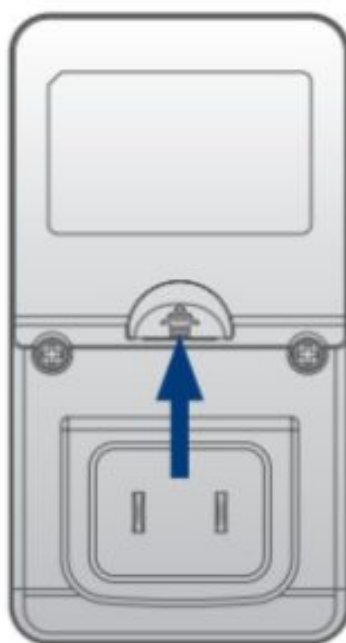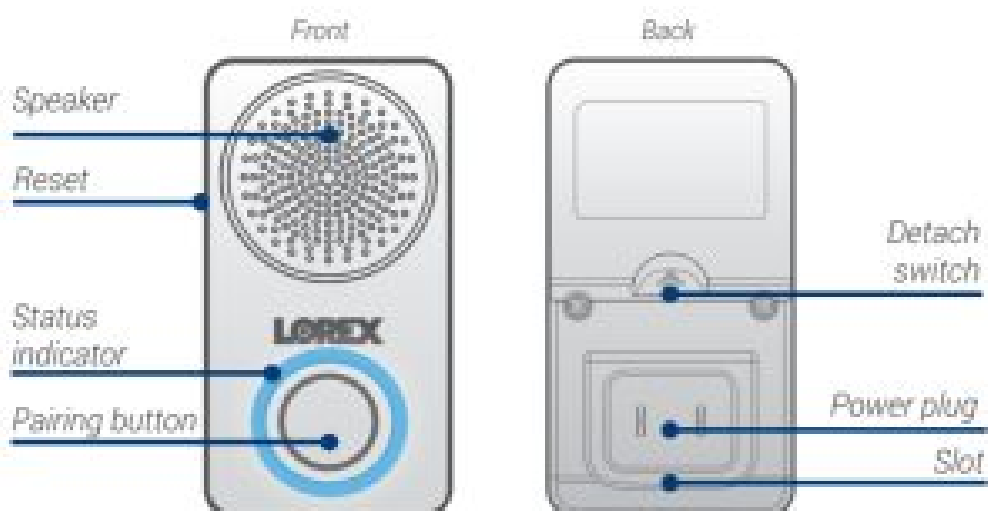

Installation

To attach the power plug, hook the power plug's bottom tab into the chime slot and push in.

To detach the power plug, hold onto the plug then push up on the detach switch.

Wi-Fi Chime overview

Front   Back

Speaker

Reset

Status indicator

Pairing button

Detach switch

Power plug

Slot

Status indicator

 Solid blue
Operating correctly.

 Flashing blue

- Ready for connection.
- Network connection failed. Use the pin to reset.

Dimensions

Height: 3.9" (99mm)
Width: 2.0" (52mm)

App setup

1. Scan the QR code on this page to download the free **Lorex Home app** from the App Store or Google Play Store.
2. Open the Lorex Home app.
3. Sign in or sign up and create an account.
4. Plug the Wi-Fi Chime into an outlet.
5. Once the status indicator flashes blue and the startup chime sounds, tap the + icon.
6. Scan the device QR code on the chime and tap **Next** or tap **Manually enter Device ID**.
7. Follow the in-app instructions to complete the setup.

https://app.lorex.com/home/download

 IMPORTANT

- **Ensure you are on a 2.4 GHz Wi-Fi connection.**
- **Ensure your 2K Video Doorbell and Wi-Fi Chime have the latest firmware version in the device settings.**
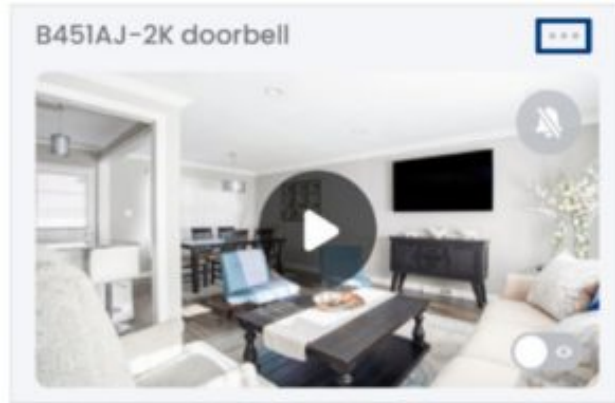
Link to the 2K Video Doorbell

There are two ways to link the Wi-Fi Chime to the 2K Video Doorbell.

- During the doorbell setup:

When the **Chime Type** screen appears, select your Wi-Fi Chime, then tap **Complete.**

- After the doorbell setup:

1. Tap the ••• icon for the 2K Video Doorbell.

2. Tap **Doorbell Chime**, then tap **Wi-Fi Chime.**

3. Select your chime, then tap **Save.**

Copyright © 2021 Lorex Corporation
As our products are subject to continuous improvement, Lorex reserves the right to modify product design, specifications, and prices, without notice and without incurring any obligation. E&OE. All rights reserved.

 Please take attention that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

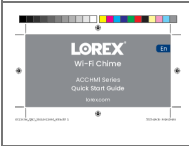**For up-to-date information and support, please visit: help.lorex.com**

Please see our full Terms of Service and Limited Hardware Warranty Policy at **[lorex.com/warranty.](lorex.com/warranty)**

Copyright © 2021 Lorex Corporation
This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
This equipment complies with FCC/IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body.

Documents / Resources

	LOREX ACCHM1 Series Wi-Fi Chime [pdf] User Guide ACCHM1-C, ACCHM1C, UCZ-ACCHM1-C, UCZACCHM1C, ACCHM1 Series Wi-Fi Chime, Wi-Fi Chime, Chime
	LOREX ACCHM1 Series Wi-Fi Chime [pdf] User Guide ACCHM1 Series, Wi-Fi Chime, ACCHM1 Series Wi-Fi Chime, Chime

Manuals+,