





POWERA BATTLE DRAGON WIRELESS CONTROLLER

USER MANUAL

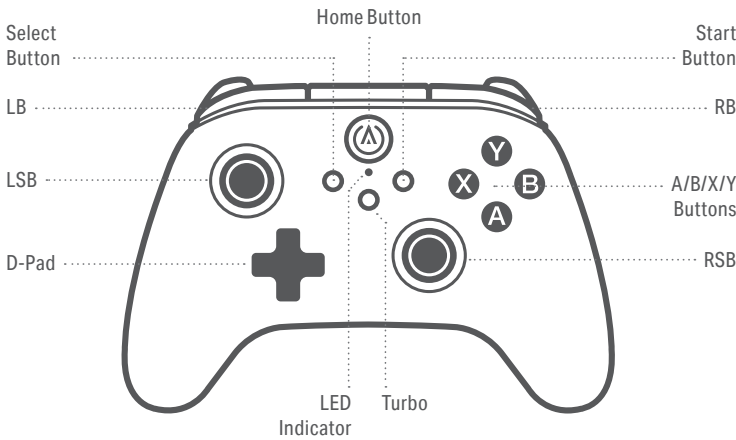

TWO-YEAR LIMITED WARRANTY

For warranty details or support with your authentic PowerA accessories, please visit www.powera.com/support.

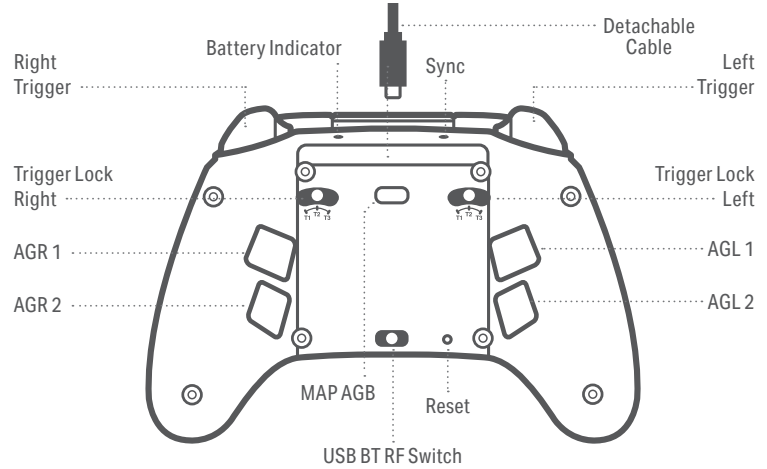

ENGLISH

CONTENTS

- Controller
- USB adaptor
- 5 ft. / 1.5 m USB-C® to USB-A Cable
- Two analog caps
- User Manual

CHARGING CONTROLLER

For best results, fully charge controller prior to first use.

1. Using a USB-C Cable connect to the USB-C port at the top of the controller, and connect the other end to any powered USB source.
2. When charging, the battery indicator LED will flash AMBER.
3. When fully charged the battery indicator LED will be solid GREEN.
4. Battery Indicator will flash RED when battery is low.

WIRELESS MODE: 2.4G

1. Insert wireless USB dongle into open PC USB port.
2. Select "RF" on the mode switch on back of controller.
3. If controller is off, press the Home button (icon) to turn on (LED will illuminate WHITE).
4. Press and hold the SYNC button (icon) on top of the controller for 3 seconds to enter pairing mode (LED will flash WHITE rapidly).
5. Enter the Settings menu on your device and choose the PC Wireless controller. The LED will turn solid WHITE when connected.



WIRELESS MODE: BLUETOOTH

1. Select "BT" on the mode switch on back of controller.
2. If controller is off, press the Home button (icon) to turn on (LED will illuminate BLUE).



3. Press and hold the SYNC button (icon) on top of the controller for 3 seconds to enter pairing mode (LED will flash BLUE rapidly).
4. Enter the Bluetooth settings on your device.
5. Select the PC Wireless Controller.

WIRED MODE USB

1. Select "USB" on the mode switch on back of controller.
2. Using the included USB-C Cable, connect to the USB-C port at the top of the controller, and connect the other end to an available USB port on the PC.
3. If controller is off, press the Home button (icon) to turn on (LED will illuminate GREEN).



MODE XINPUT TO DIRECT INPUT (2.4 RF / USB WIRED MODE ONLY)

1. Press and hold the SELECT and START buttons simultaneously for 3 seconds
2. LED indicator will flash 3 times to indicate MODE has been changed.
3. To change modes again, press and hold SELECT and START buttons again for 3 seconds until LED flashes 3 times.

TRIGGER LOCK ADJUSTMENT



ANALOG CAPS (OPTIONAL ACCESSORY)

Enhance the controller's grip and comfort by attaching the analog caps to the analog sticks for improved gameplay.


POWERING OFF

Hold the Home button (icon) for 5 seconds to turn controller off and save battery capacity.

BATTERY STATUS INDICATION

LOW BATTERY = RED LED
BATTERY CHARGING = AMBER LED
BATTERY CHARGED = GREEN LED


ASSIGNING THE ADVANCED GAMING BUTTONS




- A. Press the Program Button on the back of the controller for 3 seconds.



- B. The LED Indicator will flash, signaling the controller is in assign mode.



- C. Press 1 of the following buttons (A/B/X/Y/LB/RB/LT/RT/Left Stick Press/ Right Stick Press/D- pad) to re-assign.

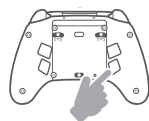

- D. Then press the Advanced Gaming Button (AGR1/ AGR2 or AGL1/AGL2) that you wish to assign. The LED connection indicator will stop flashing, signaling the Advanced Gaming Button has been set.
- E. Repeat for the remaining Advanced Gaming Buttons.

NOTE: Advanced Gaming Button assignments will remain in memory even after disconnected.

RESETTING THE ADVANCED GAMING BUTTONS

1. Hold the Program Button down for 2 seconds. The LED Connection Indicator will slowly flash, signaling the controller is in assign mode.
2. Press the previously assigned button for 5 seconds, and the function will be cleared.

TURBO SETTING



- A. Press and hold one of the A,B,X,Y buttons that you wish to set to Turbo.



- B. While holding down the desired button press the Turbo button.



- C. The LED indicator will flash 3 times to show you Turbo has been set.



- D. Press the Turbo button again to turn Turbo off.

TROUBLESHOOTING

PROBLEM: My controller will not power on.
SOLUTION: Confirm the controller is fully charged. Plug in to recharge as needed.

PROBLEM: I don't see my PC controller listed in my device's settings.
SOLUTION: Press and hold the Bluetooth sync button on top of controller for 3 seconds to enter pairing mode (LED will flash rapidly).

PROBLEM: My wireless controller is not pairing.
SOLUTION: Confirm the battery is charged by plugging in USB-C cable.

SOLUTION: Confirm you are following the Wireless pairing process.

SOLUTION: Insert paper clip into Factory Reset Hole as marked above to reset controller to factory settings.

For latest FAQs, visit www.powera.com/support

TWO-YEAR LIMITED WARRANTY

For warranty details or support with your authentic PowerA accessories, please visit www.powera.com/support.

MOTION WARNING

Playing video games may cause muscle, joint, skin, or eye discomfort. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, skin irritation or eyestrain:

- Avoid excessive play. Take a 10- to 15-minute break every hour, even if you don't think you need it. Parents should monitor their children for appropriate play.
- If your hands, wrists, arms, or eyes become tired or sore while playing, or if you feel symptoms such as tingling, numbness, burning, or stiffness, stop and rest for several hours before playing again.
- If you continue to have any of the above symptoms or other discomfort during or after play, stop playing and see a doctor.

MANUFACTURED FOR

ACCO Brands USA LLC
4 Corporate Drive, Lake Zurich, IL 60047
ACCOBRANDS.COM | POWERA.COM | **MADE IN CHINA**

ADDITIONAL LEGAL

© 2024 ACCO Brands. All Rights Reserved. PowerA and PowerA Logo are trademarks of ACCO Brands.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by ACCO Brands is under license. Other trademarks and trade names are those of their respective owners.

USB-C® is a registered trademark of USB Implementers Forum.





バトルドラゴン・ ワイヤレスコントローラー

ユーザーマニュアル

対応機種 (OS)

- Windows 10, 11 以降
- Android 6 以降

国内正規品
2年保証

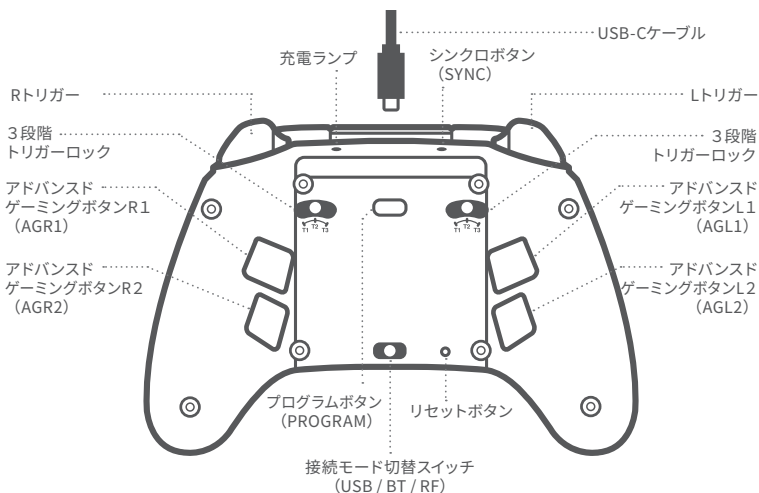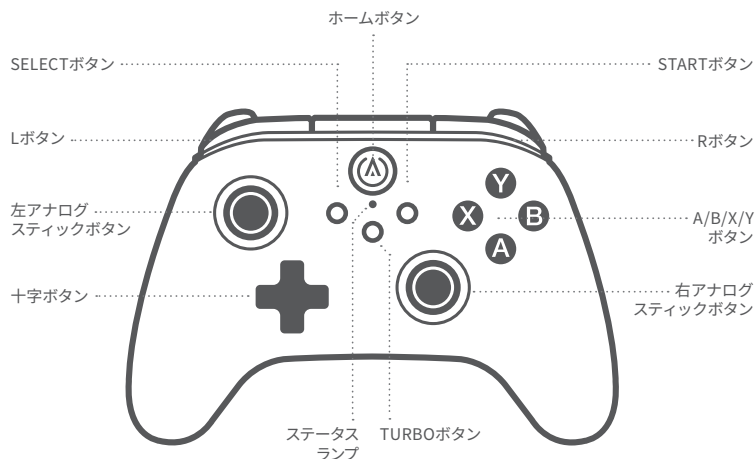

パッケージ内容

- コントローラー本体
- USB-C (R) to USB-Aケーブル (1.5m)
- USBレシーバー (RFモード用)
- アナログスティック用キャップ (2個)
- ユーザーマニュアル

コントローラーの充電

ご使用前にコントローラーを充電してください。

1. 付属のUSB-CケーブルのUSB-C側をコントローラー上部のUSB-C端子に接続し、もう一方の端子を任意のUSB-A端子に接続します。
2. 充電中は充電ランプがオレンジ色に点滅します。
3. 充電が完了すると充電ランプが緑色に点灯します。
4. バッテリーの充電残量が少なくなると充電ランプが赤色に点滅します。

ワイヤレス: RFモード (USBレシーバーを使用)

1. USBレシーバーをPCのUSB-A端子に挿入します。
2. コントローラー背面の接続モード切替スイッチで「RF」を選択します。
3. コントローラーの電源がオフの場合は、ホームボタンⓈを押して電源をオンにします。電源がオンになるとステータスランプが白色に点灯します。



4. コントローラー上部のシンクロボタンを3秒間長押しすると、ステータスランプが白色で点滅し、ペアリングモードであることを示します。
5. デバイスの設定で、USBレシーバーを有効にしてください。(詳細は接続するデバイスのユーザーマニュアルをご確認ください。) 接続されるとステータスランプが白色に点灯します。

注: 以前にペアリングしたデバイスは、コントローラーの電源がオンになると自動的にコントローラーとペアリングされます。

ワイヤレス: Bluetoothモード

コントローラー背面の接続モード切替スイッチで「BT」を選択します。



<初めて使う場合>

<新しいデバイスに接続する場合>

初めて使う場合や、新しいデバイスに接続する際は下記の手順に沿ってペアリングが必要です。

1. コントローラーの電源がオフの場合、ホームボタンⓈを押して電源をオンにします。電源がオンになると、ステータスランプが青色に点滅します。
2. コントローラー上部のシンクロボタンを3秒間長押しすると、ステータスランプが青色ですばやく点滅し、ペアリングモードであることを示します。
3. デバイスのBluetooth設定に入り、「Battle Dragon」を選択します。

<ペアリング済みの場合>

コントローラーの電源がオフの場合、ホームボタンⓈを押して電源をオンにします。電源がオンになると、ステータスランプが青色に点灯します。

注: 以前にペアリングしたデバイスは、コントローラーの電源がオンになると自動的にコントローラーとペアリングされます。詳細は接続するデバイスのユーザーマニュアルをご確認ください。

有線: USBモード

1. コントローラー背面の接続モード切替スイッチで「USB」を選択します。
2. 付属のUSB-CケーブルのUSB-C側をコントローラー上部のUSB-C端子に接続し、もう一方の端子をPCのUSB-A端子に接続します。
3. ステータスランプが緑色に点灯します。



Xinput/DirectInputモード切り替え (ワイヤレス: RFモード/USBモード時のみ)

1. SELECTボタンとSTARTボタンを同時に3秒間長押しします。
2. ステータスランプが3回点滅し、Xinput/DirectInputのいずれかに切替わったことを示します。
3. もう一方のモードに切り替える場合は、SELECTボタンとSTARTボタンを同時に3秒間長押しします。

トリガーロックの調節



アナログスティック用キャップ

付属品としてアナログスティック用キャップ (2個) が同梱されています。

操作感やグリップ感を調節したい場合は、付属品のアナログスティック用キャップ (2個) をご使用ください。

右アナログスティック、左アナログスティックの上からそのまま装着してご使用いただけます。


電源オフ (ワイヤレス: RFモード/BTモードのみ)

- ホームボタンⓈを5秒間長押しすると、コントローラーの電源がオフになります。
- 1時間以上操作が行われないと自動的に電源がオフになります。

充電ランプについて

充電残量が少ない状態＝赤色 (点滅)
充電中＝オレンジ色 (点滅)
充電完了＝緑色 (点灯)


アドバンスドゲーミングボタンの
割り当て




A. コントローラーの
背面にあるプログラム
ボタンを3秒間長押し
します。



B. ステータスランプがゆ
っくりと点滅し、コン
トローラーがプログラ
ムモードであることを
示します。



C. アドバンスドゲーミング
ボタンに割り当てるボタ
ン (A/B/X/Y/LB/RB/
LT/RT/左アナログ
スティックボタン/右
アナログスティックボ
タン/十字ボタンのい
ずれか) を押します。
ステータスランプがす
ばやく点滅します。

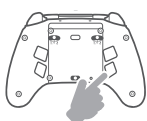

D. 機能を実行したいアド
バンスドゲーミングボ
タン (AGR1/ AGR2/
AGL1/AGL2のい
ずれか) を押します。
ステータスランプの点滅が
止まり、アドバンスド
ゲーミングボタンへの
割り当てが完了したこ
とを示します。


E. 残りのアドバンスドゲ
ーミングボタンも同様
に設定します。

注:アドバンスドゲーミングボタンの割り当て
は、接続が解除されてもメモリに保存され
ています。

アドバンスドゲーミングボタンの
リセット

- プログラムボタンを3秒間長押しし
ます。
コントローラーがプログラムモードにな
ると、ステータスランプがゆっくり点滅
し始めます。
- リセットしたいアドバンスドゲーミングボ
タン (AGR1/ AGR2/AGL1/AGL2のい
ずれか) を5秒以上長押しします。

連射機能



A. 連射機能を設定し
たいA,B,X,Yボタンの
いずれかを長押しし
ます。



B. 設定したいボタンを押
しながら、TURBOボ
タンを押します。



C. ステータスランプが
3回点滅し、連射機
能が設定されたこと
を示します。



D. A～Cの手順を再度繰
り返すと連射機能が
オフになります。

トラブルシューティング

- Q1:コントローラーの電源が入りません。
- A1:コントローラーが充電されていることを確
認してください。充電残量が少ない場合
は、コントローラーを充電してください。
- Q2:デバイスの設定にコントローラーが表示
されません。
- A2:「ワイヤレス:Bluetoothモード」の手順を
再度試してみてください。
- Q3:ワイヤレスコントローラーがペアリングさ
れません。
- A3-1:コントローラーが充電されていることを
確認してください。充電残量が少ない場
合は、コントローラーを充電してくださ
い。
- A3-2:「ワイヤレス:RFモード」または「ワイヤ
レス:Bluetoothモード」の手順を再度試し
てください。
- A3-3:上記を試してもペアリングされない場
合は、クリップの先端やつまようじなど
先の尖ったものでリセットボタンを押
して、コントローラーを工場出荷時の設
定にリセットしてください。(折れやすいも
のは使用しないでください。)

最新のFAQとサポートについては、
Powera.com/ja-jp/contact-us/を
ご確認ください。

バッテリーに関する警告

- お客様ご自身によるバッテリーの修理、
分解、改造は絶対に行わないでください。
バッテリーが損傷し、過熱、火災、けがの原因
となることがあります。
- バッテリーが内蔵されているため、コントロ
ーラーを処分する際は、お住まいの地域のル
ールに従ってください。不明な場合はお住
まいの市町村、自治体へお問い合わせください。
- バッテリーを搭載した機器は、高温環境下
(直射日光の当たる場所や炎天下の車内
など)で使用したり放置したりしないでくだ
さい。高温になるとバッテリーが過熱または
発火する可能性があります。また、バッテ
リーの性能や寿命に悪影響を及ぼすことが
あります。
- バッテリーを搭載した機器は、静電気の多い
環境で使用しないでください。過度の静電気
はバッテリーの内部安全対策を損ない、過熱
や火災の危険性を高めることがあります。
- バッテリーから漏れた液体が目に入った場
合は、目をこすらないでください。目を傷つ
けないように、すぐにきれいな流水で十分に洗
い流し、医師の診察を受けてください。
- 使用中、充電中、保管中にバッテリーが異
臭を発したり、発熱したりするなど、何らか
の異常が見られたら、ただちに充電機器か
ら取り外し、金属性の箱など密閉された耐
火容器に入れるか、人や燃えやすいもの
から離して安全な場所に置いてください。
- コントローラーやバッテリーを加熱したり、
火の中に入れたり、火に近づけたりしな
いください。

警告

健康上の安全のために、ご使用前によくお
読みいただき、その内容を必ずお守りくだ
さい。

※小さなお子様がご使用になる場合は、保
護者の方がよくお読みいただいたうえで、
お子様に付き添ってご使用ください。

• 強い光や点滅の刺激を受けたり、テレビの
画面などを見たりしているとき、ごくまれ
に一時的に筋肉のけいれんや意識の喪失、め
まい、視覚変化などを経験する人がいます。
こうした症状を経験した人は、使用する前
に必ず医師と相談してください。

• また、使用中にこのような症状が起きた
場合には、直ちに使用を中止し、医師の診
察を受けてください。

• 長時間連続して使用しない。目安として、
1時間ごとに10～15分休憩してください。

• 目や手・腕・足・顔など身体の一部に痛み
や疲労感、不快感があるときは、すぐに使
用を中止する。

• これらの症状が続く場合は、医師の診察
を受けてください。

© 2024 ACCO Brands. PowerAおよびPowerA
ロゴはACCO Brandsの登録商標または商
標です。

Bluetooth®ワードマークおよびロゴは登
録商標であり、Bluetooth SIG, Inc. が所有
権を有します。

ACCO Brandsは使用許諾の下でこれらのマ
ークおよびロゴを使用しています。

その他の商標および登録商標は、それぞ
れの所有者の商標および登録商標です。

USB-C®は、USB Implementers Forumの
登録商標です。

保証規定

商品に付属している保証書は内容をご確
認の上、大切に保管してください。

お買い上げ時のレシートや領収書等がな
い場合は無効となりますのでご注意ください。

保証期間中に正常な使用状態で万一故障
した場合には、保証規定事項に基づき、無
償修理または交換いたしますのでお買
い求めの販売店、または当社へお申し出
ください。

保証期間内でも次のような場合にはサポ
ートを提供できない場合がございます。

• 使用上の誤り、または改造や不当な修
理による故障または損傷

• お買い上げの後の落下、引っ越し、輸
送等による故障または損傷

• 火災、地震、水害、落雷その他天災地
変ならびに公害や異常電圧、その他外部
要因による故障または損傷

• 過酷な条件のもとで使用されて生じた
故障または損傷

• 保証書の提示のない場合

• お買い上げ年月日、お客様名、販売店
名の記入のない場合、あるいは字句を
書き換えられた場合

保証書は日本国内においてのみ有効です。
保証書は再発行いたしませんので紛失し
ないように大切に保管してください。

保証書は明示した期間、条件のもとに
おいて無償対応をお約束するものです。
したがって、保証書によってお客様の法
律上の権利を制限するものではありません
ので、保証期間経過後の修理等につ
いてご不明な場合はお買い上げの販
売店または当社へお問い合わせくだ
さい。

保証書		
保証規定をよくお読みください。この保証書は再発行いたしませんので大切に保管してください。		
ご購入日	年	月 日
保証期間	ご購入日から2年間	
お 客 様	お名前	様
	ご住所	
販売店名		

※製品保証を受ける際はお買い上げ時のレシートまたは領収書が必要です。

アコ・ブランドズ・ジャパン株式会社
www.accobrand.co.jp
e-mail: jp.service@acco.com