


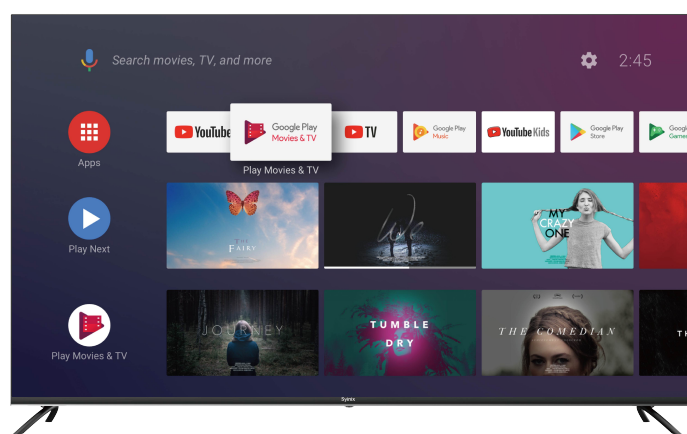

QUICK START GUIDE

Android TV 50A1S



Design and specification are subject to change without prior notice.
All OSD images shown in this user manual are for illustrative purposes only and may differ from the actual product based on the model.
Syinix reserves the right of final explanation.


スマートの家電・Design in Japan




1. Packaging including

The items below should be included in the box:

- 1 x 50" TV Set
- 2 x Base Stands
- 4 x Screws (M4 x 20)
- 1 x Remote Control
- 2 x AAA Batteries
- 1 x Mini AV Cable
- 1 x Power Cord
- 1 x Warranty Card
- 1 x Quick Start Guide
- 1 x User Manual

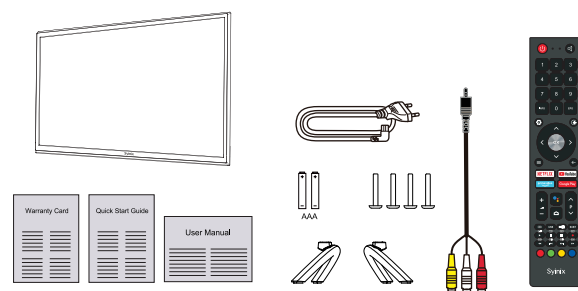


2. Installing the Stands

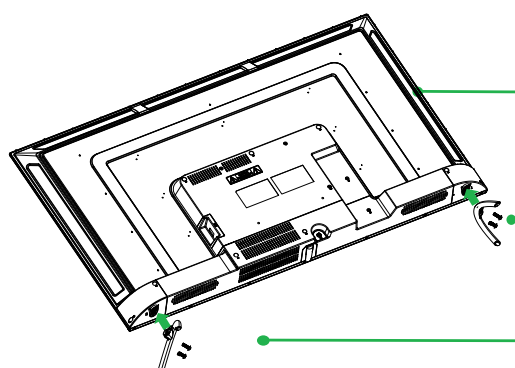

1. Place the TV face-down on a flat and soft surface. Take care of the screen from any damage or scratches.
2. Fix the left base stand with 2 pcs screws provided.
3. Fix the right base stand with 2 pcs screws provided.


3. Front&Back Views

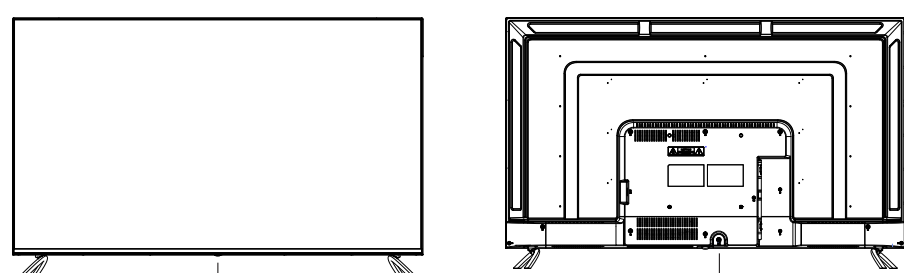


ⓘ: Press to turn the TV's power on/off.

4. Connecting to your TV


Connect the power cable to the TV, then plug the power cord to the AC outlet.

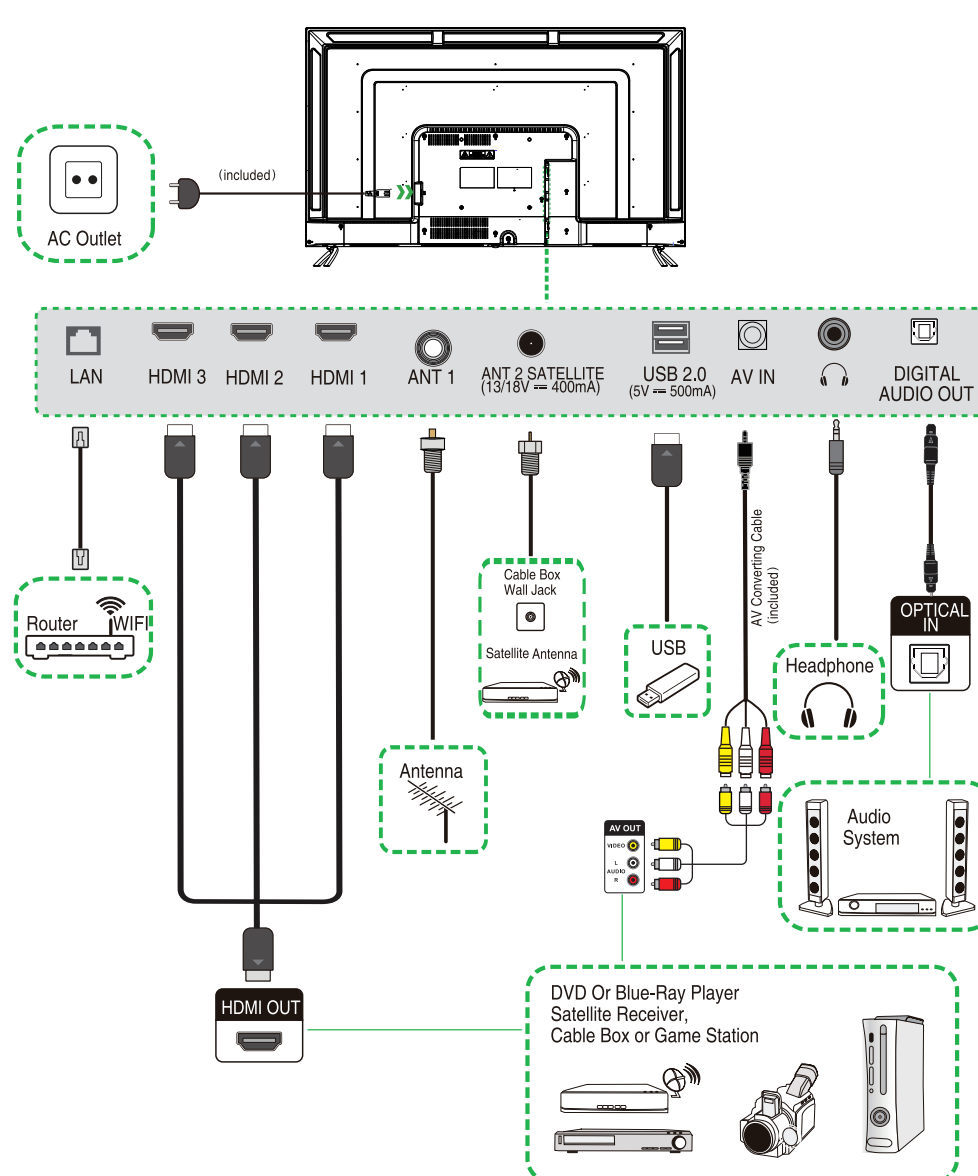


5. Remote Control

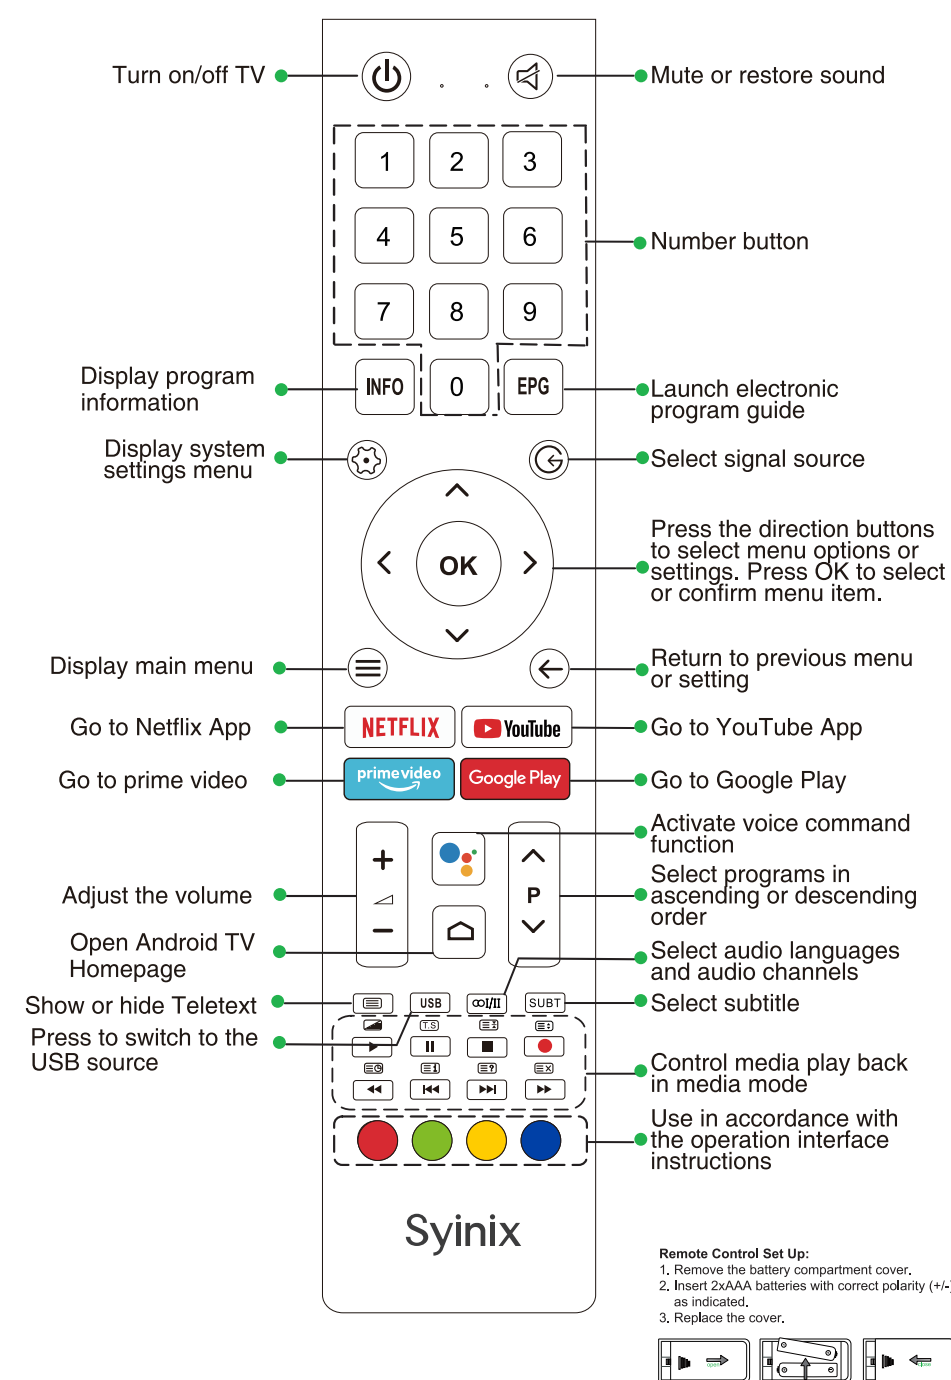


Remote Control Set Up:
1. Remove the battery compartment cover.
2. Insert 2 AAA batteries with correct polarity (+/-) as indicated.
3. Replace the cover.



5. Télécommande

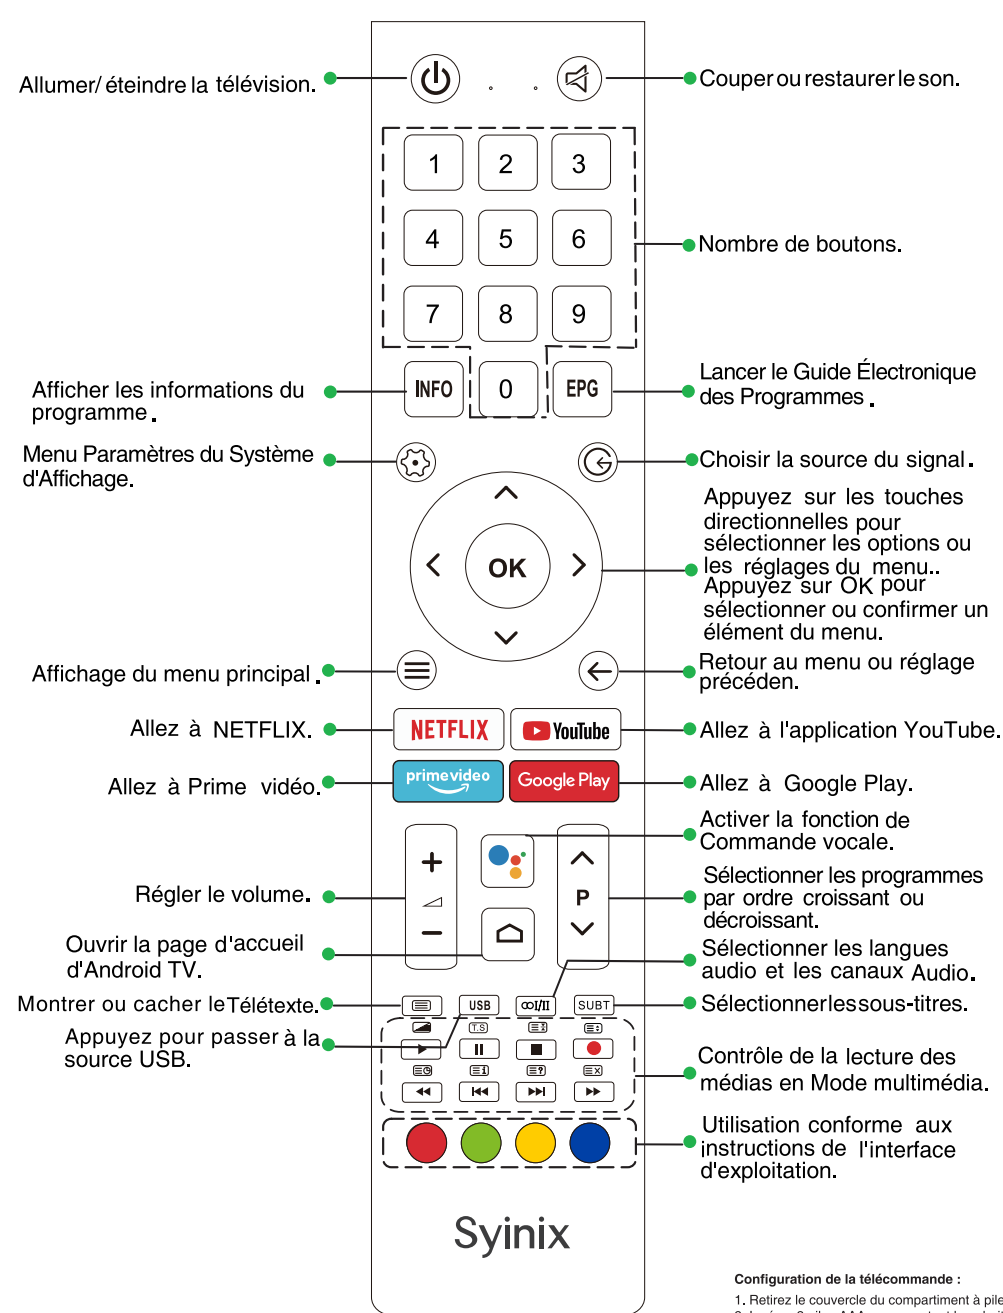


Configuration de la Télécommande :
1. Retirez le couvercle du compartiment à piles.
2. Insérez 2 piles AAA en respectant la polarité (+/-) indiquée.
3. Remettez le couvercle en place.



4. Connexion à votre téléviseur


Branchez le câble d'alimentation au téléviseur, puis à la prise secteur.

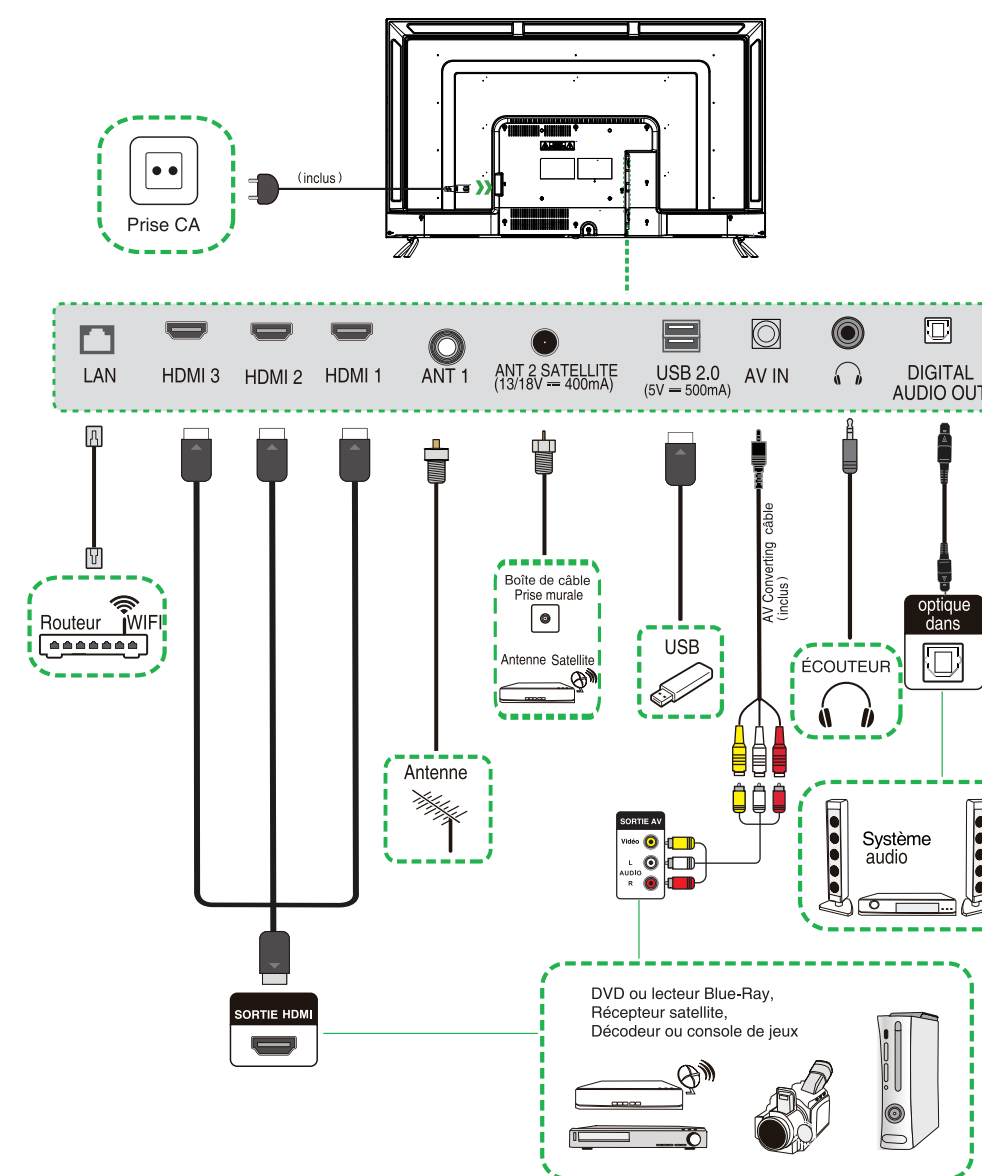


1. L'emballage comprend

Les éléments ci-dessous doivent être inclus dans la boîte :

- 1 téléviseur 55 cm
- 2 supports de base
- 4 Vis (M4 x 20)
- 1 télécommande
- 2 piles AAA
- 1 câble Mini AV
- 1 câble d'alimentation
- 1 carte de garantie
- 1 guide de démarrage rapide
- 1 manuel d'utilisation

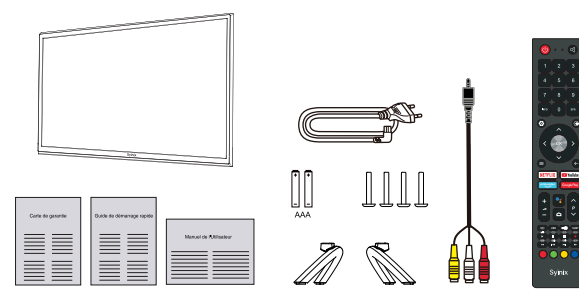


2. Installation des supports

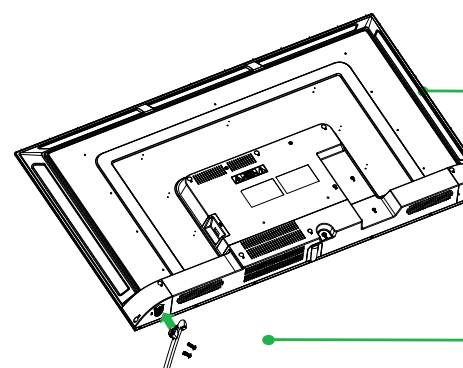

1. Placez le téléviseur face vers le bas sur une surface plane et douce. Prenez soin de l'écran de tout dommage ou rayures.
2. Fixez le support de base gauche avec les 2 vis fournies.
3. Fixez le support de base droit avec les 2 vis fournies.

3. Vues avant et arrière

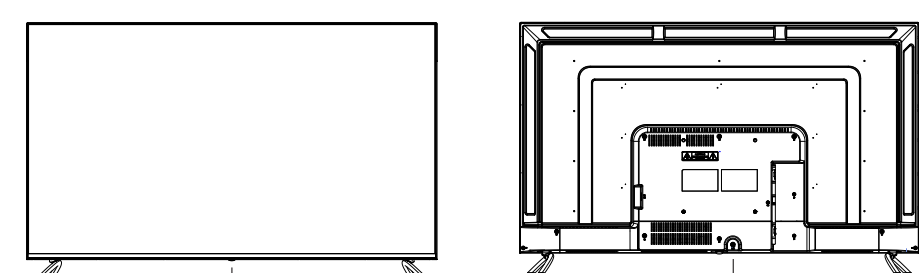


ⓘ: Appuyez pour allumer/éteindre le téléviseur.



GUIDE DE DÉMARRAGE RAPIDE

Android TV 50A1S

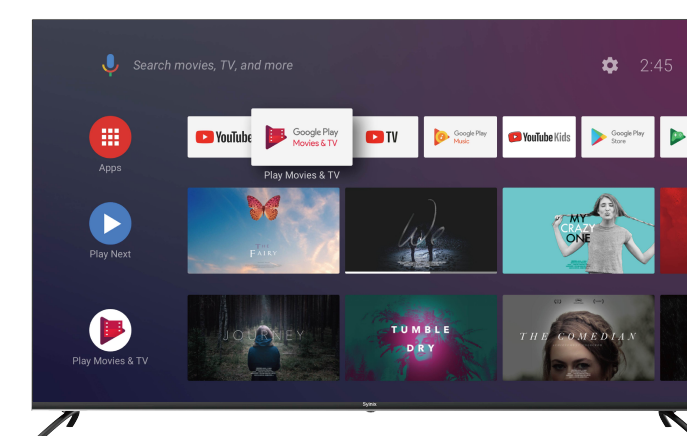

La conception et les spécifications sont susceptibles d'être modifiées sans préavis. Toutes les images OSD présentées dans ce manuel d'utilisation sont fournies à titre indicatif uniquement et peuvent différer du produit réel en fonction du modèle.
Syinix se réserve le droit d'interprétation finale.

スマートの家電・Design in Japan

