



Pre-Lit Christmas Trees With Easy Light Technology®


Eliminates cord connections

Color Choice® LED Technology Assembly Instructions

Nicolas Holiday Ltd. thanks you for purchasing this pre-lit Christmas tree. Should you have any problems with your tree, visit us at www.geholidaylighting.com for more information. You can call our toll free number at 1-877-398-7337. Check our website for latest service hours and assembly instruction videos.

TREE ASSEMBLY DIAGRAM

7.5 FT

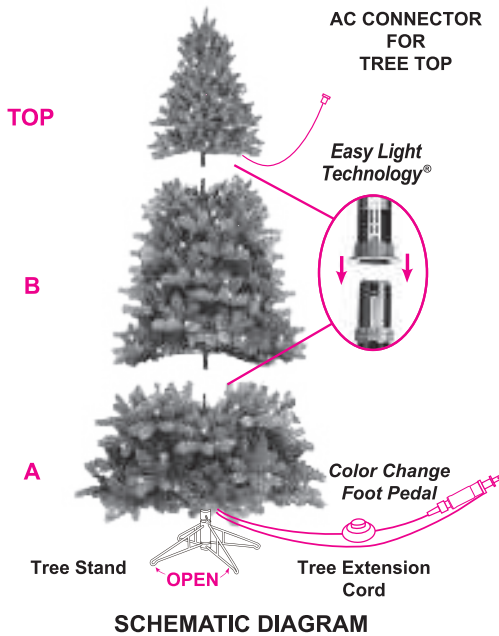

NOTE: No tools required

- This tree is provided with an extension cord for a tree topper, which can be attached to the top section along the pole.
- As an option, the tree adapter can be plugged into the back of the tree top extension cord as an add-on. This feature allows you to utilize only one outlet.

Tree Sections	Tree Stand	Approx. Asm Time*
7.5 ft tree	3	Metal
		5 – 10 minutes

Troubleshooting Tips

If the tree does not illuminate, try stepping on the **Color Change Foot Pedal** and make certain the wall switch is turned on. If one section of your tree does not illuminate, check that section for loose or missing bulbs, all factory connections are properly made or that you properly made all the electrical connections between each tree section, i.e., tree plug to extension cord outlet.

DISCLAIMER : DO NOT USE OR INSTALL ANY ADDITIONAL CHRISTMAS LIGHTING OR ORNAMENTATION THAT IS POWERED BY A LIGHT BULB SOCKET. DOING THIS MAY RESULT IN DAMAGE TO YOUR CHRISTMAS TREE OR CAUSE PERSONAL INJURY. DOING THIS, WILL RESULT IN A VOID OF THE LIMITED WARRANTY OF THIS PRODUCT.

Disconnect the decorative item from the power source before performing any maintenance or cleaning.


For indoor use only 120V

THIS IS NOT A TOY, FOR DECORATIVE USE ONLY.
GE is a trademark of General Electric Company
and is under license by Nicolas Holiday Ltd.


Nicolas Holiday Ltd.

©2025 Nicolas Holiday Ltd.
Suite 2706 Skyline Tower, 39 Wang Kwong Road, Kowloon Bay, Kowloon, Hong Kong
All rights reserved. Printed in China **NHL Model No. 20105LO**

- Carefully unpack the carton. Remove bubble wrap and inspect the sections of your tree. **The carton should include sections labeled "A", "B" and "Top", as well as a Tree Stand.**

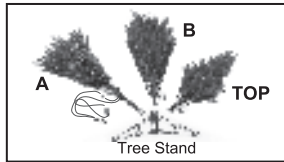

- The tree stand should be open and set at 90° angle.

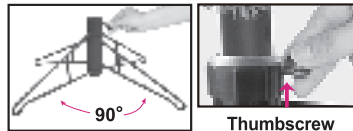


- Insert Section labeled A into tree stand, tighten the thumbscrew. Then insert the plug into an electrical wall outlet.



- Untie RED twist-tie to release branch panels. All branches should fall into place with a gentle pull on the outer layer of branches.

Fig. A. Start at the inner and stagger the tips. Move each tip up to 40°.
Fig. B. Make tips 2 & 3 to horizontal, tip 4 to vertical and tips 5 and 6 up to 45°.

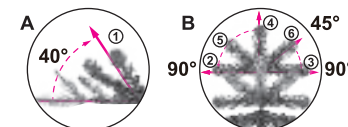

- To assemble the section labeled "B", properly align and insert section "B" into the top of section "A". (See Fig. C) Adjust branch tips, as needed, for a fuller look.


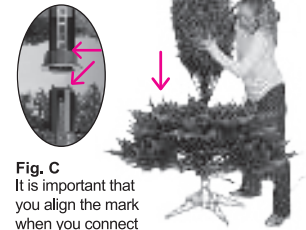


Fig. C
It is important that you align the mark when you connect two tree sections.

- Repeat "Step 4" for shaping.

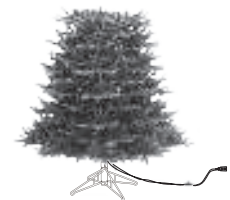


- To assemble the tree top, properly align and insert the "TOP" section into the top of section "B". (See Fig. D) Adjust branch tips, as needed, for a fuller look.



Fig. D
It is important that you align the mark when you connect two tree sections.

- Gently press on foot pedal to select the desired lighting function. (See below)

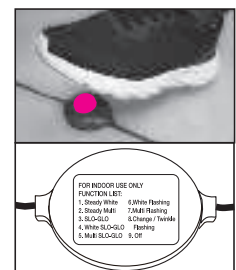

Troubleshooting Tips

If the tree does not illuminate, try stepping on the **Color Change Foot Pedal** and make certain the wall switch is turned on. If one section of your tree does not illuminate, check that section for loose or missing bulbs, all factory connections are properly made or that you properly made all the electrical connections between each tree section, i.e., tree plug to extension cord outlet.

DISCLAIMER : DO NOT USE OR INSTALL ANY ADDITIONAL CHRISTMAS LIGHTING OR ORNAMENTATION THAT IS POWERED BY A LIGHT BULB SOCKET. DOING THIS MAY RESULT IN DAMAGE TO YOUR CHRISTMAS TREE OR CAUSE PERSONAL INJURY. DOING THIS, WILL RESULT IN A VOID OF THE LIMITED WARRANTY OF THIS PRODUCT.

Disconnect the decorative item from the power source before performing any maintenance or cleaning.

For indoor use only 120V

THIS IS NOT A TOY, FOR DECORATIVE USE ONLY.
GE is a trademark of General Electric Company
and is under license by Nicolas Holiday Ltd.

Nicolas Holiday Ltd.


©2025 Nicolas Holiday Ltd.
Suite 2706 Skyline Tower, 39 Wang Kwong Road, Kowloon Bay, Kowloon, Hong Kong
All rights reserved. Printed in China **NHL Model No. 20105LO**

Tree Storage

- Remove the tree's main extension cord plug from the wall outlet.
- Starting at the top, disconnect the "TOP" from section "B" and then disconnect section "B" from section "A". **{Fig. 1}**
Note: Gently fold the tips in branches and fold the branches up toward the center. **{Fig. 2}**
Care should be taken to avoid damage to the lights.
- Remove section "A" from the tree stand and close tree stand to place into the carton.
- Refer to the drawing on how to repack your tree. **{Fig. 3}**

IMPORTANT: Store your carton neatly in a cool, dry location protected from sunlight to prolong the tree life and to better keep the light sets in working order. Do not place a heavy load on the carton to avoid damage to or crushing the carton and tree inside.

Spare parts included	 3-amp	 10 pcs
Qty	2 pcs	10 pcs

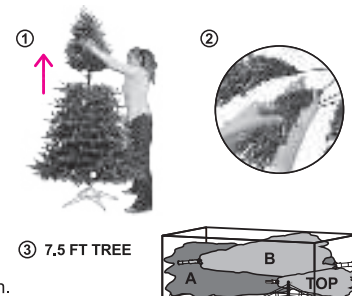



Árboles De Navidad preiluminados Con Easy Light Technology®


elimina las conexiones con cables

Tecnología LED Color Choice®

Instrucciones De Ensamblaje

Nicolas Holiday Ltd. le agradece la compra de este árbol de Navidad. Si tiene algún problema con su árbol, visítenos en www.geholidaylighting.com para obtener más información. Puede llamar a nuestro número gratuito al 1-877-398-7337. Visite nuestro sitio web para conocer los horarios de atención y videos de instrucciones de ensamblaje más recientes.

DIAGRAMA DE ENSAMBLAJE DEL ÁRBOL

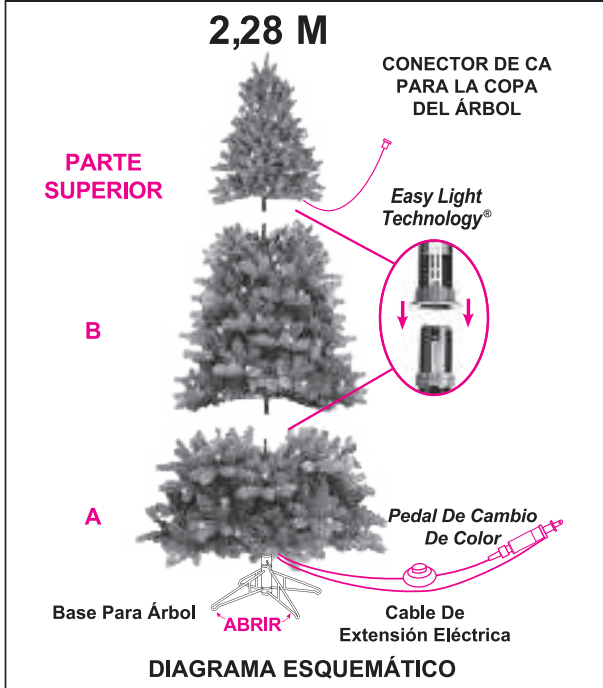

NOTA: no se necesitan herramientas

- Este árbol está provisto de un cable de extensión para un adorno de tope, que se puede unir a la sección superior a lo largo de la varilla.
- Como opción, el adaptador de árbol se puede conectar a la parte posterior del cable de extensión de la copa del árbol como complemento. Esta característica le permite utilizar solo un tomacorriente.

Secciones del árbol	Base para árbol	Tiempo estimado de ensamblaje*
Árbol de 2,28 m	3	Metal
		5 a 10 minutos

Sugerencias para la solución de problemas

Si el árbol no se ilumina, intente pisar el **Pedal De Cambio De Color** y asegúrese de que el interruptor de pared esté encendido. Si una sección del árbol no se enciende, revise si dicha sección tiene bombillas sueltas o si falta alguna; revise que todas las conexiones de fábrica estén hechas correctamente o que realizó de manera adecuada todas las conexiones eléctricas entre cada sección del árbol, es decir, el enchufe del árbol en la salida de la extensión eléctrica.

EXENCIÓN: NO USE NI INSTALE NINGUNA ILUMINACIÓN O ADORNOS NAVIDEÑOS ADICIONALES QUE SEAN ALIMENTADOS MEDIANTE UN PORTALÁMPARAS. HACERLO PODRÍA PRODUCIR DAÑOS AL ÁRBOL DE NAVIDAD O CAUSAR LESIONES PERSONALES. SI REALIZA LO DESCRITO ANTERIORMENTE, SE ANULARÁ LA GARANTÍA LIMITADA DE ESTE PRODUCTO.

Antes de limpiar o realizar cualquier mantenimiento, desconecte el artículo de decoración de la fuente de alimentación.

Solo para uso en interiores 120 V

NO ES UN JUGUETE; SOLO PARA DECORACIÓN.


GE es una marca comercial de General Electric Company y se usa bajo licencia de Nicolas Holiday Ltd.

Nicolas Holiday Ltd.


©2025 Nicolas Holiday Ltd.

Suite 2706 Skyline Tower, 39 Wang Kwong Road, Kowloon Bay, Kowloon, Hong Kong
Todos los derechos reservados. Impreso en China **NHL Model No. 20105LO**

- Abra la caja con cuidado. Retire el plástico de burbujas e inspeccione las secciones del árbol.
La caja debe incluir secciones etiquetadas como "A", "B" y "Superior", así como una base para árbol.

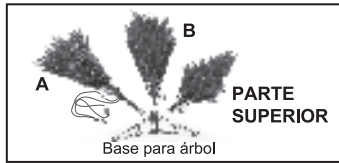


- La base para árbol debe estar abierta y colocarse en un ángulo de 90°.

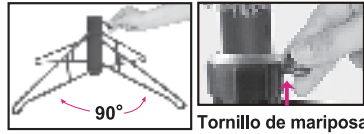

- Inserte la sección etiquetada A en la base para árbol, apriete el tornillo de mariposa. Luego, inserte el enchufe en un tomacorriente de pared.



- Desate el cordón de amarre ROJO para liberar los paneles de ramas. Todas las ramas se deben acomodar en su lugar jalando ligeramente la capa exterior de estas.
Fig. A. Comience en el interior y avance hacia las puntas. Levante cada punta hasta en 40°. Fig. B. Coloque las puntas 2 y 3 en posición horizontal, la punta 4 en posición vertical y las puntas 5 y 6 en un ángulo de 45°.

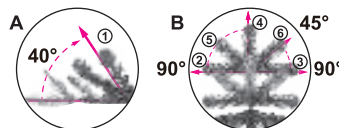


- Para ensamblar la sección etiquetada "B", alinee e inserte correctamente la sección "B" en la parte superior de la sección "A". (Consulte la Fig. C) Ajuste las puntas de las ramas, según sean necesario, para una apariencia más completa.



Fig. C
Es importante que alinee la marca cuando conecte dos secciones de árbol.

- Repita el "Paso 4" para dar forma.

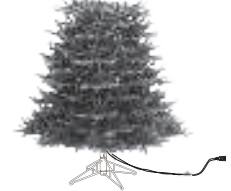


- Para ensamblar la copa del árbol, alinee e inserte correctamente la sección "SUPERIOR" en la parte superior de la sección "B". (Consulte la Fig. D) Ajuste las puntas de las ramas, según sea necesario, para una apariencia más completa.



Fig. D
Es importante que alinee la marca cuando conecte dos secciones de árbol.

- Presione suavemente el pedal para seleccionar la función de iluminación deseada. (Consulte abajo)

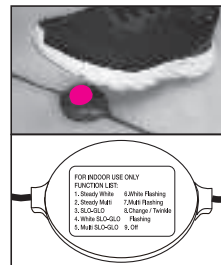

SOLO PARA USO EN INTERIORES
LISTA DE FUNCIONES:
1. Blanco fijo
2. Multicolor fijo
3. Brillo suave
4. Brillo suave blanco
5. Brillo suave multicolor
6. Blanco intermitente
7. Multicolor intermitente
8. Intermitente cambiante /destellante
9. Apagado

Almacenaje del árbol

- Retire el enchufe del cable de extensión principal del árbol del tomacorriente de pared.
- Comenzando por la parte superior, desconecte la sección "SUPERIOR" de la sección "B" y luego desconecte la sección "B" de la sección "A". {Fig. 1}

Nota: pliegue suavemente las puntas en las ramas y pliegue las ramas hacia el centro. {Fig. 2}

Se debe tener cuidado para evitar dañar las luces.

- Retire la sección "A" de la base para árbol y cierre la base para árbol para colocarla en la caja.
- Consulte el dibujo sobre cómo volver a embalar el árbol. {Fig. 3}

IMPORTANTE: guarde la caja en un lugar fresco y seco protegido de la luz solar para prolongar la vida del árbol y mantener en mejor funcionamiento los juegos de luces. No coloque una carga pesada sobre la caja para evitar dañar o aplastar la caja y el árbol en el interior.

Piezas de repuesto incluidas	3 amperios	10 piezas
Cantidad	2 piezas	10 piezas

