



IFYOO ONE PRO WX CONTROLLER


FOR PS 4, iOS, ANDROID, PC

User Manual

取扱説明書

Benutzerhandbuch

Guide de l'utilisateur

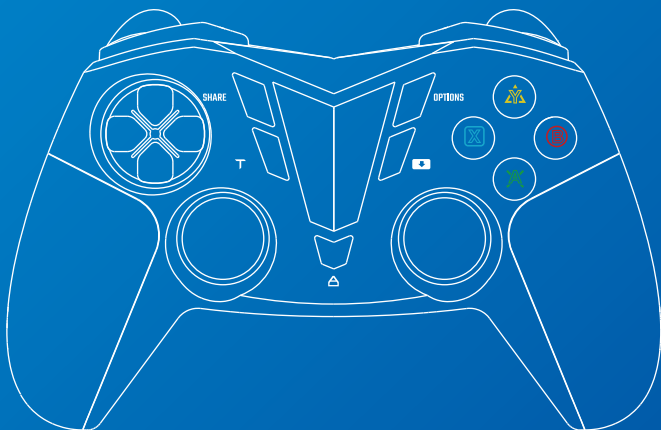

Contents

WARRANTY & SUPPORT	1
INTRODUCTION & SPECIFICATION	2
PRODUCT OVERVIEW	3
PRODUCT FEATURES	4
CONNECT TO PS 4.....	5
CONNECT TO APPLE DEVICES.....	6
CONNECT TO ANDROID DEVICES	7
CONNECT TO PC	8
FAQ	9
WANRRANTY & LEGAL	10
アフターサービス	12
製品の紹介 & 商品の仕様	13
製品概要	14
製品機能	15
PS 4に接続する	16
APPLE端末に接続	17
ANDROIDに接続する.....	18
PCに接続する.....	19
よく聞かれる質問	20
アフターサービス & 法律情報	21
GARANTIE UND KUNDENBETREUUNG	23
EINFÜHRUNG & PRODUKTSPEZIFIKATION	24
PRODUKTÜBERSICHT.....	25
PRODUKTMERKMALE	26
VERBINDUNG ZUM PS 4.....	27
VERBINDUNG ZUM APPLE-GERÄT.....	28
VERBINDUNG ZUM ANDROID-GERÄT	29
VERBINDUNG ZUM PC.....	29
FAQ	30
GARANTIEBESTIMMUNG & GESETZ	31
GARANTIE ET SUPPORT	33
INTRODUCTION & SPÉCIFICATION DU PRODUIT.....	34
APERÇU DES PRODUITS	35
CARACTÉRISTIQUES PRINCIPALES	36
CONNEXION À PS 4	37
CONNEXION À UN APPAREIL APPLE	38
CONNEXION À UN APPAREIL ANDROID	39
CONNEXION À UN PC	40
FAQ	41
GARANTIE & LOI	42

SAFETY INSTRUCTIONS

Warning: This product contains small parts, please do not swallow.

Children must use this product under adult supervision.

Recommended age for user: over 12.

- Please use the accessories in the package for assembly, and do not tamper the power cords, adapter or other parts of the product.
- In case of overheating, unusual smell or smoke, please immediately disconnect the device physically from the mains supply and contact the vendor. When charging the device, ensure good ventilation and always place the unit on non-flammable surfaces.
- In order to avoid product damage, please do not expose it to rain, high humidity or any unspecified outdoor environment. Please use the device in a dry environment.
- Please keep this device clean and dry, and avoid water, dust or other foreign matter into it.
- Please do not place the device near an open flame like a candle or similar.
- Please do not expose the device direct sunshine or over 40 degree Celsius environment.
- Please do not use water, alcohol or chemicals to clean the device directly. When cleaning, please disconnect the device from any power source.
- Please avoid falling down from height level against damage the product. Please use right steps to operate this device correctly and safely.
- Please do not disassemble and repair this device by yourself. If you encounter any problem that cannot be solved, please contact the vendor.



WARRANTY & SUPPORT

[One-year Warranty]

We offer a 90-day free replacement and one-year warranty service from the date of purchase. If there are any problem with the product, please do not hesitate to contact us.

[Drivers, Firmware Updates, Manuals & Video Tutorials]

For more information about the products and services, please visit our official website:

www.ifyoo.net

Download PDF manual, Firmware updates & drivers from:

www.ifyoo.net/support

Follow us on YouTube for more advanced video tutorials:

www.youtube.com/IFY00



OFFICAL WEBSITE

www.ifyoo.net



Customer Service: cs@ifyoo.net

9:00 - 18:00 Monday to Friday



Manuals, Drivers, Firmware Updates

www.ifyoo.net/support



Video Tutorials

www.youtube.com/IFY00



www.facebook.com/IFY00

INTRODUCTION

IFYOO ONE Pro Bluetooth Gaming Controller (Model No.:IFYOO-V911), it's compatible with PS4, slim, Pro, iPhone (iOS 13.0 or later), iPad(iPA-DOS 13 or later), Macbook (Catalina or later) , Android devices (android 10 or later). PC (windows XP, 7, 8,10,11)

Support PS 4 games.


iOS MFI games with game controller support.

Android Games with game controller support.

PRODUCT SPECIFICATION

Product	Game controller
Model No.	FO206A
Compatibility	PS4, Apple Devices, Android Devices, PC
Connection	Bluetooth
Battery	600 mAh
Input Voltage	4.5~5V DC
Input Current	< 150mA
Working Temperature	0°C~45°C
Working Humidity	20~80%
Product Net Weight	272±10g
Product Dimensions	160 x 102 x 65 mm
Package Size	175 x 126 x 70 mm
Package Contents	1x ONE Pro Wireless Controller, 1x User Manual 1x TYPE C USB Cable

PRODUCT OVERVIEW

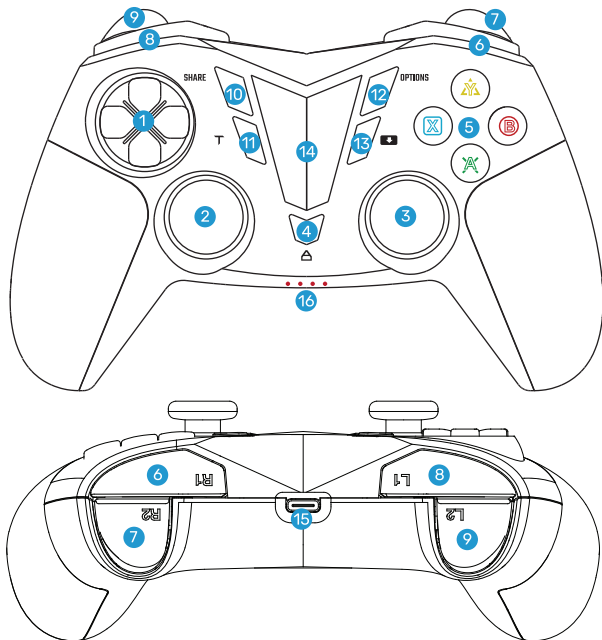

- | | | | |
|------------------|----------------|--------------|----------------------|
| 1 D-PAD | 5 X O Δ □ ABXY | 9 L2 Trigger | 13 TouchPad Press |
| 2 Left Stick L3 | 6 R1 Button | 10 SHARE | 14 LED BackLight |
| 3 Right Stick R3 | 7 R2 Trigger | 11 Turbo | 15 USB C Charge Port |
| 4 HOME | 8 L1 Button | 12 OPTION | 16 LED Indicator |

* Charge your controller before use it.

PRODUCT FEATURES

TURBO Function

Hold down the "TURBO" and then press "the button you want to set to turbo mode", TURBO function will be activate for this button. It allows continuous rapid fire.



The following buttons can set to Turbo mode:


A, B, X, Y, L1, R1, L2, R2, LSB, RSB

Notice: To deactivate the Turbo function, you just need to hold down the "TURBO" and press "the button have been activated the TURBO function", or you can reset the controller to cancel the TURBO function on all buttons.

Reset

When something goes wrong with the controller, you can reset the controller.

- 1) Find a SIM eject tool or an unfolded paper clip.
- 2) Insert it into the reset hole, hold the button for 3-5 seconds and release.

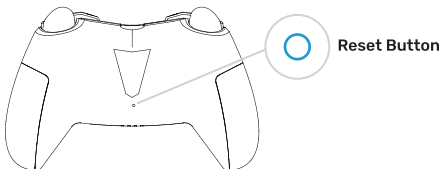


Charging

If the controller is low on battery, please charge it immediately. Use a USB C cable and 5V 1A adapter or plug it into your Console, PC to charge it, the 4 LED indicator light will Blink during charging and turn off when fully charged.

CONNECT TO PS 4



Pair it with PS4
with a USB Cable
when use it for the first time

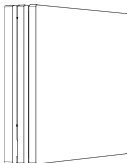

Pair it with Your PS4

- 1) Connect the Bluetooth controller to your PS 4, using the USB cable that came with the controller. (USB-C to USB A).
- 2) Press the "HOME" button on the controller to pair it with your PS 4.
- 3) Once successfully paired, you can remove the cable and use the controller wirelessly.
- 4) You can use up to 4 controllers at the same time. Different LED backlight colors are assigned to different users.

Reconnect

Press the "Home" button to reconnect it with your PS 4. The LED backlight will flash slowly then stay on after successfully reconnected.

Turn Off The Controller

Hold down the "Home" button for about 6 seconds to turn off the controller.

NOTE:


How to Fix Pairing Problems

If the controller can not pair with your PS 4. Please rest the controller with an unfolded paper clip. Then reconnect the controller to your PS4, using a USB cable.

CONNECT TO APPLE DEVICE



Compatible with
iOS 13
iPadOS 13
tvOS 13
or above

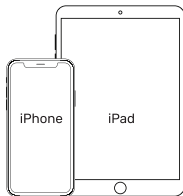

Pair it with iPhone , iPad, Apple TV



1) Hold the **"B"** buttons then Press **"Home"** buttons on the controller.

2) The LED backlight start flash green light rapidly.

3) On your Apple device, go to Bluetooth setting and turn bluetooth on.

4) Scan and choose "Xb** Wireless Controller".

5) You can now use your controller to play games support MFI controllers on your Apple devices.

Reconnect

Press the "Home" button to reconnect it with your Apple devices. The LED backlight will flash slowly then stay on after successfully reconnected.

Turn Off The Controller

Hold down the "Home" button for about 6 seconds to turn off the controller.

NOTE:

How to Fix Pairing Problems

If the controller can not pair with your Apple Devices. Please rest the controller with an unfolded paper clip. Then reconnect the controller to your Apple device again.


Where to Find iOS Games with Controller Support

You can go to our website or google MFI games, you will find a list of games that support MFI controllers.

CONNECT TO ANDROID DEVICES



Compatible with
Android 10
or later

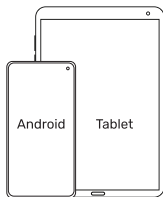

Pair it with Android Devices



- 1) Hold the “**B**” buttons then Press “**Home**” buttons on the controller.
- 2) The LED backlight start flash green light rapidly.

3) On your Android device, go to Bluetooth setting and turn bluetooth on.

4) Scan and choose “Xb** Wireless Controller”.

5) You can now use your wireless controller to play games with controller support on your Android device.

Reconnect

Press the “Home” button to reconnect it with your Android devices. The LED backlight will flash slowly then stay on after successfully reconnected.

NOTE:

Auto connection may not supported by some Android Phones, you need to go to bluetooth setting to reconnect again.

Turn Off The Controller

Hold down the “Home” button for about 6 seconds to turn off the controller.

NOTE:

How to Fix Pairing Problems

If the controller can not pair with your Android Devices. Please rest the controller with an unfolded paper clip. Then reconnect the controller to your Android device again.


Where to Find Android Games with Controller Support

You can go to our website or google Android games with controller support, you can find a list of games that support Dualshock 4 wireless controllers.

CONNECT TO PC



Compatible with
Windows XP, 7, 8,
10, 11



Pair it with PC via Bluetooth



- 1) Hold the **"B"** buttons then Press **"Home"** buttons on the controller.
- 2) The LED backlight start flash green light rapidly.

3) On your PC, go to Bluetooth setting and turn bluetooth on.

4) Scan and choose "Xb** Wireless Controller".

5) You can now use your wireless controller to play games with controller support on your Windows PC.

Pair it with PC via USB Cable

Use the USB cable that come with the controller, plug it into the USB port of your PC, the LED backlight turn on purple light.

Reconnect

Press the "Home" button to reconnect it with your PC. The LED backlight will flash slowly then stay on after successfully reconnected.

Turn Off The Controller

Hold down the "Home" button for about 6 seconds to turn off the controller.

NOTE:

For the best gaming experience, it is recommended to use Wire mode on PC. Bluetooth is compatible with window 10, 11. For windows XP, 7, 8 wire mode is recommended.

FAQ

Q: What devices can ONE Pro Wireless Gaming Controller work with?

A: PS 4, Apple Devices (iOS 13, iPadOS 13, TVOS 13), Android Phone, Android Tablet, Android TV (Android 10 or later). Windows PC (XP, 7,8 10, 11)

Q: How to reset the controller?

A: When something goes wrong with the controller, you can reset the controller.

1. Find a SIM eject tool or an unfolded paper clip.
2. Insert it into the reset hole, hold the button for 3-5 seconds and release.

Q: What games will work with the ONE Pro Wireless Gaming Controller ?

A: For PS 4, it support most of the games.

For Android Smartphone and Tablet, you can find a list of compatible games on our website, or google Android Games with controller support.

For Apple devices, you can find a list of compatible games on our website or go to: mfigames.com.

Q: Why the controller does not vibrate?

A: Check out whether the game support vibration, if the game support vibration, please check whether the vibration function is started in the game settings. Vibration doesn't work on Apple & Android devices.

If you encounter Bluetooth interference problems while using, please disconnect other Bluetooth devices, or use it via USB Cable.

WARRANTY

This product is guaranteed by Shenzhen Jing Waishe Technology Co., Ltd. for a period of 12 months from the date of purchase. During this period if there is a defect due to faulty materials or workmanship, the retailer from whom you purchased it will replace it with the same or a similar model on presentation of your purchase receipt or proof of purchase. This guarantee does not cover defects arising from accidental damage, misuse or wear and tear, and is available only to the original purchaser of the product. This does not affect your statutory rights.

LEGAL

IFY00 is a registered trademark. ©2019 Shenzhen Jing Waishe Technology Co., Ltd.

All other trademarks are the property of their respective owners. All rights reserved.

Product features, appearance and the specifications may be subject to change without prior notice. Please retain this information for future reference.



The crossed out wheellie bin symbol on the product means that under the WEEE regulations, all consumer and household electrical and electronic products should not be mixed with general household waste as it may contain environmentally hazardous substances. For environmentally responsible recovery, recycling and treatment of the product, contact your local authority for details of your nearest designated collection point.

安全に使用するために

警告：本製品には細かい部品が含まれていますので、飲み込みたりしてはいけません。子供は大人の監督のもとで本製品を使用しなければなりません。

目安年齢：12歳以上

- ・梱包内の部品を使って装着してください。電源ケーブル、アダプターなどの部品を改造しないでください。
- ・本製品が過熱し、異臭や煙が発生した場合は、直ちに本製品と給電設備を切り離して、メーカーの方にご連絡ください。本製品を充電する時、通風を確保し、不燃性の場所に本製品を放置してください。
- ・製品の損壊を避けるために、雨中、高湿度環境などの室外環境で晒さないでください。本設備は乾燥した環境で使用してください。
- ・本製品を清潔、乾燥に保持して、水・ほこり・その他の異物が入らないようにしてください。
- ・ロウソクや類似品等明るい火炎の近くに本製品を放置しないでください。
- ・ロウソクや類似品の発熱物等、高温物の近くに本製品を放置しないでください。
- ・水、アルコールや化学薬品で直接本製品を掃除しないでください。掃除する時、本製品と電源の接続を切ってください。
- ・破損を避けるために、本製品を落としたり衝撃を与えないでください。正しい操作手順で本製品をお使いください。
- ・本製品を自分で分解したり、修理したりしないでください。何か解決できない問題がございましたら、サプライヤーにご連絡ください。



アフターサービス

[保障サービス]

不良品があった場合は、90日間の無料で代替品を発送します。この商品に対しては、一年間の保証サービスが提供されますので、万が一商品に不具合がございましたら、お気軽にお問い合わせ下さい。

[取扱説明書 | ドライバ | ファームウェアの更新 | ビデオチュートリアル]

商品やサービスの詳細については、公式サイトをご覧ください:

www.ifyoo.net

PDF取扱説明書、ファームウェアアップデート、ドライバをダウンロードしてください:

www.ifyoo.net/support

YouTubeでは、より高度なビデオチュートリアルをご覧ください:

www.youtube.com/IFY00



英語での公式サイト

www.ifyoo.net



カスタマーサービス: cs@ifyoo.net

9:00 - 18:00 月曜日～金曜日



取扱説明書 | ドライバ | ファームウェアの更新

www.ifyoo.net/support



ビデオチュートリアル

www.youtube.com/IFY00




www.facebook.com/IFY00

製品の紹介

IFY00 ONE Pro Wirelessゲームコントローラー (モデル:IFY00-V911-Wireless) はPS 4、APPLE端末(iOS 13, iPadOS 13, tvOS 13) Android端末 (10以上のバージョン)、Windows PC (XP, 7,8,10,11) に適用されます。

ほとんどのPS 4ゲームに対応します。AppleデバイスではMFIコントローラーに対応するゲームをプレイできます。Androidデバイスではコントローラーに対応するゲームをプレイできます。

製品概要

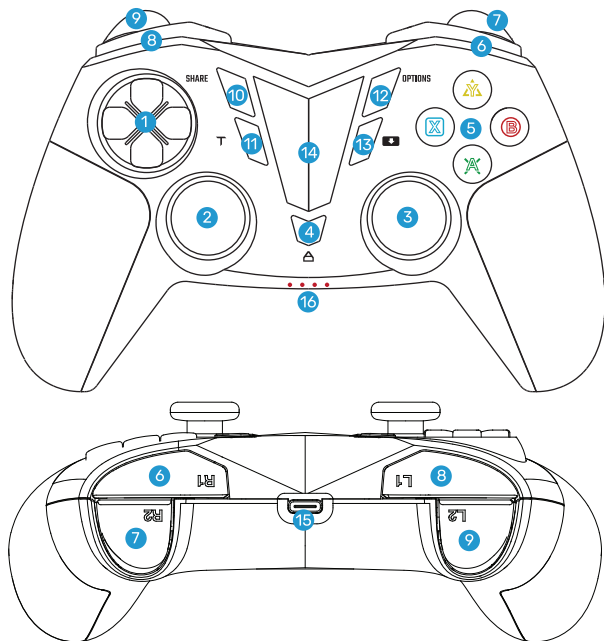

- | | | | |
|----------------|------------------|----------|------------------|
| ① D-pad | ⑤ × ○ △ □ ABXY | ⑨ L2 | ⑬ タッチパッドプレス |
| ② 左スティック
L3 | ⑥ R1 ボタン | ⑩ SHARE | ⑭ LED バックライト |
| ③ 右スティック
R3 | ⑦ R2 | ⑪ TURBO | ⑮ USB C
充電ポート |
| ④ HOME | ⑧ L1 ボタン | ⑫ OPTION | ⑯ LED インジケータ |

* コントローラを使用する前に充電してください。

製品機能

TURBO自動連発機能

TURBO+【自動連発機能を設定したいボタン】と一緒に押すと、このボタンの自動連発機能は有効になります。ボタンの自動連発とは、某ボタンを押し続けて、自動的に繰り返すボタンの機能を実現できるという。



自動連発機能を有効に設定できるボタン:


A, B, X, Y, LB, RB, LT, RT, LSB, RSB

ご注意: 自動連発機能をキャンセルしたい場合は、TURBO+【自動連発機能が有効になったボタン】と一緒に押すとキャンセルできます。またはコントローラーと端末の接続を切断して、全てのボタンの自動連発機能をキャンセルできます。

リセット

コントローラーに異常があると、ゲームパッドをリセットできます。

1. SIMカードを取り出すツールまたは広げたペーパークリップを使用します。
2. リセットホールに挿入し、3-5秒間押してから離します。

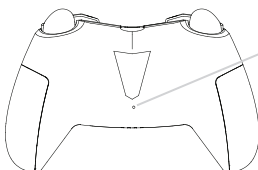

リセットボタン


充電

コントローラーのバッテリー残量が低下している時は、お早めに充電してください。USB TYPE-Cケーブルと5V 1Aのアダプターを使用するか、ゲーム機やコンピューターに接続して充電してください。充電中、4つのLEDインジケータが点滅します。充電が完了すると、インジケータが消灯します。

PS4 に接続する



初めて使用する時
USBケーブルでペアリン
グする必要があります

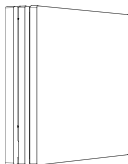

PS4とのペアリング

- 1) ゲームコントローラーの付属USBケーブルを使用し、コントローラーをPS4本体に接続します。(USB-C to USB A).
- 2) コントローラーの「Home」キーを押してペアリングします。
- 3) ペアリングが完了した後、ケーブルを外してワイヤレスで使用できます。
- 4) 最大4つのゲームコントローラーを同時に使用できます。各ゲームコントローラーのLEDバックライトの色が異なります。

再接続

「Home」キーを押してPS 4本体に再度接続すると、LEDバックライトがゆっくり点滅します。

ゲームパッドをオフにする

「Home」キーを約6秒間押して電源を強制的に切ります。

ご注意:


ペアリングと充電の問題に対応する方法

コントローラーをPS 4本体とペアリングできない場合は、ペーパークリップを広げてリセットホールに挿入し、コントローラーをリセットできます。

APPLE端末に接続



互換性
iOS 13
iPadOS 13
tvOS 13

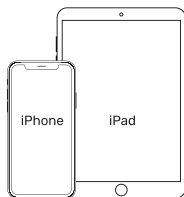

iPhone , iPad, Apple TV とのペアリング



- 1) 「B」キーを押したまま、「Home」キーを短く押すと。
- 2) LEDバックライトは緑に点滅します。

3) APPLEデバイスの電源を入れ、Bluetooth設定でBluetoothをオンにします。

4) 検索して「Xb** Wireless Controller」を選択します。

5) この時点で、APPLEデバイスでワイヤレスコントローラーを使用し、MFIコントローラーに対応するゲームをプレイできます。

再接続

「Home」キーを押してAPPLEデバイスに再度接続すると、LEDバックライトがゆっくり点滅します。

ゲームパッドをオフにする

「Home」キーを約6秒間押して電源を強制的に切ります。

ご注意：

ペアリングと充電の問題に対応する方法

コントローラーをAPPLEデバイスとペアリングできない場合は、ペーパークリップを広げてリセットホールに挿入し、コントローラーをリセットできます。


どうやってMFIコントローラーに対応するiOSゲームを検索できますか？

当社の公式サイトまたはGoogleにアクセスし、MFIゲームを検索できます。

ANDROID端末に接続



互換性
Android 10
以降

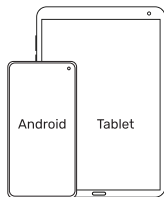

Android Phone, Tablet, TV とのペアリング



- 1) 「B」キーを押したまま、「Home」キーを短く押すと。
- 2) LEDバックライトは緑に点滅します。

3) Androidデバイスの電源を入れ、Bluetooth設定で - Bluetoothをオンにします。

4) 検索して「Xb** Wireless Controller」を選択します。

5) この時点で、Androidデバイスでワイヤレスコントローラーを使用し、コントローラーに対応するゲームをプレイできます。

再接続

「Home」キーを押してAndroidデバイスに再度接続すると、LEDバックライトがゆっくり点滅します。

一部のAndroid機種では、自動ペアリング機能は利用できません。スマートフォンのBluetooth設定で手動で接続する必要があります。

ゲームパッドをオフにする

「Home」キーを約10秒間押して電源を強制的に切ります。

ご注意:

ペアリングと充電の問題に対応する方法

コントローラーをAndroidデバイスとペアリングできない場合は、ペーパークリップを広げてリセットホールに挿入し、コントローラーをリセットできます。

どうやってコントローラーに対応するAndroidゲームを検索できますか？

当社の公式サイトまたはGoogleにアクセスし、コントローラーに対応するAndroidゲームを検索できます。

PC端末に接続



互換性

Windows 11, 10,
7, XP以降



BluetoothでPCとペアリング



- 1) 「B」キーを押したまま、「Home」キーを短く押すと。
- 2) LEDバックライトは緑に点滅します。

3) PCデバイスの電源を入れ、Bluetooth設定で - Bluetoothをオンにします。

4) 検索して「Xb** Wireless Controller」を選択します。

5) この時点で、PCデバイスでワイヤレスコントローラーを使用し、コントローラーに対応するゲームをプレイできます。

USBケーブルでPCとペアリング

コントローラに付属のUSBケーブルを使用して、PCのUSBポートに接続します。PCのUSBポートに接続すると、LEDバックライトが紫色に点灯します。

再接続

「Home」キーを押してPCデバイスに再度接続すると、LEDバックライトがゆっくり点滅します。

ゲームパッドをオフにする

「Home」キーを約10秒間押して電源を強制的に切ります。

ご注意：

BluetoothワイヤレスモードはWindows10、11で利用可能です。

Windows XP、7の場合は、有線接続をお勧めします。

よく聞かれる質問

Q: ONE Pro Wirelessコントローラーはどんな端末に対応できますか？

A: PS 4, Apple Devices (iOS 13, iPadOS 13, TVOS 13), Android Phone, Android Tablet, Android TV. (Android 10 以降)

Q: コントローラーをリセットする？

A: コントローラーに異常があると、ゲームパッドをリセットできます。

1. SIMカードを取り出すツールまたは広げたペーパークリップを使用します。
2. リセットホールに挿入し、3-5秒間押してから離します。

Q: ONE Pro Wirelessコントローラーはどんなゲームをプレイできますか？

A: ほとんどのPS4ゲームに対応します。AppleデバイスではMFIコントローラーに対応するゲームをプレイできます。Androidデバイスではコントローラーに対応するゲームをプレイできます。

当社の公式サイトまたはGoogleにアクセスし、MFIゲーム/コントローラーに対応するAndroidゲームを検索できます。

Q: どうしてコントローラーは振動しないですか？

A: ゲームが振動に対応できるかどうかをご確認ください。振動に対応できる場合、ゲームの設定メニューに振動機能は起動しているかをご確認ください。Apple & Android 端末ではバイブレーションが効きません。

使用中にBluetooth干渉が発生した場合は、他のBluetoothデバイスを切断するか、コントローラーを有線接続で使用してください。

アフターサービス

本製品は深圳競外設科技有限公司がアフターサービスを提供致します。購入日から12ヶ月以内に、製品の材料や工芸などの欠陥による品質問題が発生した場合、該当販売店に関連購入領収書または購入証明書を提出してアフターサービスを求めてください。新品交換や合意完了後類似機能を備えた製品を交換できます。この保証条例は正常の使用消耗、災害などの意外状況に不適用となります。関連のアフターサービスは製品のオリジナル購入者にのみ適用されます。本保証条例は深セン競外設科技有限公司により最終説明権を保持します。

法律情報

IFY00は登録商標で、深圳競外設科技有限公司は所有します。

他の商標は全て対応の所有者が所有し、著作権は所有者が所有します。

本製品の特性、外観、仕様等は随時変更されますで、別途にお知らせは致しません。参考までこの情報を保留してください。

SICHERHEITSHINWEISE

Warnung: Das Produkt enthält Kleinteile, bitte nicht schlucken. Kinder müssen dieses Produkt unter Aufsicht von Erwachsenen verwenden.

Empfohlenes Benutzeralter: Älter als 12 Jahre.

- Zur Montage des Produkts verwenden Sie bitte die Teile in der Verpackung. Zerlegen Sie das Netzkabel, den Adapter oder andere Teile des Produkts nicht ohne Genehmigung.
- Wenn das Produkt überhitzt, einen Geruch oder Rauch abgibt, stellen Sie die Verwendung des Produkts sofort ein, trennen Sie es von der Stromquelle und wenden Sie sich an den Produkthändler. Beim Laden dieses Produkts stellen Sie sicher, dass es in einer gut belüfteten Umgebung und auf einer nicht brennbaren Oberfläche steht.
- Verwenden Sie das Produkt nicht in staubigen, regnerischen, wassernahen oder übermäßig feuchten Umgebungen, um Produktschäden zu vermeiden. Es wird empfohlen, das Produkt an einem Ort zu verwenden, der dem Temperatur- und Feuchtigkeitsbereich des Produkts entspricht.
- Bitte halten Sie das Produkt sauber und trocken, damit kein Wasser, Staub und Fremdkörper in das Produkt gelangen.
- Stellen Sie das Produkt nicht in der Nähe von Heizkörpern und Wärmequellen wie Öfen, Kerzen usw. auf.
- Setzen Sie das Produkt nicht direkt der Sonne oder der Umgebung über 40 Grad Celsius aus.
- Reinigen Sie das Produkt nicht direkt mit Wasser, Alkohol oder anderen Chemikalien. Beim Reinigen des Produkts stellen Sie sicher, dass es ausgeschaltet ist.
- Lassen Sie das Produkt nicht aus großer Höhe fallen oder von schweren Gegenständen treffen. Bitte befolgen Sie die korrekten Arbeitsschritte, um das Produkt zu verwenden.
- Bitte zerlegen und reparieren Sie das Produkt nicht ohne Genehmigung. Wenn das Produkt unlösbare Probleme hat, wenden Sie sich bitte an den Händler, bei dem Sie das Produkt gekauft haben.



GARANTIE UND KUNDENBETREUUNG

[Ein-Jahr-Garantie]

Ab dem Kaufdatum bieten wir einen kostenlosen 90-tägigen Ersatz und eine einjährige Garantie. Wenn es irgendein Qualitätsproblem mit dem Produkt gibt, treten Sie mit uns bitte in Verbindung.

[Gerätetreiber, Firmware-Updates, Bedienungsanleitung, Video-Tutorials]

Bitte besuchen Sie unsere offizielle Website für weitere Informationen zu Produkten und Dienstleistungen:

www.ifyoo.net

Bitte laden Sie PDF-Bedienungsanleitung, Firmware-Update und Gerätetreiber von der folgenden URL herunter:

www.ifyoo.net/support

Bitte folgen Sie unserem YouTube-Kanal, um die neuesten Video-Tutorials zu erhalten:

www.youtube.com/IFY00



Offizielle Website

www.ifyoo.net



Kundendienst: cs@ifyoo.net

9:00 - 18:00 Montag bis Freitag



Gerätetreiber, Firmware-Updates

www.ifyoo.net/support



Video-Tutorials

www.youtube.com/IFY00



www.facebook.com/IFY00

EINFÜHRUNG

IFYOO ONE Pro Wireless Controller (Modell Nr.: IFYOO-V911-Wireless)


Kompatibel mit PS 4, Slim, Pro , iPhone (iOS 13.0 or later), iPad(iPADOS 13 or later), Macbook (Catalina or later). Android-Gerät (Systemversion 10 und höher), PC (Windows 11, 10, 8, 7, XP)

Die meisten PS 4-Spiele werden unterstützt.

Spiele, die MFI-Controller unterstützen, können auf Apple-Geräten gespielt werden.

Spiele, die Controller unterstützen, können auf Android-Geräten gespielt werden.

PRODUKTÜBERSICHT

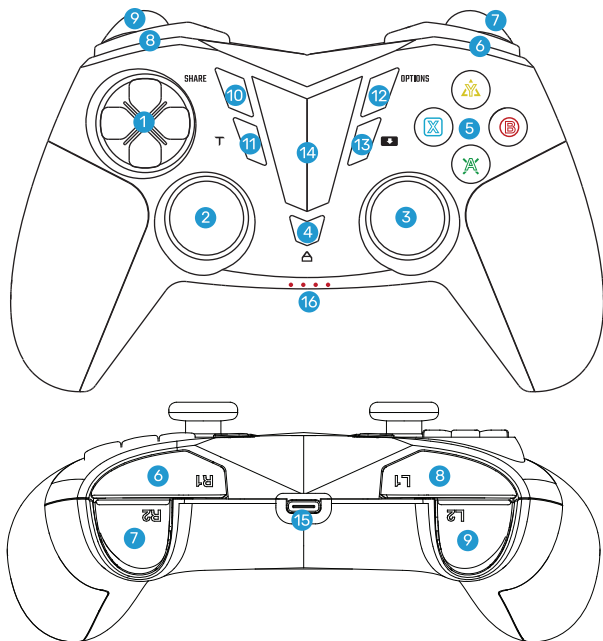

- | | | | |
|--------------------|----------------|---------------|-------------------------------|
| 1 D-PAD | 5 X O Δ □ ABXY | 9 L2 Auslöser | 13 TouchPad Presse |
| 2 Linker Stick L3 | 6 R1 Taste | 10 SHARE | 14 LED-Hintergrundbeleuchtung |
| 3 Rechter Stick R3 | 7 R2 Auslöser | 11 Turbo | 15 USB C Ladeanschluss |
| 4 HOME | 8 L1 Taste | 12 OPTION | 16 LED-Anzeige |

* Laden Sie Ihren Controller auf, bevor Sie ihn verwenden.