

Cuisinart®

PerfecTemp® 12-Cup Programmable Thermal Coffeemaker

DCC-3400 SERIES



Instruction
& Recipe
Booklet

For your safety and continued enjoyment of this product, always
read the instruction book carefully before using.



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

1. **READ ALL INSTRUCTIONS.**
2. **Always unplug from outlet when either the appliance or display clock is not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance**
3. Do not touch hot surfaces. Use handles and knobs.
4. To protect against electric shock, do not place cord, plug, or base unit in water or other liquids.
5. This appliance should not be used by or near children or individuals with certain disabilities.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest Cuisinart Repair Center for examination, repair, and electrical or mechanical adjustment.
7. The use of accessory attachments not recommended by Cuisinart may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always fill water reservoir first, then plug cord into the wall outlet. To disconnect, push the Brew/Off button, then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Make sure carafe lid is secure before serving any beverages.
14. Scalding may occur if the lid is removed during the brewing cycle.
15. The thermal carafe is designed for use with this coffeemaker only. It must never be used on the range top.
16. Do not set a hot carafe on a wet or cold surface.
17. Do not use a cracked carafe or a carafe having a loose or weakened handle.
18. Do not clean carafe or resting plate with cleansers, steel wool pads, or other abrasive materials.
19. **WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE THE BASE PANEL. NO USER-SERVICEABLE PARTS ARE INSIDE. REPAIRS SHOULD BE DONE ONLY BY AUTHORIZED PERSONNEL.**
20. Do not place cloth beneath coffeemaker or otherwise restrict airflow.
21. Use only the Cuisinart® Gold-Tone Commercial Style Filter or standard cone-shaped paper filter with this unit. **OTHER GOLD-TONE PERMANENT FILTERS MAY CAUSE THE COFFEEMAKER TO OVERFLOW.**
22. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage, always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

WARNING: RISK OF FIRE OR ELECTRIC SHOCK



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated, dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of fire or electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

Extension cords may be used if care is exercised in their use.

If an extension cord is used, the marked electrical rating of the extension cord must be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

NOTICE

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

OPERATING NOTICE

Clogging and backing up of water and/or coffee in the filter basket can occur under any or a combination of any of the following conditions: The use of too finely ground coffee, using two or more paper filters, using the gold-tone filter in conjunction with a paper filter or not properly cleaning coffee grounds from the gold-tone filter, or allowing coffee grounds to spill over the filter.

Caution: Never open the filter basket during the brewing cycle, even if no water is draining from the filter basket, because extremely hot water/coffee can spill out from the filter basket and cause injury. If water/coffee is not draining from the filter basket during the brewing cycle, unplug the unit and wait 10 minutes before opening and checking the filter basket.

	WARNING RISK OF FIRE OR ELECTRIC SHOCK DO NOT OPEN	
WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY		

CONTENTS

Important Safeguards.2-3

Important Unpacking Instructions4

The Quest for the Perfect Cup of Coffee.4

Features and Benefits5

Control Panel6

Before Brewing Your First Pot7

Programming Your Coffeemaker7

Making Coffee8

Brew Pause™ Feature.9

Cleaning and Maintenance9

Decalcification9

Warranty.10

IMPORTANT UNPACKING INSTRUCTIONS

1. Place the box on a large, sturdy, flat surface.
2. Remove literature.
3. Turn the box so that the back side of the coffeemaker is down and slide the coffeemaker from the box.
4. After the coffeemaker has been removed, place the box out of the way and lift off the left and right inserts.
5. Grasp the carafe by its handle, remove it from the resting plate, and remove the polybag.
6. Remove the polybag covering the coffeemaker.

Save all packing materials in case you have to ship the machine in the future.

KEEP ALL PLASTIC BAGS AWAY FROM CHILDREN.

THE QUEST FOR THE PERFECT CUP OF COFFEE

Element 1: Water

Coffee is 98% water. The quality of that water is as important as the quality of your coffee. If water doesn't taste good from the tap, it won't taste good in your coffee. Cuisinart includes a charcoal water filter to remove chlorine, bad tastes and odors for the purest coffee flavor, every time you brew.

Element 2: Coffee

While coffee is 98% water, all of the flavor comes from the beans. To achieve the same great taste you enjoy at a coffee bar, you need to use the same quality of coffee. If you choose to grind your own beans, buy them fresh and whole. Buy only about a two-week supply at a time, because once the bean is broken, its flavor degrades quickly.

Element 3: Grind

The grind is critical for proper flavor extraction. If the grind is too fine, over-extraction and bitterness will result. Too fine a grind may also clog the filter. If grind is too coarse, the water will pass through too quickly and the maximum flavor will not be extracted. When grinding your own beans, we recommend a medium-fine grind.

Element 4: Proportion

Coffee that is too strong or too weak is always a disappointment. Follow the recommended portions of ground coffee in the instructions under MAKING COFFEE, and later adjust the amount to suit your taste.

FEATURES AND BENEFITS

1. Coffeemaker Lid

Opens to access filter basket, water filter and water reservoir.

2. Water Reservoir with Water Level Indicator Window

3. Showerhead (not shown)

Distributes water evenly over coffee, reducing temperature loss as water passes through grounds.

4. Charcoal Water Filter Holder

Holds water filter firmly in place.

5. Charcoal Water Filter

Eliminates chlorine, bad tastes and odors from tap water.

6. Filter Basket


Holds a #4 paper filter **OR** a gold-tone filter.

7. Filter Basket Holder

8. Cuisinart® Permanent Gold-Tone Commercial-Style Filter

Eliminates the need for paper filters.

NOTE: Some fine grounds may flow through the filter and appear as sediment in the carafe.

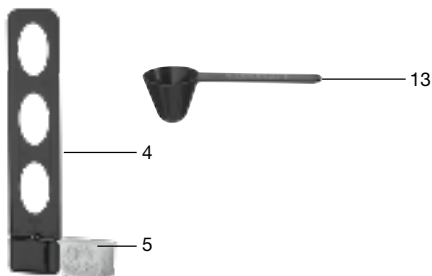

9. Control Panel

See detailed illustration, page 6.

10. Brew Pause™

Stops flow of coffee from basket when carafe is removed (20 seconds max) from the heater plate, so a cup can be poured mid-brew.

11. 12-Cup Thermal Carafe

The easy-pour double-wall insulated carafe has an ergonomic handle and is designed to keep your coffee hot for hours. No need to turn or adjust lid to pour.

12. 60-Second Reset (not shown)

One-minute protection in case a breaker trips, the unit is unplugged, or the power fails. It holds all programmed information, including time of day, Auto On time and Auto Off time.

13. Measuring Scoop


14. BPA Free (not shown)

All parts that come in contact with coffee or liquids are BPA free.



GETTING TO KNOW YOUR CONTROL PANEL

Detailed programming and use instructions are on pages 7 and 8.

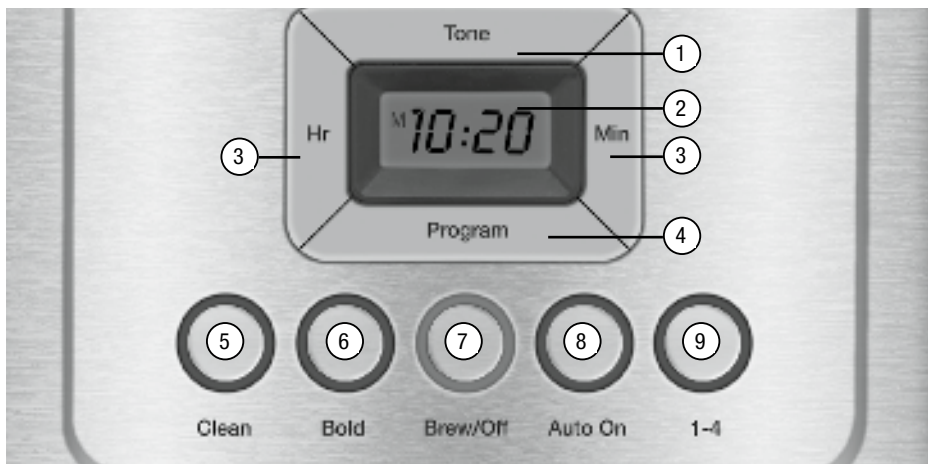

1. Ready Tone Button

Lets you turn an audible “Brew Cycle Finished” alert on or off.

2. Blue Backlit Display

Displays time of day and Auto On time. Ready Tone off icon appears when Ready Tone is off.

3. Hour and Minute Buttons

Use to set hours and minutes for time of day and Auto On time.

4. Program Button

Lets you program your coffeemaker to automatically begin brewing up to 24 hours in advance. To activate the setting, hit the AUTO ON button.

5. Clean Button

Red indicator appears when it is time to decalcify your coffeemaker.

6. Bold Flavor Strength Button

Lets you choose bold or regular coffee flavor; blue indicator appears when bold is selected.

7. Brew/Off Button

Turns coffeemaker on and off.

8. Auto On Button

Once an AUTO ON time is set using the Program button, the AUTO ON button will illuminate blue, indicating the function is on and brewing will start automatically at the preset time.

9. 1–4 Cup Button

Adjusts brew process to maximize coffee flavor when brewing fewer than 5 cups. Blue indicator appears when function is selected.

BEFORE BREWING YOUR FIRST POT OF COFFEE

Rinsing your coffeemaker: During the manufacturing process, dust can get trapped in the unit. We recommend flushing out the system before brewing your first pot of coffee. Simply fill the reservoir, power on the unit, and follow steps 1, 3 and 5 on page 8 under MAKING COFFEE. **Do not add coffee!**

Charcoal Water Filter


Your coffeemaker comes with a charcoal water filter that eliminates chlorine, bad tastes and odors from tap water.

Inserting the Water Filter

- Remove the filter from polybag and soak it, fully immersed, in cold tap water for 15 minutes.
- Lift the water filter holder out of the water reservoir.
- Press down on the filter compartment and pull toward you to open.
- Place filter into the holder and snap it closed. Be careful – improper placement can tear the filter skin.
- Flush filter by running cold tap water through holes in bottom of compartment for 10 seconds.
- Allow the filter to drain completely.
- Slide the water filter holder back into the channel in the water reservoir, pushing it down to the base of the unit.

NOTE: We recommend changing the water filter every 60 days or after 60 uses, and more often if you have hard water.

Replacement filters can be purchased in stores, by calling Cuisinart Customer Service, or at www.cuisinart.com

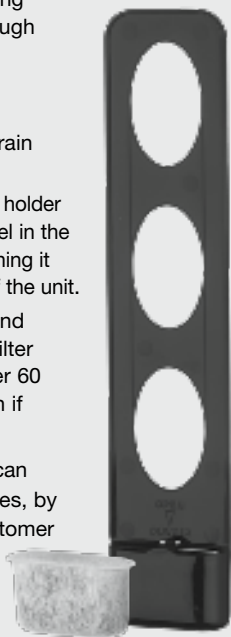

PROGRAMMING YOUR COFFEEMAKER

SETTING THE CLOCK

When the coffeemaker is plugged in, 12:00 will flash in the display for 10 seconds, indicating the unit is in Clock Set mode. If 12:00 stops flashing, simply press and hold Hour or Minute button to return to flashing Clock Set mode.

Setting Hours and Minutes

Press either button to select the desired time. Hold buttons down to scroll through the digits quickly, or press and release to advance one digit at a time. Be sure the PM indicator is on if setting a PM time.

SETTING THE AUTO ON TIME

1. Press the Program button.

The digital display will flash the default (12:00) or previously selected time. Follow directions under SETTING THE CLOCK (above) to program your start-brew time. Five seconds after finishing, the unit will automatically exit Auto On Setup mode and the Auto On light will illuminate, letting you know Auto On is activated.

NOTE: To exit Auto On Setup mode, you can also just press Program button again.

2. To activate Auto On using previously selected time:

Press the Auto On button. Previously set time will appear and indicator will light up. Display will return to clock setting.

3. To deactivate Auto On:

Press illuminated Auto On button; light will go off, indicating mode is turned off.

TURNING OFF READY TONE

Your coffeemaker features a Ready Tone that beeps 5 times when coffee is finished brewing. To turn this alert off, press Tone button; an icon will appear in display to indicate tone is off. To turn tone back on, press Tone button again; icon will disappear.

MAKING COFFEE

Follow instructions in **BEFORE BREWING YOUR FIRST POT OF COFFEE** (page 7).

1. Fill the water reservoir

Lift the coffeemaker lid to open. Pour the desired amount of water into the water reservoir using the water level indicator located at the side of the coffeemaker.



2. Add the ground coffee

Insert a #4 paper filter **OR** the gold-tone filter. Be sure that the paper filter is completely open and fully inserted in the basket. It may help to fold and flatten the seams of a paper filter beforehand. Add 1 level scoop of ground coffee per cup. Adjust the amount according to taste.



NOTE: The maximum capacity for ground coffee is 15 tablespoons for this coffeemaker. Exceeding this amount may cause overflow if the coffee is too finely ground.

3. Position carafe and plug in unit

Place carafe in unit and be sure coffeemaker lid is closed. Plug coffeemaker into an electrical outlet.

4. Set preferences

- Press the 1–4 cup button if you are brewing fewer than 5 cups. The indicator light will illuminate.
- Press the Bold button to select stronger coffee flavor, if desired. The button's indicator light will illuminate. Press again to turn off light and brew at regular strength.

5. Start Brewing

Press the Brew/Off button to begin brewing.

6. After brewing

When the brewing cycle has been completed, five beeps will sound. Coffee will continue to stream from the filter for several seconds.

Note: Reservoir cover may be hot during and directly after brewing. Wait at least 10 minutes before opening.

Helpful Hint: Using cold water in the carafe can affect brewed coffee temperature. “Preheat” your carafe by rinsing it out with hot water before brewing.

Brew Pause™ Feature

This feature interrupts the flow of coffee from the basket to let you pour that first cup mid-brew. Because the flavor profile of coffee brewed at the start of a cycle differs from that brewed toward the end, be aware that using this feature will weaken the flavor strength of the finished pot.

NOTE: Removing carafe for more than 20 seconds during brew cycle may cause filter basket to overflow.

CLEANING AND MAINTENANCE

Always turn coffeemaker off and remove the plug from the electrical outlet before cleaning.

Lift up the coffeemaker lid. Remove and discard the paper filter and ground coffee. The filter basket can be washed in warm, soapy water and rinsed thoroughly, or cleaned in the upper rack of the dishwasher. Dry all parts after use.

Do not put any water in the unit once the filter basket has been removed. Wipe the area under the filter basket with a damp cloth.

Remove the carafe from the resting plate. Discard any remaining coffee. The carafe and lid can be washed in warm, soapy water and rinsed thoroughly, or placed in a dishwasher. The carafe and carafe lid should be placed on the upper rack only.

Do not use any scouring agents or harsh cleansers on any part of the coffeemaker.

Never immerse base unit in water or other liquids. To clean base, simply wipe with a clean, damp cloth and dry before storing. Fingerprints and other blemishes on the housing can be washed off with soap and water or a nonabrasive cleaning solution. Wipe resting plate with a clean, damp cloth. Never use rough, abrasive materials or cleansers to clean the resting plate. Do not dry the inside of the water reservoir with a cloth, as lint may remain.

Maintenance

Any other servicing should be performed by an authorized service representative.

DECALCIFICATION

Decalcification refers to the removal of calcium deposits that form over time on the metal parts of your coffeemaker. The mineral content of the tap water in your area and the frequency of use affects the rate of the calcium buildup, which can affect the functioning of your coffeemaker and the flavor of your coffee.

For best performance from your PerfecTemp® coffeemaker, we recommend cleaning it whenever the CLEAN LED indicator lights up.

NOTE: Before decalcifying your unit, remove the charcoal water filter from the water reservoir.

To clean:

1. Fill the water reservoir to capacity with a mixture of $\frac{1}{3}$ white vinegar and $\frac{2}{3}$ water.
2. Press and hold the CLEAN button. When the CLEAN LED indicator flashes, the coffeemaker is in Clean mode. Release the button.
3. When the cycle is completed, 5 beeps will sound and the coffeemaker will shut off.
4. If the CLEAN indicator illuminates once more, repeat the cleaning procedure with a fresh solution of vinegar and water.
NOTE: One cleaning cycle is usually sufficient.
5. When the CLEAN indicator remains off, run one cycle with a full reservoir of fresh, cold water to rinse the unit.
6. Return the charcoal water filter to the holder inside the water reservoir and your coffeemaker is ready to brew!

Limited Warranty

Subject to the exclusions and limitations contained herein, Conair LLC dba Cuisinart ("Cuisinart") warrants that the Cuisinart® PerfectTemp® 12-Cup Programmable Thermal Coffeemaker ("Product") will be free from material defects in materials and workmanship under normal home use conditions for a period of THREE (3) years beginning on the date the Product was purchased in its original, sealed packaging, unless otherwise specified in this Limited Warranty. This Limited Warranty is only for U.S. consumers (defined herein as purchasers at retail for personal, family, or household use) who originally purchase the Product from Cuisinart or an authorized Cuisinart® reseller (if you are unsure whether a retailer or other point of sale is an authorized or unauthorized Cuisinart reseller, contact Cuisinart).

This Limited Warranty does NOT cover:

- Normal wear and tear;
- Any Product purchased by commercial purchasers or for commercial or non-household uses;
- Accessories, parts, or software added to the Product after the system is shipped from Cuisinart;
- Any costs associated with the replacement or repair of the Product, including labor, installation, or other costs incurred by you without prior Cuisinart approval;
- Damage to the Product, defective conditions, or nonconformities due to: (1) external causes, including shipping, accidents, problems with electrical power (Product designed only for use with 120-volt outlets), abnormal conditions (such as mechanical or environmental); (2) usage not in accordance with Product instructions; (3) misuse, neglect, unauthorized alteration, unauthorized repair; and (4) acts of god or other events beyond Cuisinart's control;
- Though necessary repairs and maintenance might be performed by any company, damage caused by you or any nonauthorized third party, may void, this Limited Warranty;
- Damage caused by accessories or replacement parts not specifically authorized by Cuisinart, may void, this Limited Warranty; and
- Any Product where the original Product identification markings (trademark or serial number) have been removed, altered, or obliterated from the Product.

It is recommended that you visit the website, <https://cuisinart.registria.com>, for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the

consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this Limited Warranty will be the date of manufacture.

Hassle-free warranty

If the Product that is the subject of this Limited Warranty fails during the warranty period for reasons covered by this Limited Warranty, Cuisinart will, at its option, repair the Product, replace the Product with another identical or reasonably equivalent product, or if Cuisinart is unable to repair or replace the Product, refund the purchase price, less the amount directly attributable to the consumer's prior usage of the Product. To obtain a return shipping label, email us at <https://www.cuisinart.com/customer-care/product-assistance/product-inquiry/>, or call our Consumer Service Center toll-free at 1-800-726-0190 to speak with a representative.

Upon receipt of the Product, Cuisinart will inspect the Product and, if required under this Limited Warranty, attempt to repair, replace, or refund the Product within thirty (30) days. However, there may be delays beyond Cuisinart's control, in which case that time period may be extended as reasonably necessary.

IMPORTANT: If the nonconforming Product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-726-0190 to ensure that the problem is properly diagnosed, the Product is serviced with the correct parts, and the product is still under warranty.

California Residents Only

The three (3) year Limited Warranty period begins on the date the Product was delivered, which may be different than the date the Product was purchased. California residents also have the option of obtaining the benefits of this Limited Warranty by bringing the Product to (A) the store where it was purchased or (B) another retail store that sells Cuisinart products of the same type. The retail store shall then, according to its preference, either repair the Product, refer the consumer to an independent repair facility, replace the Product with another identical or reasonably equivalent product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the Product. California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair or, if necessary, replacement with another identical or reasonably equivalent product by calling our Consumer Service Center toll-free at 1-800-726-0190. Cuisinart will be responsible for the cost of such repair, replacement, and/or shipping and handling for such nonconforming products under warranty.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR BY JURISDICTION. IN THE EVENT THIS LIMITED WARRANTY IS BREACHED, YOU MAY HAVE CLAIMS FOR REPLACEMENT, DAMAGES, OR OTHER PENALTIES

LIMITATIONS OF LIABILITY/ADDITIONAL LIMITATIONS AND EXCLUSIONS

ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU. CUISINART'S RESPONSIBILITY UNDER THIS OR ANY OTHER WARRANTY, IMPLIED OR EXPRESS, IS LIMITED TO REPAIR, REPLACEMENT, OR REFUND, AS SET FORTH ABOVE. THESE REMEDIES ARE THE SOLE AND EXCLUSIVE REMEDIES FOR ANY BREACH OF WARRANTY. TO THE MAXIMUM EXTENT PERMITTED BY LAW, CUISINART IS NOT RESPONSIBLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR UNDER ANY OTHER LEGAL THEORY (INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING, REPROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH A SYSTEM CONTAINING THE PRODUCT), EVEN IF CUISINART HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIMITED WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD. SOME STATES (OR JURISDICTIONS) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU.

This Limited Warranty is issued by:

Conair LLC
1 Cummings Point Road
Stamford, CT 06902
1-800-726-0190

©2024 Cuisinart
Glendale, AZ 85307
Printed in China
24CE089603

IB-14337-ESP-C

Cuisinart®

Cafetera térmica programable de 12 tazas (1.75 L) PerfecTemp®

DCC-3400 SERIES



Instrucciones
Y Libro De
Recetas

Para su seguridad y para disfrutar plenamente de este producto,
siempre lea cuidadosamente las instrucciones antes de usarlo.

MEDIDAS DE SEGURIDAD IMPORTANTES

Al usar aparatos eléctricos, siempre debe tomar precauciones básicas de seguridad para reducir el riesgo de incendio, electrocución o heridas, incluso las siguientes:

1. **LEA TODAS LAS INSTRUCCIONES.**
2. **Siempre desconecte el aparato cuando este o el reloj no están en uso y antes de limpiarlo. Permita que se enfríe antes de instalar/sacar piezas y antes de limpiarlo.**
3. No toque las superficies calientes; utilice los mangos/asas y los botones/perillas.
4. Para reducir el riesgo de electrocución, no sumerja el cable, la clavija ni el cuerpo del aparato en agua ni en ningún otro líquido.
5. Este aparato no debe ser usado por o cerca de niños o personas con ciertas discapacidades.
6. No utilice este aparato si el cable o la clavija estuviesen dañados, después de que hubiese funcionado mal o que se hubiese caído o si estuviese dañado; regréselo a un centro de servicio autorizado para su revisión, reparación o ajuste.
7. El uso de accesorios no recomendados o vendidos por Cuisinart para uso con este modelo puede provocar heridas.
8. No lo utilice en exteriores.
9. No permita que el cable cuelgue del borde de la encimera o de la mesa, ni que haga contacto con superficies calientes.
10. No coloque el aparato sobre o cerca de un quemador a gas o de una hornilla eléctrica caliente, ni en un horno caliente.
11. Siempre llene el depósito de agua antes de conectar el aparato a la toma de corriente. Siempre apague el aparato, presionando el botón BREW/OFF, antes de desconectarlo.
12. No utilice el aparato para ningún otro fin que no sea el indicado.
13. Cerciórese de que la tapa de la jarra esté cerrada antes de servir.
14. Para evitar las quemaduras, no retire la tapa durante la preparación.
15. La jarra térmica provista con esta cafetera ha sido diseñada para ser usada con esta únicamente; no la ponga sobre una hornilla caliente.
16. No ponga la jarra caliente sobre una superficie húmeda o fría.
17. No utilice la jarra si estuviese rajada o si el asa estuviese floja.
18. No limpie la jarra o la placa con limpiadores abrasivos, lana de acero u otros materiales abrasivos.
19. **ADVERTENCIA: PARA REDUCIR EL RIESGO DE INCENDIO O ELECTROCUCIÓN, NO DESARME EL CUERPO DEL APARATO. ESTE APARATO NO CONTIENE NINGUNA PIEZA QUE PUEDA SER REPARADA/CAMBIADA POR EL USUARIO. LAS REPARACIONES DEBEN SER REALIZADAS POR UN TÉCNICO AUTORIZADO.**
20. No coloque la cafetera encima de un paño/trapo ni obstruya el flujo de aire debajo de esta.
21. Use solamente un filtro dorado permanente Cuisinart® o filtros de papel estándares con este aparato. OTROS FILTROS PERMANENTES PODRÍAN PROVOCAR UN DERRAME.
22. No haga funcionar el aparato debajo o dentro de un armario/gabinete. **Siempre desconecte el aparato antes de guardarlo en un armario/gabinete.** Dejar el aparato conectado presenta un riesgo de incendio, especialmente si este toca las paredes o la puerta del armario/gabinete cuando cierra.

GUARDE ESTAS INSTRUCCIONES PARA USO DOMÉSTICO SOLAMENTE

ADVERTENCIA: RIESGO DE INCENDIO O ELECTROCUCIÓN



El símbolo representado por un relámpago con punta de flecha dentro de un triángulo equilátero tiene como fin alertar al usuario de la presencia de voltajes peligrosos no aislados en el interior del aparato, los cuales pueden ser de suficiente magnitud para constituir un riesgo de incendio o electrocución.



El signo de exclamación dentro de un triángulo equilátero tiene como fin alertar al usuario de la presencia de instrucciones importantes de operación y mantenimiento (servicio) en la documentación que acompaña al equipo.

USO DE EXTENSIONES

El cable provisto con este aparato es corto, para reducir el peligro de que alguien se enganche o tropiece con un cable más largo.

Puede usarse una extensión eléctrica con cuidado.

La clasificación nominal de la extensión debe ser por lo menos igual a la del aparato. Es importante acomodar el cable más largo de manera que no cuelgue de la encimera/mesa donde puede ser jalado por niños o puede causar tropiezos.

AVISO

El cable de este aparato está dotado de una clavija polarizada (una pata es más ancha que la otra). Como medida de seguridad, se podrá enchufar de una sola manera en la toma de corriente polarizada. Si no entrara en la toma de corriente, invírtala. Si aún no entrara completamente, comuníquese con un electricista. No intente modificarla.

IMPORTANTE

Ciertas condiciones pueden producir un atascamiento del agua y/o del café en el portafiltros y provocar un derrame. Para evitar que esto ocurra, no mueva el café demasiado fino, no utilice más de un filtro de papel (o un filtro permanente al mismo tiempo que un filtro de papel), limpie cuidadosamente el filtro dorado, y no sobrellene el filtro.

Precaución: nunca abra la tapa durante la preparación, aunque el líquido no esté bajando. Agua o café muy caliente podría rebosar del portafiltros y causar quemaduras. Si el café no escurriera debidamente durante la preparación, desenchufe el aparato y espere 10 minutos antes de abrir la tapa y examinar el portafiltros.

	ADVERTENCIA RIESGO DE INCENDIO O ELECTROCUCIÓN NO LO ABRA	
ADVERTENCIA: PARA REDUCIR EL RIESGO DE ELECTROCUCIÓN, NO DESARME EL CUERPO DEL APARATO.		
ESTE APARATO NO CONTIENE NINGUNA PIEZA QUE PUEDA SER REPARADA/ CAMBIADA POR EL USUARIO.		
LAS REPARACIONES DEBEN SER EFECTUADAS POR TÉCNICOS AUTORIZADOS SOLAMENTE.		

ÍNDICE

Medidas de seguridad importantes	2-3
Instrucciones de desembalaje	4
Sugerencias para la preparación de un buen café	4
Piezas y características	5
Panel de control	6
Antes del primer uso	7
Programación	7
Operación	8
Función de pausa al servir Brew Pause™	9
Limpieza y mantenimiento	9
Eliminación del sarro	9
Garantía	10

IMPORTANTES INSTRUCCIONES DE DESEMBALAJE

1. Ponga la caja sobre una superficie espaciosa, plana y segura.
2. Retire el manual de instrucciones y otros folletos de la caja.
3. Voltee la caja para que repose en su lado y retire la cafetera.
4. Aleje la caja y alce las dos piezas de cartón.
5. Agarre la jarra por el asa, y retírela de la placa y de la bolsa protectora.
6. Retire la bolsa protectora que envuelve la cafetera.

Le aconsejamos que guarde el material de embalaje.

MANTENGA LAS BOLSAS DE PLÁSTICO FUERA DEL ALCANCE DE LOS NIÑOS.

SUGERENCIAS PARA LA PREPARACIÓN DE UN BUEN CAFÉ

Elemento 1: el agua

El café está constituido por un 98 % de agua. Por lo tanto, la calidad del agua es tan importante como la del café. Si el agua tiene mal sabor, el café tendrá mal sabor. Por eso Cuisinart equipó su cafetera con un filtro de agua de carbón que elimina el cloro y el mal sabor y olor, para preparar café puro, taza tras taza.

Elemento 2: el café

Aunque la mayor parte del brebaje es agua, el sabor proviene del café. Para preparar un brebaje de calidad, debe usar ingredientes de calidad. Elija café fresco, en granos enteros. Compre café aproximadamente dos veces por mes. Una vez que se rompen los granos, el sabor intenso y rico del café comienza a deteriorarse.

Elemento 3: el grado de la molienda


La molienda es primordial para preservar el sabor del café. Café molido demasiado fino producirá un café amargo. Esto también puede atascar el filtro. Café molido muy grueso dejará pasar el agua demasiado rápidamente, lo cual producirá un café acuoso. Le aconsejamos que utilice un grado de molienda medio-fino.

Elemento 4: las proporciones

Para que el café sea perfecto, ni muy débil ni muy fuerte, se debe usar la proporción apropiada de café y agua. Siga las pautas en la sección OPERACIÓN y ajuste las proporciones al gusto.

PANEL DE CONTROL

Véase las instrucciones detalladas de programación en las páginas siguientes.

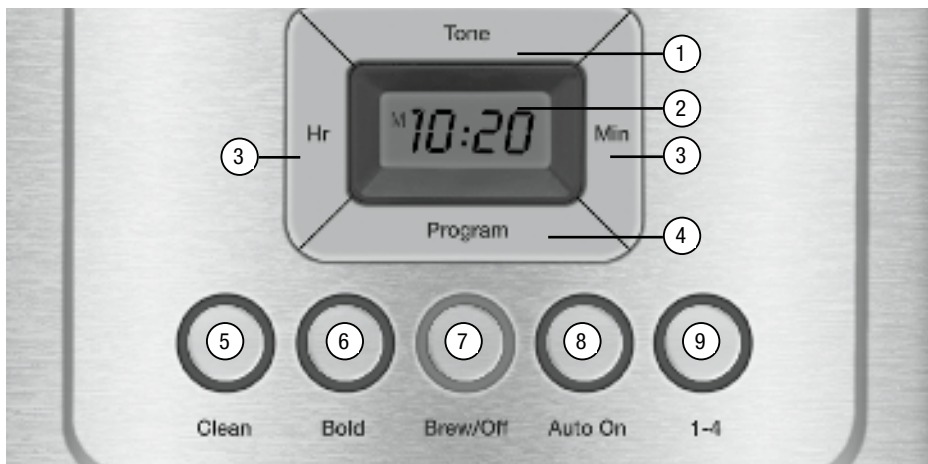

1. Botón para activar/desactivar la señal de listo

Permite activar/desactivar la señal que indica que el café está listo.

2. Pantalla digital con retroiluminación azul

Indica la hora y la hora de encendido automático. El indicador de la señal de listo aparece en la pantalla cuando la señal ha sido desactivada.

3. Botones de las horas (HR) y de los minutos (MIN)

Permiten fijar la hora y la hora de encendido automático.

4. Botón PROG

Permite programar el encendido automático, hasta con 24 horas de antelación. Para activar la preparación a la hora programada, presione el botón AUTO ON.

5. Botón de limpieza

El indicador rojo indica cuando es tiempo de eliminar los depósitos de sarro del sistema interno.

6. Selector de intensidad

Permite elegir la intensidad del café: regular (REG) o fuerte (BOLD). El indicador luminoso aparece cuando "fuerte" ha sido seleccionado.

7. Botón BREW/OFF

Permite encender y apagar el aparato.

8. Botón AUTO ON

Presiónelo para activar la hora de encendido automático previamente programada con el botón Program. El indicador luminoso azul se encenderá, lo que indica que esta función está activa y que la preparación empezará a la hora programada.

9. Botón 1-4 (preparación 1-4 tazas)

Optimiza el sabor y la temperatura del café cuando se prepara menos de 5 tazas. El indicador luminoso verde se enciende cuando la función está activada.

ANTES DEL PRIMER USO

Limpieza inicial del sistema interno: Puede acumularse polvo en el aparato durante el proceso de fabricación. Le recomendamos que limpie el sistema interno de la cafetera antes de preparar café por primera vez. Simplemente llene el depósito y encienda la unidad, siguiendo los pasos 1, 3 y 5 de la sección OPERACIÓN en la página 8, **pero sin usar café.**

Filtro de agua de carbón


Su cafetera está equipada con un filtro de agua de carbón que elimina el cloro y el mal olor/sabor del agua corriente.

Instalación del filtro de agua

- Retire el filtro de la bolsa de plástico y remójelo en agua fría durante 15 minutos.
- Alce el soporte del filtro que se encuentra en el depósito de agua de la cafetera.
- Abra el soporte.
- Instale el filtro en el soporte y ciérrelo. Haga esto con mucho cuidado. Si no instalara el filtro de manera correcta, la membrana del filtro podría romperse. Enjuague los filtros en agua fría por 10 segundos para limpiarlo, con las aberturas directamente bajo el flujo de agua.
- Permita que el filtro se seque por completo.
- Regrese el soporte del filtro en el depósito, empujándolo hasta el fondo..

NOTA: le aconsejamos que cambie el filtro de agua cada 60 días o 60 usos, o más frecuentemente si el agua es dura.

Los filtros de repuesto están disponibles en las tiendas especializadas, en nuestro sitio web www.cuisinart.com, o llamando a nuestro servicio postventa al 1-800-726-0190.

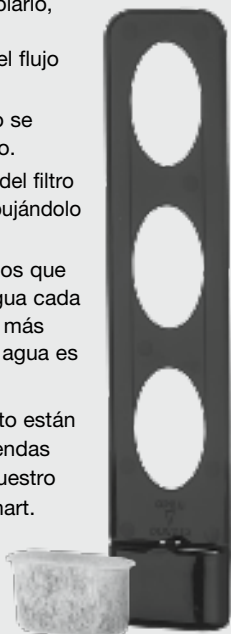

PROGRAMACIÓN

CÓMO FIJAR LA HORA

12:00 (la hora por defecto) aparecerá en la pantalla, parpadeando, al enchufar la cafetera. Si deja de parpadear, mantenga oprimido el botón HR o MIN para regresar al modo de fijación de la hora.

Oprima el botón HR para fijar la hora y el botón MIN para fijar los minutos. Mantenga oprimido el botón para desplazarse por las horas o los minutos más rápidamente u oprima el botón repetidamente para avanzar en incrementos de una hora o de un minuto. Cerciórese que el indicador PM esté en la pantalla si desea fijar una hora de tarde/noche.

CÓMO FIJAR LA HORA DE ENCENDIDO AUTOMÁTICO

1. Oprima el botón PROG.

La hora por defecto (12:00) o la hora de encendido automático previamente fijada aparecerá en la pantalla. Utilice los botones de flechas para programar la hora de encendido automático. Cinco segundos después de terminar la programación, la unidad saldrá automáticamente del modo de programación y el indicador luminoso se iluminará para indicar que el encendido automático ha sido activado.

NOTA: para salir del modo de programación en cualquier momento, presione nuevamente el botón PROG.

2. Para activar el encendido automático usando una hora previamente fijada:

Oprima el botón AUTO ON. La hora previamente fijada aparecerá en la pantalla y el indicador luminoso del botón AUTO ON se iluminará. Luego, la hora normal aparecerá en la pantalla.

3. Para desactivar el encendido automático:

Presione el botón AUTO ON iluminado; la luz se apagará, lo que indica que el modo ha sido desactivado.

CÓMO DESACTIVAR LA SEÑAL DE LISTO

Su cafetera cuenta con una señal sonora que emite 5 pitidos al final de la preparación. Para desactivar esta función, presione el botón TONE; un icono aparecerá en la pantalla para indicar que la función ha sido desactivada. Para volver a activar la señal, presione el botón TONE; el icono desaparecerá.

OPERACIÓN

Limpie la cafetera antes de usarla por primera vez, según se indica en la sección ANTES DEL PRIMER USO.

1. Llene el depósito de agua

Alce la tapa para abrir. Agregue agua hasta el nivel deseado.



2. Agregue café molido

Instale un filtro de papel n.º 4 **O** el filtro dorado en el portafiltros. Asegúrese de que el filtro de papel esté completamente abierto y debidamente instalado. Puede resultar útil doblar y aplanar las costuras del filtro de papel de antemano. Agregue 1 cucharada llena de café molido por taza de café (15 ml). Ajuste la cantidad de café molido a gusto.



NOTA: esta cafetera tiene una capacidad máxima de 15 cucharadas de café molido.

No exceda esta cantidad; esto podría provocar un derrame, especialmente si el café ha sido molido muy fino.

3. Coloque la jarra sobre la placa

Coloque la jarra sobre la placa y asegúrese de que la tapa esté cerrada. Conecte el cable a una toma de corriente

4. Fije sus preferencias

- Si desea preparar menos de 5 tazas de café, oprima el botón 1-4. El indicador luminoso se encenderá.
- Oprima el botón BOLD si desea café fuerte. El indicador luminoso se encenderá. Presione el botón otra vez para preparar café regular.

5. Empiece la preparación

Oprima el botón BREW/OFF para empezar la preparación.

6. Después del ciclo de preparación

El aparato emitirá cinco pitidos al final del ciclo de preparación. El café seguirá bajando durante varios segundos.

Nota: la tapa del depósito de agua puede estar caliente; permita que se enfríe por 10 minutos antes de abrirla.

Consejo útil: una jarra fría puede afectar la temperatura del café. “Precaliente” la jarra antes del uso, enjuagándola con agua caliente.

Función de pausa al servir Brew Pause™

La función Brew Pause™ (pausa al servir) permite sacar la jarra de la placa antes del fin del ciclo de preparación. Aunque ofrecemos esta opción, le recomendamos que espere hasta el final de la preparación para servir el café, ya que el sabor del café puede variar en diferentes momentos de la preparación.

NOTA: la función Brew Pause™ detiene el flujo de café durante solamente 20 segundos; no deje la jarra fuera de la placa durante más tiempo.

LIMPIEZA Y MANTENIMIENTO

Siempre apague y desconecte el aparato antes de limpiarlo.

Abra la tapa de la cafetera. Saque y tire el filtro de papel. El portafiltros puede lavarse a mano, con detergente y agua tibia, o en la bandeja superior del lavavajillas. Permita que todas las piezas se sequen.

No ponga agua en la unidad después de retirar el portafiltros. Limpie el área bajo el portafiltros con un paño húmedo.

Retire la jarra de la placa. Bote el café restante. Lave la jarra y la tapa de la jarra a mano, con agua tibia y detergente, o en la bandeja superior del lavavajillas.

No utilice productos o materiales abrasivos para limpiar el aparato.

No sumerja el aparato en agua ni en ningún otro líquido. Limpie el cuerpo del aparato con un paño húmedo y séquelo antes de guardar el aparato. Las huellas de dedos y otras manchas podrán eliminarse con agua y detergente, o con una solución limpiadora no abrasiva. Limpie la placa con un paño húmedo. Nunca utilice materiales ásperos o limpiadores abrasivos para limpiar la placa. No seque el interior del depósito de agua con un paño, porque esto puede dejar pelusas dentro del mismo.

Mantenimiento

Cualquier otro servicio debe ser realizado por un técnico autorizado.

ELIMINACIÓN DEL SARRO

Con el tiempo, depósitos de calcio (sarro) se acumulan en las partes metálicas de la cafetera, lo que puede afectar el desempeño de la cafetera y el sabor del café. Nota: el nivel de acumulación depende del contenido de mineral en el agua de la llave y de la frecuencia de uso de la cafetera.

Para un rendimiento óptimo, le aconsejamos eliminar el sarro cada vez que el indicador luminoso al lado del botón CLEAN se enciende.

NOTA: retire el filtro de agua de carbón antes de eliminar el sarro.

Para limpiar:

1. Llene el depósito de agua hasta la capacidad máxima con $\frac{1}{2}$ de vinagre blanco y $\frac{1}{2}$ de agua.
2. Mantenga oprimido el botón CLEAN. Cuando el indicador luminoso al lado del botón CLEAN empiece a parpadear, suelte el botón.
3. Al final del ciclo de limpieza (indicado por 5 pitidos), la cafetera se apagará.
4. Si el indicador luminoso sigue encendido, haga un segundo ciclo de limpieza con una nueva solución de agua con vinagre.
NOTA: por lo general, un ciclo es suficiente para eliminar el sarro.
5. Si el indicador luminoso está apagado, repita estos pasos con un tanque de agua fresca para eliminar el olor a vinagre.
6. Vuelva a instalar el filtro de agua de carbón. ¡Su cafetera está lista!

Garantía Limitada

Sujeto a las exclusiones y limitaciones contenidas en este documento, Conair LLC/Cuisinart ("Cuisinart") garantiza que este Producto Cuisinart® estará libre de defectos de materiales y fabricación en condiciones normales de uso doméstico durante un período de TRES (3) años a partir de la fecha de compra del Producto en su embalaje original sellado, a menos que se especifique lo contrario en esta Garantía Limitada. Esta Garantía Limitada es solo para consumidores de Estados Unidos (definidos aquí como compradores al por menor para uso personal, familiar o doméstico) que compren originalmente el Producto a Cuisinart o a un revendedor autorizado de Cuisinart. Si no está seguro de si un minorista u otro punto de venta es un revendedor autorizado de Cuisinart, póngase en contacto con Cuisinart.

Esta Garantía Limitada NO cubre:

- El desgaste normal;
- Cualquier Producto adquirido por compradores comerciales o para usos comerciales o no domésticos;
- Accesorios, piezas o programas añadidos al Producto después de que Cuisinart lo haya enviado;
- Cualquier costo asociado con el reemplazo o reparación del Producto, incluyendo mano de obra, instalación u otros costos incurridos por usted sin previa aprobación de Cuisinart;
- Daños, defectos y fallas debidos a: (1) causas externas, incluyendo el envío, accidentes, problemas con el suministro eléctrico (el Producto está diseñado para su uso exclusivo con enchufes de 120 V), condiciones anormales (como mecánicas o medioambientales); (2) uso no conforme a las instrucciones del Producto; (3) uso indebido, negligencia, alteración no autorizada, reparación no autorizada; y (4) casos fortuitos u otros acontecimientos fuera del control de Cuisinart;
- Aunque cualquier empresa puede realizar las reparaciones y el mantenimiento necesarios, los daños causados por usted o por terceros no autorizados pueden anular esta Garantía Limitada;
- Los daños causados por accesorios o repuestos no autorizados específicamente por Cuisinart pueden anular esta Garantía Limitada; y
- Cualquier Producto cuyas marcas de identificación originales (marca comercial o número de serie) hayan sido retiradas, alteradas o borradas del Producto.

Se recomienda llenar el formulario de registro disponible en <https://cuisinart.registria.com> a fin de facilitar la verificación de la fecha de compra original de este producto. Sin embargo, no es necesario registrar el producto para recibir servicio bajo esta garantía. En ausencia de prueba de la fecha de compra, el período de garantía será calculado a partir de la fecha de fabricación del producto.

Garantía de sin dificultades

Si el Producto objeto de esta Garantía Limitada falla durante el período de garantía por razones cubiertas por esta Garantía Limitada, Cuisinart, a su elección, reparará el Producto, sustituirá el Producto por otro idéntico o razonablemente equivalente, o si Conair no puede reparar o sustituir el Producto, reembolsará al consumidor el precio de compra, menos la cantidad directamente atribuible al uso anterior del Producto por parte del consumidor. Para obtener una etiqueta de devolución, contáctenos, visitando <https://www.cuisinart.com/customer-care/product-assistance/product-inquiry//> o llamando a nuestro servicio de atención al cliente, al **1-800-726-0190**, para hablar con un representante.

Tras la recepción del Producto, Conair inspeccionará el Producto y, si lo requiere esta Garantía Limitada, intentará reparar, reemplazar o reembolsar el Producto en un plazo de treinta (30) días. No obstante, pueden producirse retrasos fuera del control de Cuisinart, en cuyo caso dicho plazo podrá ampliarse en la medida en que sea razonablemente necesario.

IMPORTANTE: Si debe llevar el producto defectuoso a un centro de servicio no autorizado, por favor informe al personal del centro de servicio que deben llamar al servicio de atención al cliente Cuisinart, al 1-800-726-0190, a fin de diagnosticar el problema correctamente, usar las piezas correctas para repararlo y comprobar que el producto aún esté bajo garantía.

Residentes de California

El período de Garantía Limitada de TRES (3) años comienza en la fecha de entrega del Producto, que puede ser diferente de la fecha de compra del Producto. Los residentes en California también tienen la opción de obtener los beneficios de esta Garantía Limitada devolviendo el producto defectuoso (A) a la tienda donde lo compraron, o (B) a otra tienda que venda productos Cuisinart® del mismo tipo. La tienda podrá, a su elección, reparar el producto, referir al consumidor a un centro de servicio independiente, sustituir el producto por uno idéntico o razonablemente equivalente, o reembolsar al consumidor el precio de compra menos la cantidad directamente atribuible al uso anterior del producto por el consumidor.

Los residentes de California también pueden, si lo desean, enviar el producto defectuoso directamente a Cuisinart para que sea reparado o sustituido por uno idéntico o razonablemente equivalente. Para esto, deben llamar a nuestro servicio de atención al cliente al 1-800-726-0190. Cuisinart será responsable por los gastos de reparación, reemplazo, manejo y envío de los productos defectuosos durante el período de garantía.

ESTA GARANTÍA LIMITADA LE OTORGA DERECHOS LEGALES ESPECÍFICOS, Y TAMBIÉN PUEDE TENER OTROS DERECHOS QUE VARÍAN DE UN ESTADO A OTRO O EN FUNCIÓN DE LA JURISDICCIÓN. EN CASO DE INCUMPLIMIENTO DE ESTA GARANTÍA LIMITADA, USTED PUEDE RECLAMAR LA SUSTITUCIÓN, UNA INDEMNIZACIÓN POR DAÑOS Y PERJUICIOS U OTRAS SANCIONES.

LIMITACIONES DE RESPONSABILIDAD/LIMITACIONES Y EXCLUSIONES ADICIONALES

TODAS LAS GARANTÍAS EXPRESAS E IMPLÍCITAS TIENEN UNA DURACIÓN LIMITADA AL PERÍODO DE GARANTÍA LIMITADA. NO SE APLICARÁ NINGUNA GARANTÍA DESPUÉS DE ESTE PERÍODO. ALGUNOS ESTADOS NO PERMITEN LIMITACIONES EN LA DURACIÓN DE UNA GARANTÍA IMPLÍCITA, DE MODO QUE LAS LIMITACIONES MENCIONADAS PUEDEN NO REGIR PARA USTED. LA RESPONSABILIDAD DE CUISINART BAJO ESTA O CUALQUIER OTRA GARANTÍA, IMPLÍCITA O EXPRESA, SE LIMITA A LA REPARACIÓN, SUSTITUCIÓN O REEMBOLSO, SEGÚN LO ESTABLECIDO ANTERIORMENTE. ESTOS RECURSOS SON LOS ÚNICOS Y EXCLUSIVOS EN CASO DE INCUMPLIMIENTO DE LA GARANTÍA. EN LA MEDIDA MÁXIMA PERMITIDA POR LA LEY, CUISINART NO SE HACE RESPONSABLE DE NINGÚN DAÑO DIRECTO, INDIRECTO, ESPECIAL, INCIDENTAL O CONSECUENTE RESULTANTE DE CUALQUIER INCUMPLIMIENTO DE LA GARANTÍA O BAJO CUALQUIER OTRA TEORÍA LEGAL (INCLUYENDO, PERO NO LIMITADO A, LUCRO CESANTE, TIEMPO DE INACTIVIDAD, PÉRDIDA DEL FONDO DE COMERCIO, DAÑOS O SUSTITUCIÓN DE EQUIPOS Y BIENES, Y CUALQUIER COSTE DE RECUPERACIÓN, REPROGRAMACIÓN O REPRODUCCIÓN DE

CUALQUIER PROGRAMA O DATOS ALMACENADOS EN O UTILIZADOS CON UN SISTEMA QUE CONTENGA EL PRODUCTO), INCLUSO SI CONAIR HA SIDO ADVERTIDO DE LA POSIBILIDAD DE TALES DAÑOS. ALGUNOS ESTADOS NO PERMITEN LA EXCLUSIÓN O LIMITACIÓN DE DAÑOS ESPECIALES, INCIDENTALES O CONSECUENTES, DE MODO QUE LAS LIMITACIONES MENCIONADAS PUEDEN NO REGIR PARA USTED. TODAS LAS GARANTÍAS EXPRESAS E IMPLÍCITAS TIENEN UNA DURACIÓN LIMITADA AL PERÍODO DE GARANTÍA LIMITADA. NO SE APLICARÁ NINGUNA GARANTÍA DESPUÉS DE ESTE PERÍODO. ALGUNOS ESTADOS (O JURISDICCIONES) NO PERMITEN LIMITACIONES EN LA DURACIÓN DE UNA GARANTÍA IMPLÍCITA, DE MODO QUE LAS LIMITACIONES MENCIONADAS PUEDEN NO REGIR PARA USTED.

Esta Garantía Limitada es emitida por:

**Conair LLC
1 Cummings Point Road
Stamford, CT 06902
1-800-726-0190**

©2024 Cuisinart
Glendale, AZ 85307
Impreso en China
24CE089603

IB-14337-ESP-C