



We appreciate your decision to purchase a Zojirushi quality product. Please read the important guidelines below. By being mindful of these guidelines, we are confident that your Zojirushi product will give you top performance and optimum satisfaction for years to come. Thank you.

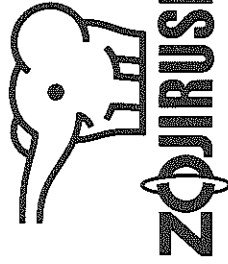

ZOJIRUSHI CORPORATION
OSAKA JAPAN

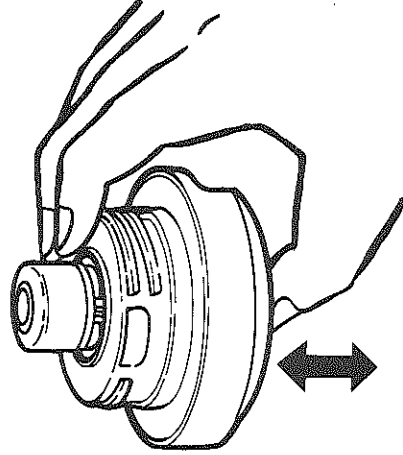

HANDY POT & COFFEE JUGS (for table top use only) IMPORTANT SAFEGUARDS

- * Before using, keep plastic bags away from babies and children to avoid danger of suffocation. Do not use plastic bags in cribs, beds, Carriages or play-pens.
- 1. Do not use by or near children. This pot is not intended for use by children.
- 2. Do not overturn the pot as drinks may flow out.
- 3. Do not drink directly from the pot.
- 4. When carrying the pot, be sure not to hold the outer lid. Always use the handle.
- 5. Do not remove the base of the pot unnecessarily. The glass liner in the pot may be damaged with the shock of improper handling.
- 6. Make sure the stopper is tightly closed when not in use. In case of push-button types, make sure the push-button is closed.

HOW TO USE

1. Before use, rinse out thoroughly with hot water.
2. For hot drinks preheat with hot water and for cold drinks precool with cold water.
3. Only fill drinks up to about 3cm below the mouth of the inner bottle.
- * Do not fill with warm milk products or baby food, fresh juice, dry ice or carbonated drinks.
4. When adding ice, first fill with drinks then add ice. Do not drop ice cubes inside as they may crack the glass liner.

HOW TO POUR

1. Open the stopper. In case of push-button type, press the push-button.
2. Tilt the pot and pour drinks.
- Do not tilt too much, otherwise drinks may overflow from the lid.

HOW TO CLEAN

1. Rinse inner bottle with warm water after each use. Wash the stopper with luke-warm water and wipe dry.
- * Do not immerse the pot in water or wash in the dish washer.
2. As using the pot, you may find some glittering flakes floating or fur covering the inner wall of the inner bottle. They are fragments of a membrane which are formed by combination of mineral ingredients such as, silicic acid, magnesium and calcium which are contained in water.
- The "FLAKES" and "FUR" may be easily cleaned by the following instructions:
Fill the inner bottle with hot water and add a 10% solution of clear vinegar or baking soda. Let stand for a few minutes and rinse thoroughly.
3. Special treatment for push button type.
(When the push button does not work.)
1. Press the push button 4-5 times while soaking the stopper in luke warm water (40°C). Then let stand for 30 minutes.
2. About 30 minutes later, press the push button 10-15 times while keeping the stopper immersed in luke warm water.
(If the push button does not still function, repeat the steps detailed in item 1 and 2.)
3. When the push button functions normally, press it several more times in water and drain the water that has entered the stopper by referring to the drawing below.
- * Shake the stopper while pressing the push button with your thumb.
4. After draining the water, dry the stopper at room temperature.

Isolierkanne (nur für den Tisch) WICHTIGE VORSICHTMASSNAHMEN

- * Vor Gebrauch Plastik-Umhüllung entfernen und vor Babys und Kindern schützen, da sonst bei Überziehen Erstickungsgefahr besteht.
- Nicht in Kinderbetten, -wagen und Laufställe legen.
- 1. Nicht für den Gebrauch mit Kindern geeignet. Diese Kanne ist nicht für Kinder vorgesehen.
- 2. Kanne nicht umkippen, da sonst das Getränk ausfließen kann.
- 3. Nicht direkt von der Kanne trinken.
- 4. Beim Tragen der Isolierkanne nur am Henkel, nicht am Außengehäuse halten.
- 5. Unterfteil der Isolierkanne nicht unnötigweise Abnehmen. Der Glaskolben zerspringt bei unsachgemäßer Behandlung.
- 6. Achten Sie darauf, daß der Stopfen nach Gebrauch geschlossen ist, sowie beim Patentstopfen.
- Gebrauchs- und Füllungshinweis
- 1. Vor Gebrauch mit heißem Wasser ausspülen.
- 2. Für heiße Getränke mit heißem, bei kalten Getränken mit kaltem Wasser ausspülen.
- 3. Die Kanne nur bis 3 cm unter der Öffnung füllen.
- * Nicht mit Milch, Fruchtsaft, Trocken-Eis oder kohlenensäurehaltigen Getränken füllen.
- 4. Bei Zufügen von Eis, erst das Getränk, dann das Eis.
- So wird ausgeschenkt:
- 1. Den Stopfen öffnen. Beim Patentstopfen, Knopf drücken.
- 2. Kanne kippen und Getränk ausschütten. Nicht zuviel kippen, da sonst das Getränk überfließen kann.
- So wird gereinigt:
- 1. Nach jedem Gebrauch die Kanne mit warmen Wasser befüllen. Den Stopfen mit warmen Wasser spülen und abwischen.
- * Nicht die Flasche in Wasser tauchen oder in Spülmaschine reinigen.
- 2. Nach Gebrauch der Isolierkanne finden Sie glitzernde Flocken oder eine peizige Schicht im inneren des Glaskolbens. Das sind Fragmente aus der Zusammensetzung von Mineralien, Kieselsäure, Magnesium und Calcium, welches das Wasser enthält.
- Leichte Reinigung bei folgender Tätigkeit:
Füllen Sie den Glaskolben mit heißem Wasser und fügen Sie 10 % igen reinen Weinessig oder kochend heißes soda hinzu. Ein paar Minuten stehen lassen, dann langsam ausschütten.
- 3. Spezialbehandlung bei Patentstopfen:
(Wenn der Stopfen nicht richtig funktioniert.)
- 1. Befätigen Sie Druckknopf 4-5 Mal in warmen Wasser (40 °C). Dann lassen Sie ihn 30 Minuten stehen.
- 2. Nach 30 Minuten nochmals 10-15 Mal in warmen Wasser beätigen.
(Wenn der Stopfen dennoch nicht funktioniert, wiederholen Sie Vorgang 1 und 2.)
- 3. Wenn der Stopfen wieder funktioniert, noch einige Zeit in Wasser tauchen, dann herausnehmen und Wasser abfließen lassen.
- * Den Stopfen schütteln und gleichzeitig Druckknopf beätigen.
- 4. Nach abfließen des Wassers, Stopfen bei Zimmertemperatur trocken lassen.