



D0284S001

PT-P710BT

(English)

Please read this guide, including all precautions, before using this printer. After reading this guide, keep it in a safe place.

For FAQs, Troubleshooting, and to download software and manuals, visit support.brother.com.

Please note that we cannot assume any responsibility for any damage or losses arising from the use of this printer or labels created with the printer, or the disappearance or change of data due to failure, repair, loss of power, or any claim from a third party.

⚠ DANGER

Failure to observe instructions and warnings will result in death or serious injuries.

Follow these guidelines to avoid the risk of heat generation, smoking, explosion, or fire.

Rechargeable Li-ion Battery

- DO NOT allow the battery to come into contact with liquids.
- DO NOT charge, use, or leave in high temperature (above 60 °C) locations.
- Use the included USB cable to charge.
- Use only for its intended purpose.
- Keep away from heat and fire.
- DO NOT connect the + and - terminals with metal objects such as wire.
- DO NOT carry or store with metal objects.
- DO NOT throw, hit or damage the battery in any way.
- DO NOT solder connections to the battery.
- DO NOT disassemble or modify the battery.
- DO NOT dispose of the battery with household waste.

⚠ WARNING

Failure to observe instructions and warnings could result in death or serious injuries.

Follow these guidelines to avoid the risk of heat generation, smoking, explosion, fire, or injury.

Rechargeable Li-ion Battery

- Keep away from infants. If ingested, see a doctor immediately.
- Stop using if there are noticeable abnormalities such as smell, heat, deformities, or discoloration.
- If liquid from the battery gets into eyes, wash them immediately with clean water. See a doctor immediately.

Printer, USB Cable

- Use the included USB cable to prevent any damage.
- DO NOT use during a thunderstorm.
- DO NOT damage.
- DO NOT place heavy objects on.
- DO NOT forcibly bend or pull.
- DO NOT disassemble or modify.
- DO NOT drop or hit.
- DO NOT allow to come into contact with liquids.
- If you notice abnormalities such as smell, heat generation, discoloration, or deformation while using or storing, stop using the printer, disconnect the USB cable, and remove the battery.

⚠ CAUTION

Failure to observe instructions and warnings could result in minor or moderate injuries.


Follow these guidelines to avoid injury.

Rechargeable Li-ion Battery

- If liquid from the battery gets onto skin or clothes, immediately rinse them with water.

Printer, USB Cable

- When the printer is not being used, store it out of the reach of children. In addition, DO NOT allow children to put any printer parts or labels in their mouths. If ingested, see a doctor immediately.
- Use the dedicated Li-ion battery (PA-BT-005).
- DO NOT get your fingers trapped in the printer when opening and closing the Cassette Cover.
- DO NOT insert your fingers any further than the brush inside the Tape Exit Slot.
- DO NOT touch the Print Head.
- DO NOT touch or insert your fingers into the cutter blade, otherwise you may get injured.

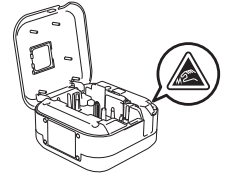

General Precautions

Printer, Tape Cassette, or USB Cable

- DO NOT use in any way or for any purpose not described in this guide. Doing so may result in accidents or damage.
- Use Brother TZe Tape Cassettes.
- DO NOT put any foreign objects into the Tape Exit Slot, the USB Port, or Li-ion battery compartment, etc.
- DO NOT place in any location exposed to extremely high or low temperatures, high humidity, or dusty location, such as direct sunlight, rain, near heaters, other hot appliances, on the dashboard, or in the back of your car.
- DO NOT try to print if the cassette is empty; it will damage the Print Head.
- DO NOT pull the tape while printing or feeding; it will damage the tape and the printer.
- The length of the printed label may differ from the displayed label length.
- Depending on the location, material, and environmental conditions, the label may unpeel or become irremovable, the colour of the label may change or be transferred to other objects. Before applying the label, check the environmental conditions and the material.
- When printing multiple copies of a label, the printer will not detect the end of the tape cassette and will continue printing.
- Printed characters may look different than previewed, as your device's or computer's screen may have a higher resolution than the printer.
- Printed small text may not be as clear as it is displayed.
- White and Gold printed objects may not always print clearly.

Regulation

Compliance Statement of Wireless equipment (Thailand only)

This telecommunication equipment conforms to NTC technical requirement.



D0284S001

PT-P710BT

(عربي)

يرجى قراءة هذا الدليل، بما في ذلك جميع الاحتياطات، قبل استخدام هذه الطابعة. بعد قراءة هذا الدليل، احتفظ به في مكان آمن.

للحصول على الأسئلة الشائعة واستكشاف الأخطاء وإصلاحها وتحميل البرامج والأدلة، قم بزيارة support.brother.com.

يرجى ملاحظة أننا لا نتحمل أي مسؤولية عن أي ضرر أو خسائر ناتجة عن استخدام هذه الطابعة أو المصقات التي تم إنشاؤها باستخدام هذه الطابعة، أو عن اختفاء البيانات أو تغييرها بسبب عطل، أو إصلاح، أو انقطاع الطاقة، أو أي مطالبة من جهة خارجية.

⚠ خطر

إن عدم مراعاة التعليمات والتحذيرات سيؤدي إلى حدوث إصابات خطيرة أو الوفاة.

اتبع هذه الإرشادات لتجنب خطر الحرارة، أو الدخان، أو الانفجار أو الحريق.

بطارية ليثيوم القابلة للشحن

- لا تسمح بلامسة البطارية للسوائل.
- لا تقم بشحن البطارية أو استخدامها أو تركها في أماكن ذات درجة حرارة عالية (أعلى من 60 درجة مئوية).
- استخدم كبل USB المرفق من أجل الشحن.
- استخدم البطارية للغرض المقصود منها فقط.
- احتفظ بالبطارية بعيداً عن الحرارة والنار.
- لا تصل أطراف التوصيل + و - بأغراض معدنية مثل الأسلاك.
- لا تحمل البطارية أو تخزنها مع أغراض معدنية.
- لا تقم برمي البطارية أو ضربها أو إتلافها بأي شكل من الأشكال.
- لا تلحم أي وصلات بالبطارية.
- لا تقم بتفكيك البطارية أو التعديل عليها.
- لا تتخلص من البطارية مع النفايات المنزلية.

⚠ تحذير

إن عدم مراعاة التعليمات والتحذيرات قد يؤدي إلى حدوث إصابات خطيرة أو الوفاة.

اتبع هذه الإرشادات لتجنب خطر الحرارة، أو الدخان، أو الانفجار، أو الحريق أو الإصابة.

بطارية ليثيوم القابلة للشحن

- احتفظ بالبطارية بعيداً عن متناول الأطفال. إذا تم ابتلاع البطارية، راجع الطبيب على الفور.
- توقف عن استخدام البطارية في حال لاحظت وجود أشياء غير طبيعية مثل الرائحة، أو الحرارة، أو التشوهات أو تغير اللون.
- إذا دخل سائل من البطارية إلى عينيك، فاغسلها بالماء النظيف وراجع الطبيب على الفور.

الطابعة وكبل USB

- استخدم كبل USB المرفق لمنع حدوث أي عطل.
- لا تستخدم الطابعة أثناء عاصفة رعدية.
- لا تقم بإتلافهما.
- لا تضع أشياء ثقيلة عليهما.
- لا تثن الكبل أو تسحبه بالقوة.
- لا تقم بتفكيك الطابعة أو التعديل عليها.
- لا تسقط الطابعة أو تقم برطمها.
- لا تسمح بتلامسهما مع السوائل.
- إذا لاحظت وجود أشياء غير طبيعية مثل الرائحة، أو الحرارة، أو تغير اللون، أو التشوه أثناء الاستخدام أو التخزين، فتوقف عن استخدام الطابعة، وافصل كبل USB، وقم بنزع البطارية.

⚠ تنبيه

إن عدم الالتزام بالتعليمات والتحذيرات قد يؤدي إلى حدوث إصابات طفيفة أو متوسطة.


اتبع هذه الإرشادات لتجنب الإصابة.

بطارية ليثيوم القابلة للشحن

في حالة وصول سائل البطارية إلى الجلد أو الملابس، قم بغسلها بالماء على الفور.

الطابعة وكبل USB

- في حال عدم استخدام طابعة المصقات، قم بتخزينها بعيداً عن متناول الأطفال. بالإضافة إلى ذلك، لا تدع الأطفال يضعون أي ملصقات أو قطع من طابعة المصقات في أفواههم. في حالة حدوث ذلك، راجع الطبيب على الفور.
- استخدم بطارية الليثيوم المخصصة (PA-BT-005).
- لا تحشر أصابعك في الطابعة عند فتح وإغلاق غطاء الكاسيت.
- لا تدخل أصابعك أبعد من الفرشة الموجودة في فتحة خروج الشريط.
- لا تلمس رأس الطابعة.
- لا تلمس شفرة القص أو تدخل أصابعك فيها وإلا فقد تُصاب.

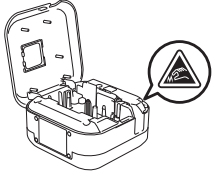

إحتياطات عامة

الطابعة أو شريط الكاسيت أو كبل USB

- لا تستخدمهم بأي شكل من الأشكال أو لأي غرض غير مذكور في هذا الدليل. قد يؤدي القيام بذلك إلى وقوع حوادث أو أضرار.
- استخدم أشرطة الكاسيت TZe من Brother.
- لا تضع أي أجسام غريبة في فتحة خروج الشريط، أو منفذ USB، أو حجرة بطارية الليثيوم، وما إلى ذلك.
- لا تضعهم في أي مكان معرض لدرجات حرارة عالية أو منخفضة للغاية، أو للرطوبة العالية، أو الغبار، أو لأشعة الشمس المباشرة، أو المطر، أو بالقرب من أجهزة التدفئة، أو الأجهزة الساخنة الأخرى، أو على لوحة القيادة، أو في الجزء الخلفي من سيارتك.
- لا تقم بالطباعة إذا كان الكاسيت فارغاً؛ لأن ذلك سيؤدي رأس الطابعة.
- لا تسحب الشريط أثناء الطابعة أو التلقيم. سيؤدي ذلك إلى إتلاف الشريط والطابعة.
- قد يختلف طول الملصق المطبوع عن طول الملصق المعروض.
- قد لا تتقشر الملصقات أو قد تصبح غير قابلة للإزالة، أو قد يتغير لونها أو تتحول إلى شيء آخر، وذلك حسب موقعها، والمواد المستخدمة والظروف البيئية. تحقق من الظروف البيئية والمواد قبل لصق الملصقات.
- عند طباعة عدة نسخ من الملصق، لن تكتشف الطابعة نهاية شريط الكاسيت وستستمر في الطباعة.
- قد تبدو الأحرف المطبوعة مختلفة عن تلك التي تمت معاينتها، وقد يرجع ذلك إلى أن دقة شاشة جهازك أو الكمبيوتر لديك أعلى من دقة الطابعة.
- قد لا يكون النص الصغير المطبوع واضحاً كما هو معروض.
- قد لا تتم الطباعة باللونين الأبيض والذهبي بشكل واضح دائماً.