

Complies with
IMDA Standards
DA108470



210-236498



Li-ion



CMIIT ID: 2021DJ11765



The power delivered by the charger must be between min 2.3 Watts required by the radio equipment, and max 5.0 Watts in order to achieve the maximum charging speed.



Product: Bluetooth Headphone
Model number: AG-WHP01K
FCC ID: 2AX2R-FI-UX3DPL

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



WHP01K MK2

Wireless Headphones



User's Manual


取扱説明書

使用说明书






WHP01K MK2




Carrying Pouch



Analog Audio Cable
with 3.5mm Plug




User's Manual

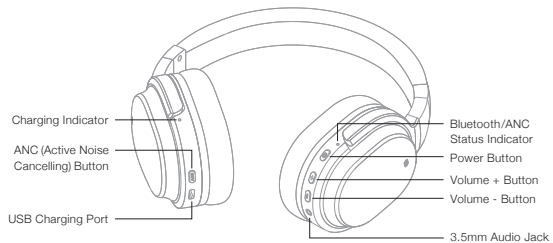

Charging the Headphones

Connect the USB Charging Port to a compatible charging adapter with USB Type-C cable to charge the headphones. The Charging Indicator lights up Red while charging and turns Blue when the headphones are fully charged.

*USB-C charging cable and adapter are not included as accessories.



Powering ON

Press and hold the Power Button for 3 seconds and the headphones will turn ON with a "Power ON" announcement.

When the power is ON, the Bluetooth/ANC Status Indicator flashes in blue at a regular interval.

When the power is ON with the ANC function is activated, the Bluetooth/ANC Status Indicator flashes alternately in blue and green at a regular interval.

Powering OFF

Press and hold the Power Button for 5 seconds and the headphones will turn OFF with a "Power OFF" announcement. When the power is turned OFF, the Bluetooth/ANC Status Indicator lights up red and fades off.

*To fully turn OFF the power of the headphones, please make sure to turn OFF the ANC function too to prevent extra power consumption. ANC function might remain ON even after turning OFF the headphone power.

Activating ANC (Active Noise Cancelling) Function

Press and hold the ANC Button for 2 seconds and the ANC function will be activated in 2 different ways depending on the status of the headphone.

If headphone power is ON: Announcement "Noise Cancelling" will be emitted and the Bluetooth/ANC Status Indicator flashes alternately in blue and green at a regular interval.

If the headphone power is OFF: The Bluetooth/ANC Status Indicator will light up green.

*The ANC function can be activated even when the power is OFF. As ANC function consumes battery power, when the headphones are not in use, please make sure that the ANC function is properly turned OFF.

Deactivating ANC (Active Noise Cancelling) Function

Press and hold the ANC Button for 2 seconds and the ANC function will be deactivated in 2 different ways depending on the status of the headphone.

If the headphone power is ON: Announcement "OFF" will be emitted and the alternately flashing blue and green light of the Bluetooth/ANC Status Indicator fades off.

If the headphone power is OFF: The green light of the Bluetooth/ANC Status Indicator fades off.

*The status of the ANC function when the headphone power is OFF can be easily recognizable by referring to the Bluetooth/ANC Status Indicator.

Green light: ANC function ON

No light: ANC function OFF

Performing Device Pairing

In order to use the headphones with your device, initial device pairing is necessary. Once the headphone is paired to a device, it will connect to the device automatically next time the power is turned ON.



To perform initial device pairing:

1. Press and hold the Power Button for 3 seconds and the headphones will turn ON with a "Power ON" announcement. The headphones start device pairing mode automatically with the Bluetooth/ ANC Status Indicator flashing alternately in red and blue.
2. With the Bluetooth function of the device being ON, choose "ag_WHP01K MK2" under the device list. The device pairing is successful if "ag_WHP01K MK2 Connected" is shown.

To reinitiate device pairing with another device:

1. While the headphone power is OFF, press and hold the Power Button for 5s and the headphones will turn ON and start device pairing mode with "Power ON" & "Pairing" announcements and the Bluetooth/ANC Status Indicator flashes alternately in red and blue.
2. With the Bluetooth function of the device being ON, choose "ag_WHP01K MK2" under the device list. The device pairing is successful if "ag_WHP01K MK2 Connected" is shown.

* It is necessary to unpair the current device pairing before reinitiating a new device pairing. This can be done by removing the current connection or turning off the Bluetooth function of the current paired device.

Performing Factory Reset

If the headphone is having difficulty pairing to a device, please follow the simple steps below to perform a factory reset.

1. While the headphone power is ON, press and hold the Volume + Button and the Volume - Button simultaneously for 2 seconds and the Bluetooth/ANC Status Indicator will flash twice in purple together with 2 beeps.
2. The factory reset is completed. The headphones will start device pairing mode automatically with the Bluetooth/ANC Status Indicator flashes alternately in red and blue.

*If the problem is not resolved even after performing the factory reset, please try the method below:

1. Plug the 3.5mm Analog Audio Cable into the 3.5mm Audio Jack of the headphones. This will automatically turn off the power of the headphones.
2. Unplug the cable and power on the headphones. The problem should be resolved.

Connecting the Headphones to a Device Using the Analog Audio Cable

The headphones can be used with any device through physical wired connection by connecting the headphones' 3.5mm Audio Jack to the device with the supplied analog audio cable. Once the 3.5mm Audio Jack is plugged in, the headphones will turn OFF immediately with all media controls being disabled. Please perform media controls via the connected device instead.

* It is possible to activate the ANC function when the headphone is used with physical wired connection.

* As the headphone power is OFF, no announcement of "Noise Cancelling" or "OFF" will be made when the ANC function is activated or deactivated. Please refer to the Bluetooth/ANC Status Indicator for the status of ANC function.

Media Control

Music Playback	Play	Press the Power Button once
	Pause	Press the Power Button once
	Next	Press and hold the Volume + Button for 2 seconds
	Previous	Press and hold the Volume - Button for 2 seconds
Phone Call	Receiving Call	Press the Power Button once
	End Call	Press the Power Button once
	Declining Call	Press and hold the Power Button for 1second
Music Playback / Phone Call	Increasing Volume	Press the Volume + Button
	Decreasing Volume	Press the Volume - Button
Siri/ Google Assistant	Activating	Press the Power Button twice *1

* 1: There is a possibility that this does not work for certain devices.




* Media controls on the headphones are disabled when the headphone is used with physical wired connection.









Maintenance

Regularly wipe the headband and earpads with a soft, dry cloth to keep the headphones clean.








Safety Precautions








The following descriptions are provided to explain matters that must be observed in order to prevent harm to the user as well as other people, along with damages to property. Please be sure to observe this before using the product..

 DANGER	Failure to observe the precautions indicated by this label will result in death or serious injury to the user.
 WARNING	Failure to observe the precautions indicated by this label may result in death or serious injury to the user.
 CAUTION	Failure to observe the precautions indicated by this label may result in personal injury or property damage.

 DANGER	
 FLAMMABLE	 ELECTRIC SHOCK
Fire, electric shock, overheating, ignition, leakage, rupture, or accidental ingestion may cause death, blindness, or serious injury.	
 PROHIBITED	Do not use, store, or leave the product in a humid or dusty place, or in a car where it will be exposed to high temperatures, or places exposed to direct sunlight. Doing so may cause overheating, leakage, or rupture of the product.
 PROHIBITED	Do not put it in a fire. Doing so may cause leakage or rupture and consequently result in injury or burn mark.
 PROHIBITED	Do not charge the battery when the Charging Port or USB cable is wet. Doing so may cause abnormal heating or malfunction due to short circuit.
 DO NOT DISASSEMBLE	Do not disassemble the product. Doing so may cause product malfunctions.
 PROHIBITED	If you find that liquid is leaking from the headphones, or if there is an unusual odor or overheating, do not touch the liquid and stop using the headphones immediately. Besides that, move all combustible materials nearby away from the headphones.

Safety Precautions

 WARNING	
 FLAMMABLE	 ELECTRIC SHOCK
Fire, electric shock, overheating, ignition may cause burn or serious injury.	
 PROHIBITED	Do not use the product while driving a car, motorcycle, bicycle, etc. Doing so may cause a traffic accident.
 PROHIBITED	Do not use the product in places where it would be dangerous if the surrounding sound is not audible. Listening at high volume makes it difficult to hear surrounding sounds. Use at railroad crossings, pedestrian crossings, station platforms, etc. may cause accidents or injuries.
 PROHIBITED	Do not allow water or foreign matter to get inside the headphones. These devices are not waterproof. Water or foreign matter may cause fire or electric shock. If water or foreign matter should enter the devices, stop using it immediately. Regularly check and ensure that no foreign matter adheres to charging port as it may cause overheating or fire.
 PROHIBITED	Do not charge the headphones while it is covered by bedding or other covering. The heat buildup may cause abnormal overheating, which may result in a fire.

<div>  CAUTION </div>	
May cause injury or damage to surrounding property.	
<div>  PROHIBITED </div> <p>Keep out of reach of children or persons requiring supervision. Swallowing any part of the product such as magnets or batteries can be very dangerous and lead to choking hazards, or internal organ damage.</p>	<div>  PROHIBITED </div> <p>A drastic change of air pressure inside the earcup could cause severe damage not only to headphones but also to the ears. It is dangerous, so please do not press the earcups while wearing the headphones.</p>
<div>  PROHIBITED </div> <p>Do not use in medical institutions or around people using medical equipment. It may cause malfunction to medical devices such as pacemakers.</p>	<div>  PROHIBITED </div> <p>Do not listen at high volume for long periods of time. Prolonged use at excessive volume may result in permanent hearing loss. Do not exceed 40 hours/week at 80 dB (A) and 5 hours/week at 89 dB (A).</p>
<div>  MANDATORY </div> <p>When using the headphones on board an aircraft, follow the instructions of the flight crew. Radio wave effects may cause an accident.</p>	<div>  CAUTION </div> <p>Using headphones with earrings, piercings, etc., on your ears may cause injury. In addition, they may cause degradation to the headphones performance or result in scratches to the body of the headphones.</p>

Problem	Cause	Remedy
Headphones will not turn ON	(Immediately after purchasing) Battery charge is low	For safety of transportation from overseas, laws and regulations do not allow the internal battery to be fully charged at the time of shipping. For that reason, voltage may fall below the level required for operation at the time the customer opens the package. Fully charging the battery before use may relieve this inconvenience. Please refer to "Charging the headphones" on P.4 regarding the method for charging.
	Power Button has not been pressed for adequate time	Please press and hold the Power Button long enough for the headphones to turn ON. Please refer to "Powering ON" on P.5 for the details of the method.
	ANC function has not been deactivated and caused battery level depletion	Please make sure that the ANC function is properly turned OFF when not in use since the ANC function can be activated even when the power is OFF. After using the headphones, please turn OFF the ANC function on top of powering OFF. Otherwise the battery may run out.
	Analog Audio Cable with 3.5mm Plug is connected	Please disconnect the Analog Audio Cable since the power is automatically turned OFF once the Analog Audio cable is connected.

Troubleshooting: When you think, "Is it broken?"

Problem	Cause	Remedy
Headphones will not turn OFF	An error has occurred due to improper operation	Headphone power automatically turns OFF once the analog audio cable is connected. Please try to connect the cable and check if the Bluetooth/ANC indicator is completely turned OFF or turned into Green. Then please disconnect the cable and check again if the power can be turned ON/OFF. If the problem is not solved, please perform the factory reset by referring to "Performing Factory Reset" on P.8.
	Power Button has not been pressed for adequate time	Please press and hold the Power Button long enough for the headphones to turn OFF. Please refer to "Powering OFF" on P.5 for the details of the method
	ANC function has not been deactivated	Please make sure that the ANC function is properly turned OFF since the ANC function can be activated even when the power is OFF. After using the headphones, please turn OFF the ANC function on top of powering OFF. Please refer to "Deactivating ANC Function" on P.6 for the details of the method.
In case it takes time to charge	The output of the USB adapter being used for charging is low	In case you are using the USB port on a PC, etc., there are cases in which the output is low and it may take more time to charge than the time stated on the specification. As such please use a 5V/1A USB adapter for charging this product.

Troubleshooting: When you think, "Is it broken?"

Problem	Cause	Remedy
Headphones cannot be detected / paired	Headphones are not in the pairing mode	In some cases, performing a reset operation may fix the problem. Please refer to "Performing Factory Reset" on P.8 for the method to reset the headphones.
	(Once pairing has been performed) Connection automatically established with the previously connected device	Please try performing the pairing operation again after having deleted the pairing information from a previously paired device.
Unstable music playback	Interference from external factors	Bluetooth communicates using the 2.4GHz band which might be interfered by other wireless standards such as Wi-Fi, etc. Moreover, the connection is sensitive against liquid where humidity, rain, or even the size of head could cause disruption to the connection. The specifications of the device to be connected could cause variation too. For that reason, reducing the distance between devices or switching OFF unused Wi-Fi/Bluetooth of surrounding devices may improve the connection.
Microphone cannot be used	Analog Audio Cable with 3.5mm Plug is connected	As the power automatically turned OFF and the microphone is disabled once the analog audio cable is connected. Please disconnect the analog audio cable.

Warranty and After Service

The warranty for this product is valid for 1 year from the date of purchase. During the warranty period, we will repair the product based on the provisions below. The warranty is only valid in the country in which the product was purchased. Regarding questions pertaining to repairs, please contact the store you purchased the product from or contact us by visiting our "Contact" page.

1. If the product malfunctions within the warranty period under the usage conditions specified in the warnings and cautions of this manual, we will repair it free of charge.
2. In the following cases, repairs to the product will be subject to a fee even during the warranty period:
 - (1) Original purchase receipt or other equivalent document showing the date of purchase are failed to be presented.
 - (2) The product is identified to be modified, disassembled, or repaired by a third party or customer other than our company or our authorized organizations.
 - (3) The headphones were subjected to a strong impact or were allowed to get wet. Product failure resulting from an excessive use of force on the product.
 - (4) Failure of the product or damage caused as a result of fire, earthquake, storm or flood damage, lightning strike or other natural disaster.
 - (5) Repair of scratches on the surface of the housing or repair of the housing itself.
3. We shall not be liable for any incidental or consequential damages for breach of any express or implied warranty or condition on this product. Nor shall recovery of any kind against us be greater than the original purchase price of the product from us or an our authorized dealer.

Regarding the earpads:

Earpads are considered as consumable parts which is not covered under warranty. Kindly contact the store you made the purchase from for the information regarding the purchase of a new pair of earpads.

Disposal Regulation

The rechargeable batteries built into the equipment are recyclable. During disposal, please follow the instructions from your local municipal government and do not attempt to disassemble the product.



Manufacturer:
final Inc.


* There is a possibility of a change in the specification, so please scan this QR code for the latest user manual.



https://final-inc.com/pages/lang-download-whp01k-mk2_ag




WHP01K MK2



専用ポーチ

3.5mm有線
接続ケーブル


取扱説明書

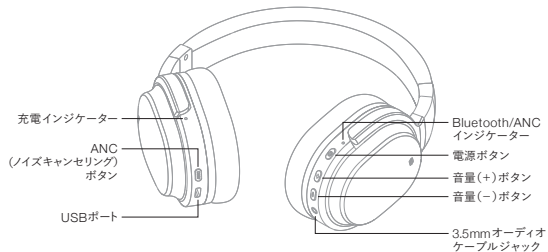

充電する

充電用ケーブルUSB (C)および互換性のある電源アダプターを使用して、ヘッドホンを電源コンセントに接続すると充電が開始されます。充電中はヘッドホンの充電インジケーターが赤く点灯し、充電が完了すると青く点灯します。

※充電用ケーブルおよび電源アダプターは付属しません。



電源をONにする

電源ボタンを約3秒間押し続けると「Power On」という音声流れ、本体の電源がONになります。電源がONになるとBluetooth/ANCインジケーターが一定間隔で青く点滅します。

※電源をONにした状態でノイズキャンセル機能をONにすると一定間隔で青と緑に交互に点灯します。

電源をOFFにする

電源ボタンを約5秒間押し続けると「Power Off」という音声流れ、本体の電源がOFFになります。電源がOFFになるとBluetooth/ANCインジケーターが赤く点灯し、その後消灯します。

ノイズキャンセル機能をONにする

ANCボタンを約2秒間長押しすると「Noise Cancelling」という音声流れ、ノイズキャンセル機能がONになります。ノイズキャンセル機能がONになるとBluetooth/ANCインジケータが緑に点灯します。

※電源をONにした状態でノイズキャンセル機能をONにすると一定間隔で青と緑に交互に点灯します。

※本体の電源がOFFの状態のままで独立してノイズキャンセル機能をご使用いただけます。

そのため、ご使用時以外は本体の電源に加え、必ずノイズキャンセル機能もOFFにしてください。

※本体が電源OFFの状態でもノイズキャンセル機能をON/OFFする場合は「Noise Cancelling」「OFF」の音声は流れません。Bluetooth/ANCインジケータが緑に点灯している場合はON、消灯している場合はOFFになります。

ノイズキャンセル機能をOFFにする

ANCボタンを約2秒間長押しすると「OFF」という音声流れノイズキャンセル機能がOFFになります。ノイズキャンセル機能がOFFになると緑に点灯していたBluetooth/ANCインジケータが消灯します。

※本体が電源OFFの状態でもノイズキャンセル機能をON/OFFする場合は「Noise Cancelling」「OFF」の音声は流れません。Bluetooth/ANCインジケータが緑に点灯している場合はON、消灯している場合はOFFになります。

ペアリングする

お手持ちのスマートホン等の機器と初めて接続する場合は、ペアリングを行なう必要があります。ペアリングが完了した機器同士は、次回からヘッドホンの電源をONにするだけで自動的に接続できます。



本機を初めてご使用になる場合：

1. 電源ボタンを約3秒間押し続けると「Power On」という音声流れ本体の電源がONになり、自動的にペアリングモードになります。その際、Bluetooth/ANCインジケータが赤・青に交互点滅します。
2. スマートホン等の機器のBluetooth機能をONにし、ペアリングする機器を選択する画面で「ag_WHP01K MK2」が表示されたら選択します。「ag_WHP01K MK2 接続済」と表示されたらペアリングは完了です。

ペアリングをやり直す場合・2台目以降の機器とペアリングする場合：

1. 電源がOFFの状態でも電源ボタンを約5秒間「Power On」「Pairing」という2種類の音声流れるまで長押しするとペアリングモードになります。その際、Bluetooth/ANCインジケータが赤・青に交互点滅します。
2. スマートホン等の機器のBluetooth機能をONにし、ペアリングする機器を選択する画面で「ag_WHP01K MK2」が表示されたら選択します。「ag_WHP01K MK2 接続済」と表示されたらペアリングは完了です。

※新しいデバイスとのペアリングを行なう前に、既にペアリングされているデバイスとの接続をお切りいただくか、既にペアリングされているデバイスのBluetooth機能をOFFにしてください。

リセット方法について

以下の手順でヘッドホンがリセットされます。リセット完了後、再度ペアリング操作をお試ください。

1. 本体の電源がONの状態では音量(+)ボタンと音量(-)ボタンを同時に約2秒間長押しすると、Bluetooth/ANCインジケータが紫に2回点滅し、電子音が2回鳴ります。
2. その後、自動的にペアリングモードに移行し、Bluetooth/ANCインジケータが赤・青に交互点滅します。この状態でリセットが完了です。

※リセットをお試しいただいても症状が改善されない場合、以下の手順をお試ください。

1. 付属の3.5mm有線接続ケーブルをヘッドホン本体の3.5mmオーディオケーブルジャックに挿入するとヘッドホン本体の電源が強制的にOFFになります。
2. その後、3.5mm有線接続ケーブルを本体から抜き、ヘッドホン本体の電源を入れ直して動作を確認してください。

有線接続について

付属の3.5mm有線接続ケーブルをヘッドホン本体の3.5mmオーディオケーブルジャックに挿入することで、有線型ヘッドホンとしてもご使用いただけます。3.5mmオーディオケーブルジャックにケーブルが挿入されると本体の電源は自動的にOFFになり、ヘッドホン本体の各種ボタン操作は無効となりますので、再生機器側にて操作を行なってください。

※有線接続状態でもノイズキャンセル機能はご使用いただけます。その場合、本体が電源OFFの状態なのでノイズキャンセル機能をON/OFFする場合は「Noise Cancelling」「OFF」の音声は流れません。Bluetooth/ANCインジケータが緑に点灯している場合はON、消灯している場合はOFFになります。

その他の操作

音楽	再生	電源ボタンを1回押す
	一時停止	電源ボタンを1回押す
	次の曲へ	音量(+)ボタンを約2秒間押す
	前の曲へ	音量(-)ボタンを約2秒間押す
着信	着信受話	電源ボタンを1回押す
	通話終了	電源ボタンを1回押す
	着信拒否	電源ボタンを約1秒間押す
音楽/着信共通	音量を上げる	音量(+)ボタンを押す
	音量を下げる	音量(-)ボタンを押す
Siri/ Google アシスタント	起動する	電源ボタンを2回押す※1

※1: 接続する機器によっては、機能しない場合があります。

※有線接続状態ではボタン操作が無効となります。

メンテナンス

ヘッドバンドやイヤーパッドに皮脂等の汚れが付いた場合、乾いた柔らかい布等でやさしく拭き取ってください。

本項目には製品を安全にご使用いただくための重要な注意事項が示してあります。ご使用前によくご確認ください。

	この表示の注意事項を守らないと使用者が死亡または重傷を負います。
	この表示の注意事項を守らないと使用者が死亡または重傷を負う原因となります。
	この表示の注意事項を守らないと使用者が軽傷、または周囲に物的損害を与える可能性があります。

危険

火災・感電・発熱・発火・液漏れ・破裂・誤飲により死亡や失明、大けがの原因になる可能性があります。



湿気や埃の多い場所、直射日光が当たる場所、車の中など高温になる場所での使用・保管・放置をしないでください。本体の異常な発熱や液漏れ、破裂の原因になります。



ヘッドホン本体の端子部やUSBケーブルが濡れた状態で充電をしないでください。ショートによる異常な加熱や故障の原因になります。



火の中に入れてください。液漏れや破裂により、怪我や周囲汚損の原因になります。



分解しないでください。あらゆる故障の原因になります。



ヘッドホン本体から液体が漏れていることを確認した場合、もしくは異臭・発熱がある場合には、直ちに使用を中止し、液体には触らないでください。また近くに火気及び可燃物があるときは速やかに遠ざけてください。

警告

火災・感電・発熱・発火によりやけどや大けがの原因になる可能性があります。



自動車やバイク、自転車などの運転中に本機を使用しないでください。交通事故の原因になります。



本機を布団などで覆った状態で充電しないでください。熱が籠もることで異常な発熱を起こし、火災の原因になることがあります。

警告

火災・感電・発熱・発火によりやけどや大けがの原因になる可能性があります。



ヘッドホン本体やの端子部に水や異物を入れないでください。本製品は防水ではありません。水や異物が入った場合、火災や感電の原因になります。万が一、水や異物が入った場合は、直ちに使用を中止してください。また、端子部に異物が付着すると発熱や火災の原因となりますので、定期的に異物の付着が無いかをご確認ください。



踏切や横断歩道、駅のホームなど、周囲の音が聞こえないと危険な場所で使用しないでください。本機の音量を上げると周囲の音が聞こえにくくなります。また、本機はノイズキャンセリングを搭載しているため、警告音なども聞こえにくくなり、事故や怪我の原因になります。

注意

怪我や周囲の家財に損害を与える可能性があります。



子供や監督を必要とする方などの手の届くところには置かないでください。本機は磁石及び電池を使用しています。小さな部品を飲み込むと窒息の危険性や内臓を傷つけるなど深刻な症状を引き起こす恐れがあります。



医療機関内や医療機器を使用している方の近くで使わないでください。ペースメーカーなどの医療機器に影響を与える恐れがあります。



イヤリング、ピアスなど耳につける装身具をつけたままヘッドホンを使用すると、怪我の原因となる恐れがあります。また、ヘッドホンの性能が損なわれたり、ヘッドホン傷つける可能性があります。



ヘッドホンを頭に装着した状態で、ハウジングを耳から浮かして手を離したり、ヘッドホンを頭に装着した状態でハウジングを両側から押さえるなどの動きをすると、ハウジング内部に急激な圧力の変化が起こり、ヘッドホンの故障の原因だけでなく耳にも圧力がかかり、危険ですでおやめください。



大音量で長時間聴かないでください。長期にわたる過剰な音量での使用は永久的な難聴を招く恐れがあります。80 dB (A)の音量で40時間/週、89 dB (A)の音量で5時間/週を超えないようにしてください。



本機を航空機内で使用する場合は、客室乗務員の指示に従ってください。電波が影響することで、事故の原因になる恐れがあります。

問題点	原因	対処法
ヘッドホンの電源がONにならない	(ご購入直後の場合) 電池残量が少ない	内蔵バッテリーは、海外からの輸送の安全のため、法令に基づき工場出荷時にフル充電にすることができません。そのため、お客様が開封された際に動作に必要な電圧を下回ることがございます。ご使用前にフル充電してください。充電方法については、P.20の「充電する」をご確認ください。
	電源ボタンを押す時間が十分でない	電源ボタンを電源がONになるまで長押ししてください。電源をONにする方法については、P.21の「電源をONにする」をご確認ください。
	ノイズキャンセル機能をOFFにしていない	本製品はノイズキャンセル機能を独立して使用することが可能なため、本体の電源をOFFにしても、ノイズキャンセル機能はOFFになりません。そのため、気付かないうちに電池残量が無くなっている可能性がございます。充電後、電源ボタンを長押しして、電源がONになるかご確認ください。また、ノイズキャンセル機能をONにした状態でご使用後は、電源だけでなく、ノイズキャンセル機能もOFFにしてください。
	3.5mm有線接続ケーブルが挿入されている	付属の3.5mm有線接続ケーブルをヘッドホン本体の3.5mmオーディオケーブルジャックに挿入することで、有線型ヘッドホンとしてもご使用いただけますが、3.5mmオーディオケーブルジャックにケーブルが挿入されると本体の電源は自動的にOFFになります。ワイヤレス機能をご使用になる場合は、ケーブルを外した状態でご使用ください。

問題点	原因	対処法
ヘッドホンの電源がOFFにならない	誤操作のためエラーが発生している	ケーブルを接続することで、ヘッドホンの電源が強制的にOFFになります。そのため、一度付属の3.5mm有線接続ケーブルをヘッドホン本体に挿入し、Bluetooth/ANCインジケータが完全に消灯もしくはANC ONを示す緑点灯のみに変化したことを確認した後、ケーブルをヘッドホンから抜いた状態で電源のON/OFFが可能か確認してください。上記方法を試しても改善されない場合は、リセット操作を行なうことで改善する場合がございます。リセット方法について詳しくは、P.24の「リセット方法について」をご確認ください。
	電源ボタンを押す時間が十分でない	電源ボタンを電源がOFFになるまで長押ししてください。電源をOFFにする方法については、P.21の「電源をOFFにする」をご確認ください。
	ノイズキャンセル機能をOFFにしていない	本製品はノイズキャンセル機能を独立して使用することが可能なため、本体の電源をOFFにしても、ノイズキャンセル機能はOFFになりません。Bluetooth/ANCインジケータが緑に点灯している場合はノイズキャンセル機能がONになっていますので、ANCボタンを約2秒間長押ししてノイズキャンセル機能をOFFにしてください。
充電に時間がかかる	充電に使用しているUSBアダプターの出力が低い	PC等のUSBポートをご使用いただいている場合、出力が低く、公称値よりも充電に時間が掛かる場合がございます。そのため、本製品を充電される際は、5V/1AのUSBアダプターをご使用ください。

問題点	原因	対処法
ヘッドホンの検索/ ペアリングが できない	ヘッドホンがペアリング 状態にならない	リセット操作を行なうことで改善する場合がございます。リセット方法については、P.24の「リセット方法」をご確認ください。
	(一度ペアリングを 行なった場合) 以前接続した機器に 自動的に接続されている	以前ペアリングされた機器のペアリング情報を削除してから、再度ペアリング操作を行なってください。
音楽再生中に 音(接続)が 途切れる	外的要因により干渉を 受け、接続状況に 影響が出ている。	Bluetoothは、2.4GHzの帯域を使って通信を行なっております。この帯域は、Wi-Fiなどさまざまな無線規格で使われておりますので、それらの干渉を受ける場合がございます。また、この2.4GHz帯は水分に吸収されやすい帯域です。湿度や雨天による影響を受ける場合がございます。なお、人体も水分ですので、頭部の大きさにより接続性に個人差がございます。そのため、ご自宅では周囲の使用していないWi-Fi/Bluetoothの設定をOFFにする等が対策です。外出中であれば、鞆のスマートホン等を胸ポケットに移動させる等、機器同士の距離を近づけることで接続状況が改善される場合がございます。
マイクが 使用できない	有線接続用ケーブルを 装着している	3.5mmオーディオケーブルジャックに付属のケーブルが挿入されると本体の電源は自動的にOFFになり、マイクが使用できません。本製品のマイク機能を利用する場合は、ケーブルを外して本体の電源をONにし、スマートホン等の機器とペアリングした状態でご使用ください。

本製品の保証期間はお買い上げ日より1年間です。保証期間中は以下の保証規定に基づき修理いたします。保証はご購入いただいた国でのみ有効です。修理のお申込みのほか、居住国以外の国でご購入の場合や保証期間後のサポートについては弊社WEBサイトの「SUPPORT」ページよりお問い合わせください。

- 保証期間内に、取扱説明書に記載の警告、注意書きに従った使用状態で故障した場合には、無償修理させていただきます。
- 保証期間内でも次の場合には、有償で修理させていただきます。
 - (1) レシート等、購入日を証明するものをご提示いただけない場合。
 - (2) 弊社および弊社が指定する機関以外の第三者やお客様により改造、分解、修理がなされた場合。
 - (3) 強い衝撃を与えたり、水に濡らした場合。無理な力がかかるような状況下で起こった故障。
 - (4) 火災、地震、風水害、落雷、その他天変地異などによる故障、人災による故障、盗難、ウイルス感染による故障。
 - (5) 筐体表面の傷の修理、筐体自体の修理。
- 本製品のご使用により、お客様に生じた損害については、弊社は一切その責任を負わないものとします。また、いかなる場合でも、弊社が負担する損害賠償額は、お客様がお支払いになったこの商品の代価相当額をもって、その上限とします。

イヤーパッドについて：

イヤーパッドは消耗品となります。新しいイヤーパッドをお求めの際はag公式WEBストアよりご購入をお願いいたします。



https://final-inc.com/products/earpad-whp01k_ag

お問い合わせの際は、弊社WEBサイトの「SUPPORT」ページをご確認ください。



https://final-inc.com/pages/support_ag

製造：株式会社 final


※仕様変更の可能性がございますので、最新の取扱説明書は弊社WEBサイト「DOWNLOAD」ページをご確認ください。



https://final-inc.com/pages/lang-download-whp01k-mk2_ag



WHP01K MK2




専用袋



3.5mm 耳机线




使用说明书

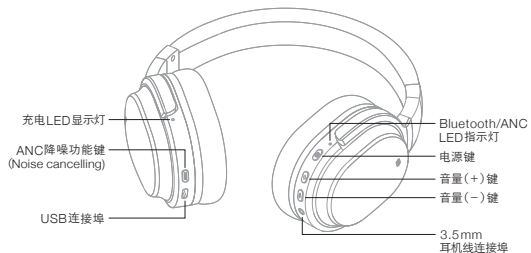

通过使用充电用的 USB-C 电线和兼容的电源适配器，将耳机连接到电源插座，即可开始充电。
充电中耳机上的红色LED指示灯会亮起，充电完后会切换成蓝色LED指示灯。

*USB-C 充电线和适配器不包含在附带的配件中。



启动耳机

电源键长按约 3 秒直到「Power On」的语音提示响起后，耳机本体电源开启。

耳机启动后耳机上的 Bluetooth/ANC 蓝色 LED 指示灯会持续闪烁。

※电源开启状态下 Noise cancelling 机能开启时 LED 指示灯会以蓝色及绿色交互闪烁显示。

关闭耳机

长按电源键约 5 秒直到「Power Off」的提示语音响起后，耳机本体的电源关闭。

耳机电源关闭后耳机上的 Bluetooth/ANC 红色 LED 指示灯会亮起，随后即熄灯。

降噪功能启动时

长按 ANC 降噪功能键约 2 秒直到「Noise Cancelling」的提示语音播放后，降噪功能会被开启。

降噪功能开启后 Bluetooth/ANC 的绿色 LED 指示灯随即亮起。

※电源开启状态下，降噪功能开启时 LED 指示灯会以蓝色和绿色交互闪烁显示。

※本体电源关闭的状态下降噪功能仍能独立使用。

降噪功能使用中会持续消耗本体的电源，因此不使用时请务必将机能关闭。

※本体电源关闭的状态下降噪功能开启/关闭的时候「Noise Cancelling」「OFF」的提示语音不会被播放。Bluetooth/ANC 的绿色 LED 指示灯亮起的时候为开启状态，熄灭的时候为关闭状态。

降噪功能停用时

长按 ANC 降噪功能键约 2 秒直到「OFF」的提示语音播放后，降噪功能会被关闭。降噪功能关闭 Bluetooth/ANC 的绿色 LED 指示灯亦会随即熄灭。


※本体电源关闭的状态下降噪功能仍能独立使用。

因此在使用中会消耗本体的电源，不使用时请务必将机能关闭。

※本体电源关闭的状态下降噪功能开启/关闭的时候「Noise Cancelling」「OFF」的提示语音不会被播放。Bluetooth/ANC 的绿色 LED 指示灯亮起的时候为开启状态，熄灭的时候则为关闭状态。

进行连线配对

手边的智能手机或其它待连线机器在初次连线状况下需要连线配对。下次当耳机电源启动时，耳机会自动与先前已配对的机器自动进行连线。



初次使用本机时：

1. 长按电源键约 3 秒直到「Power On」的语音提示响起后。电源随即被启动，自动切换成配对模式此时 Bluetooth/ANC 的 LED 指示灯会以红色及蓝色交互闪烁显示。
2. 开启智慧型手机或待接机器的蓝牙功能，从选单中选取「ag_WHP01K MK2」的名称选项。待接机器画面中显示「ag_WHP01K MK2 已连线」表示配对成功。

重置连线配对时・向第 2 台机器进行连线配对的情况：

1. 电源关闭的状态下长按电源键约 5 秒直到听到「Power On」「Pairing」的 2 种语音提示响起后进入配对模式，此时 Bluetooth/ANC 的 LED 指示灯会以红色及蓝色交互闪烁显示。
2. 开启智慧型手机或待接机器的蓝牙功能，从选单中选取「ag_WHP01K MK2」的名称选项。待接机器画面中显示「ag_WHP01K MK2 已连线」表示配对成功。

※ 新的装置在配对设定进行前，请先将已配对成功装置的连线断开或将已配对成功的装置上蓝牙功能先关闭。

重置方法

请照以下方式重置耳机本体。成功重置后，请再次尝试进行连线配对。

1. 电源启动的状态下对音量键(+)及音量键(-)同时持续长按约 2 秒左右直到 Bluetooth/ANC 的紫色 LED 指示灯闪烁 2 次，电子提示音也 2 次作响。
2. 之后耳机会自动切换成配对模式，Bluetooth/ANC 的 LED 指示灯会以红色及蓝色交互闪烁显示，表示重置已经完成。

※ 尝试重置后问题仍没有办法改善时，请再尝试下面的方法。

1. 将附属的 3.5mm 耳机线插入耳机本体的 3.5mm 音源插座即可让耳机本体的电源强制断电。
2. 之后，将 3.5mm 耳机线从耳机本体拔出，重新开启耳机电源并确认耳机功能。

关于有线连结

将附属的 3.5mm 有线耳机线由耳机本体的 3.5mm 有线耳机插孔插入后，也可以当有线耳机来使用。3.5mm 有线耳机插孔与耳机线连接后，本机电源会自动关闭，耳机本体的各种操作键机能将失效，请由播放器端进行操作。




※ 有线耳机的状态下仍能使用降噪功能。因为耳机电源是关闭的状态，降噪功能 ON/OFF 切换时「Noise Cancelling」「OFF」的提示语音不会播放。Bluetooth/ANC 的绿色 LED 指示灯亮起的时候为开启状态，熄灭的时候则为关闭状态。









音乐	播放	按压电源键 1 次
	暂停	按压电源键 1 次
	下一曲	按音量 (+) 键约 2 秒
	上一曲	按音量 (-) 键约 2 秒
来电	来电通话	按压电源键 1 次
	通话结束	按压电源键 1 次
	来电拒接	按压电源键约 1 秒
音乐/来电共通	音量调大	按音量 (+) 键
	音量调小	按音量 (-) 键
Siri/ Google 语音助理	启动	按压电源键 2 次 ※1






※1: 因连线机种而异, 有可能不支援该项功能。






※连接耳机线使用情况下功能键操作无效。








为了能安全使用该产品, 请确认重要的注意事项及其标示。务必在使用前详细阅读。

 危险	该标示的注意事项不严格遵守, 使用者有可能造成危及生命或招致严重伤害的危险。
 警告	该标示的注意事项不严格遵守, 有可能危及生命或招致严重伤害的原因。
 注意	该标示的注意事项不严格遵守, 使用者可能招致伤害, 甚至造成周遭事物毁损的可能性。

 危险	
  火灾, 触电, 发热, 自燃, 液体渗漏, 破裂, 误食所造成的危及生命或失明, 甚至是招致严重伤害的原因。	
 禁止 请勿在湿度高或尘埃多的环境下, 日光直射的场所, 车厢内等高温场所中使用, 保管或放置。可能成为产品本身异常发热或 液体渗漏, 破裂的原因。	 禁止 请勿置入火中。恐因电池液体渗漏或破裂, 造成人员招致伤害或周遭污染损毁的原因。
 禁止 在潮湿的情况下请勿使用充电盒及 USB 充电线。恐因短路造成异常加热或故障的原因。	 分解禁止 请勿自行进行分解。往往为造成故障的原因。  禁止 从耳机本体有液体渗漏的情况, 或产生异臭, 发热等情况, 请立即中止使用, 请勿触碰渗漏的液体。此外附近有火气或易燃物时请迅速将其远离该场所以策安全。

 警告	
  可能导致火灾, 触电, 发热, 自燃的原因, 进而造成烫伤或招致严重伤害。	
 禁止 驾驶汽车, 自行车等情况下请勿使用本机。恐导致交通事故的原因。	 禁止 本机充电时请勿覆盖在毛巾或被单下。在不通风的环境, 无法顺利散热等原因导致异常发热, 甚至造成火灾。

 警告	
  可能导致火灾, 触电, 发热, 自燃的原因, 进而造成烫伤或招致严重伤害。	
 禁止 请勿将液体或异物塞入耳机本体或是充电/传输线端子中。本产品本不防水。液体或异物置入后, 恐引起火灾, 触电的原因。万一有水或异物进到充电盒内部时, 请立即停止使用。另外耳机的充电插槽处有异物时恐造成发热或火灾的原因, 请定期检查确认有无异物附着。	 禁止 平交道, 马路, 车站月台附近, 因周遭环境声音听不见而容易造成危险的地方请勿使用。本机的音量提高后或开启搭载降噪模式, 会导致周遭环境声音和警告声响听不见。造成发生事故或招致严重伤害的原因。

 注意	
可能导致受伤或周遭财产损害的可能性。	
 禁止 请勿将产品置于孩童或需受成人监护的朋友容易取得的位置。本机使用了磁石及电池等材料。恐造成小零件被误食引起窒息的危险或使得内脏受伤害等情况发生。	 禁止 头戴着耳机时请避免刻意将耳机外壳从耳朵上提起撑开, 或从两侧挤压外壳。如此的举动可能导致耳机内部产生突然的压力变化并造成耳机故障, 此外对耳朵施予不必要的压力也有相对的危险性。
 禁止 医疗机关内或医疗器材使用中请勿靠近使用。恐对心律调节器等医疗器材造成影响。	 禁止 请勿长时间大音量的使用耳机。长时间大音量的使用恐造成听力受损的原因。80 db (A) 的音量每周请勿超过 40 小时以上, 89 db (A) 的音量每周请勿超过 5 小时以上的使用时间。
 注意 同时戴着耳环等耳朵上的装饰品使用耳机, 有可能会造成耳朵受伤。此外也可能影响到耳机性能, 甚至有可能造成耳机的损坏。	 指示 本机在飞机机舱内使用时, 请遵照机上空服人员的指示下进行使用。对通讯电波造成影响, 恐导致事故发生的原因。

状况	原因	对应方式
耳机电源无法开启	(产品购入第一次使用时) 产品内含电量不足	内藏电池的产品, 为了能确保海外运输上的安全性, 基于法条规定, 不能在满电的状态下进行运送。为此, 在开封产品时, 产品内电池电量有可能会低于产品作动所需。使用前如果先将产品充满电后再使用, 有可能让该问题得以解决。关于充电方式, 请参阅使用说明书第 35 页的「充电方式」内容。
	电源键按压时间不足	请长按电源键直到电源开启为止。关于电源开启方法请参阅使用说明书第 36 页的「启动耳机」。
	降噪功能没有关闭	本产品的降噪功能可以独立使用, 即使将耳机电源关闭, 降噪功能仍然不会被关上。因此在不注意的情况下有可能将电池的电量消耗殆尽。充电后, 长按电源键, 请确认电源是否开启。另外将降噪功能开启使用完毕后, 不止要关上电源也要记得将降噪功能一并关闭。
	是否接上 3.5mm 耳机线	将附属的 3.5mm 有线耳机线由耳机本体的 3.5mm 有线耳机插孔插入后, 也可以当有线耳机来使用。3.5mm 有线耳机插孔与耳机线连接后, 本机电源会自动关闭。要以无线耳机机能来使用时, 请将耳机线移除。

状况	原因	对应方式
耳机电源无法关闭	操作错误所引发的故障情况	耳机线连接使用时, 耳机的电源会被强制关闭。因此, 请将 3.5mm 耳机线与耳机连线后, 只能凭借 Bluetooth/ANC 的 LED 指示灯完全熄或 ANC 开启时所显示的绿色 LED 指示灯亮起等变化确认后, 耳机线从耳机移除状态下, 确认电源是否能开启及关闭。上述的做法仍无法改善的话, 请试这进行重置设定, 或许能得到改善。关于重置设定的方法, 请参阅使用说明书第 39 页「重置方法」的内容。
	电源键按压时间不足	请长按电源键直到电源关闭为止。关于电源关闭方法请参阅使用说明书第 36 页的「关闭耳机」。
	降噪功能无法关闭	本产品的降噪功能设计上是可以独立运作的, 因此关闭耳机电源也无法同时关闭降噪功能。Bluetooth/ANC 的绿色 LED 指示灯亮起时, 表示降噪功能是开启的状态, ANC 键长按约 2 秒后可以将降噪功能关闭。
需长时间才能完成充电的情况下	充电时所使用的 USB 变电器功率低弱	当利用 PC 等的 USB 连接埠进行充电时、有可能因为输出电量功率不足, 而拉长了产品充电所需时间。因此, 在对本产品进行充电时, 请选用 5V/1A 规格的 USB 变电器。

状况	原因	对应方式
耳机无法正常被搜寻 / 无法连线配对	耳机无法连线配对	有可能经由重置设定使问题得以改善。关于重置设定的方法, 请参阅使用说明书第 39 页「重置方法」的内容。
	(经过一次连线配对后) 与先前成功连线配对的机器自行连线	请将机器中先前成功连线配对的资料消除后, 再度进行连线配对。
音乐播放中讯号接收不良	受到外在因素的干扰, 导致影响收讯品质	本机的蓝牙通信设定所使用的频道是 2.4GHz。该频道广为 Wi-Fi 及许多无线产品使用, 可能造成频中各机器讯号间相互的干扰。2.4GHz 频道无法穿透水分, 会因湿度或雨天等情形下受到影响, 另外人体中也富含水分, 信号接受能力也会因人而异。再者讯号接收也仰赖智能手机等机器的晶片性能。因此, 在自家环境下, 可以尝试将周围未使用的 Wi-Fi / 蓝牙等设定关闭。在外出的情况下, 将包中的智能手机移动到胸前的口袋等位置, 可能经由缩短机器间的距离, 而改善收讯的情况。
麦克风无法使用	跟耳机线搭配使用时	3.5mm 有线耳机插孔与耳机线连接后, 本机电源会自动关闭, 麦克风将无法使用。想使用本产品的麦克风功能时, 请移除耳机线, 开启电源与智能手机等机器配对后得已使用。

本产品丢弃时

本产品内藏的可充电式电池为可回收电池。请客人勿自行进行拆解，将该充电电池取出，请遵照当地地方政府规定去进行处理。



保修以及售后服务

本产品的保修期自购买日起一年内有效。保修期内将按照敝社的保修条款提供维修服务。保修对象仅为该产品的购买国家有效。如果您对本产品有任何疑问或寻求售后服务时，请向购买店家或代理商进行咨询。

1. 商品在保修期内，且遵守使用说明和各项安全警告，仍产生故障，敝社将免费提供维修服务。

2. 商品在保修期内，但出现以下情况，敝社将酌情收取维修费用。

(1) 无法出示保证书中记载之必要凭证资料时。

(2) 敝社及敝社所认可特定机关以外的第三方或是客人自身所进行的改造、分解、修理等情况。

(3) 商品在使用过程中受到强烈的外力冲击、进水等情况。故障因受到不合理外力而致使断裂的状况。

(4) 火灾、地震、风水灾害、雷击等自然灾害而造成的故障。人为所造成的故障、遗失、电脑病毒感染造成损坏。

(5) 表面痕迹清除、单独腔体维修。

3. 关于使用本产品下造成客人的财损伤害，弊社将一概不负责。任何情况下，弊社所负担的损害赔偿金额，为购入该产品时所支付的相当金额为上限。

关于耳罩：

耳罩属于消耗产品。如有期望购入耳罩配件，请与当地代理商进行咨询。

制造商：

final Inc.

※因为有规格更动的可能性，最新版本的使用说明书请扫描此二维码。



https://final-inc.com/pages/lang-download-whp01k-mk2_ag