

JOYO

使用说明书

JF-22
音箱模拟

感谢您购买我司的产品，请在使用前仔细阅读此说明书。

一、注意事项

- 1、切勿擅自拆卸、改装、修理机器，以免发生短路。
- 2、勿在高温、潮湿、污浊、强烈震动处使用机器。
- 3、勿将机器摔落，或落在坚硬物体表面，以免机器操作失常。
- 4、勿用酒精等稀释性液体擦洗机器表面，以免机器受损。
- 5、长时间不使用机器时请将电池取出。
- 6、废旧电池请勿当作普通垃圾随意丢弃。

三、装卸电池

- 1、用手指轻轻打开机器底部电池门。
- 2、将9V方块电池（6F22）接上机器所对应电池扣，缓缓放入机器电池仓，扣上电池门。

四、使用说明

- A.将输入插座与设备相连接，当输入插头完全插入时，效果器自动启动。
B.LED指示灯在启动效果时点亮，如果发现LED亮度不足或者熄灭，请更换电池。
C.外接电源--当使用外接电源时，自动将电池供电切断。

五、技术参数

输入阻抗：1/4" 单声道音频接口(阻抗：1M Ohms)
输出阻抗：1/4" 单声道音频接口(阻抗：1K Ohms)
电源供给：9V电池/DC 9V 电源适配器(内负外正)
工作电流：6mA
尺寸：120mm (D) × 97mm (W) × 55mm (H)
重量：390g
附件：用户手册

*免责声明：参数更新恕不另行通知。


卓乐产品服务政策

一、在正常使用产品过程中，如果产品出现非人为损坏的性能故障，自购买之日起，消费者享有保修服务，保修期为12个月。
二、有下列情况之一者，消费者不能享受保修权益。
1、人为损坏；2、超过保修期；3、无保修卡及有效发票，但能够证明产品在保修期内的除外；
4、保修卡与产品型号不符，或保修卡被涂改；5、未按说明书要求使用、维护、保养而造成产品损坏；6、未经卓乐公司授权，擅自拆卸、维修产品、或浸水、摔坏产品；7、其他不可抗力造成的损坏。
三、卓乐服务信息
消费者服务热线：0755-29765390
更多信息请访问：www.joyochina.cn



品牌:JOYO 名称:效果器
执行标准 :QB/T 4324-2012
制造商: 深圳市卓乐科技有限公司
地址: 广东省深圳市宝安区28区新安三路陆氏工业大厦2楼 邮编:518133
售后服务热线：0755-29765390

二、面板说明

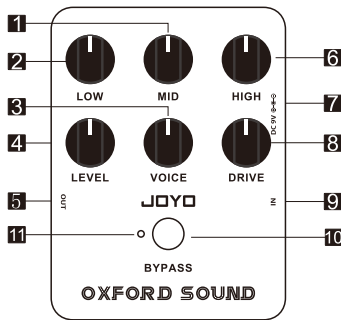

- 1.MID：中频调节
- 2.LOW：低频调节
- 3.VOICE：频响以及失真特性调节，配合DRIVE调节可以模拟不同音箱的音色。
- 4.LEVEL：输出电平调节
- 5.输出：1/4" 单声道音频接口，输出信号。
- 6.HIGH：高频调节
- 7.电源接口：电源供给，使用9V直流电源适配器(内负外正)。
- 8.DRIVE：增益调节
- 9.输入：1/4" 单声道音频接口，连接吉他。
- 10.旁通脚踏开关：踩下脚踏开关以选择效果的开关。
- 11.LED指示灯：显示OXFORD SOUND的工作状态，当指示灯亮时为效果开启。

JOYO

Owner's Manual

JF-22
OXFORD SOUND

Thank you for purchasing our product, please read carefully before proceeding.

I. Precautions

- 1.Do not disassemble or repair this product by yourself .
- 2.Do not use or store it to any heat sources , damp , dusty areas . Avoid violent vibrations or shock .
- 3.Do not drop this product, otherwise it may malfunction.
- 4.Do not use alcohol or other cleaning fluids to clean this product.
5. Take out the battery if the unit is not in use for a long time.
6. The used battery cannot be disposed of with household waste.

II. Panel Instruction

1. MID: adjust the mid frequency
2. LOW: adjust the low frequency
3. VOICE: adjust the frequency response and distortion characteristics, it can simulate various amp tones when used together with DRIVE knob.
4. LEVEL: adjust the output level
5. OUTPUT: 1/4" mono audio jack, outputting the signal.
6. HIGH: adjust the high frequency
7. Power Jack: for power supply, with 9V DC power adapter(center minus plug).
8. DRIVE: adjust the Gain
9. INPUT: 1/4" mono audio jack, connecting to the guitar.
10. BYPASS Footswitch: press the Footswitch to select the effects.
11. LED indicator: it indicates OXFORD SOUND's working status, the effects is turned on when the LED is on.

III. Replace the battery

1. Press the battery compartment cover and open it.
2. Insert the 9V 6F22 battery into the battery compartment, observing proper polarity. Then close the battery compartment cover.

IV. Instructions

- A. Connect the Input Jack with the instruments correctly, the effects pedal starts automatically once it's connected properly.
B. The LED indicator is in red when the effects pedal is in use. Please replace the battery once the LED indicator dims or goes out.
C. Power adapter--The battery supply will be cut off automatically when you use the power adapter.

V. Specifications

INPUT: 1/4" mono audio jack (impedance: 1M Ohms)
OUTPUT: 1/4" mono audio jack (impedance: 1K Ohms)
Power requirements: 9V 6F22 battery/DC 9V power adapter (center minus plug)
Current draw: 6mA
Dimensions:120mm (D) × 97mm (W) × 55mm (H)
Weight:390g
Accessories: owner's manual
*Disclaimer: Any specification's update won't be amended in this manual.

JOYO TECHNOLOGY CO.,LTD

Address: 2/F, Lushi Industry Building, 28th District, Bao'an, Shenzhen, 518133 China.
www.joyoaudio.com Email:info@joyoaudio.com Tel: 0086-755-29765381

