


AGPTEK

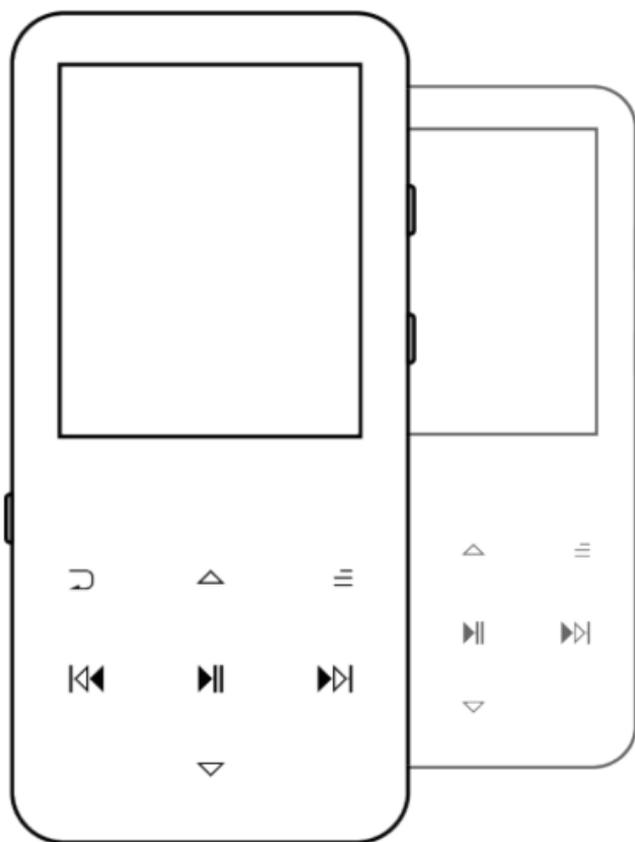

A19 MUSIC PLAYER

User Manual

CONTENT

English	01-12
日本語	13-30

Manufacturer: Shenzhen RuiZu Digital Technology Co., Ltd.
Address: 6/F, Building D, KeShang Mei park, Chongqing Road,
Fuyong, Bao'an District, shenzhen,China.



Important Notice

Thank you for purchasing AGPTEK Music Player. Please read the manual carefully before using the product. Specifications are subject to change without prior notice.

Charge the Player



- Charge by computer USB
- Use 5V/500mA charger (Charger not included).


Connect to the PC & Download audio files

1. Open the Windows Explorer or "This PC".
2. Using the USB cable, connect the player to a USB port on your PC.
3. Open the new "AGP-A19" folder under "This PC".
4. Copy files to the "AGP-A19" in which you want them to play.
5. In the left sidebar, right-click the "AGP-A19" folder and select "Eject" from the menu.
6. Wait until the computer confirms a safe ejection before you unplug the USB cable.
7. Note: Please do not disconnect the USB plug during file transferring. It may cause malfunction of the player and the files.



Product Overview

Buttons and Controls

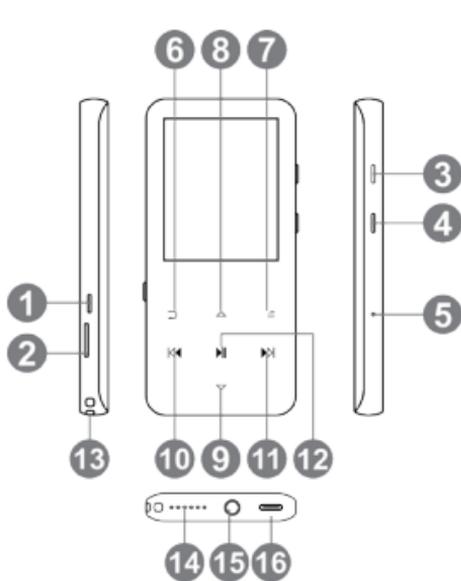

- ① Power On/Off
- ② TF Card Slot
- ③ Vol +
- ④ Vol -
- ⑤ Reset Hole
- ⑥ Return
- ⑦ Submenu
- ⑧ Scroll Up
- ⑨ Scroll Down
- ⑩ Previous/Fast Rewind
- ⑪ Next/Fast Forward
- ⑫ Play/Pause/Enter
- ⑬ Lanyard Hole
- ⑭ Speaker
- ⑮ Earphone Jack
- ⑯ Type-C Port

Basic Operation

- Power On/Off. Hold button ① to turn on/off the player. Screen lock. Hold down the button  to lock screen and all the buttons will be unavailable. Repeat the above steps to unlock.
- Screen display. Press ① to activate screen.
- Browse. On home menu or list menu, press button  /  /  /  to browse item, press button  to enter.
- Back. When on any interface, press  to go back; hold down to back to home menu directly.
- Volume +/- . On the non-list menu, press ③/④ to adjust volume.



Main Functions

Home Menu

The home menu is the starting point of each application. There are 9 functions on the home menu: Music/FM Radio/Folder/Bluetooth/Recorder/Video/E-book/Tools/Settings.

Music

Find "Music" on home menu with button to access to its function. A related list will show:

- All songs.
- Resume/Now Playing.
- Artists/Albums/Genres.
- Playlists. There are 3 default playlists on the player: Playlist [1/2/3].
- Update Playlist. Update music files.
- Local Folder/Card Folder. View music file in the local folder or card folder.

Note: These functions only available when memory card inserted.

Play the music.

While it's on music playing interface, hold down the button **▶▶** to fast forward, and press it to skip to next track. Hold down the button **◀◀** to fast rewind, and press it to play the previous track. Press button **▶||** to play/pause.

Back to Home/Play Mode/Sound Settings/Bookmarks/Add to Playlist/Remove from Playlist/ Delete.

While it's on music playing interface, tap button **≡** to access to the submenu.

1. Back to Home. Choose to go to home menu.
2. Play Mode.
 - A. Play music from. Choose to play from All Songs/This Artist/Album/Genre.
 - B. Repeat. Choose repeat mode: Repeat Off, Repeat 1, Repeat All.
 - C. Shuffle. Enable shuffle mode.

D. Repeat Settings.

a. Repeat Mode.

- Enter. Press the button ►|| to enter.
- Set. Press button ►|| to confirm the starting time A when A is flashing. Then press button ►|| to set the ending time B when B is flashing. The passage from time A to B will be repeated automatically. The icon for A-B indication will appear on the screen. Press button ►|| again to back to normal playback.

b. Replay Times. Set the replay times from 1 to 10.

c. Replay Interval. Set the replay gap from 1 to 10 (seconds).

3. Sound Settings. Choose to set Equalizer, Variable Speed Playback and Volume Limit.

4. Bookmarks. Choose to add bookmark for the song that is playing now, or go to/delete the bookmark you added.

5. Add to Playlist/Remove from Playlist. Choose to add to or remove from the 3 existing playlist.

6. Delete. Choose to delete the song that is playing now.

FM Radio

Find "FM Radio" on Home menu with the button ►|| to access to its function. A related list will show:

- Presets. All the saved stations will be listed here.
- Manual tune/Auto tune. When choose "Auto tune", the searched stations will be saved in "Presets" automatically.
- FM Recordings. View the radio recording files. You will need to choose from local folder or card folder if the memory card is inserted. The radio recordings will also be saved in Recordings> Recordings library.

Start FM Recording/Save/Clear Station/Auto Tune/Tuner Region/FM Recordings.

While it's on radio playing interface, press button ►|| to switch among preset stations, press the button ◀◀ / ▶▶ to find stations. Press button ≡ to access to its submenu which includes:



1. Start FM Recording. Press button ►|| to pause/continue, press ▶ and select "Yes" to save the recording file.
2. Save/Clear station/Auto tune.
3. Tuner Region. Choose from Common/European/Japan Band as needed.
4. FM Recordings.

Folder

Find "Folder" on Home menu with the button ►|| to access to its function. All of the files in the player will be listed. If the Micro SD card is inserted, you can choose to go to Local folder or Card folder.

Bluetooth

Find "Bluetooth" on Home menu with the button ►|| to access to its function. A related list will show, including Bluetooth On/Off, Search for Devices, Device List, BT Upgrade. Select the device you want to connect/disconnect, and then press ►|| to connect/disconnect. After successfully connected, this player is ready to play music or FM radio via Bluetooth headphones, Bluetooth speaker, etc.

Note:

1. When listen to radio by Bluetooth, wired headphones are needed as radio antenna.
2. BT Upgrade function is only available for manufacturer, not for user.

Recorder

Find "Recorder" on home menu with button ►|| to access to the recording interface. Press button ►|| to start voice recording, press again to pause. Press the button > and choose "Yes" to save the recording file. Press button ≡ to access to its submenu which includes:

- Recordings Library. Find the saved recordings in Recordings>Recordings library. You will need to choose from local folder or card folder if the memory card is inserted. While it's on recording playing interface, press button ≡ and choose "Delete" to delete.

- Storage. Choose to store your recordings in internal or external memory. Confirm your selection with button **▶||**. (Only available when TF card inserted)
- Record Format. Choose the record format between MP3/WAV.
- Record Settings.

1. Set rec bitrate. Set the recording bitrate as you need.
2. Record from. Choose the recording source from microphone or Line in.

Note: There are 2 functions after choosing to record from Line in.

Play. Play music after connecting the player and speaker via line in cable.

Record. Through the line in cable, connect 2 players or connect the player and other devices with output function to record the audio.

3. Track AVR mode. Choose normal or track on.

Videos

- Press button **▶||** to access to its function. You will need to choose from local folder or card folder if the memory card is inserted.
- Press button **▶||** to watch videos, press the button **◀◀/▶▶** to go to previous/next video or hold to fast backward/forward.
- When it's on video playing interface, press button **≡** to access to its submenu, including: Brightness, Repeat, Delete Video, Update Playlist. Set according to your preference.

Tools

Find "Tools" on Home menu with the button **▶||** to access to its function. A related list will show:

- Photos

Press **▶||** to access its function. If the TF card is inserted, you need to choose from a local folder or a card folder. Press **▶||** to view pictures, press the **◀◀/▶▶** to go to previous/next picture. When it's on picture viewing interface, press button **≡** to access to its submenu, including: Brightness, Backlight Timer, Slideshow

Settings, Delete Photos, Update Playlist. Set according to your preference.

- Calendar

Press the button ►|| to switch among year|month|day, press the button ◀◀/▶▶ to choose specific year | month | day.

- Stopwatch

Press ►|| to enter, press again to start the timer, then press again to stop or press ≡ to resume. Press ▼ to start a new one. The maximum Stopwatch list is 4.

- Clock

Press button ►|| to enter, a related list will show: Alarm On/off, Alarm Time, Alarm Cycle (Once/Daily/Work day), Alarm Music, Alarm Volume. Set according to your preference.

- Pedometer

Find "Pedometer" on Tools with the button ►|| to access to its function, a related list will show:

1. Start.

- 1) Press ►|| to start counting your daily steps. Press it again to stop counting steps and then press the button ⏏ to exit it.

- 2) Press button ⏏ and choose "Yes" to save the record in "History". If the history record is full, it will automatically cover the previous one.

2. Personal Info. Set your height, weight, and step length with button ►|| to confirm.

3. History. All your saved step record will be listed here, and you can save up to 7 records.

4. Clear history. You can choose to clear the history record you want or clear all the history record.

E-book

Press ►|| to access its function. If the TF card is inserted, you need to choose from a local folder or a card folder. While it's on text playing interface, press button ▲ / ▼ to turn the pages. Press the button ►|| to play automatically, press again to stop.

Submenu. While it 's on text playing interface, press button M to enter its submenu and set your preference, including Autoplay Settings (2s-30s), Font Size, Page Color, Delete E-book, Select Bookmark, Delete Bookmark, Add Bookmark, Select Page, Local Folder and Card Folder (Only available when TF card inserted).

Settings

Find "Settings" on Home menu with the button ► to access to its function. A related list will show, including:

- Language/Language. Choose display language.
 - Display Settings. Set Brightness, Backlight timer and Screensaver.
 - Button Light. Set the button light to be always on, on and off.
 - Speaker. Turn On/Off the Speaker.
 - Shutdown Settings.
1. Power Off. When there is no operation on the device, the device will shut off automatically when reaches the set time.
 2. Sleep Timer. The device will shut down automatically when reaches the set time.
 - Date and Time. Choose "Time" to set time format and date. To set time, press ◀◀ / ▶▶ to switch among hour | minute; Press button ▲ / ▼ to adjust the value of hour | minute. Set date under "Date Settings > Set Date" and adjust the date like "Time Settings".
 - Information. Check the information Tand disk space about your player.
 - Format device/Factory settings. Format the device or restore to factory default settings.
- Note: Before formatting the device, please backup the file so as not to lose any files.

Help and Troubleshooting

How to reset the language?



There are two ways to reset the language shown below.

1. Find ⚙️ (Settings) in the home menu and confirm it by pressing button ▶️. Select the first (upper) option and press button ▶️ to confirm. Scroll down and select the language you want to set.
2. Find ⚙️ (Settings) in the home menu, enter and scroll down to the last menu. Press button ▶️ to enter and choose the first (upper) option which means "Yes" with button ▶️ to confirm and restore to factory settings. And then the player will power on automatically and then you can choose language again.

Can't turn on the player; the screen of player goes blank/black; the player is crashed or has a firmware bug.

1. Power off the player and try again.
2. Update the firmware. Please contact our customer service or check our website at <https://www.agptek.com/blog> to download the firmware.

Can't download files from computer.

1. Please confirm whether it's connected properly.
2. Please check whether the storage space of the internal memory is full.
3. Please check whether the USB cable is damaged.

Can't recognize the player when connected to the computer via USB cable.

1. Reconnect it.
2. Restart the computer and reconnect it.
3. Connect your player to another USB port.
4. Charge the player for about 10 minutes first.

Specifications

Screen		2.4" TFT	
Housing		Zinc alloy	
Unit Size		106*48*9mm	
Net Weight		100g	
Interface Type		Type-C	
Internal Memory		16GB/32GB	
SD Card Expansion		Up to 128GB	
Format	Music	MP3/WMA/APE/FLAC/WAV/ DRM/ACELP	
	Bluetooth	MP3/WMA/WAVE/FLAC/APE/ M4A /AAC	
	Lyric	LRC	
	Video	AMV/AVI	
	Recording	MP3/WAV	
	E-book	TXT	
Playtime	Music	Wired	48 hours
		Bluetooth	6.5 hours
	Video	Wired	10 hours
	Radio	14 hours	
	Recording	50 hours	
Battery		500mAh lithium polymer battery	
Charging time		2.5 hours (5V/500mA)	

Notes On Battery Charging

1. Please use the PC USB port or a 5V/1A power adapter to charge the device.

Note:

A. When using the PC USB port to charge, the current output capability of the USB port of different PCs is different and the charging time will be slightly different. It is recommended that when using the PC USB port to charge, try to power off the device to speed up the charging.

B. The charger and the MP3 player will heat up to a certain extent during charging, which is a normal phenomenon.

2. New battery needs to go through several charging and discharging processes to achieve the best performance.

3. Under normal circumstances, the player can be fully charged in about 3h. It is recommended to pull out from the USB port after charging, and do not connect to the power supply for a long time.

4. The battery of this device is a polymer lithium battery, which can be recharged and used.

5. The polymer lithium battery must be replaced by a professional, and the user must not replace it by himself (Note: If the battery is replaced improperly, there will be a danger of explosion, and it can only be replaced with the same type or equivalent type of battery); in order to protect the environment, please hand over the waste batteries to a professional organization for recycling.

6. The lifespan of the battery may vary with the conditions of use and production time.

7. The battery should not be exposed to sunlight, fire or similar overheating environment.

Tips for Hearing Conservation

1. It is recommended to turn down the volume of the device when using the earphones, and gradually increase until it is suitable for you start to listen.

2. In order to protect hearing, please do not turn up the volume too high (doctors pointed out that listening at high volume for a long time will damage the listener's hearing).

3. When tinnitus occurs, please lower the volume or stop using it.



Caution

1. Before formatting the device, it is recommended to back up the personal data stored in it in time.
2. Ensure that the product is placed safely to avoid accidents and drops caused by children touching.
3. Do not overvoltage, strain the power cord, bend it or be squeezed by heavy objects, so as not to cause overheating or fire.
4. Please keep the product away from the electromagnetic environment; keep away from excessive humidity, smoke and dust and other harsh environments.
5. Do not immerse the device in water; do not use any corrosive or abrasive cleaners to clean it.
6. Do not expose the product to moisture or rain, it may cause the device to malfunction or even be difficult to repair due to the penetration of water and moisture.

ご使用前に

AGPTEK A19音楽プレーヤーをお買い上げいただきありがとうございます。正しく安全にお使いいただくため、ご使用前に必ず取扱説明書をよくお読みください。仕様は予告なしに変更されることがあります。

ご注意

充電について

- プレーヤーと充電器の接続には、同梱のUSBケーブルを使います。パソコンまたは充電器で充電してください(別売)。
- はじめてお使いになる場合や、しばらくお使いにならなかった場合は、なるべく電池残量表示が満タンになるまで充電することをおすすめします。
- 充電器の仕様は、5V 500mAまたは5V 1000mAの充電器を使用してください。規格外の充電器を誤って利用する場合は、故障になる恐れがあります。無料修理、交換、返品等対応不可です。予めご了承ください。
- 入力：AC110-240V 50 / 60Hz 最大：100mA
出力：DC5.0-5.5V 500mA-800mA
- 電池の劣化を抑えるために、プレーヤーを長期間使わない場合でも、1ヶ月から3ヶ月ごとに充電するようにしてください。
- 充電完了後は、パソコンまたは充電器からプレーヤーを取り外してください。
- 5時間以上充電または置きっ放し充電しない。バッテリーが故障する原因となります。
- 充電端子に水が付着していないことを確認してから充電する。感電・ショート・発火の原因となります。
- ヒント：電池残量が不足しているときにパソコンへ接続すると、画面表示までに約10～30分程度時間がかかる場合があります。

本製品の取り扱いについて

- 落としたり、重いものを乗せたり、強いショックを与えたり、圧力をかけないでください。故障の原因となります。
- 以下のような場所に置かないでください。


- 直射日光が当たる場所や暖房器具の近くなど温度が非常に高いところ
変色したり、変形したり、故障したりすることがあります。
- ダッシュボードや、炎天下で窓を閉め切った自動車内（とくに夏季）
- ホコリの多いところ
- 風呂場など、湿気の多いところ
- 磁石、スピーカーボックス、テレビなど、磁気を帯びたものの近く
- 水がかからないようご注意ください。本製品は防水仕様ではありません。

液晶画面について

- 液晶画面を強く押さないでください。画面にムラが出たり、液晶画面の故障の原因になります。

各部の名称

ボタンと機能

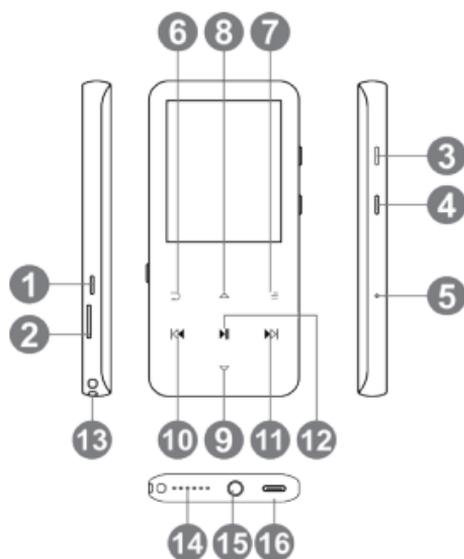

- ① 電源オン/オフ
- ② TFカードスロット
- ③ 音量+
- ④ 音量-
- ⑤ リセット穴
- ⑥ 戻る
- ⑦ サブメニュー
- ⑧ 上へ移動
- ⑨ 下へ移動
- ⑩ 前へ/早戻し
- ⑪ 次へ/早送り
- ⑫ 確認/再生/一時停止
- ⑬ ランヤードホルド
- ⑭ スピーカー
- ⑮ イヤホンジャック
- ⑯ Type-Cポート

基本な使いかた

電源を入れる / 切る

⏻電源ボタンを3秒間長押しすると、電源を入れます / 切れます。

⏻電源ボタンを押すと、画面表示をオン / オフします。

ヒント: バックグラウンドで音楽を再生 / 一時停止している時にプレーヤーの電源を切ると、電源を再起動するときに画面は前回再生した曲が表示されます。

ご注意: 画面オフ状態でもわずかに電池を消耗します。

スクリーンロック / ロック解除する

任意画面で、☰ ボタンを長押しすると、画面をロック / ロック解除します。誤ってボタンが押されて動作するのを防ぎます。

メイン画面



プレーヤーでは、各機能の入り口がメイン画面になります。ここから各機能を選んだり、曲を探したり、設定を変更することができます。音楽、FMラジオ、フォルダ、Bluetooth、録音、ツール、設定、電子ブック、動画などの機能を選択できます。

1. ▲ / ▼ / ⏮ / ⏭ を押して、機能または項目を選ぶ。
2. ▶|| ボタンを押して、決定する。
3. ◀ ボタンで前の画面に戻ります。◀ ボタンを長押ししてメイン画面に戻ります。


microSDカードを入れる

プレーヤーでは、本体メモリーのほかに、microSDカード（別売）に音楽 / ビデオ / 写真 / 電子ブックなどのコンテンツを保存できます。

1. microSDカードを、microSDカードスロットに、端子面を上向きにしてカチッと音がするまでしっかり差し込む。
2. microSDカードを挿入すると [音楽] でカードフォルダに切り替えることができます。[カードフォルダ] → [プレイリストを更新しますか]

?] → [はい] を選ぶ。本体メモリを切り替わる時はローカルフォルダを選択してください。

- microSDカードを挿入すると[フォルダ]/[画像]/[電子ブック]/[動画]でローカルフォルダとカードフォルダを切り替えることができます。

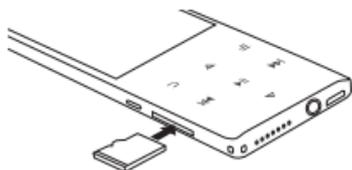

ご注意:

- microSDカードが認識されない場合は、microSDカードを取り出し、再度入れ直してください。
- 大量のコンテンツを保存したmicroSDカードを入れた場合、プレイヤーのデータベース更新に10分以上かかる場合があります。
- プレイヤーの電源を切ってから、microSDカードを取り付けることをおすすめします。


microSDカードを取り出す

microSDカードを一度奥に押す。手前に出てきたら、microSDカードスロットから取り出す。

音楽 / ビデオ / 写真などのコンテンツを転送する

• パソコンを使って音楽 / ビデオ / 写真を取り込む


- インターネット接続したパソコンとプレイヤーを同梱のUSBケーブルで接続する
- プレイヤーの充電タイプは [充電&転送] を選ぶ。
- スタート画面から[デスクトップ] をクリックし、デスクトップ画面から [エクスプローラー] をクリックする。
- 画面の左側で[PC]をクリックする。
- [AGP-A19] をダブルクリックする。
- 音楽 / ビデオ / 写真などのコンテンツを [AGP-A19] にドラッグ&ドロップして転送完了。
- タスクバーにある△マークをクリックし、ハードウェアの取り外しま

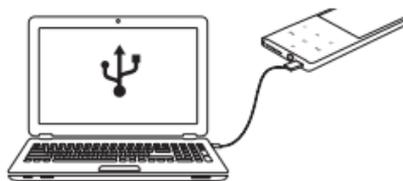

ークをクリックする。AGP-A19の取り出しを選択してプレーヤーをパソコンから取り外す。

• パソコンを使わずに音楽を取り込む

録音用ケーブル（別売）を使ってプレーヤーとオーディオ機器を接続すると、プレーヤーに直接、曲を録音することができます。

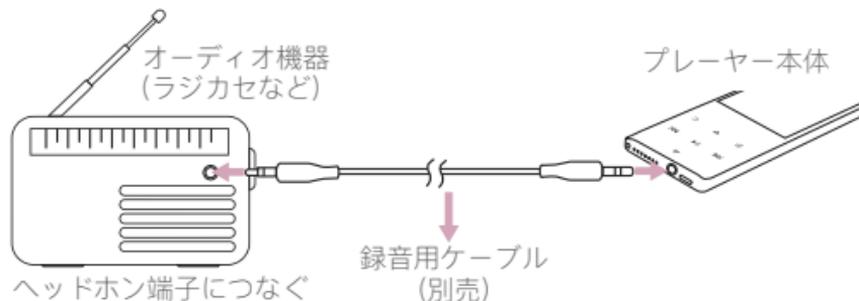

1. 録音用ケーブルを接続する

ヘッドホンをつないだ端子に録音用ケーブルのステレオミニプラグ(3.5mm)を差し込み、もう一方をプレーヤーのイヤホンジャック(3.5mm)につなぎます。

2. [メイン画面] → [録音] → [録音デバイスを選択] → [ライン入力] を選ぶ

3. [音声録音を開始] を選択して、[しばらくお待ちください]の表示が出ます。オーディオ機器の再生ボタンの押して準備する。

4. プレーヤー画面に録音のアイコンと[0: 00: 00]が出ると、オーディオ機器の再生を始める。

5. プレーヤーの▶|| ボタンを押して録音が止まる。


6. ☰ ボタンを押して録音ファイルを保存する。

7. 録音した曲は[ボイスフォルダー]に保存されます。

ご注意:

録音した曲の曲名を変更したい場合はパソコンをご利用になるかスマホをお使いください。

- OTGアダプター(別売)を使ってプレーヤーとAndroidスマホを接続すると、プレーヤーに直接、音楽 / ビデオ / 写真を転送することができます。

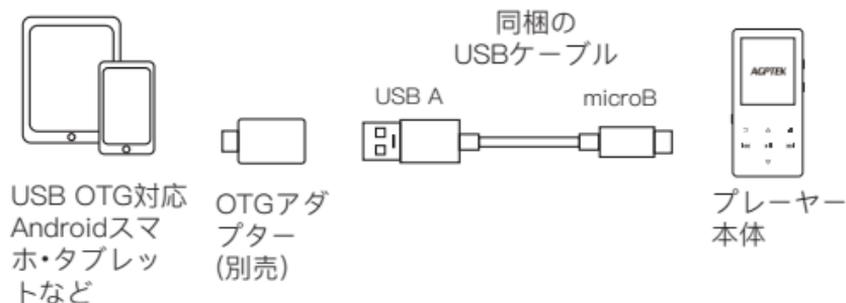

1. スマホの充電口にOTGアダプターを差し込み、スマホとプレーヤーを同梱のUSBケーブルで接続する。
2. プレーヤーの充電タイプは[充電&転送]を選ぶ。
3. スマホ通知バーに選択の案内が出て、設定を[転送]に変更する。
4. スマホのファイル管理アプリを選ぶ。
5. [ACTIONS製USBドライブ]が表示され、プレーヤー本体内部のメモリとなります。
6. スマホ内部の音楽 / ビデオ / 写真などのコンテンツを選択して、[ACTIONS製USBドライブ]にコピーする。

ヒント: USB OTGは、USB機器同士を接続して使うために制定されたUSBインターフェースの規格で、PCを介さずにプレーヤーをスマホと直接つなぎたい、スマホから直接USBメモリにデータを移行したい、というニーズに応えるかたちでUSB2.0に追加された仕様です。

ご注意:

- OTG規格を利用するには、OTG (USBホスト機能) 対応のスマホであることが条件。iPhoneは対応しません。
- スマホのOS設定により、コピー&ペーストの表示が異なる場合がございます。スマホの操作について、ご不明な点がございましたら各メーカーの問い合わせセンターまでご確認ください。
- 転送中にプレーヤーを取り外さないでください。ファイル破損となる恐れがあります。

音楽

[メイン画面] → [音楽]  を選ぶ。

- 再生中 – 再生中の曲、前回再生した曲やオーディオファイルに戻ります。
- すべての曲 – すべての曲がリストされます。希望の曲を選び再生が始まります。
- アーティスト / アルバム / ジャンル – アーティスト / アルバム / ジャンルごとに曲を再生することができます。
- プレイリスト – プレイリスト[1]、プレイリスト[2]、プレイリスト[3]を選択できます。
- プレイリストを更新します – 外部の Micro SD カードまたはプレーヤーの内蔵メモリの曲を更新します。
- ホームディレクトリ / カードディレクトリ – 音楽ファイルをローカルフォルダまたはSDカードフォルダに切り替えることができます。

ヒント: ローカルフォルダ / カードフォルダの機能は、microSDカードを挿入した場合にのみ使用できます。カードフォルダの音楽を表示する場合は、ローカルフォルダの音楽が非表示になります。

音楽再生画面の操作

音楽再生画面で、▶▶ ボタンを押して次の曲へ行きます。

▶▶ ボタンを長押しすると早送りをします。◀◀ ボタンを押して前の曲へ行きます。◀◀ ボタンを長押しすると巻き戻しをします。▶▶ ボタンを押して再生 / 一時停止します。- / + ボタンで音量を調整します。

サブメニュー

音楽再生画面で、☰ ボタンを押してサブメニューを表示する。▲ / ▼ ボタンで各サブメニュー項目を選択したり、値を調整することができます。▶▶ ボタンを押して決定する。

再生方法: 希望の設定の種類を選ぶ。選んだ再生方法で曲を再生することができます。

設定の種類	説明
リピート→リピートオフ	再生範囲の曲を順に再生します。

リピート→1曲リピート	再生中または再生を始めた曲を繰り返し再生します。
リピート→全曲リピート	再生範囲の曲を順に繰り返し再生します。
シャッフル	再生範囲の曲を順不同に再生します。
区間リピート設定 (A-Bリピート再生)	再生中の音声の任意の区間(A-B区間)を指定して、その区間を繰り返し再生します。
...から音楽を再生する	全曲 / アーティスト / アルバム / ジャンルから再生します。

※シャッフルを設定した後、再生方法を他の設定の種類を選択するとシャッフルモードがオフになります。

区間リピート設定: A-Bリピート再生、再生回数、再生間隔を設定できます。[A-Bリピート再生]は再生中のみ利用できます。

- 1) **▶▶** ボタンで[A-Bリピート]を選択し、開始時刻Aを確定する。Aが点滅します。
- 2) **▶▶▶** ボタンをおして終了時刻Bを確定する。Bが点滅します。
- 3) **▶▶▶** ボタン押して時間Aから 時間Bの内容が自動的に再生されます。A-B表示のアイコンが表示されます。
- 4) **▶▶** ボタンを押して通常再生に戻ります。

- 再読回数: 1~10回の再生回数を設定する。
- 再生間隔: 再生間隔を1~10(秒)を設定する。

サウンド設定:

- イコライザー: オフ / ロック / ファンク / ヒップホップ / ジャズ / クラシック / テクノ / カスタムを設定できます。
カスタムはB、L、M、H、Tを好みの音に設定できます。
- 変速再生: 再生速度を-8レート(最小)から+8レート(最大)に調節できます。
- 音量制限: 耳を刺激するような大きな音を流れないよう音量を最大限まで設定できます。-/ + ボタンを押して音量の値を設定する。
▶▶ ボタンを押して決定する。

プレイリストに追加: 再生中の曲をプレイリスト[1] / プレイリスト[2] /

プレイリスト[3]に追加します。

プレイリストから削除：再生中の曲をプレイリスト[1]/プレイリスト[2]/プレイリスト[3]から削除します。

この曲を削除：不要な曲を削除することができます。

ご注意：一度削除した曲は元に戻せません。削除する前に必要な曲をバックアップしてください。

ブックマーク：ブックマークを追加/ブックマークから再生/ブックマークを削除することができます。お気に入りの区間だけを再生したり、好きな区間で曲を再生したりするときはブックマークを使います。

Bluetooth

[メイン画面] → [Bluetooth]  を選ぶ。

Bluetoothオーディオ機器とプレーヤーを接続し、プレーヤーの音声をワイヤレスで聞くことができます。

1. 初回接続時は、プレーヤーと相手側Bluetoothオーディオ機器をペアリングする。
 - 1) 相手側のBluetoothオーディオ機器とプレーヤーを隣に置く。
 - 2) 相手側のBluetoothオーディオ機器をペアリングモードにする。
 - 3) [メイン画面] → [Bluetooth] → [Bluetoothオン / オフ] → [Bluetoothオン] を選ぶ。☑ ボタンを押して前の画面に戻す。
 - 4) [デバイスを検索] → [Bluetoothオーディオ機器名] → [ペアリング] を選ぶ。
 - 5) ペアリング可能なBluetoothオーディオ機器の検索が始まり、該当する機器の機種名が表示されます。ペアリングが完了し、自動的にBluetooth接続されていることを確認する。
 - 6) プレーヤーで再生を始めると、相手側のBluetoothオーディオ機器で音声を聞くことができます。

Bluetooth接続で音楽を再生する。

- ペアリングが済んでいるBluetoothオーディオ機器でも毎回Bluetooth接続が必要です。ペアリング直後はBluetooth接続された状態になります。

- 1) 接続するBluetoothオーディオ機器の電源を入れ、接続待ち状態にする。
詳しくは相手側のBluetoothオーディオ機器の取扱説明書をご覧ください。
 - 2) [メイン画面] → [Bluetooth] → [Bluetoothオン / オフ] → [Bluetoothオン] を選ぶ。
 - 3) [メイン画面] → [Bluetooth] → [デバイス一覧] を選ぶ。希望のBluetoothオーディオ機器を選ぶ。Bluetooth接続すると、プレーヤー画面はが表示されます。
 - 4) プレーヤーで曲を再生する。曲を聞き終わったら、プレーヤーとBluetoothオーディオ機器の両方の電源を切ります。
3. Bluetooth接続を切断する。
[メイン画面] → [デバイス一覧] → [Bluetoothオーディオ機器名] → [ペアリング切断] を選ぶ。

ヒント: Bluetoothオーディオ機器はワイヤレスイヤホンまたはワイヤレススピーカーなどで音楽再生、FMラジオ再生を聴くことができます。BluetoothモードでFMラジオを聞くとともに、接続した同梱のイヤホンのコードがアンテナとして働きます。

Bluetooth接続の使用上のご注意

- 本製品のBluetoothはカーナビ、スマホやパソコンなどに接続することができません。
- Bluetooth無線技術では約10 mまでの距離で接続できますが、障害物（人体、金属、壁など）や電波状態によって接続有効範囲は変動します。
- 人体は電波の吸収性を有するため、衣類のポケットに入れる等、人体と密着させたり、混雑した電車内での使用時に電波の減衰が生じます。Bluetooth接続に障害を起こす場合があります。このような場合、音が途切れたり接続に失敗することがありますが故障ではありません。使用環境を変えてご使用ください。
- プレーヤーはすべてのBluetoothオーディオ機器とのワイヤレス接続を保証するものではありません。機器の特性や仕様によっては、接続できない、操作方法や表示・動作が異なるなどの現象が発生する場合があります。
- 接続する機器によって、Bluetooth接続ができるようになるまで時間がかかることがあります。

- スマホや他のBluetooth機能のある機器のBluetooth機能をオフすると、干渉を減少し、デバイスの検索はしやすくなります。

FM ラジオ

[メイン画面] → [FMラジオ]  を選ぶ。

プレーヤーでは、FMラジオ放送を楽しめます。接続した同梱のイヤホンのコードがアンテナとして働きます。コードをできるだけ長く伸ばしてお使いください。コードを巻き付けたまさない。

[プリセット]、[手動チューニング]、[自動チューニング]、[FM録音ファイル]四つの項目があります。

手動チューニング:  ボタンで周波数を選ぶ。

自動チューニング: お使いの地域で受信できる放送局を自動的に探してプリセット登録できます (最大30局まで)。

ラジオ再生画面で  ボタンを押してサブメニューに入ります。

- FM 録音開始: [FM 録音開始]を選択してFM録音を開始します。  ボタンを押して録音ファイルを保存します。保存した録音は[FM 録音ファイル]にあります。
- 登録済みのプリセット: 登録済みのプリセットを選んで再生する。
- プリセットをクリア: すべてのプリセットを削除する。
- 周波数帯域: 共有放送電波 / 日本放送電波 / ヨーロッパ放送電波を選ぶ。日本放送電波は76-90MHzの放送局を受信できます。

FM 録音ファイル: すべての録音ファイルがリストされます。

ご注意: 本製品が使用している周波数は、他の無線機器でも使用していることがあります。万一、本製品と「他の無線局」との間に電波干渉が発生した場合には、速やかに本製品の使用場所を変えるか、または本製品の運用を停止 (電波の発射を停止) してください。

録音

[メイン画面] → [録音]  を選ぶ。

[音声録音を開始]、[ボイスフォルダー]、[ストレージ](microSD カードが挿入されている場合のみ)、[録音デバイスを選択]、[録音フォーマット]、[量子化ビット数を選択]という機能があります。

- 音声録音を開始: ▶▶ ボタンを押して再生 / 停止する。停止しているときに ⏏ ボタンを押して録音を保存します。
- ボイスフォルダー: 録音ファイルがリストされます。
- ストレージ: microSD カードがセットされている場合のみ表示します。録音ファイルを内部メモリまたは外部メモリ(microSDカード)から選ぶ。
- 録音デバイスを選択: 録音デバイスを[マイク]と[ライン入力]選択できます。

ライン入力は2つの機能があります。

1. 再生機能: プレーヤーとスピーカーをオーディオケーブルで接続すると、音声をスピーカーから直接に聴くことができます。
2. 録音機能: オーディオケーブルを利用すると、オーディオ機器と接続して音声を録音することができます。

量子化ビット数を選択: MP3録音ファイルのビットレートを32/64/128/192kbpsに設定できます。WMV録音ファイルのビットレートを512/768/1024/1536kbpsに設定できます。量子化ビット数が大きいほど、録音の再現性が高い。そのかわりに録音ファイルの容量も増えます。

電子ブック

[メイン画面] → [電子ブック]  を選ぶ。

TXTの電子ブックをプレーヤーで再生することができます。

電子ブック再生画面で、⏮ / ▶▶ ボタンを押してページを切り替えます。▶▶ ボタンを押して自動的に再生されます。もう一度 ▶▶ ボタン押しで再生を停止します。

☰ ボタンを押してサブメニューに入ります。

[画面の明るさ]、[連続スクロール] (自動再生間隔を設定する)、[電子ブックを削除]、[ブックマークを選択]、[ブックマークを削除]、[ブックマークを追加]、[ページ選択]、[背景色]を設定することができます。

動画

[メイン画面] → [動画]  を選ぶ。

160 * 128のAMV / AVI動画ファイルをプレーヤーで再生することができます。

- ▶|| ボタン押して動画を再生します。◀◀ / ▶▶ ボタンを押して次の動画/前の動画に切り替えます。◀◀ / ▶▶ ボタンを長押しすると、早戻し/早送りします。
- 動画再生画面で ≡ ボタンを押してサブメニューに入ります。

ヒント: 動画をプレーヤーに転送する場合は、まずはフォーマット変換ソフトで対応している形式に変換してください。フォーマット変換ソフトはAGPTEK公式サイトにてダウンロードすることができます。

ツール

[メイン画面] → [ツール]  を選ぶ

歩数計:

[ウォーキング開始]、[個人情報]、[記録]、[記録を削除]等の項目があります。

- **ウォーキング開始:** 経過時間とステップ数を計測する。▶|| ボタンで start / stop をします。☑ ボタンで記録を保存する。
- **個人情報:** 身長、体重、ステップサイズを設定する。▲ / ▼ ボタンで身長と体重を調整し、▶|| ボタンで決定する。
ステップサイズは20~250cmを調整できます。
- **記録:** 保存した記録をリストする。最大7つの記録を保存できます。7つ以上の記録を保存する場合は、前の記録をカバーします。

記録を削除: 不要の記録を削除できます。

カレンダー: カレンダーを確認する。▶|| ボタンで年、月、日を切り替える。▲ / ▼ で次の年、月、日を切り替える。

ヒント: プレーヤーの日付を変更するには[設定]→[日付と時刻]にて変更してください。

ストップウォッチ: 最大4つの経過時間を計測することができます。

▶▶ ボタンを押してタイマーを開始する。もう一度 ▶▶ ボタンを押すと停止する。▼ を押して新規を開始します。

アラーム:

- アラームオン / オフ: アラームをオン / オフする。
- 時間設定: ◀◀ / ▶▶ ボタンで時、分を選び、▲ / ▼ ボタンで数字を選ぶ。
- 繰り返し設定: 繰り返しなし、毎日、平日 (月曜日～金曜日) を設定する。
- サウンド: アラーム音をお気に入りの曲・音楽を設定する。
- アラーム音量: - / + ボタンで音量を調節する。▶▶ ボタンを押して決定する。

画像: JPG、BMPの画像ファイルをプレーヤーで再生することができます。

▶▶ ボタンを押して画像が表示されます。◀◀ / ▶▶ ボタンで前/次の画像に切り替えます。

フォルダー

[メイン画面]→[フォルダー]  →[ローカルフォルダ]または[カードフォルダ]を選択して再生できます。

ヒント: MicroSDカードをセットしていない場合はローカルフォルダの内容のみ確認できます。

設定

[メイン画面] → [設定]  を選ぶ。

Language / 言語: プレーヤーの言語を切り替える。

表示設定:

- 画面の明るさ: ▲ / ▼ ボタンで明るさを調整します。▶▶ ボタンを押して決定する。
- スリープ: 10秒 / 20秒 / 30秒 / 常にオンに設定できます。操作が一定時間ない場合にプレーヤーを自動的にスリープするようになります。
- 待受画面: なし / 待受画面1 / 待受画面2 / 待受画面3に切り替えるこ

とができます。

- **タッチライト**: 操作ボタンのランプをOFF / ON / Normalに設定できます。OFFにしてすべてのボタンが常時消灯します。ONにして押すときそのボタンが光ります。Normalはすべてのボタンが常時点灯します。
- **スピーカーオン / オフ**: プレーヤーのスピーカーをオン / オフする。オフにする時、イヤホンと接続して音楽 / FMラジオ / 動画を再生してください。
- **スリープタイマー**: 1~99分の時間を設定してタイマーで設定した時間が経過すると自動的に電源を切る。▲ / ▼ ボタンで時間を設定する。ボタンを押して決定する。
- **画面オフタイマー**: 1分 / 2分 / 3分 / 5分 / 10分 / オフに設定できます。操作が一定時間ない場合にプレーヤーを自動的に電源を切る。
- **日付と時刻**: ◀◀ / ▶▶ ボタンで年、月、日、時、分を選び、▲ / ▼ ボタンで数字を選ぶ。▶▶ ボタンを押して決定する。時刻の表示形式を12時間 / 24時間を設定できます。日付の表示形式をDD MM YYYY / MM DD YYYY / YYYY MM DDを設定できます。
- **端末情報**: プレーヤー情報とストレージを確認する。
- **デバイスをフォーマット**: フォーマットすると本体メモリーに記録されたデータはすべて消去されます。フォーマットする前に内容を確認してください。必要に応じてバックアップしてください。
- **工場出荷時設定**: すべての設定を出荷時の状態に戻ります。工場出荷時設定完了後、改めて表示言語を設定してください。デフォルトは英語となります。この操作は本体メモリーに記録されたデータを削除しません。

トラブルシューティング

言語を再選択する方法。

[設定]  を選択し、最初の行[Language / 言語]を▶▶ボタンで選択します。▲ / ▼ ボタンを押すと言語を選択できます。もう一回 ▶▶ ボタンを押すと、設定完了になります。

プレーヤーは電源が入らない。

- 長期間使用していないなどバッテリーが空の可能性がります。満充

電になるまで充電をしてください。充電が始まるまで30分ほどかかる場合もありますので、しばらく待ってください。

- 充電ケーブルまたは充電器を取り替えてください。

パソコンに認識されない。

- 接触不良の可能性があります。USBケーブルを抜き差ししてください。
- 充電できる場合は、充電専用ケーブルではないことを確認します。USBケーブルにはデータ転送ができない充電専用のタイプもあります。充電・転送(通信)ケーブルと取り替えてください。
- プレーヤーの充電ポートに目立った異常（キズや外的な損傷）がないか確認します。
- パソコンに接続している他の周辺機器の影響やリソースが不足していないか確認する。パソコンから他の周辺機器を取り外してプレーヤーを接続して認識しないか確認します。
- パソコン本体に問題がないか確認する。複数パソコンがありましたら他のパソコンでもUSBメモリが認識しないか確認します。

画面が表示されているが動作しない。

- パソコンから一度に多量の音楽などのコンテンツを転送した場合は、データベースの更新に時間がかかります。数十分程度時間がかかる場合があります。
- 操作しても反応しない場合は、爪楊枝の先などでリセット穴を押して、プレーヤーを再起動してください。
- ファームウェアを更新してください。

電池がすぐになくなる。

- 充電が不十分の可能性があります。パソコンがスタンバイ（スリープ）、休止状態の場合は充電できません。起動した状態を維持して充電してください。
- 充電器の規格は5V500mAまたは5V1000mAのものか確認してください。
- 充電ケーブルまたは充電器を取り替えてください。
- 充電を繰り返すと電池の特性上劣化が発生します。使える時間が買い上げ時の半分くらいになる充電可能な回数の目安は、約500回です。毎日充電する使い方なら、約1年半から2年くらい経過すると、バッテリーの交換を検討する時期となります。

曲が転送順に表示されない。

- [音楽]再生では、曲の数字順に並べます。曲名の前に001、002、003、004、.....010、011を付けて順番的に並ぶことができます。
- [フォルダ]再生では、取り込む時間順に並べます。例えば15: 51、15: 52、15: 53の順番に並べます。ソフトを利用して簡単に曲順を変更できます。ご購入先までお問い合わせください。

ファイルを取り込んだが表示されない。

- プレーヤーで認識できない形式という可能性があります。予めファイル拡張子を確認してください。
- 変換ソフトを利用して対応している形式に変換して取り込んでください。変換ソフトはAGPTEK公式サイトでダウンロードすることができます。

ファームウェアのアップデート。

<http://www.agptek.com/support/download.html/> または www.agptek.com/blog にアクセスし、ファームウェアをダウンロードしてアップデートしてください。

アップデートについてご不明な点がありましたらご購入先までお問い合わせしてください。

ディスクエラー。

[ディスクエラー]と表示される場合は、[設定]→[デバイスをフォーマット]を選択してプレーヤーをフォーマットしてください。

曲がプレーヤーに認識されません。

曲のフォーマットが間違っているか、暗号化されているか、この曲がサポートされていないかを確認してください。

仕様

スクリーン	22.4" TFT		
素材	亜鉛合金		
本体サイズ	106*48*9mm		
重さ	100g		
端子	Type-C		
内蔵メモリー	16GB/32GB		
SD カード	128GBまで拡張可能		
フォーマット	音楽	MP3/WMA/APE/FLAC/WAV/ DRM/ACELP	
	Bluetooth	MP3/WMA/WAVE/FLAC/APE/ M4A /AAC	
	歌詞	LRC	
	ビデオ	AMV/AVI	
	録音	MP3/WAV	
	電子ブック	TXT	
再生時間	音楽	有線	48 時間
		Bluetooth	6.5 時間
	ビデオ	有線	10 時間
	ラジオ	14 時間	
	録音	50 時間	
バッテリー	500mAh リチウムポリマー電池		
充電時間	2.5 時間 (5V/500mA)		

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



FCC ID: 2AQWYA19X

Manufacturer:

Shenzhen RuiZu Digital Technology Co., Ltd.

Address:

6/F, Building D, KeShangMei Park, Chongqing Road, Fuyong, Bao' an District, Shenzhen, China



Made In China



® 215-JCD103

