



INSTRUCTIONS MANUAL

Helmet Bluetooth WiFi Recorder



English

日本語



Bluetooth®

R1 Pro

Contents

1. Product Functions Introduction	1
2. List of Packing Parts	1
3. Product Assembly and Disassembly Steps	2
4. Function Keys Introduction	3
5. Bluetooth Functions Operating Introduction	4
5.1. Basic Functions Operation	4
5.2. Bluetooth Pairing with Different Devices	5
5.3. Phone Calls, Music and Radio Operation	5
5.4. Intercom Operation between Two R1 devices	6
5.5. Music Sharing	7
5.6. Pairing and Intercom Operation Among Six R1 devices	7
6. Connect to Walkie-talkie by PTT Wire	8
7. Operation of Camera Functions	9
8. TF Memory Card Formatting	10
9. WIFI Functions Introduction	10
10. Introduction of Video Application Usage	10
11. Product specifications and Parameters	12
12. Charging and Maintenance	13
13. Trouble Shooting	13
14. After-sales Service	14



Please charge before using for the first time!

Welcome

Thank you for choosing FreedConn Helmet Bluetooth® Intercom system. By doing so you now have the assurance and peace of mind that comes with purchasing a product made by one of the leading manufacturers. All products brought to you are manufactured to the highest standard of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 2 Year Warranty. We hope you will enjoy using your purchase for many years to come.

Safety Warning: Keep in mind that using FreedConn can limit the audibility of ambient sounds. Listening to music at maximum volume in addition to temporarily adapting to make it impossible to hear soft sounds can lead to permanent hearing damage.

Warm Tips: In order to get the best sound quality experience, please make sure Speakers are within 2mm of ears.

1. Product Functions Introduction

- Video recording function
- Photo capturing function
- WIFI function
- Radio function
- Activate voice assistant
- Connect two mobile phones
- Voice prompts
- Bluetooth intercom
- K wire connection with Walkie-talkie
- Music sharing
- Supports connection with most other Bluetooth intercom brands
- Supports connection with most smart phones, MP3 players and GPS navigation system
- Supports TF cards with a maximum capacity of 256GB

2. List of Packing Parts



❶ Bluetooth main unit *1



❷ Microphone & speaker *1



❸ Clip*2



❹ Screwdriver*1



❺ Speaker Velcro*4



❻ Microphone Velcro*2



❼ Charging Cable*1




❽ Product manual *1

3. Product Assembly and Disassembly Steps

3.1 Assembly steps




- 1 Insert the memory card into the slot at the bottom of the host.



- 2 Loosen the clamp by turning the screw counterclockwise.



- 3 Open the inner lining on the left side of the helmet, insert the clamp into the appropriate position between the left EPS and the shell, and tighten the screw. Note: If the screw is too tight, the clamp may be broken.)



- 4 Align the R1 host with the card slot and install it on the base.



- 5 Open the inner lining of both sides of the helmet and stick the earphone Velcro on the surface of EPS with the position of the ear.




- 6 Attach the speaker to the Velcro tape.



- 7 Remove the triangle scrap from the microphone.




- 8 Stick the microphone on EPS inside the helmet or the shell just at the mouth position.





- 9 Insert the earphone plug into the jack on the R1.

3.1 Disassembly Steps




Press and push







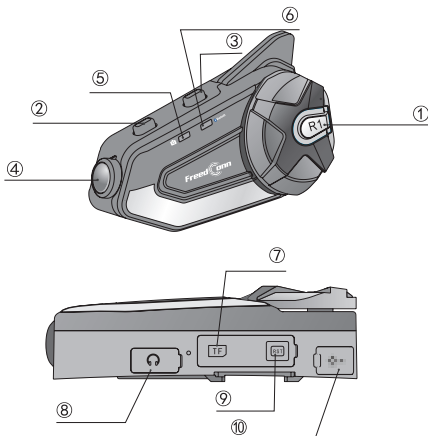

Take off

4. Function Keys Introduction







5. Bluetooth Functions Operating Introduction

5.1. Basic Functions Operation

Function	Key	Operation	Prompts	LED indicator light
Power on		Hold the multi-function key for about 3 seconds and release when you hear the prompt	"Welcome to use FreedConn product"	Bluetooth indicator light flashing in blue.
Power off		Hold the multi-function key for about 3 seconds and release when the red light is on	"Power off"	The red LED indicator light is on and then goes off.
Bluetooth language switching		In the standby or music pause stage, press the multi-function key and WiFi key (Intercom key) at the same time.	"Welcome to use FreedConn product" in Chinese or English.	The blue LED indicator light is on and then flash twice.
		Note: You need to shut down to save the current language after switching the language, and must not press the reset key directly.		
Delete historical pairing information		In power on state, press and hold the power off key for 8 seconds.	"Power off" "toot"	The red indicator is on and flashes twice quickly
Turn down the volume		Turn the knob counterclockwise without letting go	You will hear a "toot" prompt when it reaches the minimum volume.	NA
Turn up the volume		Turn the knob clockwise without letting go	You will hear a "beep" prompt when it reaches the maximum volume.	NA
Automatically turn off	If the device does not connect to the phone within 15 minutes after power on, it will turn off automatically if no operation is performed.			


5.2. Bluetooth Pairing with Different Devices






Tip: Make sure the distance between R1 Pro and the Bluetooth device waiting for pairing is within 1 meter visible range.

Function	Key	Operation	Prompts	LED indicator light
Pairing with mobile phones, GPS, etc.		Step1: (1) Under the condition that all historical pairing information is cleared, in power off state, press the key for 3 seconds to turn on the device, and it will start the pairing state automatically. (2) Under the condition that the historical pairing information is not cleared, in the power off state, press the power on key and hold it for 8 seconds to enter the pairing state.	"Welcome to use FreedConn product" "Pairing"	The red light and blue light flash alternately
		Step 2: Choose "R1 Pro V5.0" in the phone Bluetooth list	"Connected"	The blue light flashes regularly.
Pairing with intercom devices from other brands		Step 1: Turn the multi-function key clockwise and press the WIFI key (Intercom key)	"Pairing" "Disconnected"	The red light and blue light flash alternately
		Step 2: press the WIFI key (Intercom key)	"intercom connected"	The blue light flashes regularly
Tips:1. When the third-party headset enters the pairing state, please follow the instructions to make the product enter the pairing state. 2. After connecting to a third-party headset, the connection with the phone will be off. 3. When it connects to another headset from a third party, the one initiating active connection gains the control right, the other one can only hang up, and cannot actively connect to the initiating headset.				

5.3. Phone Calls, Music and Radio Operation




Tip: make sure that R1 pro has been connected to the mobile phone

Function	Key	Operation	Prompts
Answering phone calls		Press once when a call comes in	"Call answer"
Declining phone calls		Press for 2 seconds and then release	"Call rejected"
Ending phone calls		Press once during a call	

Voice call		Press the multi-function key, rotate it clockwise at the same time, and release it quickly.	"Voice dial"
on/off Auto-answer Function		In the standby or music pause stage, turn the knob counterclockwise and press the WIFI key (intercom key).	"Close auto answer" "Open auto answer"
Automatic answering	When the phone rings, if there is no operation , the call will be answered automatically after 15 seconds.		
Music playing and pause		Step 1: Turn on the music player in your phone Step2: Click the knob key to play music and click once again to pause the music.	"Tick"
Radio ON and OFF		In standby stage,double click the knob key to turn on the radio mode and double click to turn it off.	"Tick"
Switching between music and radio		In music mode, double click the multi-function key to turn on radio and double click again to turn back to music mode.	"Tick"
Next music /Next FM radio channel		Turn the multi-function key clockwise	"Tick"
Last music /last FM radio channel		Rotate the multi-function key once counterclockwise.	"Tick"
Tip: When the music pauses or there is no response, it may due to too much audio playing Applications are running in the background of the mobile phone. Please turn the other APP off, turn the music player on again and it will turn normal			

5.4. Intercom Operation between Two R1 devices



Function	Key	Operation	Prompts	LED indicator light
Bluetooth intercom pairing between 2 R1 Pro devices		Step 1: In power off state, press and hold the ON/OFF key and the knob at the same time for 8 seconds and release after hearing the prompt and then enter the pairing state.	"Pairing"	The red light and blue light flash alternately
		Step2: Press the WIFI key (intercom key) to search for the other device to pair.	NA	The red light and blue light flash alternately
		Step3: Pairing succeeds (Bluetooth intercom between 2 people can be started now)	"Intercom connected"	The blue light flashes regularly
	Note: If the pairing fails, please clear the historical pairing information and repeat the above operation.			
Disconnect the intercom Resume the intercom		When the two devices are in the Bluetooth intercom mode, press the WIFI button (intercom button) to disconnect the intercom, and press again to go back to the intercom mode.	"Intercom disconnected" "Intercom connected"	

Note: 1. If there is an incoming call during intercom, the device will disconnect the intercom automatically, and resume the intercom state after hanging up the phone call.

2. If a partner user sends an invitation for intercom to you while you are in a phone call, you will not be able to accept the invitation, but there will be a "beep" prompt.

5.5. Music Sharing







- (1) Make sure that both devices only keep the pairing information of each other (You can clear up all the pairing records of both devices and pair them once again)
- (2) Follow the methods of pairing with mobile phone in point 2 of Five above to complete the pairing between the Bluetooth and mobile phone.
- (3) After completing the above procedures, when A needs to share music with B, and if both A and B are playing music, B has to pause the music. Then double click the intercom key of either A or B, and both devices can listen to the music from A. During music sharing, press the multi-function key of A to pause the music, press the multi-function key of B to exit music sharing, or press the intercom key of either A or B to exist the sharing.

(Note: If the sharing is not successful, please clear the pairing records first and then repeat the steps above.)

5.6. Intercom Connection among 6 R1 Pro devices and Using Methods




Note: The first user and the last user (as below A and F) can not pair with each other

Function	Key	Operation	Prompts
Step 1: Clear the matching record of device from A,B,C,D,E, F		Press and hold the ON/Off key of A,B,C,D,E,F for 3 seconds, keep pressing for another 5 seconds when you hear the prompt"power off", until you see the red light flashes twice quickly.	"Power off" ..."toot,toot"
Step 2: Pair two neighbor devices from head to tail	 + 	Refer to the pairing methods of two users to pair A and B, and then turn off B. (Note: When you are turning off the device, release your hand once you hear the prompt "Power off" , otherwise the pairing records in B will be deleted.)	"Intercom connected" "Power off"
		Pair B with C, and turn off C when the pairing is finished	
		Pair C with D, and turn off D when the pairing is finished	
		Pair D with E, and turn off E when the pairing is finished	"Intercom connected"
		Pair E with F. (At this time, all the devices are power on.)	
Step 3: Create group chats		Press D once to connect with E; Press C once to connect with D; Press B once to connect with C; Press A once to connect with B.(At this time, all the devices are connected successfully and are ready for group conversations.)	"Intercom connected"
Exit group chat		When you are in a group chat, you can click the WIFI key (intercom key) to exit the chat, then the group will be split int two with you as the breaking point.	"Intercom disconnected"
Resume intercom with the front or back user		1. If you are in the first or last position of the group, click the WIFI key (intercom key) once to resume the intercom;	"Intercom connected"
		2. If you are in other positions of the group, double click the WIFI key (intercom key) to resume intercom with the upstream user (i.e.: double click the intercom key of E to connect with D), click the WIFI key (intercom key) once to resume intercom with the downstream user (i.e.: Click the intercom key of E once to connect with F).	"Intercom connected"
Incoming call during group intercom		When there is an incoming call during intercom among multiple users, you will be forced to disconnect the intercom, and then the intercom units before and after you will be split into two intercom groups. (The intercom units before you as one group and the intercom units after you as another group. When you refuse or hang up the call (within valid connection range), you will return to the previous intercom state.	

6. Connect to Walkie-talkie by PTT Wire (The K wire needs to be purchased separately)

(1) As shown in the below picture, connect the intercom with the PTT control line when



R1 Pro is on.

(2). Bind the PTT magic tape to the handlebars of the motorcycle.

(3). Paste the PTT key of the PTT control line on the magic tape.

(4). Place the device in a suitable position and you can use it for communication during riding by pressing the PTT key. Note: While being used, the corresponding functions are prioritized as "Phone call > PTT Intercom > Music /GPS/ Voice Prompt".

7. Operation of Camera Functions

Function	Key	Operation	Prompts	LED indicator light
Insert TF card		Insert the TF card, with the side of texts facing upwards, to the slot of the device		
Turn on the recorder		Long press the video switch key for 3 seconds	"DV on"	The green light flashes
Start the video		Press the video switch while the device is on to start recording	"Start recording"	The green light remains on
Pause the video		Press the video switch while the device is on	"Stop recording"	The green light is off
Turn off the recorder		Long press the video switch key for 3 seconds	"DV off"	The green light flashes
Photo shooting		Double click the switch in the recording state	"Click"	The green light flashes
Switch the language of the recorder		Under the camera standby status, press the WiFi key and then press the recording switch, release the WiFi key and then release the switch key	"Start recording" "Stop recording"	The green light flashes
Restore factory settings of the recorder		Long press the WiFi key for 8 seconds while the recorder is in standby state	"Ding, Ding, Ding"	

Tips:

1. If the memory card is not inserted, you will hear the prompt "Please insert the memory card".

2. If the video cannot be recorded after inserting the card, please format the TF card in the APP (Refer to "No. Eight" for the methods).

3. When the memory card capacity is insufficient, the newly recorded video will automatically replace the first video stored in the memory card. In case the video cannot be recycled when the card is full, delete 3-5 videos, then the video can be recycled automatically. When the card is full, the video may be suspended automatically, and the video will be automatically started after the recycled videos are deleted.

8. TF Memory Card Formatting


(1) Format the memory card via the APP in the mobile phone preferentially following the below operation methods:

Step 1: Press the video switch key " "to start the video taking function of R1 Pro.

Step 2: Press the WiFi key for 3 seconds to turn on the WiFi

Step 3: Choose "FreedConn" in the WiFi list of the mobile phone



Step 4: Turn on the APP and click " " to enter video taking state after R1 PRO connecting to WiFi successfully.

Step 5: Click the icon at the upper right corner " " → Format the device"/ (click sound represents "formatting").

(Note: In case of any abnormal operations, you can use a computer to format it instead)

(2) Support maximum 256G memory card

9. WIFI Functions Introduction

Function	Key	Operation	Prompts	LED indicator light
Turn on WiFi		Press and hold the WiFi key for 3 seconds	"WiFi connected"	The green light flashes every 0.5 seconds
Turn off WiFi		Press and hold the WiFi key for 3 seconds	"WiFi is disconnected"	
Connect the WiFi of the recorder		Choose the WIFI named as "FreedConn" in the mobile phone, then enter the initial password "12345678" to connect.		

Tips:

1. The built-in WIFI function of R1 Pro is only used for the users to download videos in the APP or preview the videos online temporarily.
2. Due to limited body size and over-intensive processors, using the WIFI and the Bluetooth at the same time will cause signal interference. (Please turn off the WIFI when you don't need to preview or download any videos.)
3. During the connection, if the mobile phone indicates "The current WLAN cannot access to the internet, continue to use this WLAN or not?", you must choose "yes".
4. If the message "Network access denied" is displayed when you connect to the WIFI again, please turn off the recorder WIFI and restart it, refresh the WIFI list of your mobile phone and reconnect.

10. Introduction of Video Application Usage

Note:

1. The video recording function of R1 Pro does not need to rely on the APP to use.
2. The APP is only used for online preview or to download the videos recorded by R1 Pro to the mobile phone. The functions of the APP itself do not represent the functions of R1 Pro, the specific situation shall prevail;
3. The following recommended APP is a public version produced by a third-party company and it is not FreedConn's product. The third party reserves the right of interpretation. Issues about after-sales of the APP or about compatibility between the APP and mobile phone are not covered by FreedConn's after-sales guaranteed area.
4. The recommended APP is compatible with most mobile phones. If you cannot use the relevant functions normally after downloading the APP, please watch and process the recorded videos on the computer according to the 3 methods described in below.

(1). Use a mobile phone to scan the below QR code to download "Roadcam" or "KaKa" APP to the mobile phone (Below introduction is for RoadCam):




RoadCam




KaKa

(2). Roadcam "APP interface introduction and operation

Pic.1:

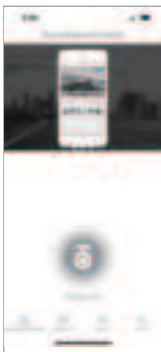

Pic.2:

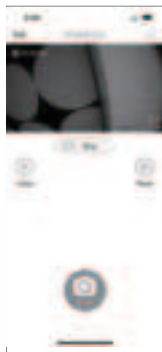


Function	Icon	Operating Instructions
Video		Click the camera icon as shown in the middle of pic. 1 to enter video recording mode.
Photo taking		Click the camera icon as shown in the middle of pic.2 to take photos.
Check videos, pictures		Click the device's videos and photos to preview, play and download them.

Note: The play option is only in the preview mode, so videos and photos will be vague and soundless. You need to download if you want to watch high-definition ones.

The downloaded videos and pictures can also be reviewed or deleted in the "photo album" as shown at the bottom of pic. 1. You can also use a USB cable to connect the USB port of the recorder at one end, and connect a computer at the other end. (You can also pull out the memory card and put it in a card reader which then connect to the computer). Find the USB flash drive in "my computer" and open the videos or picture files inside to play in HD (The disk can only be read when the recorder is turned on).

(3). APP setting interface introduction

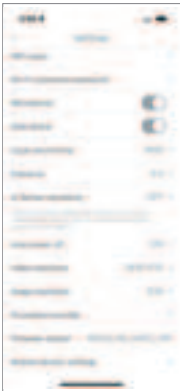

WiFi name: You can customize the WiFi name

WiFi connecting password: The password can be changed via this item, and the new password will take effect after the recorder is restarted. (Notes: The WiFi password must include 8 digits, if the new password is fewer than 8 digits or the password is forgotten, then you won't be able to connect to the WiFi. Then you need to long press the WiFi key of the recorder to restore factory setting, so it is not recommended to change the password unless necessary. When you change the password of the recorder without changing the WiFi name, please ignore the original network and reconnect with the new password, otherwise the mobile phone will still use the old password to connect to this WiFi.

Recording: Click to choose to turn on or turn off the audio while taking videos. If you think the video environment is too noisy, then you can turn off the audio of the video.

Video time watermark: Click to turn on or turn off the time watermark of the videos.

Recycled recording time: Click to choose the recording time of a single video from the options "off, 1 minute, 2 minutes, 3 minutes, 5 minutes and 10 minutes. Choosing the "off" option means the default recording time of a single video is 5 minutes.

Video quality: Click to change the definition of video recording.

Exposure compensation: Click to change the exposure rate of the lens.

Format the device: Click to format the TF card.

Restore factory Settings: Click to restore the factory settings of the APP.

11. Product specifications and Parameters

Frequency: 2.4 GHz

Weight: 77 gram

Dimension: 98 x58 x30mm

Power Adaptor: DC 5V/1A

Lens: 400W pixels wide Angle

Battery Capacity: 1500 mAh

Phone Call Duration: 30 hours

Video Taking Time: About 4.5 hours

Charging Time: About 2.5 hours


Standby Time: Standby for 15 minutes without Bluetooth connection or operation, then it will automatically turn off.

Music Playing Time: About 35 hours

(When the recorder's power low, there will be a prompt to indicate "Battery low, please charge, DV power off"; When the recorder is off due to low battery, you can still listen to music for 40 minutes by Bluetooth, which will report low battery every 15 minutes, and when the battery is

too low, the Bluetooth will shut down automatically. During charging, the red light will remain on, and it will be off when the battery is full.)

12. About Charging and Maintenance



1. Before using the Bluetooth device, fully charge it.
2. To extend the life of the built-in polymer battery, please charge the device at least once a month.
3. If the red light goes off while charging, the voltage may be too low. It is best to charge it for 2.5 hours and then recheck if the Bluetooth receiver has been successfully charged.
4. Please don't put the product in an environment with too high (or too low) temperature. The best storage environment temperature is -4 to 60 degrees, otherwise the life of the product will be shortened.
5. Stay away from fire.
6. Keep away from sharp objects, which may cause scratches or damage to the product.
7. Don't attempt to disassemble the headset.
8. Please put the headset in a dry environment when it is not used for a long time, and make sure to charge it once a month to guarantee its performance.

13. Trouble Shooting

1. Bluetooth is off

In the case that the recorder can be turned on but the Bluetooth cannot, it is normally because the Bluetooth failed to reset during shutdown. Now press the reset key on the device for over 3 seconds, then it can reset successfully. Plugging in the charger to reset is also applicable.

2. The recorder can not be turned on

If the recorder can not be turned on when it is with sufficient battery capacity, it is usually because the recorder is not reset successfully when it was shut down. At this time, you only need to press the reset key on the device for about 1 second, then it is reset successfully. You can also plug in the charger to reset it. (Charging while the recorder is on will not make it reset.)

3. There is a lag of music playing while checking videos in the application.

While you are checking videos in the application, the video code stream is too large,

so it will interfere with The Bluetooth. You need to turn off the Bluetooth temporarily. You can turn on the Bluetooth after exiting the APP.

4. There is a “crackling” noise when the phone is playing videos
Turn off the 4G traffic and WIFI before playing the videos downloaded via the APP for the first time, then the “cracking” noise will not appear again.

5. When the music playing operation does not respond properly

Solutions: ① Try to use the built-in player in the mobile phone.

② Try to exit or turn off the other running audio players

6. When listening to audios from Wechat or Tik Tok, the APP is mute or has other abnormal situations.

Please turn off the audio player running on the backstage and re-enter to listen.

7. When the WiFi is on, the mobile phone can not find the Freedconn network? Or the Freedconn WiFi can be found but can not be connected?

Your mobile phone may not be compatible with the WiFi software version, and you need to upgrade the WiFi software of R1 Pro. To solve this problem, please contact the manufacturer for upgrading by emailing the after-sales service or through the WeChat public account.

8. The TF card still can not be used normally after trying many ways to format it?
Suggest that you choose a high speed card Class 10 or above, an authorized edition memory card with 64G capacity. High-quality TF cards have longer service life than low-quality ones.

If the video screen is blurred and the frame rate decreases, replace the card with a new one.

The higher the quality of TF cards, the longer they will last. And vice versa.

9. The lens is covered with fog or water droplets?

It is caused by the temperature difference between internal and external of the body, and they will volatilize naturally after placing aside for a period of time.

14. After-sales Service

If you encounter other problems during the use of the product, you can scan the following QR code to enter the technical support page of the official website to find the corresponding solution.



After-sales technical support

目次

一、製品機能の紹介	16
二、梱包リスト	16
三、製品の取付と取り外し手順	17
四、ボタンの紹介	18
五、Bluetooth機能の紹介	19
1. 基本機能の操作	19
2. 他社のバイクインカムとのペアリング	20
3. 通話、音楽、ラジオ機能の紹介	20
4. 2つのR1 Proの間でのインターコム	21
5. 音楽共有	22
6. 6つのR1 Proのインターコムの接続方法と使用方法	22
六、R1 Proのインターコム機能を接続する手順	23
七、R1 Pro撮影機能の紹介	24
八、TFメモリーカードのフォーマット	25
九、WiFi機能の紹介	25
十、アプリ内での動画再生	25
十一、技術データ	27
十二、充電とメンテナンス	28
十三、よくある問題	28
十四、アフターサービス	29



初めて使用する際、フル充電してから、お使いください。

弊社の商品をご購入頂き、誠にありがとうございます

この度は弊社のFreedConn ヘルメット式Bluetoothとインターコム機能付きの製品をご購入頂き、誠にありがとうございます。

FreedConnは、各種通信関連製品を融合し、「自由とファッション」という新しいコンセプトを生み出しました。高品質の通信製品と革新的な技術で、新世代の消費者をターゲットにしたファッションなヘルメットヘッドセットブランドとして、自由とファッションなライフスタイルを追求する都会の若いユーザーに新しいツーリング通信体験を提供いたします。

"ボーンフリー"のブランド精神を出発点に、各製品は20以上の厳しい検査工程を経て、お客様のために究極のコストパフォーマンスのアウトドアツーリング用通信デバイスを開発しました。

健康、幸せ、自由という自然なツーリングの中、ツーリングの楽しさ、製品の調和、及びファッションなルックスの間のバランスをよくとれた、「負担のない自由さ」を求めています。

FreedConnは「自由でファッションなツーリング」のブランドコンセプトと解釈される「サイクリング」「自由」「ファッション」の代名詞となっています。

FreedConnの製品をご購入して頂くことで、最もパーソナルな保証と、最も手間のからないアフターサービスを提供します。弊社がお届けするすべての製品は、性能と安全性の最高基準に基づいて製造されており、弊社のカスタマーサービスと顧客満足の理念の一環として、2年間の包括的な保証を提供します。

ご購入いただいた弊社の製品が未永くお使いいただけることを願っています。

安全上のアドバイス: FreedConnのヘルメット用ヘッドセットを装着して走行すると、周囲の音が耳に入りにくくなります。

最大音量で長時間音楽を聴くと一時的に小さな音が聞こえなくなり、更に聴覚に永久的な損傷を与える可能性があります。

ヒント: 最高の音質体験を得るために、取り付けの時に、ヘッドホンと耳の間の距離が2mm以内に保たれるようにすることをお勧めします。

一. 製品機能の紹介

- ・ 撮影機能
- ・ スナップ撮影機能
- ・ WiFi機能
- ・ ラジオ機能
- ・ 音声アシスタントを有効にする
- ・ スマホ2台との接続
- ・ 案内音
- ・ インターコムケーブルインターコムとの接続
- ・ Bluetooth機能付きのインターコム
- ・ 音楽共有
- ・ 他社の殆どのBluetooth機能付きのヘッドセットと接続可能
- ・ 殆どのスマホ、MP3プレイヤーとGPSナビゲーションシステムと接続可能
- ・ 最大256Gのメモリーカードに対応可能

二. 梱包リスト



① 本体 X 1



② マイク&スピーカー X 1



③ クリップ X 2



④ ドライバー X 1



⑤ ヘッドセット用マジックテープ X 4



⑥ マイク用マジックテープ X 2



⑦ ケーブル X 1




⑧ 取扱説明書 X 1

三. 製品の取付と取り外し手順

3.1 取付手順




- ① メモリーカードを本体底部にあるスロットに差し込んでください。



- ② 反時計回りにドライバーを回転し、クリップを緩めてください。



- ③ ヘルメットの左側の裏生地を開き、クリップを発泡スチロールとケースの間にある適切な場所に付け、ネジを締めてください。(注: ネジを締めすぎることによって、クリップが割れる可能性がある)



- ④ R1 Proの本体をスロットに位置合わせてつけてください。



- ⑤ ヘルメットの両側の裏生地を開き、ヘッドセットを貼り付ける用マジックテープを耳の位置に合わせて、発泡スチロールの表面に貼り付けてください。



- ⑥ スピーカーをマジックテープに貼り付けてください。



- ⑦ マイクにある三角形の紙を剥がしてしてください。




- ⑧ ヘルメットの裏側の発泡スチロールあるいは口の位置に合わせて、マイクをケースに貼り付けてください。





- ⑨ R1 Proのプラグをジャックに差し込んでください。

3.2 取り外し手順




本体を押し



取り外し

四、ボタンの紹介

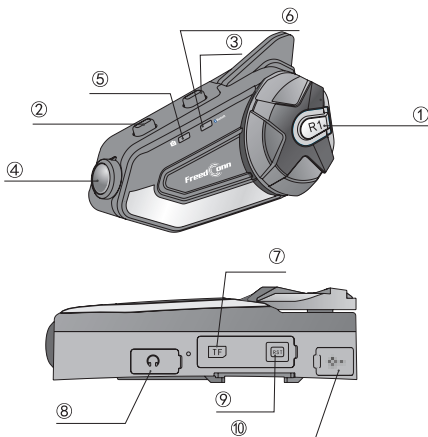

- | | |
|---------------------|--------------------------|
| 1.電源オン・オフボタン/多機能ボタン | 6.ブルートゥースBluetoothのLED表示 |
| 2.録画とスナップのオン・オフボタン | 7.TFメモリーカード |
| 3.WiFi /インターコムボタン | 8.ヘッドセットのジャック |
| 4.レンズ | 9.リセットボタン |
| 5.録画、WiFiのLED表示 | 10.充電/USB口スポット |





五、蓝牙功能操作介绍

1. ブルートゥース機能の操作

機能	ボタン	操作	案内音	LED表示
電源オン		多機能ボタンを3秒長押し、案内音が聞こえたら、手を離してください。	「フリードコム製品へようこそ」	青色のブルートゥース表示LEDが点滅
電源オフ		多機能ボタンを3秒長押し、赤色の表示LEDが点滅してから、手を離してください。	「システム終了します」	赤色のブルートゥース表示LEDが点滅と消す
ブルートゥースの言語切替		待機または音楽一時停止した状態で、多機能ボタンとWiFiボタン(インターコムボタン)を同時に押してください。	「フリードコム製品へようこそ」	青色のLEDが点灯、2回速く点滅する
注:言語切替後、電源オフし、切替えた言語を保存してください。直接リセットボタンを操作しないでください。				
ペアリング履歴を削除する		電源オンした状態で、電源オン・オフボタンを8秒長押ししてください。	「システム終了します」...「ブーブー」	赤色のLEDが常時点灯、2回速く点滅する
音声ボリュームをダウンする		反時計回りにボタンを回してください。	音声ボリュームが最大になった際、「ビービー」の案内音が出る。	なし
音声ボリュームをアップする		時計回りにボタンを回してください。	音声ボリュームが最小になった際、「ビービー」の案内音が出る。	なし
自動的に電源オフ	電源オンしてから15分以内にスマホと接続していない、または何の操作もしていない場合、本製品が自動的に電源オフになる。			


2. 他のデバイスとのペアリング

注: R1 Proとペアリングしようとするデバイスを1メートルの見える範囲に置いてください。

機能	ボタン	操作	案内音	LED表示
スマホ、GPS などとペアリン グ		ステップ1: (1) ペアリング履歴をクリアした状態であれば、電源オン・オフボタンを3秒長押し、本製品が自動的にペアリング状態になる。 (2) ペアリング履歴をクリアしていない状態であれば、電源オン・オフボタンを8秒長押し、ペアリング状態になる。	「フリードム製品へようこそ」 「ペアリング」	赤色と青色のLEDが交互に点滅する。
		ステップ2: スマホのBluetoothのリストから「R1 Pro5.0」を選択してください。	「接続完了しました」	青色のLEDが規則的に点滅する。
他社のバイク インカムとペ アリング		ステップ1: 電源オンした状態で、時計回りに多機能ボタンを回す + WiFiボタン(インターコムボタン)を押してください。	「ペアリング」	赤色と青色のLEDが交互に点滅する。
		ステップ2: WiFiボタン(インターコムボタン)を押してください。	「インターコムとの接続を解除しました」「インターコムと接続しました」	青色のLEDが規則的に点滅する。
	注: 1. 他社のバイクインカムをペアリングモードに設定するには、その取扱説明書に基づいて設定し、本製品とペアリングしてください。 2. 他社のバイクインカムと接続後、スマホとの接続が切れる。 3. 他社のバイクインカムと接続する際、接続を発信する側にマスター権があり、接続発信を受ける側は通話中に通話を切断する場合、自動的に相手と接続できない。			

3. 通話、音楽、FMラジオ機能の紹介



注: R1 Proがスマホと接続した状態で行うこと。

機能	ボタン	操作	案内音
着信応答		着信が来た際、1回押してください。	「電話に応答します」
着信拒否		着信が来た際、2秒長押ししてから、手を離してください。	「電話を拒否します」
通話終了		通話中の状態で、1回押してください。	「通話を終了します」

スマホの音声アシスタントを呼び出す		多機能ボタンを押し、同時に時計回りに回してから、手を離してください。	「音声アシスタントを起動します」
着信を自動的に応答する機能をオン・オフ		待機または音楽一時停止した状態で、反時計回りにボタンを回す+WiFiボタン(インターコムボタン)を押す	「自動応答を解除します」、「自動応答を開始します」
着信を自動的に応答する	ベルがなってから15秒以内に、操作をしない場合、自動的に着信を応答。		
音楽再生、一時停止		ステップ1、スマホから音楽プレーヤーを開いてください。 ステップ2、ボタンを1回クリックする場合、音楽を再生し、再度クリックする場合、音楽が一時停止になる。	「ビー」
ラジオ機能のオン・オフ		待機した状態で、ボタンをダブルクリックする場合、ラジオモードを開き、再度ダブルクリックする場合、ラジオモードを閉じる。	「ビー」
音楽とラジオモードの切替		多機能ボタンをダブルクリックする場合、音楽モードからラジオモードに切替、再度ダブルクリックする場合、音楽モードに戻る。	「ビー」
(音楽) 次の曲、(ラジオ) 次のチャンネル		時計回りに1回多機能ボタンを回してください。	「ビー」
(音楽) 前の曲、(ラジオ) 前のチャンネル		反時計回りに1回多機能ボタンを回してください。	「ビー」
注: 音楽の再生が一時停止したり、応答がなかったりする場合、スマホのバックグラウンドで再生しているオーディオのアプリが多すぎるので、それらの再生を閉じてから、もう一度操作してください。			

4. R1 Pro2つの間でインターコムする操作



機能	ボタン	操作	案内音	LED表示
R1 Pro2つの間でのインターコム		ステップ1:電源オフした状態で、電源オン・オフボタンを8秒長押し、案内音が聞こえてから、手を離して、ペアリング状態になる。	「ペアリング」	赤色と青色のLEDが交互に点滅する。
		ステップ2:片一方のR1 Pro WiFiボタン(インターコムボタン)押し、もう片一方のR1 Proを検索してペアリングしてください。	なし	赤色と青色のLEDが交互に点滅する。
		ステップ3:ペアリング完成(2人の間ではインターコムできる)。	「インターコムと接続しました」	青色のLEDが規則的に点滅する。
注: ペアリングに失敗した場合、ペアリング履歴をクリアし、上記内容通りに再度操作してください。				
インターコム切断 インターコム回復		2つのデバイスがインターコム中の場合、WiFiボタン(インターコムボタン)を短く押せば、インターコム切れ、再度そのボタンを押せば、インターコムモードに戻る。	「インターコムとの接続を解除しました」「インターコムと接続しました」	

注:1. インターコム中に着信があった場合、インターコムが自動的に切れ、通話が終了後、自動的にインターコムに戻る。
2. 通話中にインターコムの呼び出しがあった場合、この呼び出しに回答できないが、ブーブーの案内音が鳴る。

5. 音楽共有







- (1) 共有する2つのデバイスがお互いのペアリング履歴のみを持っていることを確認してください。(お互いのペアリング情報のみを持っていることを確認するために、2つのデバイスのペアリング履歴をクリアしてから、ペアリングすることも可能)
- (2) 前述1-2のスマホとのペアリングする方法でヘッドセットとスマホをペアリングしてください。
- (3) 上記操作が完了した後AがBに音楽を共有する場合、AとBとも音楽再生中の場合、Bが音楽を一時停止し、AとBのいずれもインターコムのボタンをダブルクリックすれば、Aから共有する音楽を聞こえ、共有中にはAが多機能ボタンを押せば、音楽一時停止ができ、Bが多機能ボタンを押せば、音楽共有から退出でき、あるいは、AとBのいずれもインターコムボタンをダブルクリックすれば、音楽共有から退出できる。
(注:音楽共有できない場合、ペアリング履歴を削除してから、上記内容通りに再度操作してください。)

6. R1 Pro 6台の間でペインターコムする設定




注:最初と最後の2つのデバイスはペアリングしないでください。(上図で下記のAとF)

	ボタン	操作	案内音
第一ステップ:A、B、C、D、E、Fのペアリング履歴を削除してください。		A、B、C、D、E、Fの電源オン・オフボタンを8秒長押し、「電源オフしました」の案内音が聞こえてから、赤色のLEDが2回速く点滅するまで、引き続き5秒長押ししてください。	「システム終了します」「ブービー」
ステップ2:デバイスを順番に2つつペアリングする	 + 	デバイス2つのペアリングする方法を参考にして、AとBをペアリング後、Bを電源オフにしてください。(提示:電源オフする際、「電源オフしました」の案内音が聞こえたら、Bのペアリング履歴を削除しないように、すぐに手を離してください) BとCがペアリング後、Cを電源オフにしてください、 CとDがペアリング後、Dを電源オフにしてください、 DとEがペアリング後、Eを電源オフにしてください、 EとFをペアリングしてください。(今A、B、C、D、E、Fは電源オン状態)	「インターコムと接続しました」 「システム終了します」 「インターコムと接続しました」
ステップ3:インターコムのグループを作成		Dを押して、Eと接続、Cを押して、Dと接続、Bを押して、Cと接続、Aを押して、Bと接続してください。 A、B、C、D、E、Fが接続でき、グループの間でインターコムできる。	「インターコムと接続しました」
インターコムのグループから退出		インターコム中に、WiFiボタン(インターコムボタン)を1回クリックして、グループから退出でき、退出したヘッドセットのデバイスを区切りとして、このグループを二つに分けられる。	「インターコムとの接続を解除しました」
前のメンバーと後ろのメンバーとのインターコムに戻る		1. グループの最初と最後の順番であれば、WiFiボタン(インターコムボタン)をクリックすれば、グループ間でのインターコムに戻る。 2. それ以外の順番であれば、WiFiボタン(インターコムボタン)をダブルクリックすれば、前のメンバーとのインターコム接続でき(例:eのインターコムボタンをダブルクリックすれば、dと接続できる)、WiFiボタン(インターコムボタン)を1回クリックすれば、後のメンバーとのインターコム接続できる(例:eのインターコムボタンを1回クリックすれば、fと接続できる)。	「インターコムと接続しました」 「インターコムと接続しました」
グループ間でインターコム中に着信が来た		インターコムが自動的に切れ、グループの間でのインターコムが二つのグループに分けられる(あなたの前の順番のメンバー達が一つのグループになり、後に続く順番のメンバー達ももう一つのグループになる)。 着信を拒否あるいは通話終了する場合(有効な範囲内であれば)、インターコム状態に戻る。	

六、R1 Proとインターコム機器との接続手順(インターコムケーブルは別途でご購入ください)

(1). 下記図通りに、R1 Proが電源オンした状態で、インターコムケーブルでインターコムに



接続してください。

- (2). PTTマジックテープをバイクのハンドルに貼り付けてください、
- (3). インターコムケーブルについてあるPTTキーをマジックテープをに貼り付けてください
- (4). インターコム機器を適切な場所に付け、ツーリング中にPTTキーを操作することでインターコム機器でインターコムできる。

注: 使用中、対応する機能の優先順位は、「電話＞PTTインターコム＞音楽/GPS/案内音」の順となる。

七、R1 Proの撮影機能の紹介

機能	ボタン	操作	案内音	LED表示
TFカードの挿入		TFカードの文字面を上向けにしてスロットに挿入してください。		
レコーダー起動		録画のオン・オフボタンを3秒長押ししてください。	「ドライブレコーダーを起動します」	緑色のLEDが点滅する。
録画起動		録画機能が起動した状態で、録画のオン・オフボタンを1回押し、録画開始する。	「録画を開始します」	緑色のLEDが常時に点灯する。
録画一時停止		録画状態で録画のオン・オフボタンを1回押し、録画が一時停止する。	「録画を終了します」	緑色のLEDが消す。
レコーダーオフ		録画のオン・オフボタンを3秒長押ししてください。	「ドライブレコーダーを終了します」	緑色のLEDが点滅する。
撮影		録画状態で、録画のオン・オフボタンをダブルクリックしてください。	「ガチャン」	緑色のLEDが常時に点灯する
レコーダーの言語切替	① + ②	まずはWi-Fiボタンを押し、次は録画のオン・オフボタンを押し、それから手をWi-Fiボタンから離してから、録画のオン・オフボタンから手を離してください。	「録画を開始します」 「録画を終了します」	緑色のLEDが点滅する。
レコーダーを工場出荷時の設定に戻す		レコーダーが待機状態で、Wi-Fiボタンを8秒長押ししてください。	「リンリン」	

注:

1. メモリーカードを差し込んでいない場合、「カードが入っていません」との案内音が聞こえる。
2. メモリーカードを差し込んで、録画できない場合、アプリからTFカードをフォーマットしてください (方法は第8項を参考にしてください)。
3. メモリーがいっぱいになり、空きが無くなると、古いファイルの上に順番に上書きされる。上書きできないメモリーカードの場合、容量がいっぱいになったら、自動的にループ録画できないため、3-5個録画を削除してから、自動的に録画が開始する。


八、TFカードのフォーマット

(1) スマホのアプリからTFカードをフォーマットすることをお勧めする。フォーマットする方法は下記通り:

ステップ1: 録画のオン・オフボタン“”を押して、R1 Proの撮影機能をオンにしてください。

ステップ2: WiFiボタンを3秒長押し、WiFiをオンにしてください。

ステップ3: スマホのWiFiリストから「Freedconn」という名前のWiFiを選択してください。


ステップ4: R1 PROのWiFiと接続後、録画のアプリを開き、 をクリックして、録画機能をオンにしてください。

ステップ5: 右上にある「設置」のアイコン  をクリックして、→フォーマットしてください。
(kakalはメモリーカードをフォーマットするアプリである)。

(注: スマホからの操作に異常があれば、パソコンで操作してください)。

(2) 最大256Gのメモリーカードに対応できる。

九、WiFi機能の紹介

機能	ボタン	操作	案内音	LED表示
WiFiオン		WiFiボタンを3秒長押ししてください	「WiFiを起動します」	緑色のLEDが0.5秒ごとに1回点滅する。
WiFiオフ		WiFiボタンを3秒長押ししてください	「WiFiを終了します」	
R1 PROのWiFiと接続		スマホのWiFiリストから「Freedconn」という名前のWiFiを選択し、初期パスワード「12345678」を入力して接続してください。		

注: 1. WiFiはR1 Proに搭載されている機能で、アプリ上で動画をダウンロードしたり、オンライン動画を一時的にプレビューするためにのみ使用されるものである。

2. 製品がコンパクトのため、プロセッサが密集しており、WiFiとブルートゥースを同時に使用すると信号間の干渉が発生する。(ビデオをプレビューとダウンロードする場合を除いてWiFiをオフにしてください)。

3. WiFiと接続時にスマホから「現在のWLANはインターネットに接続できません、このWLANを引き続き使用しますか」との案内がきた場合、「使用」を選択してください。

4. その後再度WiFiに接続する時に「ネットワークはアクセスを拒否します」との案内が来た場合、R1 ProのWiFiを切って再び電源を入れ、スマホのWiFiリストを更新して再びR1 ProのWiFiと接続してください。

十、アプリでの録画機能とビデオの鑑賞

注: 1. R1 Proはアプリに依存せずに、録画機能を使う。

2. アプリはR1 Proが録画したもののオンラインでのプレビュー、またはスマホにダウンロードしたファイルを見る時のみに使うもので、場合によっては、アプリに備わっている機能はR1 Proも同時に備わっているとは限らない。

3. 以下推奨されるアプリは他社のもので、FreedConn社のものではなく、利用上の権利は他社に帰属する。アプリに関連するアフターサービスの問題、およびアプリとスマホ間の互換性の問題は、FreedConnのアフターサービス保証の対象外である。

4. 推奨されるアプリはほとんどのスマホと互換性があり、アプリをダウンロードした後、関連する機能を正常に使用できない場合は、以下の(三)に記載されている方法に従って、パソコンで操作方法をご確認してください。

(一).スマホで下記のQRコードをスキャンして「Roadcam」あるいは「KaKa」のアプリをスマホにダウンロードしてください。(下記はRoadCamをメインとして紹介する)。



RoadCam




KaKa




(二).「Roadcam」アプリの画面及び操作

図1:

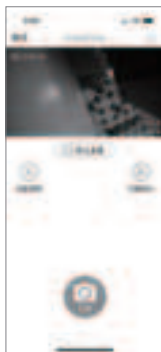

図2:



機能	アイコン	操作
録画		図1のカメラのアイコンをクリックして、録画モードに入ってください。
撮影		図2のカメラのアイコンをクリックして、撮影機能に入ってください。
録画と写真の鑑賞		アプリにあるビデオと写真をクリックすれば、ビデオと写真をプレビューや再生、またはダウンロードができる。

注: アプリからビデオや写真を再生するとは、プレビューモードで再生するだけで、このモードでは解像度が低いし、音声もない。高解像度のものを見る場合、ダウンロードしてください。ダウンロードしたビデオや写真は、図1の下にあるアルバムのアイコンをクリックすることで見ることや削除することができる。あるいはケーブルで本製品とパソコンを接続(メモリーカードを抜き出して、カードリーダーを使用してパソコンと接続しても可)。マイコンコンピュータからUSBを開き、その中にあるビデオや写真をクリックすれば、高解像度のビデオや写真を見れる。(注: 本製品が電源オンした状態で見る)

(三) . アプリの設置画面の紹介



WiFi名:WiFi名をカスタマイズできる

WiFiパスワード: このアイコンをクリックすると、WiFiパスワードを変更でき、変更後、レコーダーを再起動すると、新パスワードが有効になる。(注: WiFiパスワードは少なくとも8桁が必要で、8桁以下に設定するかまたはパスワードを忘れると、WiFiに接続できなくなり、この場合は、WiFiボタンを8秒長押しして、出荷時の設定に戻してください。) 必要な場合、WiFiのパスワードを変更しないで下さい。WiFi名を変更せずに、パスワードのみを変更する場合、スマホからWiFiを選択する際、このWiFiを無視する選択肢をしてから、再度新パスワードでこのWiFiと接続してください、そうしなければ、スマホは旧パスワードでこのWiFiと接続します。

録音: このアイコンをクリックすると、録音中にオーディオをオンまたはオフにすることができます。録音環境に応じ、ノイズが大きすぎると感じた場合は、録音オーディオをオフにしてください。

撮影時間のウォーターマークの表示:このアイコンをクリックすると、撮影時間のウォーターマークの表示機能をオンまたはオフにできる。

録画時間: このアイコンをクリックすると、1回の録画時間を選択でき、それぞれ「オフ」/1/2/3/5/10 分の6つの選択肢があり、「オフ」を選択すると、一回のビデオの録画時間はデフォルトで5分になる。

録画品質:このアイコンをクリックすると、録画の解像度を変更できる。
露出補正ろしゅつほせいををクリックすると、撮影した映像の露出度を調整することができます。

フォーマット: このアイコンをクリックすると、TFカードをフォーマットできる。

出荷時の設定に戻す:このアイコンをクリックすると、アプリの工場出荷時の設定に戻す。

十一、技術データ

周波数:2.4 GHz

重量:77グラム

寸法: 98 x 58 x 30mm

電源アダプター: DC 5V/1A

レンズ: 4Mピクセルでワイドレンズを備えたカメラ

バッテリー容量: 1500 mAh

(電源が切れると「ローバッテリー、充電してください」と表示され、電源が切れた後、ローバッテリーで40分間曲を聴き続けることができ、15分ごとにローバッテリーの案内を表示し、バッテリーが「少なくなりすぎると本製品が自動的にオフになる。充電中は赤色のLEDが常時点灯し、フル充電になると赤色のLEDが消える。)

通話時間:30時間

録画時間:約4.5時間

充電時間:約2.5時間

待機時間:接続・操作なしの場合、待機時間15分で、その後は自動的に電源オフになる。

音樂時間：約35時間

十二、充電とメンテナンス



1. 初回、フル充電してから、ご使用ください。
2. 内蔵ポリマーバッテリーの寿命を長くするために、少なくとも月に一度充電してください。
3. 充電中に赤いライトが消える場合は、電圧が低すぎる可能性がある。
- 2.5時間を充電後、レシーバーが正常に充電されているかどうかを再確認してください。
4. 製品寿命を長くするために、高すぎるあるいは低すぎる温度環境の中に置かず、-40から+60度の範囲で保管してください。
5. 火から離れたところで保管してください。
6. 鋭利なものを近づけると、製品に傷がついたり、破損したりする恐れがある。
7. 本製品を分解しないでください。
8. 長期間使用しない場合は、乾燥した場所に置き、性能を保つため、1ヶ月に1回必ず充電してください。

十三、よくある問題

1. ブルートゥースがオンにならない

製品自体がオン、ブルートゥースがオンにならない場合、通常は電源を切った時にブルートゥースが正常にリセットされていないことが原因で、この時は、リセットボタン **RST** を約3秒以上長押しすればリセットでき、または充電器を接続してリセットすることもできる。

2. 本製品がオンにならない。

フル充電しても本製品がオンにならない場合、通常は電源を切ったときに本製品が正常にリセットされていないことが原因で、この時は、リセットボタンを約1秒間押すだけで正常にリセットされるか、または充電器を接続してリセットすることもできる。(レコーダーがオンした状態で充電する場合、リセットされない。

3. 音楽再生中にアプリから録画を見る場合、音楽再生が途切れる

アプリを開いてビデオを見ると、ビデオストリームが大きいので、ブルートゥースと干渉し、一時的にブルートゥースをオフにする必要があり、アプリから退出後、ブルートゥースを開いてください。

4. スマホで動画を再生すると「パチパチ」という雑音がある

スマホのアプリからダウンロードしたビデオを再生する前に、4GとWiFiをオフしてから、ビデオを再生すると「パチパチ」という雑音なくなる。

5. 音楽を正常に再生できない

解決方法①スマホに付けてあるプレーヤーを使用してみてください。

②バックグラウンドで動作している他のオーディオプレーヤーを閉じてみてください。

6. スマホのウィーチャットやTikTokを視聴する際、音声がない、またはほかの異常が発生する。

バックグラウンドで動作している他のオーディオプレーヤーを閉じてみてください。

7. 本製品のWiFiはオンですが、スマホは「Freedconn」のWiFiを検出できない、またはスマホはWiFiを発現されたとしても、接続することはできない

お使いのスマホがWiFiソフトウェアのバージョンと互換性がない可能性があり、メーカー(service@fdcdz.com)にお問い合わせの上、R1 ProのWiFiソフトウェアのバージョンアップしてください。

8. TFカードをフォーマットするために、いろいろな方法で試してみたが、TFカードを使用できない。

高速度カードのClass 10及び以上の64GBの正規メモリーカードにすることをお勧めする。高品質のTFカードは、低品質のTFカードよりも長持ちする。

ビデオ画像が不鮮明でフレームレートが低下した場合は、新しいカードに交換してください。TFカードの品質が高いほど、より長持ちし、また、その逆も同様である。

9. レンズに霧状の水分や水溜りがついてある

ケース内外の温度差によって、起きたもので、しばらく放置していたら、自然に揮発する。

十四、アフターサービス

使用中に上記以外の問題が発生した場合は、下記のQRコードをスキャンして、公式サイトのテクニカルサポートページにアクセスし、対応策を見つけてください。



アフターテクニカルサポート

Warranty Card

Model Number: R1 Pro



Please keep your shopping receipt, warranty card
and the seal label

Name: _____

Address: _____

 _____

After-sales service: service@fdcdz.com

Failure Description:

Please affix a copy of invoice on the back of warranty card as a proof of purchase date. If you find any problems during use of our product, please contact our after-sales service. Please make sure that you describe the problems clearly on warranty card so that we can handle them timely.



