



PowerA™

PLAY AND CHARGE KIT

USER MANUAL

Manuel de l'utilisateur
Bedienungsanleitung
Manual de usuario
Manuale per l'uso
Manual do usuário



Customer Service

Service client
Kundendienst
Servicio a clientes
Assistenza clienti
Apoio ao Cliente

PowerA.com/Support

TWO YEAR LIMITED WARRANTY

For warranty details or support with your authentic PowerA accessories, please visit [PowerA.com/Support](#).




Beschränkte 2-Jahre-Garantie Informationen zur Garantie oder Unterstützung zu Ihrem PowerA-Originalzubehör finden Sie unter [PowerA.com/Support](#).

Garantía limitada de dos años Si quieres más información sobre la garantía o necesitas ayuda con tus accesorios originales de PowerA, visita [PowerA.com/Support](#).

Garantie limitée de deux ans Pour plus de détails sur la garantie ou pour obtenir une assistance pour vos accessoires PowerA d'origine, veuillez consulter le site [PowerA.com/Support](#).

Garanzia limitata di due anni Per i dettagli sulla garanzia o per richiedere assistenza per i tuoi accessori PowerA autentici, visita la pagina [PowerA.com/Support](#).

Garantia limitada de dois anos Para mais informações sobre a garantia ou os acessórios originais da PowerA, visita [PowerA.com/Support](#).

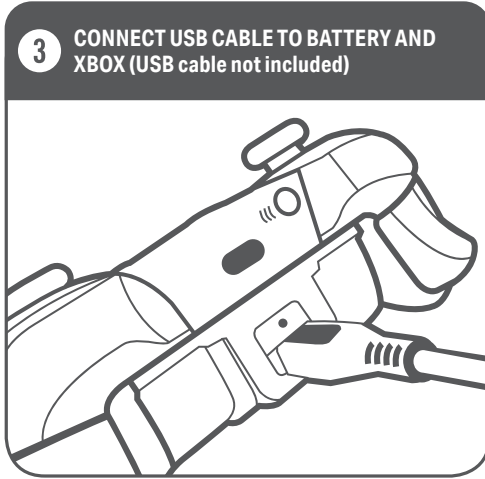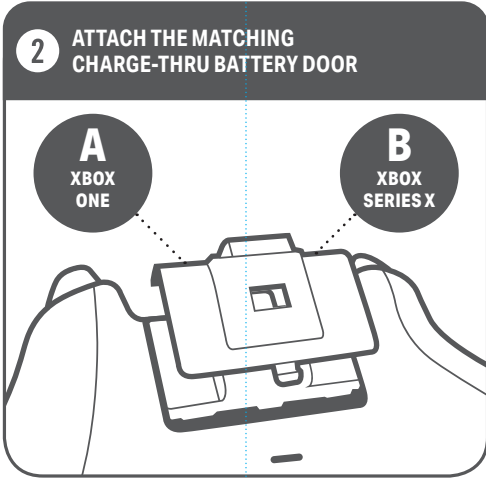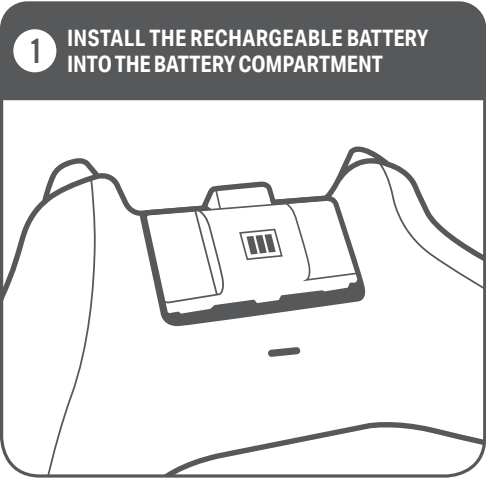

ENGLISH

CONTENTS

- (1) 1100mAh Rechargeable Battery Pack
- (2) Battery Doors
- User Manual

USE

1. Install the Rechargeable Battery into the battery compartment of your Xbox Wireless Controller.
2. Attach the correct Charge-thru Battery Door to the back of the Xbox Wireless Controller after checking underside of door: 'A' for Xbox One and 'B' for Xbox Series X.
3. Attach the Charge-thru Battery Door to your controller.
4. Connect USB cable to battery and the Xbox.

NOTE: USB cable sold separately.

5. Check LED color for charge status; Amber while charging and White once fully charged.

NOTE: For battery charge level, check Xbox on-screen display. Battery can also be charged when not installed to controller. Controller remains functional when charging while battery is installed.

CHARGING

- Connect a standard Micro B USB cable (sold separately)
- Do not connect USB Charge Cable to any USB AC adapters.
- Do not charge your 1100mAh Rechargeable Batteries on flammable surfaces i.e. mattresses, couches, and/or other flammable materials.
- Do not leave batteries unattended for long periods of time.
- Do not cover your controller while charging with any blankets, pillows, bedding, etc.
- Ensure proper ventilation.

TROUBLESHOOTING

Q1: The Play and Charge Kit Rechargeable Battery is not charging.

A1: The Rechargeable Battery needs a powered USB source to charge. Confirm that your Xbox is powered ON.

A2: Confirm the Charge-thru Battery is connected to the Rechargeable Battery and/or the Xbox correctly.

A3: Confirm the Rechargeable Battery and Charge-thru Battery Door is installed correctly.

Q2: The Play and Charge Kit Rechargeable Battery is not charging on the PowerA Charging Stand or Charging Station.

A1: Confirm the Xbox Wireless Controller is placed on the PowerA Charging Stand or Charging Station correctly.

A2: Confirm the Charging Stand or Charging Station is properly connected to a powered USB port.

A3: Confirm the Charging Stand or Charging Station charge cradle is pushed down in the charge position.

A4: If using the PowerA Charging Station, confirm it is properly connected to an AC Powered wall outlet.

WARNING - BATTERY LEAKAGE

Leakage of ingredients contained within the battery pack, or the combustion of product ingredients, can cause personal injury as well as damage to game controller. Avoid contact with skin. If contact occurs, immediately wash thoroughly with soap and water. If liquid leaking from a battery pack comes into contact with your eyes, immediately flush thoroughly with water and contact a medical professional for assistance.

BATTERY WARNING

Do not attempt to replace the rechargeable battery yourself- you may damage the battery, which could cause overheating, fire, and injury. The Lithium-ion battery in your device should be serviced or recycled by PowerA or an authorized provider and must be recycled or disposed of separately from household waste. Dispose of batteries according to your local environment laws and guidelines.

Do not use or leave the product containing rechargeable batteries exposed to very high temperature (e.g. at strong direct sunlight or in a vehicle in extremely hot weather). Otherwise, it can overheat, catch fire, or the performance will degenerate, and the service life will be shortened.

Do not use the rechargeable battery item in a location where static electricity is rich, otherwise, the internal safety devices may be damaged, causing a harmful situation. If the battery gives off an odor, generates heat, or in any way appears abnormal during use, recharging or storage, immediately remove it from battery charger and place it in a sealed vessel such as a metal box.

Be aware discarded batteries may cause fire, do not heat the controller or throw it into fire.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules.

CAN ICES-003(B)/NMB-003(B)

This device complies with Industry Canada license exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

MANUFACTURED BY

ACCO Brands USA LLC, 4 Corporate Way, Lake Zurich, IL 60047
[ACCOBRANDS.com](#) | [POWERA.com](#) | [Made In China](#)

CONTACT/SUPPORT

For support with your authentic PowerA accessories, please visit [PowerA.com/Support](#).

WARRANTY

2-Year Limited Warranty. Visit [PowerA.com/support](#) for details.

AUSTRALIAN WARRANTY STATEMENT

This product comes with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If purchased within Australia or New Zealand, this product comes with a One-year warranty from date of purchase. Defects in the product must have appeared within One year from date of purchase, in order to claim the warranty. All warranty claims must be facilitated back through the retailer of purchase in accordance with the retailer's return policies and procedures. Any expenses incurred, as a result of returning the product to the retailer of purchase are the full responsibility of the consumer.

AU WHOLESALE DISTRIBUTOR

Level 2, 2 Darling Street, South Yarra, Australia VIC 3141
[bluemouth.com.au](#) | Email: [support@bluemouth.com.au](#)
+61 (3) 9867 2666

ADDITIONAL LEGAL

© 2021 ACCO Brands USA LLC. PowerA and PowerA Logo are trademarks of ACCO Brands Corporation. Microsoft, Xbox, Xbox "Sphere" Design, Xbox Series X, and Xbox One are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners.

REGIONAL COMPLIANCE SYMBOLS

More information available via web-search of each symbol name:

 The **WEEE** (Waste of electrical and electronic equipment) symbol requires battery disposal outside of other household waste per local regulations. Contact your city office, waste disposal service, or retailer for guidance.

 The **CE** (Conformité Européenne aka European Conformity) mark is a declaration from the manufacturer that the product meets applicable European Directives and Regulations for health, safety, and environmental protection.

 The **UKCA** (UK Conformity Assessment) mark is a declaration from the manufacturer that the product meets applicable UK Regulations for health, safety, and environmental protection.

 The **Regulatory Compliance Mark** is a visible indication of a product's compliance with all applicable ACMA (Australian Communications and Media Authority) regulatory arrangements, including all technical and record-keeping requirements regarding the electrical safety and/or electromagnetic compatibility (EMC).

DECLARATION OF CONFORMITY

Hereby, ACCO Brands USA LLC at 4 Corporate Way, Lake Zurich, IL 60047 USA, declares that this wired charger is in compliance with Directive 2014/30/EU. The full text of the EU Declaration of Conformity is available at the following internet address: [PowerA.com/compliance](#)

FRENCH

CONTENU

- (1) Batterie Rechargeable (1,100 mAh)
- (2) Couvercles de Batterie
- Manuel de l'utilisateur

UTILISATION

1. Placez la batterie rechargeable dans le compartiment dédié de votre manette sans fil Xbox.
2. Fixez le couvercle approprié au dos de la manette sans fil Xbox pour la recharger, après avoir vérifié la lettre inscrite en-dessous : « **B** » pour Xbox Series X et « **A** » pour Xbox One.
3. Fixez bien ce couvercle à votre manette.
4. Connectez le câble USB à la batterie et à la Xbox.

REMARQUE : câble USB vendu séparément.

5. Vérifiez la couleur du voyant de charge LED : il s'affiche en orange durant le chargement et en blanc une fois la batterie complètement chargée.

REMARQUE : Pour connaître le niveau de charge de la batterie, vérifiez les informations qui s'affichent sur l'écran de la Xbox. La batterie peut également être chargée hors de la manette. La manette reste fonctionnelle lors du chargement lorsque la batterie y est installée.

RECHARGE

- Connectez un câble USB Micro B standard (vendu séparément)
- Ne connectez pas le câble de charge USB à un adaptateur secteur USB.
- Ne chargez pas vos batteries rechargeables de 1 100 mAh sur des surfaces inflammables, c'est-à-dire sur des matelas, des canapés et/ou autres matériaux inflammables.
- Ne laissez pas les batteries sans surveillance pendant une période prolongée.
- Ne couvrez pas votre manette de couvertures, oreillers, etc. pendant qu'elle charge.
- Assurez-vous que la zone est bien aérée.

DÉPANNAGE

Q1 : La batterie rechargeable du kit Play & Charge ne se recharge pas.

R1 : La batterie rechargeable doit être connectée à un port USB alimenté pour pouvoir se recharger. Vérifiez que votre Xbox est bien allumée.

R2 : Vérifiez que le câble de charge USB est correctement connecté à la batterie rechargeable et/ou à la Xbox.

R3 : Vérifiez que la batterie rechargeable et son couvercle sont correctement installés.

Q2 : La batterie rechargeable du kit Play & Charge ne se recharge pas sur le support ou la station de charge PowerA.

R1. Vérifiez que la manette sans fil Xbox est correctement installée sur le support ou la station de charge PowerA.

R2 : Vérifiez que le support ou la station de charge est correctement connecté à un port USB alimenté.

R3 : Vérifiez que la manette est bien enclenchée sur le support ou la station de charge en position active.

R4 : Si vous utilisez la station de charge PowerA, vérifiez qu'elle est correctement connectée à une prise électrique AC.

AVERTISSEMENT CONCERNANT LES BATTERIES

N'essayez pas de remplacer vous-même la batterie rechargeable, vous pourriez l'endommager et ainsi entraîner une surchauffe, un incendie et des blessures. La batterie lithium-ion de votre appareil doit être révisée ou recyclée par PowerA ou un fournisseur agréé. Elle doit être recyclée ou mise au rebut séparément du reste des ordures ménagères. Débarrassez-vous des batteries conformément aux lois et directives locales relatives à l'environnement.

N'utilisez pas et ne laissez pas le produit contenant des batteries rechargeables exposé à de très fortes températures (par exemple, à la lumière directe du soleil ou dans un véhicule lors de conditions météorologiques très chaudes).

Si tel est le cas, le produit peut surchauffer, prendre feu, ou ses performances peuvent diminuer, réduisant ainsi sa durée de vie.

N'utilisez pas l'appareil contenant une batterie rechargeable dans un environnement chargé en électricité statique, cela pourrait endommager la sécurité interne de l'appareil et exposer à des dangers. Si l'électrolyte entre en contact avec vos yeux en raison d'une fuite de la batterie, ne les frottez pas ! Rincez-les avec de l'eau et consultez immédiatement un médecin. Cela pourrait abîmer vos yeux ou entraîner une perte de vision.

Si la batterie émet une odeur, génère de la chaleur, ou semble

d'une manière ou d'une autre anormale en cours d'utilisation, de recharge ou de stockage, retirez-la immédiatement du chargeur et placez-la dans un contenant scellé, tel qu'une boîte en métal.

N'oubliez pas que des batteries usagées peuvent entraîner un incendie, ne chauffez pas la manette et ne la jetez pas dans un feu.

CAN ICES-003(B)/NMB-003(B)

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

FABRIQUÉ PAR

ACCO Brands USA LLC, 4 Corporate Way, Lake Zurich, IL 60047
[ACCOBRANDS.com](#) | [POWERA.com](#) | [FABRIQUÉ EN CHINE](#)

SERVICE CLIENTÈLE

Pour obtenir une assistance pour vos accessoires PowerA d'origine, veuillez consulter la rubrique [PowerA.com/Support](#).

GARANTIE

Garantie limitée de deux ans. Consultez le site [PowerA.com](#) pour plus de détails.

INFORMATIONS LÉGALES SUPPLÉMENTAIRES

© 2021 ACCO Brands USA LLC. PowerA et le logo PowerA sont des marques commerciales d'ACCO Brands Corporation. Microsoft, Xbox, Xbox «Sphere» Design, Xbox Series X/S, Xbox One et Windows sont des marques commerciales du groupe de sociétés Microsoft. Toutes les autres marques sont la propriété de leurs propriétaires respectifs.

SYMBOLES DE CONFORMITÉ RÉGIONALE

De plus amples informations sont disponibles en recherchant chaque nom de symbole

 Le symbole **WEEE** (déchet d'équipements électrique et électronique) indique que la batterie doit être éliminée séparément du reste des déchets ménagers conformément à la législation locale. Veuillez contacter votre hôtel de ville, le service d'élimination des déchets ou le revendeur pour toutes recommandations supplémentaires.

 Le marquage **CE** (conformité européenne) est une déclaration du fabricant selon laquelle le produit est conforme aux réglementations et directives européennes applicables en matière de santé, de sécurité et de protection de l'environnement.

 Le marquage **UKCA** (UK Conformity Assessment) est une déclaration du fabricant selon laquelle le produit est conforme aux réglementations britanniques applicables en matière de santé, de sécurité et de protection de l'environnement.

 La **marque de conformité réglementaire** est une indication visible de la conformité d'un produit avec toutes les dispositions applicables de l'ACMA (Australian Communications and Media Authority), notamment les exigences techniques et celles en matière de tenue de registres concernant la sécurité électrique et/ou la compatibilité électromagnétique (EMC).

DÉCLARATION DE CONFORMITÉ

Par la présente, ACCO Brands USA LLC at 4 Corporate Way, Lake Zurich, IL 60047 USA, déclare que la chargeur filaire est conforme à la directive 2014/30/UE. Le texte complet de la déclaration de conformité européenne est disponible à l'adresse Internet suivante : [PowerA.com/compliance](#)

SPANISH

CONTENIDO

- (1) Batería Recargable de 1100 mAh
- (2) Tapas Batería
- Manual de usuario

USO

1. Instala la batería recargable en el compartimento para baterías del mando inalámbrico de la Xbox.
2. Coloca la batería con tapa recargable correcta en la parte trasera del mando inalámbrico de la Xbox después de comprobar en la parte inferior de la tapa que: 'B' es para Xbox Series X y 'A' es para Xbox One.

