

PLAY BIG. WON BIG

© 2021 BIGBIG WON Inc. All rights reserved.
Product may vary slightly from pictures.



RAINBOW



BIGBIG WON APP

MORE CUSTOM SURPRISE ON BIGBIG WON DEVICE

Customize the button functions of your Rainbow wired controller with BIGBIG WON Official APP, and a series of custom button functions can be set such as Macro, Turbo, Firmware upgrade, AURORA lighting effects and more.

www.bigbigwon.com/support/app-download



GET HELP WITH BIGBIG WON SUPPORT

We are here to assist you with your BIGBIG WON devices. If you have any questions, please feel free to contact us:

BIGBIG WON Official Web: www.bigbigwon.com
Customer Service: support@bigbigwon.com

ENGLISH/イギリス語/英語

PACKAGE CONTENTS

BIGBIG WON RAINBOW Wired Game Controller
Micro-USB Cable (16F)
User Manual

SYSTEM REQUIREMENTS

Windows10+

Switch

*PS4/PS5 will be supported with R90 adapter (R90 adapter needs to be purchased separately)

*Device with a free USB port




REGISTRATION

Register your BIGBIG WON ID online at www.bigbigwon.com to get real-time information on your product's warranty status and a series of exclusive benefits from BIGBIG WON.

YOUR RIGHTS

*12-month limited warranty from the date of purchase.

*Free online technical support at www.bigbigwon.com

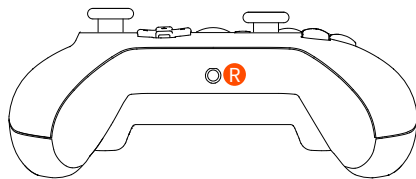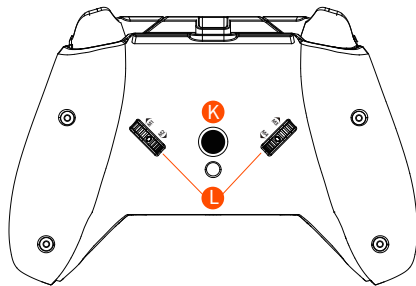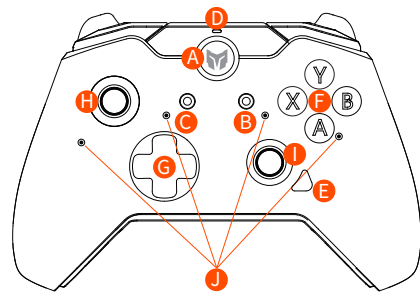

- | | | |
|-------------------------|----------------------|---------------------|
| A HOME Button | H Left Joystick/L3 | N LB Button |
| B SELECT Button | I Right Joystick/R3 | O RT Button |
| C START Button | J Function indicator | P RB Button |
| D Mode Indicator | K FN Button | Q USB Charging Port |
| E Capture Button | L Custom Back Button | R 3.5mm Audio Port |
| F A/B/X/Y Action Button | M LT Button | S Micro-USB Cable |
| G Cross button | | |

CONNECT TO SWITCH DEVICES

Connect to Switch Device via a USB Cable

- To connect to Switch, please go to [System Settings] > [Controllers and Sensors] > [Pro Controller Wired Communication] to enable this option.
- Plug the Micro-USB cable to the port on Switch dock, or connect controller to Switch via a OTG cable (sold separately).
- The corresponding controller icon will show on the main interface of Switch. Mode indicator stays red , and connected successfully.

CONNECT TO WINDOWS 10 PC DEVICES

Connect to Windows 10 PC Device via a USB Cable

- Plug the USB cable into PC port.
- Mode indicator stays green , and connected successfully.

BUTTON FUNCTIONS

GLOBAL GYRO

- First long press the FN button, and then Press down Left Joystick / L3 button at the same time. The mode indicator light turns into purple  to show the left joystick global gyroscope has been turned on. Repeat the step till the indicator went off above to turn it off.
- First long press the FN button, and then Press down Right Joystick / R3 button at the same time. The mode indicator light turns into purple  to show the right joystick global gyroscope has been turned on. Repeat the step till the indicator went off above to turn it off.

RESPONSIVE GLOBAL GYRO

- First long press the response button (LT/LB/RT/RB/M1/M2/M3/M4) you want to set, then press and hold the right joystick R3 button + FN button to turn on the responsive global gyro (in this mode, the global gyro function can only be turned on when you press response button you want to set, and the mode indicator light will turn into purple ).
 - Repeat the step till the indicator went off above to turn it off.
- ★ When setting (LT/LB/RT/RB) into the responsive button, please pay attention to its native function.
- ★ If you want to remove the function of the button itself, and only use it as a somatosensory response switch, please set the button as blank function in BIGBIG WON APP (M1/M2/M3/M4).

GYRO CALIBRATION

- Place the controller on the desktop horizontally and long press the FN + Capture button at the same time, until the Function indicator turn on and breath in orange  to show it has entered the automatic calibration state.
- Do not move or use the controller during calibration which will last about 3-5 seconds.
- The Function indicator  double flash and then go out to show the calibration is successful, indicator lights go out directly, it means that the calibration has failed and you need to re-calibrate according to the above steps.

JOYSTICK & TRIGGER CALIBRATION

- Long press SELECT + START for 3s at the same time and the four indicators inside the controller turn on.
- Push the joystick to the limit and rotate it at a constant speed, repeat 3-5 times.
- Press the LT/RT button to the limit and release, repeat 3-5 times.

- d. Press the SELECT + START button at the same time again, the indicator lights flash double and then go out to show the calibration is completed.

TURBO FUNCTION (TURBO ON: FN button+Target button)

- Press and hold the FN button first and then press TARGET button to set TURBO function successfully, and mode indicator flashes in orange  twice .
 - Press the FN button + LEFT button of the D-pad simultaneously to switch combo frequency from fast, middle to slow.
 - Press and hold the FN button first and then press TARGET button to cancel combo function of the button.
- ★ The buttons that can be set with the TURBO function are: A/B/X/Y button, LB/RB/LT/RT button.

MACRO FUNCTION

- The back buttons M1-M4 can be used as custom macro buttons, long press FN button first and then press target back button, when the mode indicator breathe in blue  indicating it has entered the macro recording mode.
 - After recording the button sequence and interval, press the target back button once, and the mode indicator will flash blue  twice to exit the recording mode.
 - Press the target back button to respond to the recorded macro settings.
 - To cancel the macro setting, press the target back button once after entering the macro recording mode again, and the mode indicator will flash blue  once to cancel the function.
- ★ The buttons that can set the macro function are: A/B/X/Y buttons, LT/LB/RT/RB/L3/R3 buttons and direction buttons.

VOLUME CONTROL

Press FN + Cross key up/down buttons of the D-pad simultaneously to set the volume (Only for Windows 10).

MOTOR VIBRATION INTENSITY ADJUSTMENT

- The intensity of the motor vibration is divided into 4 levels of strong/medium/weak/off, which can be switched cyclically, and the vibration intensity defaults to the highest gear.
- Press and hold the FN button first and then press the right button of D-pad to adjust the vibration intensity.

JOYSTICK DEAD ZONE ADJUST

Connect the BIGBIG WON APP to respectively adjust the joystick dead zone of the RAINBOW controller.

★ It is recommended to set a certain dead zone, otherwise the joystick may be drifting.

CUSTOM BUTTON FUNCTION

Connect the BIGBIG WON APP, you can customize the button function of the RAINBOW controller.

Back button (M1/M2/M3/M4) can obtain its button function by copying the other buttons. The function buttons can also be deleted by copying the back buttons (M1/M2/M3/M4).

AURORA RGB LIGHTING EFFECT SWITCH

- Double-click the FN button to quickly switch the controller lighting effects (please download BIGBIG WON APP to enjoy rich lighting modes and custom light effects).
- If there is no connection within 30 minutes, the light effect will be automatically turned off and you can press any button to wake it up.

CONNECT WITH BIGBIG WON OFFICIAL APP

Customize the button functions of your Rainbow wired controller with BIGBIG WON Official APP, and a series of custom button functions can be set such as Macro, Turbo, Firmware upgrade, AURORA lighting effects and more.

- Turn on the Bluetooth of the device. 「Settings> Bluetooth」
- Make sure that RAINBOW and the device are in a normal connection state.
- Open 「Settings> Bluetooth> Other Devices」 to connect with Rainbow.
(Only for Android devices)
- Open the BIGBIG WON APP and set your RAINBOW uniquely.

★ System Requirements for the APP

iOS 13 or above
Android 8.0 or above



BIGBIG WON APP



Tutorials on Official Website

パッケージ内容

BIGBIG WON RAINBOW ワイヤードコントローラー
Micro-USBケーブル(3M)
取扱説明書

システム要件

Windows 10+ / Switch

*R90アダプターと組み合わせ、PS4 / PS5に対応可能です (R90アダプターは別途購入が必要)

*空きのUSBポートを備えるデバイス






ユーザー登録

jp.bigbigwon.com にてBIGBIG WON IDを作成して、ご購入の製品を登録すると、当製品の品質保証の状態に関するリアルタイム情報と、BIGBIG WON会員専用のメリットを得ることができます。

登録による特典

12ヶ月のメーカー限定保証(コントローラー本体のみ)

jp.bigbigwon.comでのマニュアルの閲覧と無料オンラインテクニカルサポート

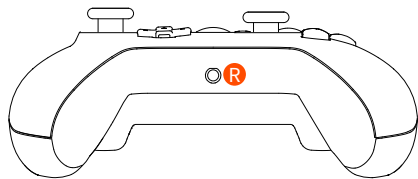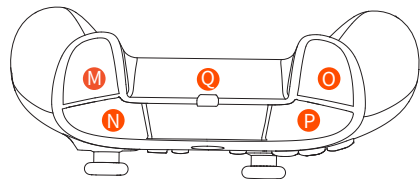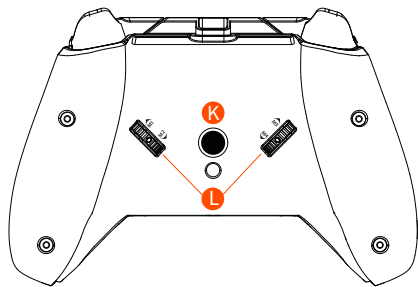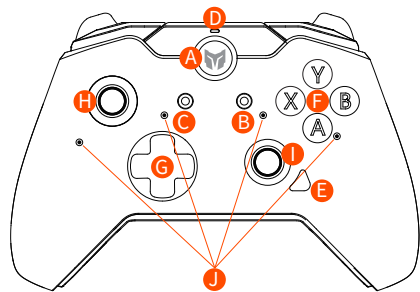

- | | | |
|-------------------|----------------|-----------------|
| A HOMEボタン | H 左スティック/L3ボタン | N LBボタン |
| B SELECTボタン | I 右スティック/R3ボタン | O RTボタン |
| C STARTボタン | J 機能インジケータ | P RBボタン |
| D モードインジケータ | K FNボタン | Q USB充電端子 |
| E スクリーンショットボタン | L 追加ボタン | R ヘッドセット端子 |
| F A/B/X/Yアクションボタン | M LTボタン | S Micro-USBケーブル |
| G 方向キー | | |

SWITCHへの接続

- 設定>コントローラーとセンサー>Proコントローラーの有線通信をオンにしてください。
 - USBケーブルで RAINBOW を Switch ドックの USB 端子に差し込みます。
 - Switch でコントローラーのアイコンが現れて、RAINBOW のモードインジケータが赤色  で点灯になると、Switch をコントロールできます。接続成功です。
- ★ 携帯/テーブルモード及び Switch Lite と接続する場合は USB アダプタ(別途購入) が必要です。

WINDOWS PCへの接続

- USBケーブルで RAINBOW を Windows PC のUSB端子に差し込みます。
- モードインジケータが緑色  で点灯になると、接続成功です。Windows PC をコントロールできます。

ボタン機能説明

グローバルジャイロ (GYROCON+) 機能

- FN ボタンを押しながら、L3 ボタンを押して、モードインジケータがパープル色  で点灯になると、左スティックのグローバルジャイロ機能がオンになります。
もう一度 FN ボタンを押しながら、L3 ボタンを押すると、モードインジケータが消灯し、グローバルジャイロ機能がオフになります。
- FN ボタンを押しながら、R3 ボタンを押して、モードインジケータがパープル色  で点灯になると、右スティックのグローバルジャイロ機能がオンになります。
もう一度 FN ボタンを押しながら、R3 ボタンを押すると、モードインジケータが消灯し、グローバルジャイロ機能がオフになります。

レスポンスグローバルジャイロ

いずれか設定したいボタン (LT/LB/RT/RB/M1/M2/M3/M4) を押しながら、FN ボタン+R3 ボタンを同時に押すと、指定したボタンの加速度センサー機能がオンになります。

- ★ 当機能は設定したボタンを押した時 (モードインジケータがパープル色で点灯) のみオンになります。当機能はデフォルトではオフになっています。
- ★ LT/LB/RT/RB ボタンに設定をする場合、デフォルトのボタン機能にご注意ください。
- ★ M1/M2/M3/M4 ボタンに設定した機能を削除する場合またはグローバルジャイロスイッチのみとして使用する場合は、BIGBIG WON アプリ> ボタン設定で追加ボタン (M1/M2/M3/M4) に設定してください。

ジャイロ/加速度センサー校正

- RAINBOW を水平面に置き、FN ボタンを押しながら、スクリーンショットボタンと同時に長押しして、機能インジケータが  点灯します。
 - ジャイロ/加速度センサー校正モードに入り、機能インジケータがゆっくりブリージングします (時間: 3-5 秒)。
 - 機能インジケータが  2 回点滅すると、校正完了です。
ご注意: 校正中に、RAINBOW を移動/コントロールすることを必ずしないでください。
- ★ 校正失敗の場合は、機能インジケータが直接に消灯します。ステップ a-c に従って、もう一度やってみてください。

ジョイスティック</RT校正

- SELECT と START を同時に 3 秒間長押しして、機能インジケータが  点灯します。
- ジョイスティックを最大限にユニフォーム回転します。(3-5 回繰り返し)
- LT/RT トリガーを最大限に押します。(3-5 回繰り返し)
- もう一度 SELECT と START を同時に押して、機能インジケータが  2 回点滅すると、校正完了です。

TURBO機能

- a. FNボタンを押しながら、TURBOさせたいボタンを押して、中心2枚の機能インジケーターがオレンジ色  で点滅になると、TURBO機能がオンになります。
 - b. FNボタンを押しながら、方向キーの左ボタンを押すとTURBOのスピードを調節できます。TURBOのスピードは3レベルでサイクルします。
 - c. もう一度 FNボタンを押しながら、TURBO機能を設定したボタンを押して、対応ボタンのTURBO機能をオフになります。
- ★ TURBO機能を設定可能なボタン:A/B/X/Yアクションボタン、LB/RB/LT/RTボタン。

追加ボタンのマクロ機能設定

- a. FNボタンを押しながら、マクロ機能を設定させたい追加ボタンを押して、モードインジケーターがブルー色  でブリージングになると、マクロ機能レコードモードが入ります。
 - b. 追加ボタンのシーケンスと間隔をレコードして、マクロ機能を設定させたい追加ボタンを押して、モードインジケーターがブルー色  で二回点滅になると、レコード完成です。
 - c. 設定した追加ボタンを押して、レコードしたマクロ機能をコントロールできます。
 - d. マクロ機能レコードモードで再度マクロ機能を設定した追加ボタンを押して、モードインジケーターがブルー色  で一回点滅になると、マクロ機能がオフになります。
- ★ 追加ボタンのマクロ機能を設定可能なボタン:A/B/X/Yアクションボタン、LT/LB/RT/RBボタン、L3/R3ボタン及び方向キー。

音量の調節

FNボタンを押しながら、方向キーの上/下ボタンを押すと音量を調節できます。
当機能は Windows 10のみ対応します。

モーター振動の強さの調節

FNボタンを押しながら、方向キーの右ボタンを押すとモーター振動の強さを調節できます。振動の強さは強(デフォルト)/中/弱/オフで、総計4レベルでサイクルします。

ジョイスティックDead Zone 調整

BIGBIG WON アプリ>スティック設定でDead Zoneを調整することができます。
★ジョイスティックのドリフトを防ぐために、一定数値のDead Zoneを設定してください。

ボタン機能のカスタマイズ

BIGBIG WON アプリ>割り当てでボタン機能をカスタマイズできます。
追加ボタン (M1/M2/M3/M4) が一般ボタンの機能をコピーすることができます。
一般ボタンも追加ボタンをコピーすることができ、本来の機能を消します。

AURORA RGBバックライト効果

- a. FNボタンをダブルクリックすると、AURORA RGBバックライト効果をすばやく切り替えることができます。
- b. 30分以上操作されないとバックライトは自動的にオフになり、いずれかのボタンを押してウェイクアップできます。

BIGBIG WON アプリへの接続

BIGBIG WON APP では、カスタマAURORA RGB/バックライト効果を作成したり、スティックのデッドゾーン調整したり、ファームウェアのアップデートしたり、加速度センサーの感度調整したりすることで、お使いのBIGBIG WONデバイスのライティングをカスタマイズできます。

- a. デバイスのBluetoothをオンにしてください。「設定> Bluetooth」
- b. BIGBIG WON-RAINBOWがオン状態に確認します。
- c. 「RAINBOW」を検索してお使いのデバイスに接続します。「設定> Bluetooth >その他のデバイス (Androidデバイスのみ)」
- d. 接続成功すると、BIGBIG WON アプリを開き、豊かな機能/配置をカスタマイズします。

★ 対応デバイス
iOS 13+
Android 8.0+



BIGBIG WON アプリ



ビデオチュートリアル

包装内容

BIGBIG WON RAINBOW 有线游戏手柄

Micro-USB数据线 (3M)

说明书

合格证

系统要求

Windows 10+

Switch


*配合R90转接器可支持PS4/PS5 (R90转换器需另购)

*设备具有可用的USB插口

您的权益

*从购买产品之日起享受12个月有限质量保证。

*联系我们以获取免费的在线技术支持。

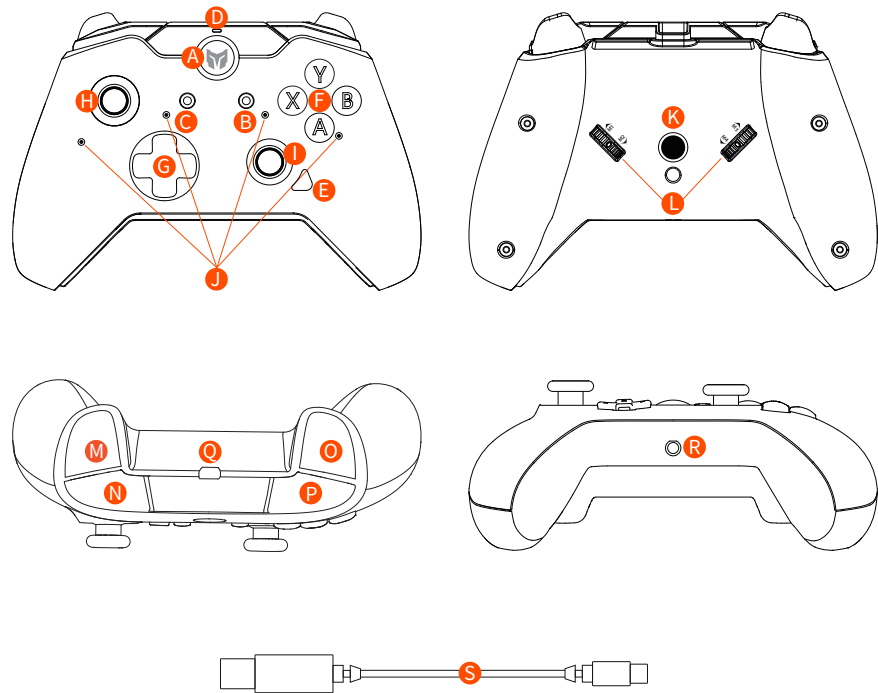

- | | | |
|----------------|--------------------|----------------|
| A HOME键 | H 左摇杆/L3键 | N LB键 |
| B SELECT键 | I 右摇杆/R3键 | O RT键 |
| C START键 | J 功能指示灯 | P RB键 |
| D 模式指示灯 | K FN键 | Q USB充电接口 |
| E 截图键 | L M1/M2/M3/M4自定义背键 | R 3.5mm耳机插口 |
| F A/B/X/Y 动作按键 | M LT键 | S Micro-USB数据线 |
| G 十字键 | | |

SWITCH设备连接

通过USB数据线连接Switch

- 打开Switch的设置>手柄与感应器>Pro手柄的有线连接, 开启该功能。
- 通过Micro-USB数据线接入Switch底座的USB端口, 或将手柄通过OTG线(需另行购买) 连接到Switch主机。
- Switch主界面出现对应手柄图标, 模式指示灯为红色  常亮, 连接成功。

WINDOWS PC连接方法

通过USB数据线连接Windows PC

- 将手柄通过USB数据线接入PC的USB端口。
- 手柄模式指示灯为绿色  常亮, 连接成功。

按键功能说明

全局体感(Gyocon+) 功能

- 先按住FN键不放, 然后同时按住左摇杆下压键L3, 模式指示灯紫色  常亮, 表示左摇杆全局体感 已开 启, 再次按下该组合键, 模式指示灯熄灭, 关闭左摇杆全局体感功能。
- 先按住FN键不放, 然后同时按住右摇杆下压键R3, 模式指示灯紫色  常亮, 表示右摇杆全局体感已开启, 再次按下该组合键, 模式指示灯熄灭, 关闭右摇杆全局体感功能。

响应式全局体感功能

- 先按住想要设定的响应式按键不放, 然后按住右摇杆下压键R3 + FN键开启响应式全局体感功能(在该模式下只有按住设定响应按键时才能开启全局体感, 模式指示灯紫色  常亮)。
 - 再次按下该组合键, 模式指示灯熄灭, 关闭响应式全局体感功能。
- ★ 当设定(LT/LB/RT/RB/M1/M2/M3/M4)为响应按键时, 需注意按键本身的功能。
- ★ 若想移除按键本身功能, 仅作体感功能开关使用, 请在BIGBIGWON APP改键设置栏将按键键值修改为空白功能的背键(M1/M2/M3/M4)。

体感校准

- 将彩虹RAINBOW放置于水平桌面上, 同时按住FN+截图键, 功能指示灯  点亮, 自动进入校准状态。
 - 校准过程中切勿移动/使用彩虹RAINBOW, 校准时间大概在3-5秒。
- ★ 功能指示灯  双闪熄灭, 校准完成。

摇杆扳机校准

- 同时长按SELECT键+START键3秒, 功能指示灯  点亮。
- 将摇杆推至极限值并匀速转圈, 重复3-5次。
- 按下LT/RT键至极限值后松开, 重复3-5次。
- 再次同时按下SELECT键+START键, 功能指示灯双闪后熄灭, 校准完成。

设置背键宏功能

- 背键M1-M4可作为自定义宏按键，先长按FN键不放，然后同时按住目标背键，模式指示灯蓝色 ◀▶ 呼吸，此时进入宏录制模式。
- 录制完成按键顺序与间隔后，再次按下目标背键，模式指示灯蓝色 ▶▶ 闪烁两次，即可退出录制模式。
- 按下目标背键，即可响应录制完成的宏设置。
- 如需取消背键宏设置，再次进入宏录制模式后按下目标背键，模式指示灯蓝色 ▶▶ 闪烁一次，即可关闭宏设置。

★可设置宏功能的按键为：A/B/X/Y 动作按键，LT/LB/RT/RB按键，L3/R3按键及方向键。

系统音量控制

同时按下FN键 + 十字键的上/下方向键，即可控制音量的加/减(仅支持Windows 10平台)。

马达震动强度调节

- 马达振动的强度分为强/中/弱/关闭4档，可循环切换，震动强度默认为最高档位。
- 先按下FN键不放，然后同时按住十字键的右方向键，可循环调整强/中/弱/关闭4档震动强度。

连击功能(开启连击：目标按键 + FN)

- 先按住目标按键不放，然后同时按住FN键，中间两颗功能指示灯橙色 ⚡ 闪烁，设置按键连击成功。
- 如需更改连击频率，同时按下FN键 + 十字键的左方向键，即可切换为快/中/慢3档连击速率。
- 再次按住已设置连击的按键+ FN键，即可取消按键连击功能。

★可设置连击功能的按键为：A/B/X/Y 动作按键，LB/RB/LT/RT键。

摇杆死区调整

连接BIGBIG WON APP，可分别对彩虹RAINBOW摇杆的死区进行调整。

★为防止出现摇杆漂移现象，请设置一定的死区。

自定义键值

连接BIGBIG WON APP，可对彩虹RAINBOW的按键功能进行自定义。

背键(M1/M2/M3/M4)可以通过复制功能键来获得其按键功能。

功能键也可通过复制背键(M1/M2/M3/M4)来消除功能。

AURORA RGB背光灯效切换

- 双击FN键即可快速切换手柄灯效(请下载BIGBIG WON APP解锁更丰富的灯光模式及自定义背光灯效)。
- 连接状态下30分钟内没有操作则背光灯效自动关闭，按下任意按键即可唤醒背光灯效。

连接BIGBIG WON官方APP

通过BIGBIG WON APP可以高度自定义您的RAINBOW，实现摇杆曲线调整、体感灵敏度调整、固件升级以及自定义您专属的AURORA RGB背光灯效等一系列丰富的功能。

- 开启设备的蓝牙功能。「设置 > 蓝牙」
- 确保 RAINBOW 与设备处于正常连接状态。
- 打开「设置 > 蓝牙 > 其它设备」与RAINBOW进行连接。(仅限安卓系统设备)
- 打开BIGBIG WON APP，对您的 RAINBOW 进行独特的个性化设置。

★ 移动应用程序要求

iOS 13+

Android 8.0+



BIGBIG WON APP



官网使用教程

FCC CAUTION

1. 15.19 Labelling requirements

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

2. 15.19 Labelling requirements

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

3. 15.105 Information to the user

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

⚠ NOTICE PLEASE READ THIS PRECAUTIONS CAREFULLY.

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch USB port directly or it might cause malfunctions.
- DO NOT strongly bend or pull cable parts.
- Use a soft, dry cloth while cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact BIGBIG WON or your local distributor.

★ PS5, PS4, PS3, DualSense and DualShock are registered trademarks or trademarks of Sony Computer Entertainment Inc. Windows, Xbox One, Elite and Elite Series 2 are registered trademarks of Microsoft Inc. Switch and Switch Lite are registered trademarks of Nintendo Inc. All rights reserved. All other trademarks are the property of their respective owners. Photos and illustrations are not binding. Contents, designs and specifications are subject to change without notice and may vary from one country to another. This product is not distributed under an approved official license and is not sponsored or endorsed by Sony Computer Entertainment Inc. This product is not manufactured by Sony Computer Entertainment Inc or Microsoft Inc or Nintendo Inc.

⚠ ご注意:保護者の方へ必ずお読みください。

- 小さいな部品がありますので3歳未満のお子様には絶対に与えないでください。
- 乳幼児の手の届くところに置かないでください。万一飲み込んだ場合は、すぐに医師に相談してください。
- 火気のある場所では絶対に使用しないでください。
- 長時間直射日光当てたり、高温となる場所に置かないでください。
- 本品を湿気やホコリの多いところに置かないでください。
- 本品に物を当てたり、落下させるような強い衝撃を与えないでください。
- 故障の原因になりますので、USB端子を直接手で触らないでください。
- ケーブル部を強く曲げたり引っ張ったりしないでください。
- お手入れの際には、乾いた柔らかい布を使用してください。
- ペンジン、シンナーなどの薬品は使用しないでください。
- 分解や修理、改造は絶対にしないでください。
- 本来の目的以外には使用しないでください。本来の目的以外に使用した場合の事故や損害に対し、弊社は一切その責任を負いません。
- 光学式ライトの光を直接見ないでください。強い光より、目を痛める可能性があります。

★ PS5, PS4, PS3, DualSense および DualShock はSony Computer Entertainment Inc.の登録商標または商標です。Windows, Xbox One, Elite および Elite Series 2 はMicrosoft Inc.の登録商標です。Switch, Switch ProはNintendo Inc.の登録商標です。その他、記載されている会社名、製品名は、各社の登録 商標または商標です。写真やイラストは拘束力がありません。内容、デザイン、仕様は予告なしに変更されることがあり、国によって異なる場合があります。*この製品は、Sony Computer Entertainment Inc、Microsoft Incまたは Nintendo Incによって製造されたものではありません。

保修卡

(售后政策:非人为损坏,三个月包换、一年保修)

用户姓名

联系电话

联系地址

售后要求

☐ 退

☐ 换

☐ 保修

售后原因

订单编号

(注:非墨将官网途径购买的产品,售后问题请直接与购买商家联系。)

