

EN Instructions for use

AR تعليمات الاستخدام


Tomme Tippee®

BORN 1965

PerfectPrep®



Formula Feed Maker



Download the
Tommee Tippee® App
for easy set up





Keep this instruction guide for future reference as it includes important information. These instructions can be downloaded from the Tommee Tippee® app or from www.tommeetippee.com

This appliance is intended for household use only.

Before plugging in the Perfect Prep® for the first time, ensure that the voltage is compatible with your electricity supply by checking the label on the base of the unit.

Do not immerse in water.

To protect against fire, electric shock and injury to persons, do not immerse cord, plugs or other parts of the unit in water or other liquid.

Misuse of the product may result in the risk of fire, electric shock and/or personal injury.

The appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Unplug appliance from outlet when not in use and before cleaning.

Allow time to cool before performing any maintenance, cleaning, moving, or storing the appliance. The surfaces are wipe clean only

Cleaning and user maintenance shall not be done by children.

Do not touch hot surfaces.

When in use the Perfect Prep contains

hot water and steam.

Keep hands away from dispensing spout as it can cause burns and scalds.

Use in a well-ventilated area.

Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.

If the supply cord is damaged it must be changed by a qualified person in order to avoid a hazard.

If the damage is from new the unit must be returned to the manufacturer. If within a retail warranty period this product should be exchanged at place of purchase.

Only use this product on a stable, level and heat resistant surface.

Do not place on or near a hob, burner, or oven.

Do not move the appliance when in use.

Do not let the cord hang over the edge of kitchen work surface or touch hot surfaces.

The product has been fitted with a cord wind on the bottom of the unit to allow you to adjust the length of the cord safely.


It is recommended that the cord be kept as short as possible. Extension cords may be used if care is exercised in their use.

Do not use any accessories other than those supplied with this appliance.

DO NOT REMOVE THE WATER JUG WHILE WATER IS BEING DISPENSED.


FOR DOMESTIC USE ONLY - NOT INTENDED FOR COMMERCIAL USE.

Get to know your Perfect Prep® machine

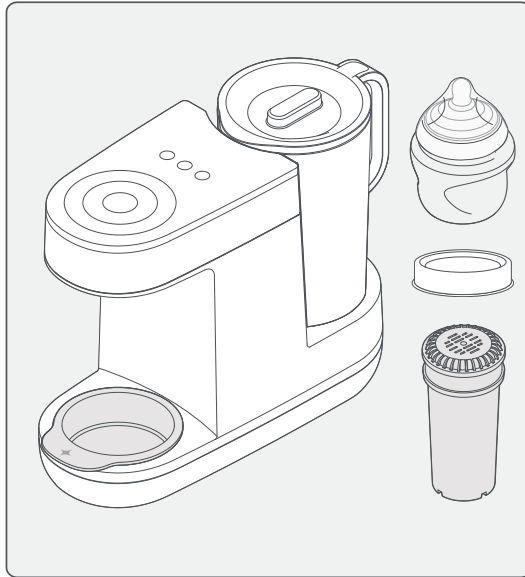


What's in the box:

Perfect Prep® Machine
 1 x 150ml Natural Start® Bottle
 with Slow Flow Teat
 1 x Milk Storage Lid
 1 x Tommee Tippee®
 Anti-bacterial Water Filter

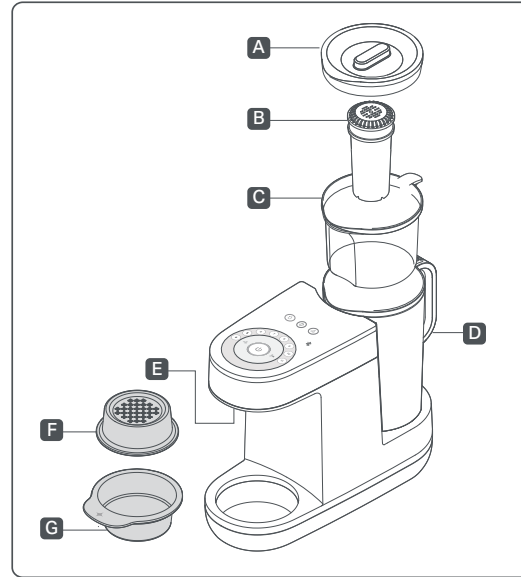

- A** Water jug lid
- B** Tommee Tippee® Anti-bacterial Water Filter
- C** Filter hopper
- D** Removable water jug
- E** Water outlet
- F** Bottle stand
- G** Drip tray

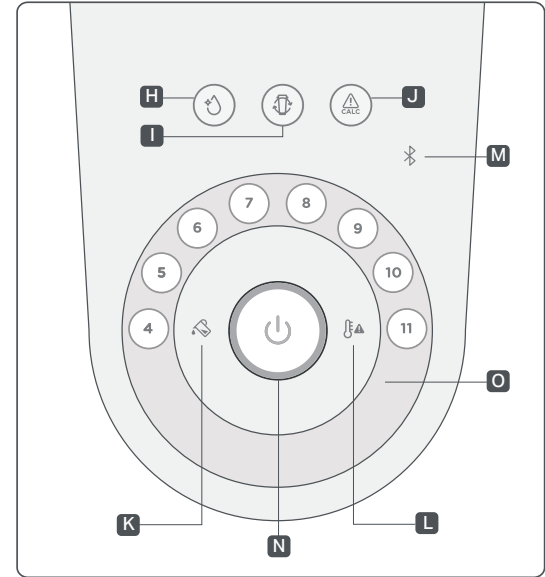

- H** Cleaning
- I** Fit new filter / Reset filter counter
- J** Descaling
- K** Water level low
- L** Jug temperature warning
- M** Bluetooth pairing
- N** Power button
- O** Setting dial in fluid ounces

Connecting your Perfect Prep® to the Tommee Tippee® App ✨

Our app has step-by-step guidance to make cleaning, descaling, and filter replacement easier. You'll find how-to tutorials and tips to keep the unit up to date.

Push notifications can be controlled in your mobile phone settings.

The Tommee Tippee® app is available to download on Android and iOS app stores.



Quick set-up guide

These instructions can be downloaded from the Tommee Tippee® app or from www.tommeeippee.com.

- 1 Download the Tommee Tippee® app.
- 2 Open the app on your smartphone or tablet, then follow the instructions.

Extra functions ✨

Volume On / Off

Press and hold both 4fl oz and 11fl oz buttons at the same time for 2 seconds.

Bluetooth pairing

Press and hold bluetooth button (M) to reset bluetooth connection. For more info, follow directions on your Tommee Tippee® app.

On / Stand-by / Wake-up

Once the unit is plugged in, press the Power button (N) to power the unit on. The unit will enter stand-by mode after 18 mins of inactivity. Simply press the Power button (N) to wake up.

Cleaning cycle



You must run a cleaning cycle **BEFORE** first use or when indicated by the cleaning icon.

This can take up to 10 minutes to complete. **DO NOT fit your filter until instructed to do so.**


DO NOT REMOVE THE WATER JUG WHILE WATER IS BEING DISPENSED.

You should clean your Perfect Prep® machine:


- ✦ Before its first use and then every 30 days.
- ✦ If your machine hasn't been used for 1 week or more.
- ✦ When replacing your filter.
- ✦ After a de-scaling cycle.

Always remove your filter before running a cleaning cycle.


After the initial cleaning cycle is completed, you can cancel further cleaning cycles by pressing and holding the cleaning button for 2 seconds.

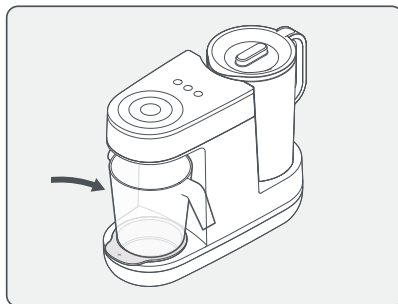


1. Place an empty container under the water outlet, with at least 1 litre capacity.

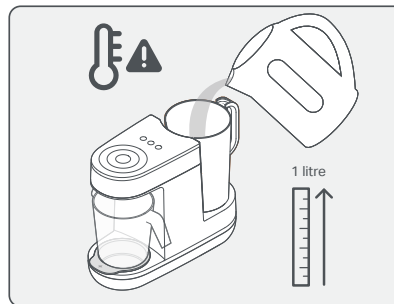


2. Add boiling water straight from the kettle into the water jug (D). The temperature warning light (L) will illuminate during the cleaning process.

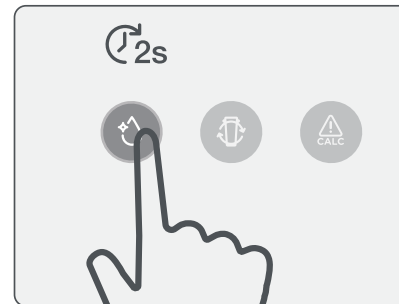

3. Press and hold the cleaning cycle button (H) for 2 seconds to start. If you need to pause, press the button again.

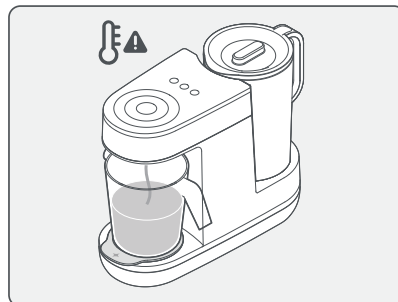

4. Wait for hot water to run through the system.

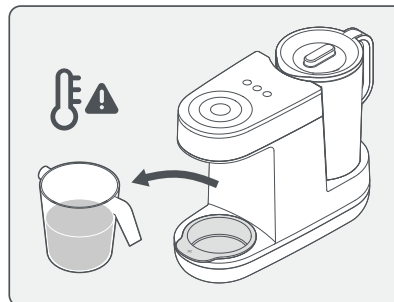

5. Pour away the hot water.

NOW MOVE ONTO PRIMING AND FITTING THE FILTER TO COMPLETE THE CLEANING CYCLE.


IF YOU ARE NOT REPLACING WITH A NEW FILTER, MOVE STRAIGHT TO STEP 3 OF FITTING A FILTER.

Priming your filter




Make sure that any air bubbles or loose particles are removed from the filter **BEFORE USE** by submerging it in water for at least 5 minutes. This is necessary to enable water to pass through the filter once it is installed in the machine.


Only touch the top of filter when handling.

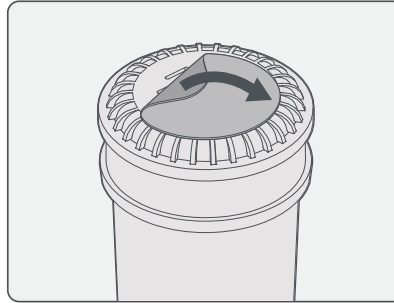


1. Remove the filter from packaging and remove the sticker from the top of the filter.

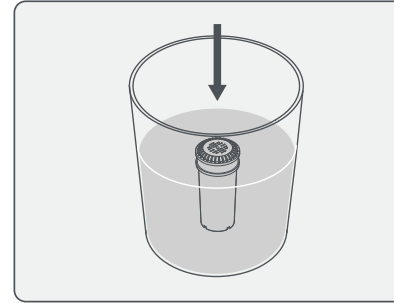

2. Submerge the filter in a bowl filled with cold tap water.

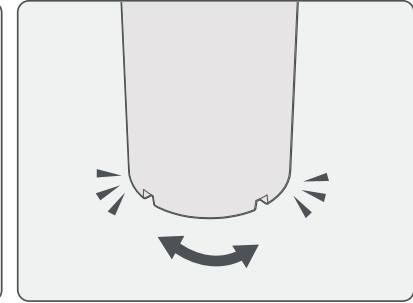

3. Shake and tap the base of the filter to remove any air bubbles (whilst submerged for 5 minutes).

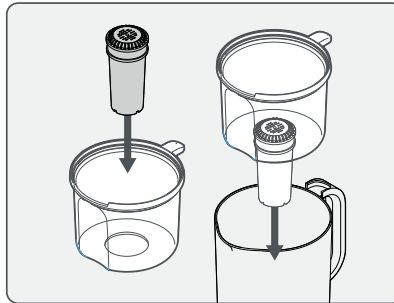

4. The filter is ready to fit into the filter hopper (C). Push downwards until it is positioned firmly.

FOLLOW FILTER REPLACEMENT INSTRUCTIONS FROM STEP 3.

Filter replacement



You should not reset your filter counter unless you are replacing it with a brand new filter. You must run a cleaning cycle when replacing your filter. See Cleaning Cycle instructions.

Your unit comes with a Tommee Tippee® Antibacterial Filter which lasts approximately 3 months (150 litres of water).


If you use your water jug for daily water consumption in your household (outside of the machine) you should change your Tommee Tippee® water filter every 4 weeks to ensure optimum performance.

You'll know it's time to change your filter when the filter replacement icon (I) lights up solid orange. This is a good time to order your new filters from the Tommee Tippee® app or visit our website (tommeetippee.com).


When the filter replacement icon starts flashing (I), the filter must be changed immediately for your child's safety and health.

This product is intended for use with Tommee Tippee® replacement filters only, which are available from all Perfect Prep® Formula Feed Maker stockists. The use of alternative water filters with this product is NOT RECOMMENDED and could put your child's health at risk.


Filter replacement

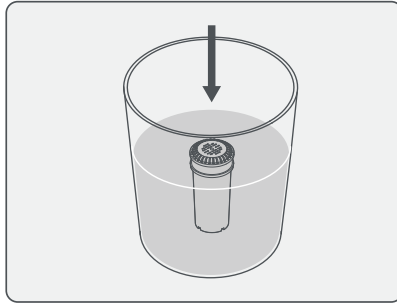


1. Prime your filter by submerging upright it in a bowl of cold tap water. Tap the base of the filter to remove any air bubbles for 5 minutes.

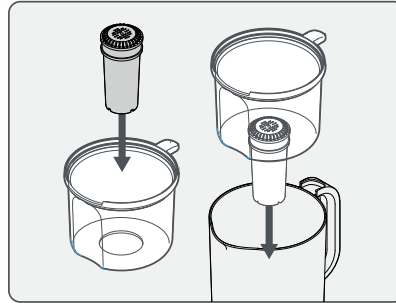


2. Insert filter into the filter hopper and insert filter hopper (C) into water jug.

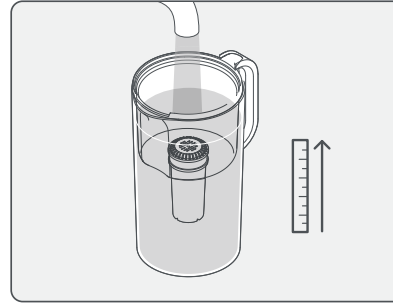


3. Fill filter hopper (C) to the maximum level.

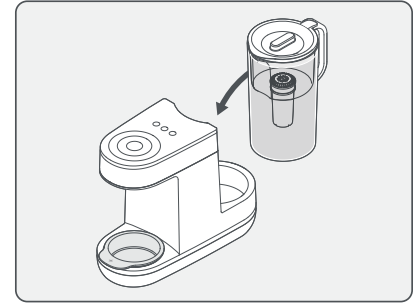


4. Place the lid (A) on the water jug (D) and add to your Perfect Prep machine.

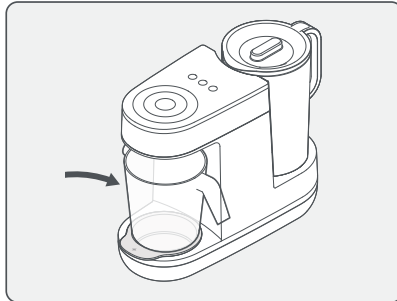


5. Place an empty container under the water outlet.

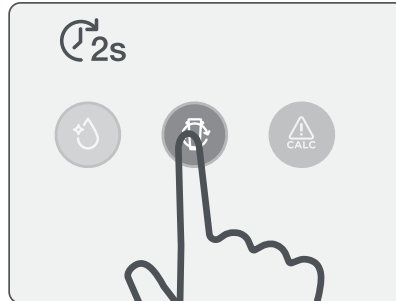

6. Press and hold filter replacement button (I) for 2 seconds, cleaning light will illuminate.

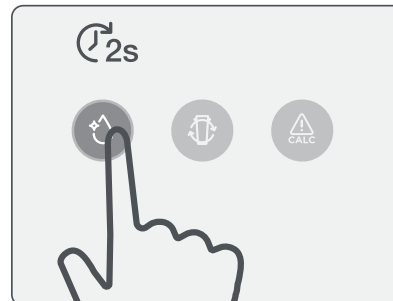

7. Press the cleaning button (H) for 2 seconds to flush the remaining water.

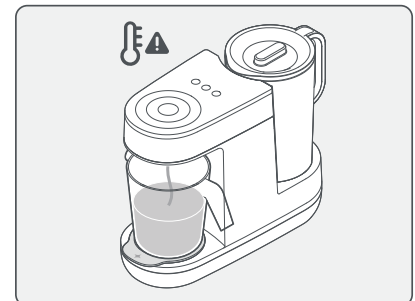

8. Wait for the water to run through the machine. DO NOT REMOVE THE WATER JUG WHILE WATER IS BEING DISPENSED. DISCARD THE WATER.

Preparing a bottle




If you need to stop dispensing hot or cold water, press the Power button (N) for 2 seconds.


Discard your feed and start the bottle preparation again from step 1.

The unit is ready to be used again when the Power button (N) illuminates white.


Ensure your hands and all surfaces that come into contact with the Perfect Prep® and its components (including filter) are clean and dry.

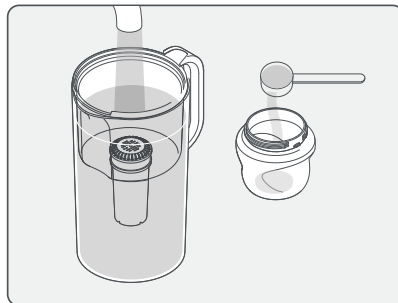


1. Check the water jug has enough water. Pour the formula powder into your bottle. Follow manufacturer's instructions.

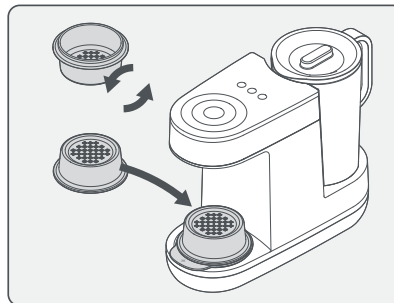


2. Place your bottle as close to the water outlet as possible using the bottle stand and drip tray to create a surface at the correct height.

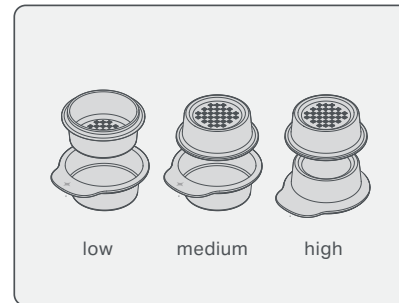


3. The drip tray and stand can be used in the following formations to make low, medium and high surfaces.

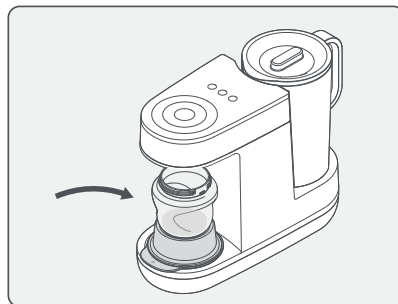

4. Put a bottle with formula powder under the outlet.

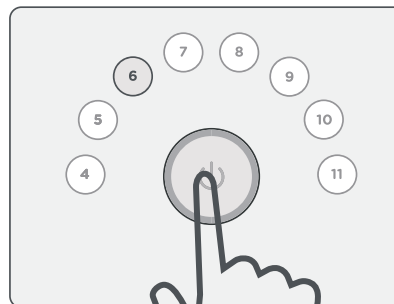


5. Select your feed size (fl oz) from the dial and press Power button (N).

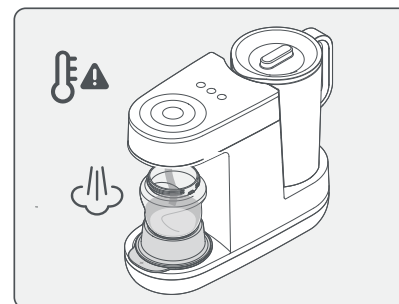


6. A hot shot of water will be dispensed. While the hot shot is dispensing the Power button (N) will be flashing.

Preparing a bottle

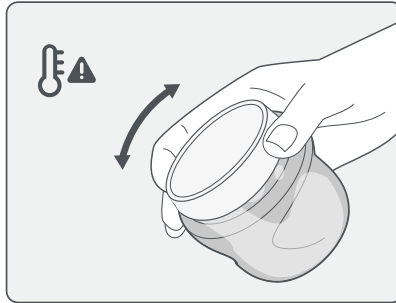


- 7.** Wait for the Power button (N) to pulse before removing the bottle. Add milk lid securely to the bottle and swirl until the formula has dissolved.


FOR SAFETY, ADD THE COLD WATER WITHIN 2 MINUTES AFTER ADDING THE HOT SHOT. IF YOU TAKE LONGER THAN 2 MINUTES OR IF YOU STOP THE CYCLE, THE POWER BUTTON WILL ILLUMINATE WHITE. DISCARD THE FEED AND REPEAT THE BOTTLE PREPARATION PROCESS FROM STEP 1.

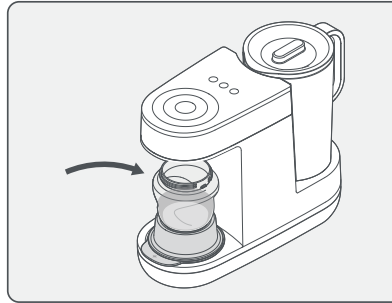

- 8.** Remove the lid and place your bottle back on the stand. Press the Power button (N) again to dispense the remaining water.

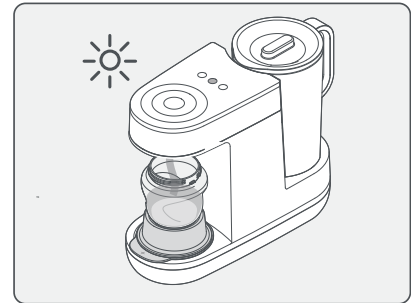

- 9.** The Power button (N) will flash to let you know the machine is preparing to dispense. Expect a slight delay before water is dispensed.

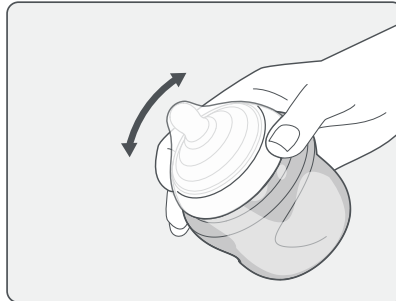

- 10.** The bottle is ready when the power button turns green. Add the sterilised teat, screw ring and hood and swirl.

FOR YOUR CHILD'S SAFETY ALWAYS CHECK FOOD TEMPERATURE BEFORE FEEDING BY TESTING ON A SENSITIVE PART OF YOUR SKIN.


YOUR BOTTLE IS NOW READY TO SERVE!

Descaling your Perfect Prep®




The descaling process will remove deposits of calcium and other minerals in the system that may affect its performance.


The 'calc' or descaling icon (J) will illuminate when the unit requires descaling soon. If the light flashes, you should descale immediately.

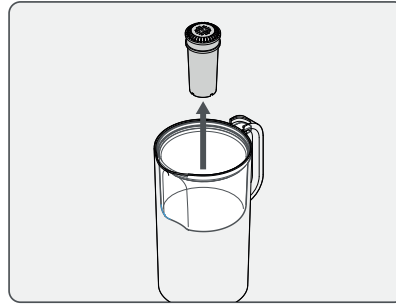


1. Remove the filter hopper and filter (always place them on a clean surface).

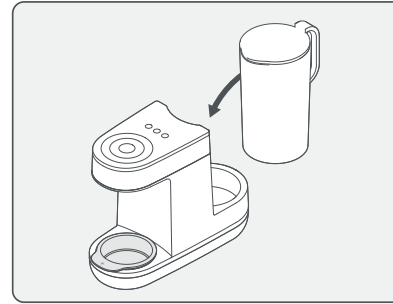


2. Put the water jug in place.

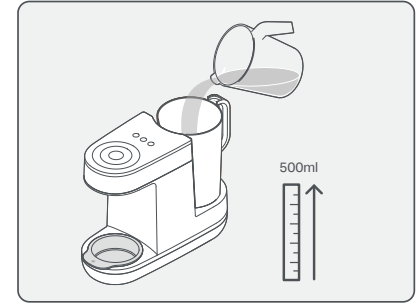


3. Add 500ml white vinegar to the water jug.

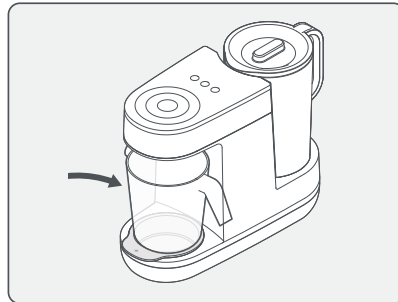

4. Put an empty container under the outlet.

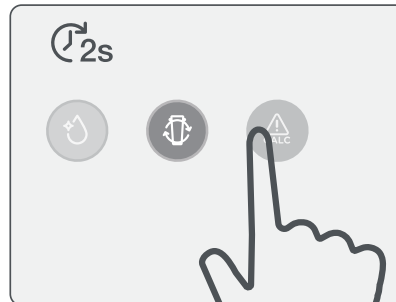

5. Press and hold descale button for 2 seconds. If you need to pause, press the button again. Press and hold the same button for 2 seconds if you need to cancel.

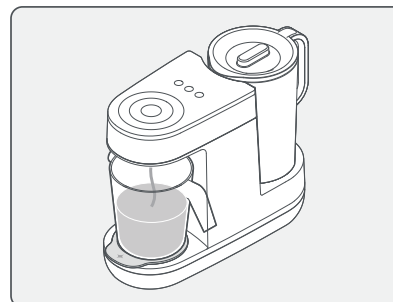

6. The descale cycle will stop and start to allow the vinegar to clean the machine. This is normal. When complete, pour the vinegar away.

SUCCESS!
RUN THE CLEANING CYCLE TWICE TO REMOVE ANY REMAINING VINEGAR IN THE SYSTEM.

THE MACHINE MAY MAKE A LOUD SOUND FOR AROUND 10 SECONDS AT THE END OF THE DESCALE CYCLE. THIS IS NORMAL.

SEE CLEANING CYCLE INSTRUCTIONS.

Troubleshooting



Icon	Issue	Possible cause	Solution
	Bluetooth is not connecting.	Perfect Prep® unit too close to other electronic devices like microwaves may be affecting coverage.	Move Perfect Prep® away from electronic devices like microwaves.
		Your mobile phone is on battery saving mode.	Ensure your mobile phone is fully charged and is not on battery saving mode.
		Location services on your mobile is disabled.	Ensure the location services on your mobile is enabled.
		TT App does not have permission to phones BLE	Ensure permissions are enabled.
	Solid orange light on Bluetooth icon.	No phone is paired with the unit.	Press and hold Bluetooth button for 2 seconds to reset the Bluetooth connection and follow instructions on the Tommee Tippee® app to pair.
	Pulsing blue light on Bluetooth icon.	Perfect Prep® unit is searching for a device to pair with.	Follow instructions on the Tommee Tippee® app to pair.
	Solid red light on power button and number 5 on the setting dial lights up.	The machine may be too warm. Operating temperature range is between 5°C and 28°C.	Empty the water jug and refill with cool tap water, switch off at the main power supply to reset.
	Flashing red light on power button.	The cycle has been stopped.	You must discard the feed and start the bottle preparation again from step 1. The light will flash for 20 seconds before going back to white, this will indicate you can start again.
	Solid orange light on filter replacement icon.	Its time to think about replacing your filter.	Order a new filter from the Tommee Tippee® app or visit our website (tommeetippee.com)
	Flashing orange light on filter replacement icon.	The Perfect Prep® will not allow you to continue use until you replace the filter.	The filter must be changed immediately for your child's safety and health. Follow steps to replace your filter.
	Solid orange light on descale icon.	Your Perfect Prep® needs to be descaled.	Follow the Descaling instructions.
	Flashing orange light on descale icon.	The Perfect Prep® will not allow you to continue use until you descale the machine.	Follow the Descaling instructions.

Troubleshooting



Icon	Issue	Possible cause	Solution
	Solid orange light on cleaning icon.	Your Perfect Prep® needs to be cleaned.	Follow the Cleaning Cycle instructions.
	Solid orange light on water level low icon.	The water level in the water jug is too low.	Ensure you have enough water in the water jug.
	Solid orange light on temperature warning icon.	The water in the jug may be too warm. Operating temperature range is between 5°C and 28°C.	Empty the water jug and refill with cool tap water.
	The unit has stopped working.	If you have not replaced your filter and the filter replacement icon is flashing.	The filter must be changed immediately for your child's safety and health. Follow steps to replace your filter.
	The filter is taking too long to filter water.	The filter requires priming before use to release any air bubbles and allow the water to flow.	Fully submerge the filter and tap the base of the filter on the side of the jug or basin for approximately 5 minutes to release any air bubbles.

For further support and FAQs, visit the app or the product support page at tommeetippee.com.

Technical information



Model: 1245-1, 1245-2

Voltage: 220 - 240V ~

Frequency Band:
50Hz - 60Hz 820W

Class of Protection: 1

Made in China.



INFORMATION ON THE DISPOSAL FOR WASTE ELECTRICAL & ELECTRONIC EQUIPMENT (WEEE)

This symbol means that your product shall be disposed of separately from household waste in accordance with local laws and regulations. When this product is ready for disposal, take it to a collection point designated by local authorities. Separating and recycling of your product at the time of disposal will help conserve natural resources and ensure that the product is recycled in a manner that

protects human health and the environment. Penalties may be applicable for the incorrect disposal of this product in accordance with national legislation.

Warranty

If the unit is damaged from new the unit must be returned to the manufacturer. If within a retail warranty period this product should be exchanged at place of purchase. The manufacturer will then be made aware. 2-YEAR WARRANTY when you buy direct from tommeetippee.com

RED Declaration Hereby, Mayborn (UK) Limited declares that the radio equipment type Perfect Prep® is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
www.tommeetippee.com/contact-us

PSTI Statement of Compliance



Product Name: Tommee Tippee Perfect Prep D&N

Model: 1245

Manufacturer: Mayborn (UK) Limited, Balliol Business Park, Newcastle Upon Tyne, NE12 8EW

This statement of compliance has been prepared by Mayborn (UK) Limited. It is the opinion of Mayborn (UK) Limited that the object of the declaration described above has been deemed to comply with the compliance conditions contained within Schedule 2 of The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023, (The PSTI Regulations). The object of the declaration described above, complies with the following standard: EN ETSI 303 645 V2.1.1 (2020-06) Cyber Security for Consumer Internet of Things: Baseline Requirements, cyber security provisions 5.1, 5.2 and 5.3. In accordance with the requirements of the PSTI Regulations the object of this declaration will be supported for a minimum of 24 months from the date of sale.

Signed for on behalf of Mayborn UK Ltd

Alison Evans
General Counsel
17 June 2025

استكشاف الأخطاء وإصلاحها

أيقونة	خطب ما	السبب المحتمل	الحل
ⓘ	يظهر ضوء برتقالي ثابت على أيقونة التنظيف.	جهاز Perfect Prep® الخاص بك بحاجة إلى التنظيف.	اتبع تعليمات دورة التنظيف.
ⓘ	يظهر ضوء برتقالي ثابت على أيقونة منسوب المياه المنخفض.	منسوب المياه في قنينة المياه منخفض جداً.	تأكد من وجود قدر كافٍ من المياه في قنينة المياه.
ⓘ	يظهر ضوء برتقالي ثابت على أيقونة التحذير من درجة الحرارة.	قد يكون الماء الموجود في القنينة أدفاً من اللازم. يتراوح نطاق درجة الحرارة المناسبة للتشغيل بين 5 درجات مئوية و 28 درجة مئوية.	أفرغ قنينة المياه وأعد ملاًها بماء فاتر من الصنبور.
ⓘ	الوحدة توقفت عن العمل.	إذا لم تقم باستبدال الفلتر الخاص بك وتومض لديك أيقونة استبدال الفلتر.	يجب تغيير الفلتر على الفور حفاظاً على سلامة وصحة طفلك. اتبع الخطوات لاستبدال الفلتر الخاص بك.
ⓘ	الفلتر يستغرق وقتاً طويلاً جداً لتنقية المياه.	يتطلب الفلتر تحضيراً قبل الاستخدام من أجل التخلص من أي فقاعات هواء والسماح بتدفق المياه.	اغمر الفلتر بالكامل وأربت على قاعدة الفلتر من جانب القنينة أو الحوض لمدة 5 دقائق تقريباً للتخلص من أي فقاعات هواء.

لمزيد من الدعم وللوصول إلى الأسئلة الشائعة، قم بزيارة التطبيق أو صفحة دعم المنتج على tommeetippee.com

المعلومات الفنية

معلومات بشأن التخلص من نفايات المعدات الكهربائية والإلكترونية (WEEE)

يعني هذا الرمز أنه سيتم التخلص من منتجك بشكل منفصل عن النفايات المنزلية وفقاً للقوانين واللوائح المحلية. عندما يحين وقت التخلص من هذا المنتج، خذه إلى إحدى نقاط التجميع المحددة من قبل السلطات المحلية. سيساعد فصل منتجك وإعادة تدويره عندما يحين أوان التخلص منه في الحفاظ على الموارد الطبيعية وضمان إعادة تدوير المنتج بطريقة تحافظ على صحة الإنسان وعلى البيئة. قد يتم تطبيق عقوبات على التخلص من هذا المنتج بصورة غير مناسبة وفقاً للتشريعات الوطنية.

الضمان

في حالة تلف الوحدة في حلتها الجديدة، يجب إرجاعها إلى الشركة المصنعة. إذا كان ذلك خلال فترة سريان ضمان الشراء من المتجر، فيجب استبدال المنتج من مكان الشراء. وسيتم بعد ذلك إعلام الشركة المصنعة. ضمان لمدة عامين عند الشراء مباشرة من موقع tommeetippee.com بموجب إعلان التوجيه الأوروبي المتعلق بالمعدات الراديوية، تعلن شركة مايورن (المملكة المتحدة) المحدودة أن نوع الجهاز الذي يعمل بموجات الراديو [اسم المنتج] يتوافق مع توجيه الاتحاد الأوروبي 2014/53/EU. النص الكامل لإعلان المطابقة للاتحاد الأوروبي متاح على عنوان الموقع الإلكتروني التالي: www.tommeetippee.com/contact-us



الموديل: 1245-1, 1245-2
الجهد: 220 - 240 فولت ~
نطاق التردد:
50 هرتز - 60 هرتز 820 واط



فئة الحماية: 1
صُنع في الصين.




استكشاف الأخطاء وإصلاحها

أيقونة	خطب ما	السبب المحتمل	الحل
✱	البلوتوث لا يتصل.	وحدة بيرفيكت بريب Perfect Prep قريبة جداً من الأجهزة الإلكترونية الأخرى مثل أجهزة الميكروويف وقد يؤثر ذلك على التغطية.	انقل ماكينة Perfect Prep بعيداً عن الأجهزة الإلكترونية مثل أجهزة الميكروويف.
		هاتفك النقال في وضع توفير الطاقة.	تأكد من أن هاتفك المحمول مشحون بالكامل وأنه ليس في وضع توفير الطاقة.
		تم إيقاف تشغيل خدمات المواقع على هاتفك.	تأكد من تفعيل خدمات المواقع على هاتفك المحمول.
		ليس لدى تطبيق تومي تيبّي تصريح بالاقتران ببلوتوث الهواتف منخفض الطاقة.	تأكد من تمكين السماح بالاقتران.
✱	يظهر ضوء برتقالي ثابت على أيقونة البلوتوث.	لا يوجد هاتف مقترن بالأوحدة.	اضغط مع الاستمرار في الضغط على زر البلوتوث لمدة ثانيتين لإعادة ضبط اتصال البلوتوث واتبع التعليمات الموجودة على تطبيق تومي تيبّي Tommee Tippee® للاقتران.
✱	يظهر ضوء أزرق نابض على أيقونة البلوتوث.	تبحث وحدة بيرفيكت بريب Perfect Prep عن جهاز للاقتران به.	اتبع التعليمات الموجودة على تطبيق تومي تيبّي Tommee Tippee® للاقتران.
	يضيء زر التشغيل بضوء أحمر ثابت ويضيء الرقم 5 على قرص الإعداد.	قد يكون الجهاز أدفاً من اللازم.	أفرغ قنينة المياه وأعد ملاًها بماء فاتر من الصنبور، ثم قم بإيقاف تشغيل مصدر الطاقة الرئيسي لإعادة الضبط.
	وميض ضوء الأحمر على زر التشغيل.	تم إيقاف الدورة.	يجب التخلص من الرضعة والبدء في تحضير الزجاجة مرة أخرى من الخطوة 1. سيومض الضوء لمدة 02 ثانية قبل أن يعود إلى اللون الأبيض، وهذا يشير إلى أنه يمكنك البدء من جديد.
	يظهر ضوء برتقالي ثابت على أيقونة استبدال الفلتر.	حان الوقت للنظر في استبدال الفلتر الموجود لديك.	اطلب فلترًا جديدًا من تطبيق Tommee Tippee® أو قم بزيارة موقعنا الإلكتروني (tommeetippee.com)
	يظهر ضوء برتقالي وامض على أيقونة استبدال الفلتر.	لن يُنح لك جهاز بيرفيكت بريب Perfect Prep مواصلة الاستخدام لحين استبدال الفلتر.	يجب تغيير الفلتر على الفور حفاظاً على سلامة وصحة طفلك. اتبع الخطوات لاستبدال الفلتر الخاص بك.
	يظهر ضوء برتقالي ثابت على أيقونة إزالة الترسبات.	جهاز Perfect Prep الخاص بك بحاجة إلى إزالة الترسبات.	اتبع تعليمات إزالة الترسبات.
	يظهر ضوء برتقالي وامض على أيقونة إزالة الترسبات.	لن يُنح لك جهاز Perfect Prep مواصلة الاستخدام لحين إزالة الترسبات.	اتبع تعليمات إزالة الترسبات.


إزالة الترسبات الكلسية من جهاز بيرفيكت بريب® Perfect Prep

ستعمل عملية إزالة الترسبات الكلسية على إزالة رواسب الكالسيوم والمعادن الأخرى الموجودة في النظام والتي قد تؤثر على أدائه.


سيضيء رمز "التكلس" أو رمز إزالة الترسبات (J) عندما تتطلب الوحدة إزالة الترسبات في وقت عاجل. إذا ومض الضوء، يجب عليك إزالة الترسبات الكلسية على الفور.

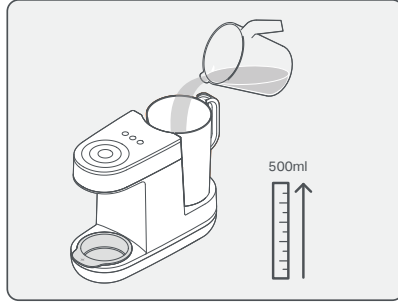

3. أضف 500 مل من الخل الأبيض إلى قنينة المياه.

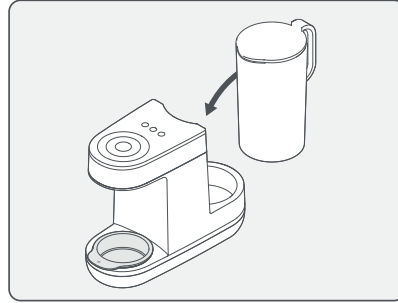


2. ضع قنينة المياه في مكانها.

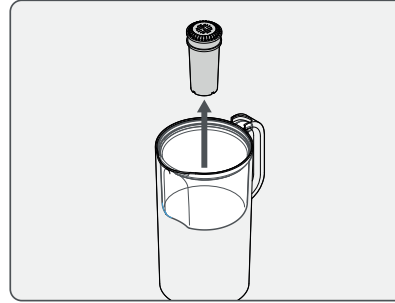

1. قم بإزالة قادوس الماء والفيلتر (ضعهما دائماً على سطح نظيف).


نجحت العملية!
قم بتشغيل دورة التنظيف مرتين لإزالة أي بقايا للخل داخل النظام. قد تصدر الماكينة صوتاً عالياً لمدة 10 ثوانٍ تقريباً في نهاية دورة إزالة الترسبات. هذا أمر طبيعي. راجع تعليمات دورة التنظيف.

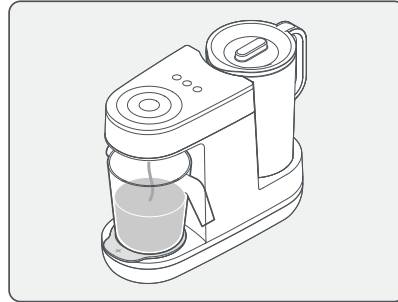

6. ستوقف دورة إزالة الترسبات وتبدأ في السماح للخل بتنظيف الماكينة. هذا أمر طبيعي. عند الانتهاء، اسكب الخل بعيداً.




5. اضغط مع الاستمرار في الضغط على زر إزالة الترسبات الكلسية لمدة ثانيتين. إذا كنت بحاجة إلى التوقف مؤقتاً، فاضغط على الزر مرة أخرى اضغط مع الاستمرار بلاضغط على نفس الزر لمدة ثانيتين إذا كنت بحاجة إلى إلغاء العملية.

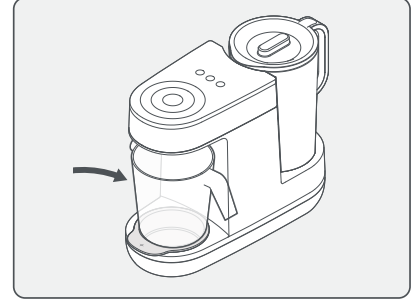


4. ضع وعاء فارغ تحت مخرج المياه.

تحضير زجاجة

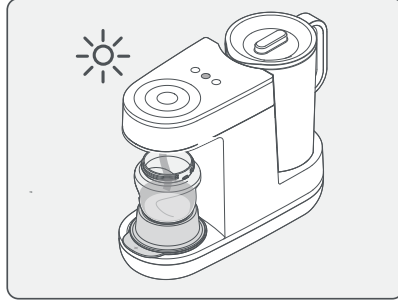


9. سيومض زر التشغيل (N) لإعلامك بأن الجهاز يستعد للتوزيع. توقع تأخيراً طفيفاً قبل توزيع المياه.

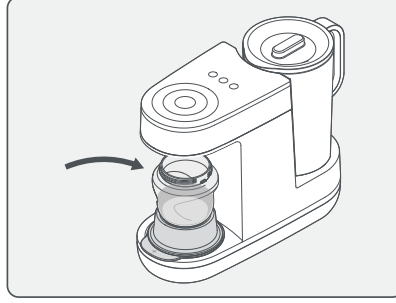


8. قم بإزالة الغطاء ثم ضع الرضاعة مرة أخرى على الحامل، اضغط على زر التشغيل (N) مرة أخرى لتوزيع الماء المتبقي.

لأغراض السلامة، أضيف الماء البارد خلال دقيقتين بعد إضافة الجرعة الساخنة. إذا استغرقت وقتاً أطول من دقيقتين أو إذا أوقفت الدورة، سيضيء زر التشغيل بلالون الأبيض. تخلص من الرضعة وكرّر عملية تحضير الزجاجة من الخطوة 1.

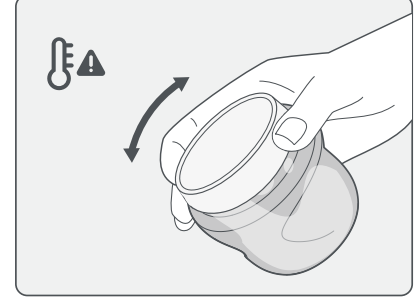

7. انتظر حتى يصدر زر التشغيل (N) نبضة قبل إزالة الرضاعة. ضع غطاء زجاجة وضع غطاء زجاجة حتى دوّبان التركيبة.

من أجل سلامة طفلك، تحقق دائماً من درجة حرارة الطعام باختباره على جزء حساس من بشرتك قبل إرضاع الطفل. زجاجة الآن جاهزة للتقديم!

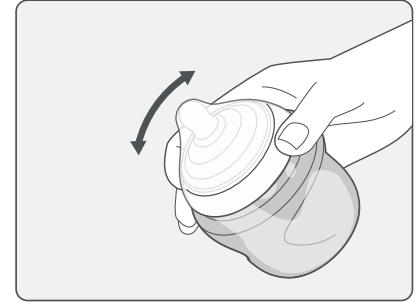

10. تكون الزجاجة جاهزة عندما يتحول لون المسحوق إلى اللون الأخضر. أضيف الحلمة المعقمة، وحلقة الربط، والغطاء ثم أدرهم. والان، الزجاجة جاهزة للتقديم!


تحضير زجاجة

إذا أردت إيقاف توزيع الماء الساخن أو البارد، فاضغط على زر التشغيل (ON) لمدة ثانيتين.


تخلص من الرضعة وابدأ في تحضير الزجاجة مرة أخرى من الخطوة 1.

تصبح الوحدة جاهزة للاستخدام من جديد عندما يضيء زر التشغيل (N) بلالون الأبيض.


تأكد من نظافة وجفاف يديك وجميع الأسطح التي تلامس بيرفيكت بريب® Perfect Prep ومكوناته (بما في ذلك الفلتر).

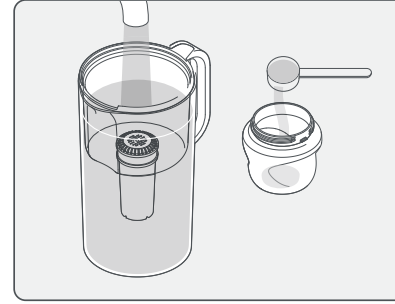


1. تأكد من أن قنينة المياه تحتوي على قدر كافٍ من المياه. اسكب مسحوق الحليب داخل الزجاجة. اتبع تعليمات الشركة المصنعة.

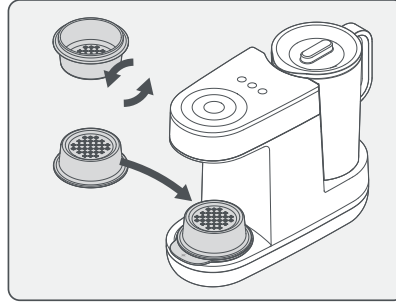


2. ضع الزجاجة بالقرب من مخرج المياه قدر المستطاع باستخدام حامل الرضعة وصينية التنقيط لتركيب السطح بالارتفاع الصحيح.

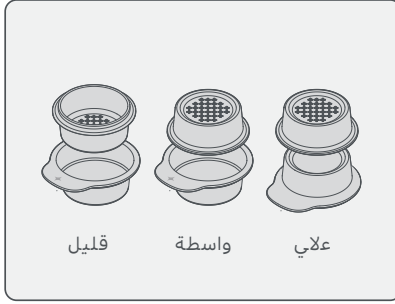


3. يمكن استخدام صينية التنقيط والحامل بالتركيبات التالية لتكوين ارتفاعات الأسطح المنخفضة، والمتوسطة، والعالية.

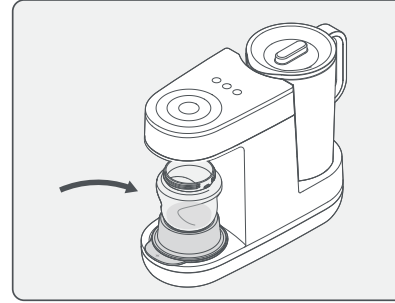

4. ضع زجاجة بها مسحوق الحليب تحت المخرج.

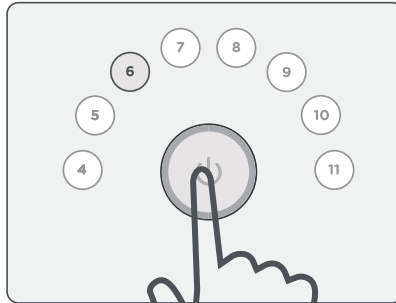


5. حدد حجم الرضعة (أونصة سائلة) من القرص واضغط على زر التشغيل (N).

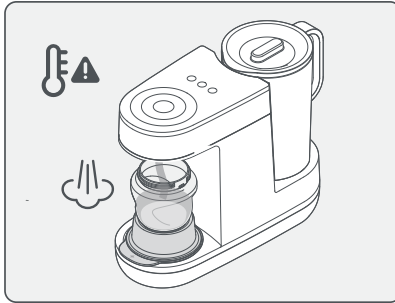


6. سيتم توزيع جرعة ساخنة من الماء. أثناء إطلاق الجرعة الساخنة، سيومض زر التشغيل (N).


استبدال الفلتر

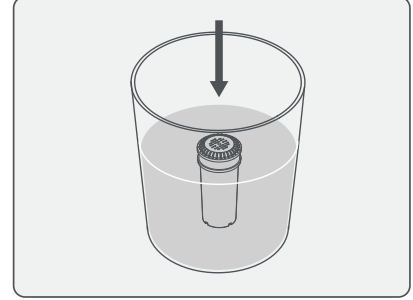


1. قم بتجهيز الفلتر الخاص بك عن طريق غمره بشكل مستقيم في وعاء من ماء الصنبور البارد. أربت على قاعدة الفلتر لإزالة أي فقاعات هواء لمدة 5 دقائق.

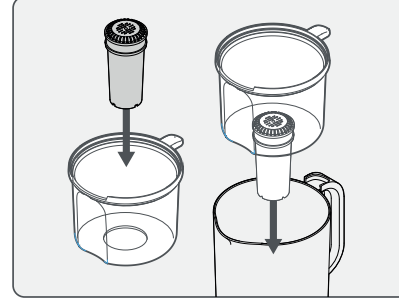


2. أدخل الفلتر في قادوس الفلتر (C) ثم أدخل قادوس الفلتر في قنينة المياه.

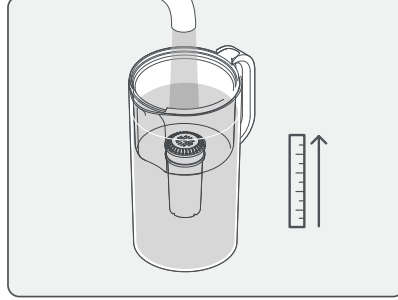


3. املاً قادوس الفلتر (C) حتى الحد الأقصى.

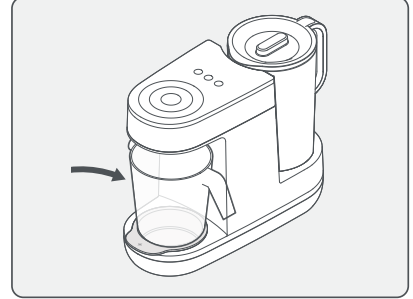



5. ضع وعاء فارغ تحت مخرج المياه.

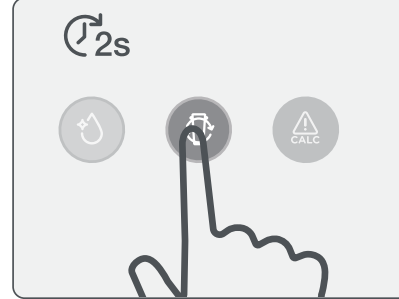


6. اضغط مع الاستمرار في الضغط على زر استبدال الفلتر (I) لمدة ثانيتين، وسيضيء ضوء التنظيف.

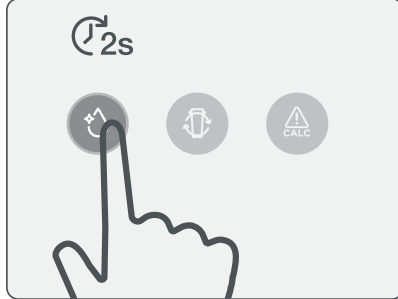

7. اضغط على زر التنظيف (H) لمدة ثانيتين لطرء الماء المتبقي.

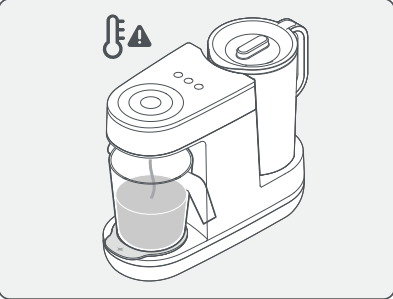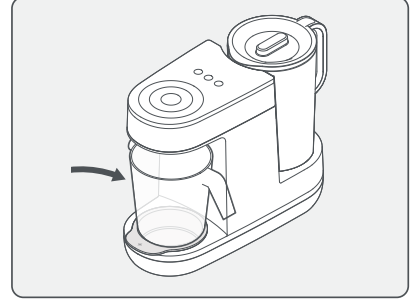

8. انتظر حتى يمر الماء عبر الجهاز. لا تقم بإزالة قنينة المياه أثناء توزيع المياه. التخلص من المياه.

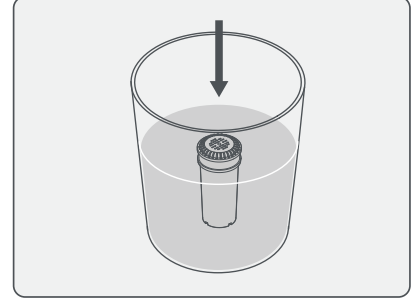

4. ضع الغطاء (A) على قنينة المياه (د) وأضيفهما إلى ماكينة بيرفكت بريب Perfect Prep®.

استبدال الفلتر



يجب ألا تقوم بإعادة ضبط عداد الفلتر إلا إذا قمت باستبداله بآخر جديد تماماً يجب تشغيل دورة التنظيف عند استبدال الفلتر. راجع تعليمات دورة التنظيف.

يأتي مع الوحدة فلتر مضاد للبكتيريا من Tommee Tippee® وهو يدوم لمدة 3 أشهر تقريباً (051 لترًا من الماء).

إذا كنت تستخدم قنينة المياه الخاصة بك للاستهلاك اليومي للمياه في منزلك (خارج الجهاز)، فيجب عليك تغيير فلتر المياه Tommee Tippee® كل 4 أسابيع لضمان الحصول على أفضل أداء.

ستعرف أن الوقت قد حان لتغيير الفلتر الخاص بك عندما يضيء رمز استبدال الفلتر (I) بلالون البرتقالي الثابت. هذا هو الوقت المناسب لطلب مجموعة فلاتر جديدة من تطبيق Tommee Tippee® أو من خلال زيارة موقعنا على الإنترنت (tommeetippee.com).


عندما تبدأ أيقونة استبدال الفلتر في الوميض (II)، يجب تغيير الفلتر على الفور من أجل سلامة وصحة طفلك.

هذا المنتج مخصص للاستخدام مع فلاتر الاستبدال من Tommee Tippee®، والتي تتوفر لدى جميع وكلاء Perfect Prep® Formula Feed Maker. لا يُصح باستخدام فلاتر مياه بديلة مع هذا المنتج فقد يعرض ذلك صحة طفلك للخطر.


تجهيز الفلتر الخاص بك

تأكد من إزالة أي فقاعات هواء أو جزيئات سائبة من الفلتر قبل الاستخدام عن طريق غمره في الماء لمدة لا تقل عن 5 دقائق. هذه خطوة ضرورية لتمكين الماء من المرور عبر الفلتر بمجرد تركيبه في الجهاز.


لا تلمس سوى الجزء العلوي من الفلتر فحسب عند التعامل معه.

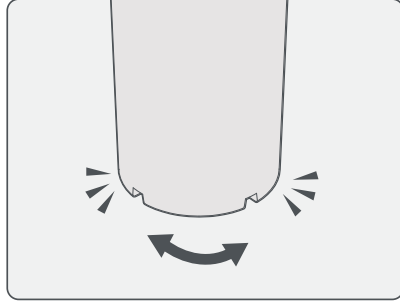

3. قم برج الفلتر وأربيت على قاعدته لإزالة أي فقاعات هواء (أثناء غمره لمدة 5 دقائق).

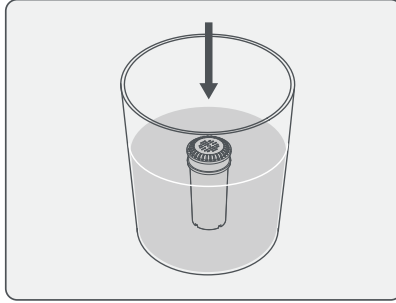


2. اغمر الفلتر في وعاء مملوء بماء الصنبور البارد.

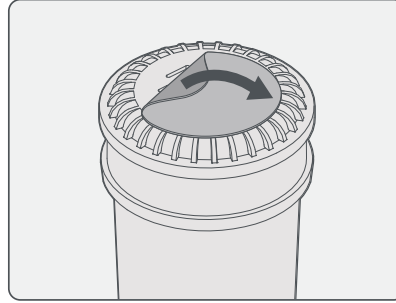

1. قم بإزالة الفلتر من العبوة وانزع المصق من أعلى الفلتر.



اتبع تعليمات استبدال الفلتر من الخطوة 3.

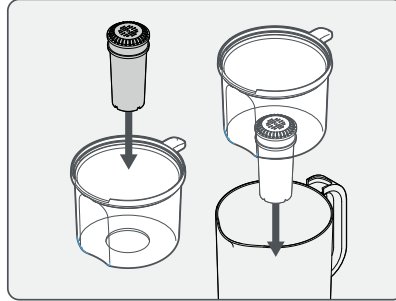

4. الفلتر جاهز للتركيب في قادوس الفلتر (C). ادفعه للأسفل حتى يستقر جيداً بموضعه.

دورة التنظيف

لا بد من تشغيل دورة التنظيف قبل الاستخدام الأول أو عندما تشير أيقونة التنظيف لذلك.

يمكن أن يستغرق استكمال هذه العملية حتى 10 دقائق. لا تقم بتركيب الفلتر الخاص بك حتى يرد ذلك في التعليمات.

لا تقم بإزالة قنينة المياه أثناء توزيع المياه.

عليك تنظيف جهاز Perfect Prep الخاص بك:


- ✦ قبل أول استخدام وكل 30 يوماً بعد ذلك.
- ✦ إن لم تستخدم الجهاز لمدة أسبوع أو أكثر.
- ✦ عند استبدال الفلتر.
- ✦ بعد دورة إزالة الرواسب.

يجب إزالة الفلتر دائماً قبل تشغيل دورة التنظيف.


بعد اكتمال دورة التنظيف الأولية، يمكنك إلغاء دورات التنظيف الإضافية بضغط المستمر على زر التنظيف لمدة ثانيتين.



3. اضغط مطولاً على زر دورة التنظيف (H) لمدة ثانيتين للبدء. إذا كنت بحاجة إلى التوقف مؤقتاً، فاضغط على الزر مرة أخرى.

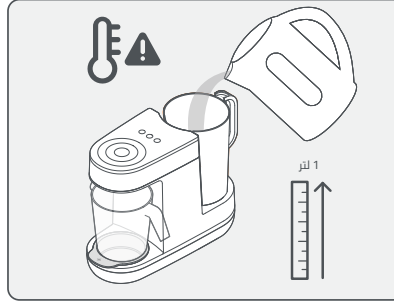


2. أضف الماء المغلي مباشرة من الغلاية إلى قنينة المياه (D). سيبقى ضوء التحذير الخاص بدرجة الحرارة (L) أثناء عملية التنظيف.

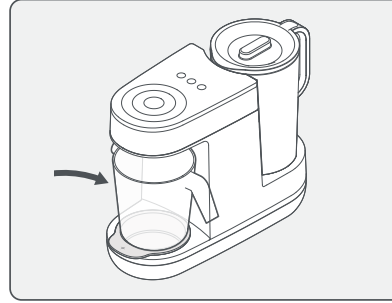


1. يجب وضع وعاء فارغ لا تقل سعته عن 1 لتر أسفل مخرج الماء.

انتقل الآن إلى تجهيز الفلتر وتركيبه لإكمال دورة التنظيف.
إن لم تكن تستبدل الفلتر بآخر جديد، فانتقل مباشرة إلى الخطوة 3 من تركيب الفلتر.

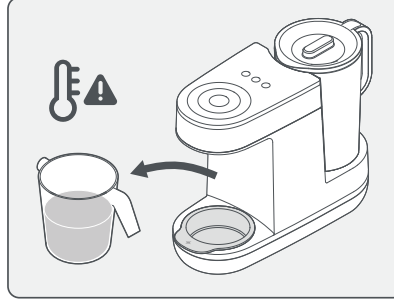

5. اسكب الماء الساخن.

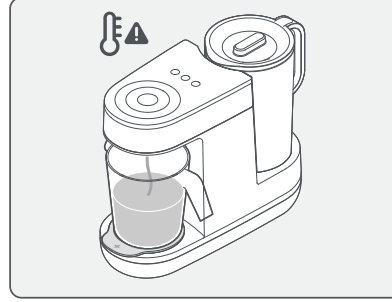

4. انتظر سريان الماء الساخن عبر النظام.



توصيل ماكينة بيرفيكت بريب® Perfect Prep بتطبيق تومي تيبّي® Tommee Tippee

يحتوي تطبيقنا على تعليمات خطوة بخطوة لتسهيل عملية التنظيف، وإزالة الترسبات الكلسية، واستبدال الفلتر. تتوفر شروح ونصائح إرشادية لإبقاء الوحدة محدّثة باستمرار. يُمكن التحكم في إشعارات التنبيه المنبثقة من خلال إعدادات هاتفك المحمول.

تطبيق تومي تيبّي® Tommee Tippee متاح للتنزيل على متاجر تطبيقات أندرويد وiOS.



دليل الإعداد السريع

يُمكن تنزيل هذه التعليمات من تطبيق تومي تيبّي® Tommee Tippee أو من على الموقع tommeetippee.com.

- 1 تنزيل تطبيق تومي تيبّي® Tommee Tippee.
- 2 يُرجى فتح التطبيق على هاتفك الذكي أو على الجهاز اللوحي الخاص بك (التابلت)، واتباع التعليمات.



وظائف إضافية

فتح/وغلق الصوت

يُمكن تنزيل هذه التعليمات من تطبيق تومي تيبّي® Tommee Tippee أو من على الموقع tommeetippee.com.


الاقتران بـ لابلوتوث

اضغط مع الاستمرار في الضغط على زرّي 4 أونصة سائلة (4 fl oz) و11 أونصة سائلة (11 fl oz) في نفس الوقت لمدة ثانيتين.


تشغيل/استعداد/إيقاف

بمجرد توصيل الوحدة، اضغط على زر الطاقة (N) لتشغيلها. ستدخل الوحدة في وضع الاستعداد بعد 81 دقيقة من عدم النشاط. ما عليك سوى الضغط على زر الطاقة (N) للإيقاف.


تعرف على ماكينة بيرفيكت بريب® Perfect Prep®

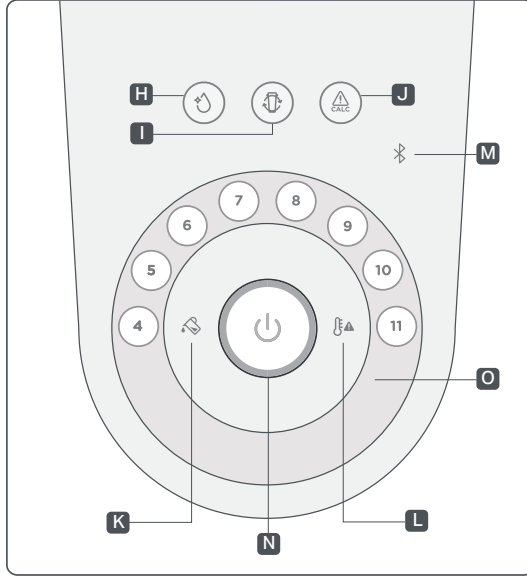

- H التنظيف
- I تركيب فلتر جديد/ إعادة ضبط عداد الفلتر
- J إزالة الترسبات
- K منسوب المياه منخفض
- L تحذير خاص بدرجة حرارة القنينة
- M الاقتران بالبلوتوث
- N زر التشغيل
- O ضبط قرص سعة السوائل بالأنصبة

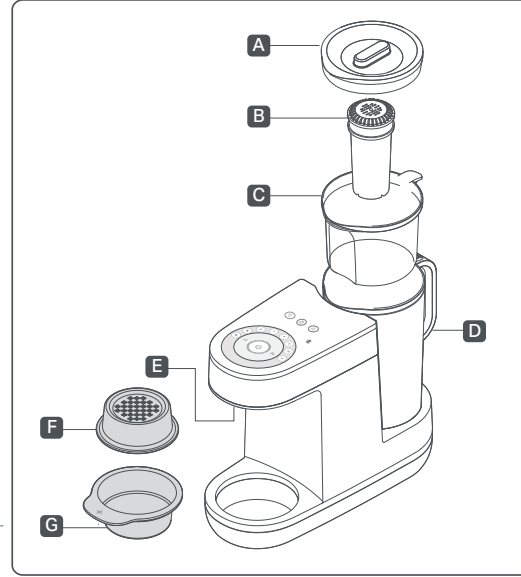

- A غطاء قنينة المياه
- B فلتر مياه تومي تيبّي® Tommee Tippee®
- C قادوس الفلتر
- D قنينة مياه متحركة
- E مخرج المياه
- F حامل الزجاجية
- G صينية تنقيط

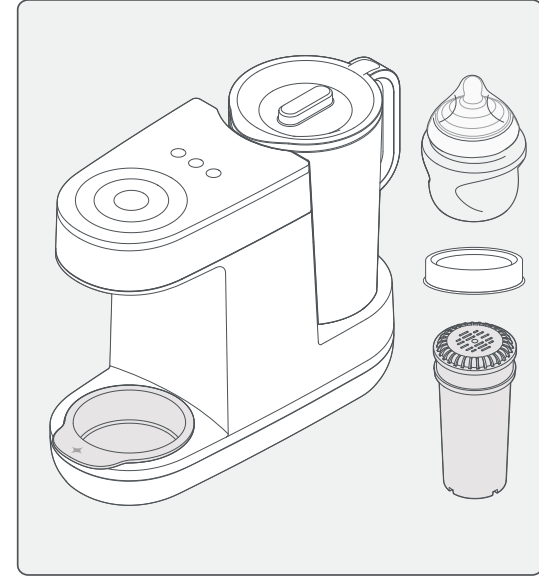

الذي في الصندوق:

- ماكينة بيرفيكت بريب® Perfect Prep®
- رضاعة ناشورال ستارت® Natural Start سعة 150 × 1 مل مع حلقة بطيئة التدفق
- 1 × غطاء محكم لتخزين الحليب
- 1 × تومي تيبّي® Tommee Tippee®
- فلتر مياه مضاد للبكتيريا

يُرجى الاحتفاظ بدليل التعليمات هذا للرجوع إليها في المستقبل لأنه يتضمن معلومات مهمة. يُمكن تنزيل هذه التعليمات من تطبيق تومبي تيببي® Tommee Tippee أو من على الموقع www.tommeetippee.com

هذا الجهاز مخصص للاستخدام المنزلي فقط.

قبل توصيل جهاز® Perfect Prep للمرة الأولى، تأكد من أن الجهد الكهربائي متوافق مع مصدر الكهرباء الخاص بك عن طريق التحقق من المصلق الموجود على قاعدة الوحدة. لا تغمر الجهاز في الماء.

للحماية من الحريق، والصدمات الكهربائية وتعرض الأشخاص للإصابة، لا تغمر السلك أو المقابس أو أجزاء أخرى من الوحدة في الماء أو أي سائل آخر. قد يؤدي سوء استخدام المنتج إلى خطر نشوب حريق أو صدمة كهربائية أو إصابة شخصية أو كل ذلك.

احتفظ بالجهاز والسلك الخاص به بعيداً عن متناول الأطفال. لا تسمح بعبء أحد الأطفال بالمنتج أو بأي مكون من المكونات.

يمكن للأشخاص ذوي القدرات البدنية، أو الحسية، أو العقلية المنخفضة أو الذين يفتقرون إلى الخبرة والمعرفة استخدام الجهاز تحت إشراف، أو إذا تم توعيتهم بتعليمات الاستخدام الآمن للجهاز بطريقة واستيعابهم المخاطر التي ينطوي عليها.

افصل الجهاز من المنفذ عندما لا يكون قيد الاستعمال وقبل التنظيف.

اترك مساحة من الوقت للجهاز حتى يبرد قبل إجراء أي عملية صيانة أو تنظيف أو قبل نقله أو تخزينه.

لا يجوز للأطفال إجراء عملية التنظيف وصيانة المستخدم.

لا تقم بلامسة الأسطح الساخنة.

يحتوي® Perfect Prep على الماء الساخن والبخار عندما يكون قيد الاستعمال.

ابق يديك بعيداً عن فوهة التوزيع لأنها قد تسبب حروقاً وسمماً.

يستخدم في منطقة جيدة التهوية.

لا تقم بتشغيل أي جهاز به سلك أو قابس تلاف أو بعد تعطل الجهاز أو تعرضه للتلف بأي شكل من الأشكال.

في حالة تلف سلك التيار الكهربائي، لا بد من تغييره بواسطة شخص مؤهل لتجنب المخاطر.

في حالة تلف الوحدة في حلتها الجديدة، يجب إرجاعها إلى الشركة المصنعة. إذا كان ذلك خلال فترة سريان ضمان الشراء من المتجر، فيجب استبدال المنتج من مكان الشراء.

يجب استخدام هذا المنتج فقط على سطح ثابت، ومستو، ومقاوم للحرارة.

لا تضعه على أو بالقرب من موقد، أو مشعل أو فرن.

لا تحرك الجهاز وهو قيد الاستعمال.

لا تدع السلك يتدلى على حافة سطح عمل المطبخ أو يلامس الأسطح الساخنة.

تم تزويد المنتج بسلك مطوي في الجزء السفلي من الوحدة للسماح لك بتعديل طول السلك بأمان.

من المستحسن إبقاء السلك قصيراً قدر الإمكان. يمكن استخدام أسلاك التمديد إذا تم توشي الحذر عند استخدامها.

لا تستخدم أي ملحقات سوى تلك المرفقة مع هذا الجهاز.

لا تقم بإزالة فتحة المياه أثناء توزيع المياه.

للاستخدام المنزلي فقط - غير مخصص للاستخدام في الأغراض التجارية

جميع حقوق الملكية الفكرية محفوظة لشركة مايبورن (المملكة المتحدة) المحدودة و/أو الشركات التابعة لها.

Mayborn (UK) Limited. Balliol Business Park,
Newcastle upon Tyne, NE12 8EW, UK.

EU Representative. Mayborn France Sarl,
56 Rue de Paris, Boilogne Bollancourt,
92100, France.

All IP rights held by Mayborn (UK) Limited and/or its affiliates.
TOMMEE TIPPEE®, PERFECT PREP®, NATURAL START®.
Copyright © 2024.
tommeetippee.com

0426773 P1