

TIPS & TECHNIQUES

When you cut your hair, you should visualize the head as if it were divided into four sections. Image below shows the different sections. Using proper techniques when moving from one section to the next will help you blend the sections together for professional looking results.

Section 4: Top of the head

Section 3: The rim or side

Section 2: Under the rim of the head

Section 1: The neckline

- The first time you cut hair, cut only a small amount of hair until you become accustomed to the length of hair each attachment guard provides.
- For best results, when cutting hair, go through hair at a slow, even speed. Don't force the clipper through the hair.
- For best results, go through the hair against the direction of your hair's growth, so you can catch more hair with the guard.
- The blades on your new clipper should be oiled every few haircuts.

SHAVER TIPS: 9149LP Only

Not all kits include a foil shaver head.

- Use shaver before washing your face or top of head.
- Always hold the shaver at a 90° right angle to your skin.
- Shave against the direction of hair growth and stretch your skin as tight as possible.

STEP-BY-STEP GUIDE FOR CUTTING HAIR



1. Comb hair and remove tangles. Add the largest attachment guard to the clipper.




2. Start at hairline on side of head and cut up to middle of head. **Note: If cut hair is too long, repeat with next smaller guard.**




3. Continue around head repeating **step 2**.




4. You are now ready to cut the middle portion of the hair.

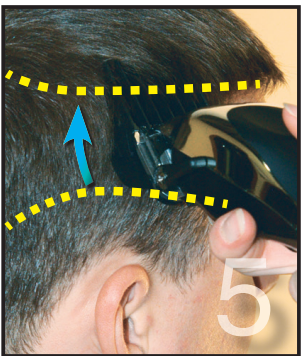

5. Use the attachment guard with the next highest number than in **step 3**. Example: If you used a #6 guard in **step 3**, select guard #7.

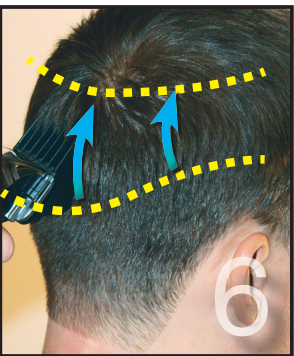

6. Continue cutting around middle portion of head as in **steps 2 and 3**.

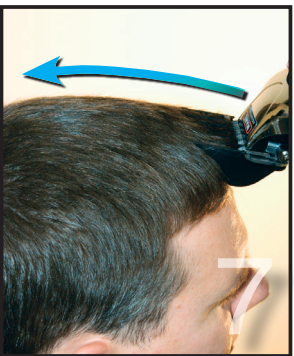

7. For cutting top of head, use the attachment guard with the next highest number than in **step 6**. Start at front bang area.



8. Cut across top of head. Comb hair on entire head to assess if further cutting is necessary.

BLENDING

When you want to blend from one section to the next, you will need to practice moving the clipper in an upward rocking motion. This motion will leave the hair slightly longer where the clipper pulls away from the scalp, enabling you to blend between the sections and achieve a smooth transition from one length of hair to the next. This technique will enhance the appearance of your haircuts.



1. Blend out any cut lines. Lines may form where you change guard sizes. Use the same guard used in **step 3**

2. Using a rocking motion, blend out the middle cut line.

3. Using the guard used in **step 8** repeat blending the top outline as needed.

DETAILING / OUTLINING



1. No attachments needed. Start with the sideburns.

2. Continue around ear as shown.

3. Trim neckline as shown.

Use clipper or battery trimmer (not all kits include a trimmer).

DISPOSAL & RECYCLING

LITHIUM BATTERY REPLACEMENT & DISPOSAL 2240LP, 9179LP, 9649LP Only

- For battery replacement send the entire, intact clipper unit to: Wahl Annex 3001 North Locust, P.O. Box 578, Sterling, IL 61081
- **Do not attempt to remove the battery. Lithium-ion batteries can explode, catch fire, and/or cause burns if disassembled, damaged, or exposed to water or high temperatures.**


- If you choose not to replace the battery, the entire clipper unit must be disposed.
- Do not attempt to remove the battery for disposal. Lithium-ion batteries may be subject to local disposal regulations. Many locations prohibit disposal in standard waste receptacles. Check your local laws and regulations.
- For recycling contact a government recycling agency, waste disposal service, retailer, or visit online recycling sources, such as www.batteryrecycling.com or www.rbr.org.

NIMH BATTERY REMOVAL & DISPOSAL 9639, 9649, 9655N Only

At the end of its life, when it can no longer take a full charge, it cannot be replaced. The clipper must be discarded, but first the battery must be removed & recycled properly. To do so, follow these steps.

Make sure the on/off switch is in the "O" or "OFF" position and the charging cord is not plugged into the clipper.

- Remove the blade or shaver attachment (see "Detachable Clipper Blade & Shaver Head" instructions).
- Remove visible screws [Red]; Remove lid inserts as needed. [Blue]
- Remove other screws after removing lid inserts as noted above. [Green] Remove lid to expose internal parts. [Light Green]
- Pull out battery and circuit board and cut off wires to remove from unit.
- Apply tape to both ends of battery before recycling or properly disposing of it, discard the entire clipper.

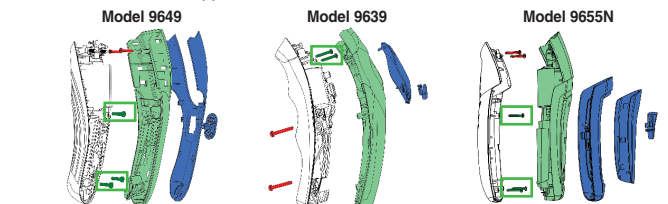

Cordless Home Haircutting



Model number can be found on the underside of the clipper.

Blade (1) Detachable Blade (2) Taper Lever (3) Charge Indicator (4) On/Off Switch (5) On/Off Button (6)

For Household Use Only

Art #56527-700 v.2021.09
© 2021 WAHL CLIPPER CORPORATION
P.O. Box 578, Sterling, Illinois 61081 USA
Printed in China

The Brand Used
By Professionals

CLIPPER OPERATION AND MAINTENANCE

OIL BLADES: The blades on your clipper should be oiled every few haircuts.

When oiling your clipper, turn the clipper "ON - I," hold the unit with the blades facing DOWN and squeeze three drops across the front of the blade and one drop on each side on the heel of the blade. Wipe off excess oil with soft cloth. **NOTICE—DO NOT OVER OIL!** Excessive oiling or application of liquids will cause damage if allowed to seep back into motor. **DO NOT USE HAIR OIL, GREASE, OR ANY OIL MIXED WITH KEROSENE OR ANY SOLVENT.**

See fig. 1

DETACHABLE CLIPPER BLADE & SHAVER HEAD:

9639, 9649, 9649LP, 9655N, 9179LP Units Only

Not all kits include both a clipper blade and shaver head.

Remove:

- Before removing blade or shaver head, make sure clipper is turned to the "O/OFF" position.
- Hold the clipper in both hands. Using both thumbs, push the blade or shaver head away from the front of the clipper as shown.
- The blade and shaver heads will both come off in one piece.

See fig. 2

Attach:

- Before adding blade or shaver, make sure the on/off switch is turned to the "O/OFF" position.
- To add attachment, place the tab on bottom of the blade or shaver into the notch found on the bottom of the clipper housing.
- Secure by pivoting attachment toward the clipper until you hear a click.

See fig. 3

CLEANING FOIL SHAVER: 9649, 9649LP Only

Not all kits include a shaver head.

- Remove cap; Press two buttons on side of shaver attachment and pull off foil head.
- Use small cleaning brush to remove excess hair. Don't use brush on foils or cutting bars.
- Foil attachment is rinseable, clipper is **NOT** rinseable.
- Replace Foil Head: Carefully re-attach onto attachment until you hear a click.
- If needed, remove cutting bars. Hold ends of cutting bar and gently lift-up to remove.
- Replacing cutting bars: Hold ends of cutting bar and gently press back into place until you hear a snap.

See fig. 4

CLEANING CLIPPER BLADES:

- Use the small cleaning brush provided to remove excess hair and debris.
- **2240LP:** Clipper and blades are **NOT** rinseable.
- **9639, 9649, 9649LP, 9655N, 9179LP:** Detachable blades are rinseable, clipper **ISN'T**.
- After cleaning blades, oil blades as noted above.

TRAVEL LOCK: 9179LP Only

9179 clippers have a push button on/off switch. The unit has a travel lock feature to prevent accidental activation during shipment and travel. To activate or deactivate the travel lock feature, press and hold the on/off button for 3 seconds.









TAPER LEVER: 2240LP Only

The taper lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut, ideal for blending and fading.

"Up" Position = Closest Cut | "Down" Position = Longest Cut

Should the blades become jammed with hair, move the taper lever up and down several times to help free up the blades.

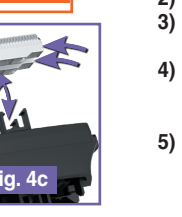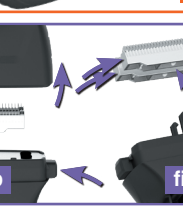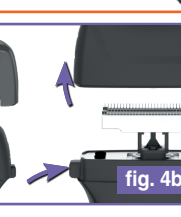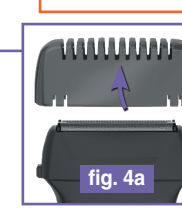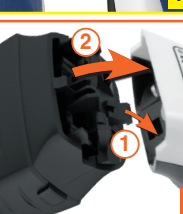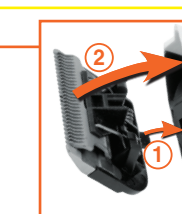

CHARGING:

- 1) **a. 9639, 9649, 9655N Only:** Unit should be charged 3-5 hours for a full charge.
b. 2240LP, 9649LP, 9179LP Clippers: Unit should be charged 2 hours for a full charge.
- 2) After initial charge, clipper can be "Quick Charged" for 15 minutes. This should allow enough power for one haircut.
- 3) To charge, turn off and connect the charging plug into an outlet at the correct voltage.
- 4) **CHARGE INDICATORS:**
a. 9639, 9649, 9655N Only: The indicator light will not turn off or change color after clipper is fully charged. The power indicator light illuminates to show when the charger is properly connected to the clipper and plugged in. Light will not indicate when the clipper needs to be recharged.
b. 2240LP, 9179LP, 9649LP Only: The indicator light will be red while charging and green when fully charged or when running. The light will flash red when the battery is low.
- 5) When clipper is not in use, it may be connected to the charging cord and plugged into an outlet to assure maximum power is available when it is next used. This detachable power supply unit (charger) is designed to charge the battery without overcharging. The clipper cannot be overcharged, so you may charge it as often as desired.

STORAGE:

- 1) The charging cord should be removed from the clipper when not charging. Leaving the cord connected to the clipper without being plugged in may cause the battery to drain.
- 2) The cord should not be used to pull the clipper. Care should be used to keep the cord untwisted and unobstructed. When stored, the cord should be coiled and unit placed in original box or storage case (if provided) and away from children.
- 3) Do not expose or store the clipper at temperatures below 0°C (32°F) or above 45°C (113°F). Avoid direct exposure to sunlight.

TROUBLESHOOTING:

If your clipper does not seem to take a charge, check the following before returning it for repair:

- 1) Check outlet operation by plugging in another appliance.
- 2) Make sure the outlet is not connected to a switch which turns the power at the outlet off.
- 3) Be sure the clipper is properly connected to the charging cord, all connections are secure and the switch on the clipper is turned "OFF - O."
- 4) If your electricity is connected to a master power switch, we suggest the clipper be disconnected from the charging cord anytime the master switch is off. Leaving the unit plugged into a dead outlet or an unplugged charger will drain the battery.
- 5) If clipper does not run and it is completely charged, turn the unit "ON - I" and pinch or push the blades manually. (Oil may have dried out between the blades, so they may be temporarily stuck together.)

EASY-TO-USE ATTACHMENT GUARDS


ATTACHMENT GUARDS:

Attachment guards help you cut hair to a desired length by keeping the blades at set distance from the skin, helping ensure an even hair length after cutting hair with a guard attached to the clipper. For easy reference, each guard is numbered and lists what length the hair will be after being cut using the noted size guard. Always start with a longer length guard (you can always use a shorter length guard if the length is not short enough). The first time you cut hair, cut only a small amount of hair until you become accustomed to the length of hair each attachment guard provides. To achieve an even "tapered" cut around the ears, use the LEFT and RIGHT tapered attachment guards. Before adding or removing guards from clipper, make sure the on/off switch is turned off (or in "O" position). Not all kits may include all the different size and style of guards listed in this instruction sheet.

ADDING:

While holding at a slight angle, place the attachment guard onto the clipper so the tips of the blade rests into the slots of the guard fingers. (fig A)

Using your thumb, push down on the guard, where the guard size number is located, until you hear a "SNAP". (fig B)

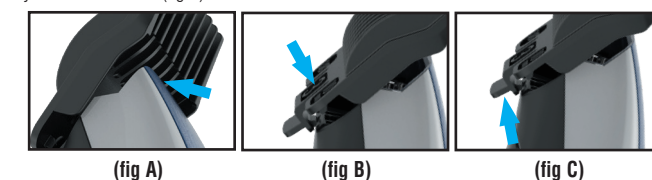

SPECIALTY ATTACHMENT GUARDS:

Not all kits include the guards shown

The cutting length of the ear taper guards ranges from 3/16" (#1-1/2") to 1/4" (#4).




EAR TAPER GUARDS:

Attach the "R" RIGHT attachment guard to the clipper as directed above.

Starting BEHIND the right ear (so shorter portion of guard fingers are closest to the ear), move the clipper upward and around towards the front side of the ear repeating as necessary. (Fig A)


Keep the "R" attachment guard on clipper. Starting on the FRONT of the left ear (so shorter portion of guard fingers are closest to the ear), move the clipper upward and around towards the back side of the ear repeating as necessary. (Fig B)

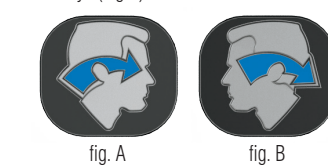

Remove the "R" RIGHT attachment guard and attach the "L" LEFT attachment guard.

Starting BEHIND the left ear (so shorter portion of guard fingers are closest to the ear), move the clipper upward and around towards the front side of the ear repeating as necessary. (Fig C)

Keep the "L" attachment guard on clipper. Starting on the FRONT of the right ear (so shorter portion of guard fingers are closest to the ear), move the clipper upward and around towards the back side of the ear repeating as necessary. (Fig D)

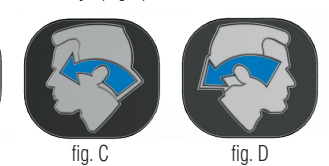

CUSTOMER SUPPORT

www.wahlusa.com
help@wahlclipper.com
1.800.767.9245

Find us on social media:
@WAHLGROOMING



Clipper How-To Info



Clipper Replacement Parts & Accessories



Digital Copy of Instruction Book

CONSEJOS Y TÉCNICAS

Cuando corte su cabello, debe visualizar la cabeza como si estuviera dividida en cuatro secciones. La siguiente imagen muestra las diferentes secciones. El uso de técnicas adecuadas cuando se desplaza de una sección a la siguiente lo ayudará a combinar las secciones para obtener resultados de aspecto profesional.



- La primera vez que corte el cabello, corte solo una pequeña cantidad hasta que se acostumbre al largo del cabello que logra con cada peine protector.
- Para obtener los mejores resultados, al cortar el cabello recórralo a una velocidad lenta y uniforme. No haga fuerza sobre la cortadora al pasarla por el cabello.
- Para obtener los mejores resultados, corte el cabello en contra de la dirección del crecimiento, para que pueda tomar más cabello con el peine protector.
- Las cuchillas de su nueva cortadora se deben aceitar cada varios cortes.

CONSEJOS PARA EL USO DE AFEITADORAS: Solamente 9149LP

No todos los kits incluyen el cabezal de la afeitadora.

- Use la afeitadora antes de lavarse la cara o la cabeza,
- Siempre sostenga la afeitadora a un ángulo de 90° de su piel.
- Afeite contra la dirección del crecimiento de su cabello y estire su piel lo más posible.

USO Y MANTENIMIENTO DE LA CORTADORA (Vea las imágenes en el reverso como referencia)

ACEITE LAS CUCHILLAS: Las cuchillas de su nueva cortadora se deben aceitar cada varios cortes.

Cuando aceite su cortadora, colóquela en posición de encendido ("ON – I"), sostenga la unidad con las cuchillas mirando hacia ABAJO y escurra tres gotas por la parte delantera de las cuchillas y una en cada lado de la parte plana de la cuchilla. Limpie el exceso de aceite con un paño suave.

IMPORTANTE: ¡NO COLOQUE ACEITE EN EXCESO!

La aplicación excesiva de aceite o líquidos ocasionará daños si se filtran hacia el motor. **NO USE ACEITE PARA CABELLO, GRASA NI OTRO ACEITE MEZCLADO CON QUEROSENO U OTRO SOLVENTE.**

CUCHILLA Y CABEZAL DE AFEITADORA DESMONTABLES DE LA CORTADORA: Solamente unidades 9639, 9649, 9649LP, 9655N, 9179LP

No todos los kits incluyen cuchilla de cortadora y cabezal de afeitadora

Retirar:

- Antes de retirar la cuchilla o el cabezal de la afeitadora, asegúrese de que la cortadora esté en la posición "O/APAGADO".
- Sostenga la cortadora con ambas manos. Usando los dos pulgares, empuje la cuchilla o el cabezal de la afeitadora para separarlo de la parte delantera de la cortadora, como se muestra.
- La cuchilla y el cabezal de afeitadora saldrán en una sola pieza.

Colocar:

- Antes de colocar la cuchilla o afeitadora, asegúrese de que el interruptor de encendido/apagado se encuentre en la posición "O/APAGADO".
- Para colocar el aditamento, coloque la lengüeta de la parte inferior de la cuchilla o afeitadora en la muesca que está en la parte inferior de la carcasa de la cortadora.
- Fijela moviendo el aditamento hacia la cortadora hasta que escuche un chasquido.


LIMPIEZA DE LA AFEITADORA: Solamente 9649, 9649LP

No todos los kits incluyen una afeitadora.

- Quite la tapa: oprima los dos botones laterales del aditamento de afeitadora y jale el cabezal.
- Use un cepillo de limpieza pequeño para eliminar el exceso de cabello. No use el cepillo en la hoja perforada ni en las barras de corte.
- El aditamento de afeitadora puede enjuagarse, la cortadora NO puede enjuagarse.
- Coloque el cabezal de afeitadora: Vuelva a colocar cuidadosamente sobre el aditamento hasta oír un chasquido.

4

GUÍA PARA CORTAR EL CABELLO PASO A PASO

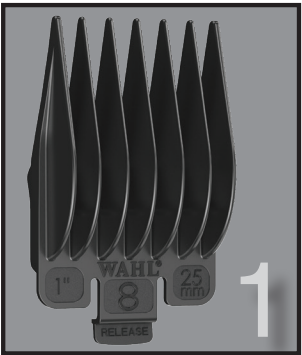


1. Peine el cabello y elimine los nudos. Coloque el peine protector más grande en la cortadora.




2. Comience en la línea de crecimiento del cabello y corte hasta la mitad de la cabeza. **Nota: Si el cabello cortado está demasiado largo, repita el procedimiento con el siguiente peine protector más pequeño.**




3. Continúe alrededor de la cabeza, repitiendo el **paso 2**.

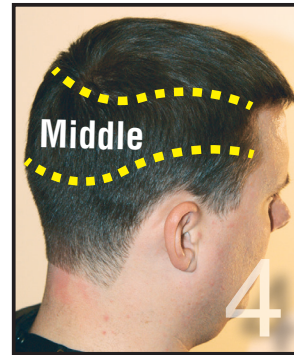


4. Ahora está listo para cortar la parte media del cabello.

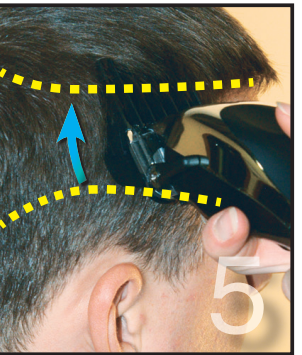

5. Use el peine protector con el siguiente número más alto que el que utilizó en el **paso 3**. Ejemplo: Si usó el peine protector 6 en el **paso 3**, seleccione el peine protector 7.

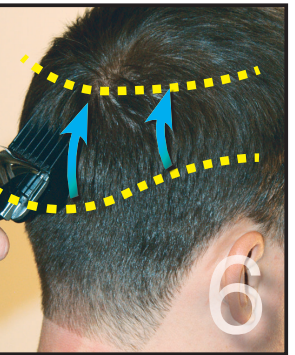

6. Continúe cortando alrededor de la porción media de la cabeza como en los **pasos 2 y 3**.

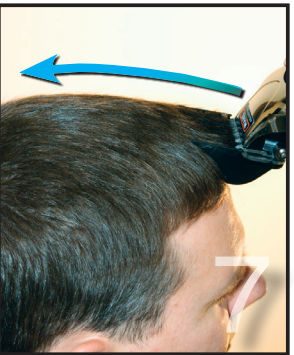

7. Para cortar la parte superior de la cabeza, use el peine protector con el siguiente número más alto que el del **paso 6**. Comience en el área del cabello de la frente.



8. Corte en toda la parte superior de la cabeza. Peine el cabello de toda la cabeza para determinar si necesita cortar más.

DESVANECIDO

Cuando desee desvanecer una sección con la siguiente, necesitará practicar cómo mover la cortadora en un movimiento oscilante hacia arriba. Este movimiento dejará el cabello levemente más largo en la zona en que la cortadora se aleja del cuero cabelludo, permitiéndole desvanecer la separación entre las secciones y obtener una transición uniforme desde una longitud de cabello a la siguiente. Esta técnica mejorará el aspecto de sus cortes de cabello.



1. Blend out any cut lines. Lines may form where you change guard sizes. Use the same guard used in **step 3**



2. Using a rocking motion, blend out the middle cut line.



3. Using the guard used in **step 8** repeat blending the top outline as needed.

DETALLAR / CONTORNO



1. No necesita accesorios. Comience con las patillas.



2. Continúe alrededor de la oreja, como se muestra.



3. Recorte la línea del cuello, como se muestra.

Como utilizar su cortadora o recortadora de baterías (no todos los kits incluyen una recortadora).


PEINES PROTECTORES DE USO FÁCIL

PEINES PROTECTORES:

Los peines protectores lo ayudan a cortar el cabello a un largo deseado al mantener las cuchillas a una distancia específica de la piel, lo que ayuda a garantizar que la longitud del cabello sea uniforme después de cortarlo con un peine protector colocado en la cortadora. Como referencia fácil, cada protector está numerado, y también especifica qué largo tendrá el cabello después de cortarlo con el peine protector del tamaño indicado. Siempre inicie con un protector de más longitud (siempre puede utilizar un protector más corto si descubre que el cabello no está lo suficientemente corto). La primera vez que corte el cabello, corte solo una pequeña cantidad hasta que se acostumbre al largo del cabello que logra con cada protector. Para lograr un corte "desvanecido" uniforme alrededor de las orejas, utilice las protecciones con reducción IZQUIERDA y DERECHA. Antes de añadir o retirar protectores de la cortadora, asegúrese de que el interruptor de energía esté apagado (o en la posición "0"). No todos los kits incluyen todos los tamaños y estilos de protectores que se indican en este instructivo.

COLOCACIÓN:

Mientras lo sostiene ligeramente inclinado, coloque el protector sobre la cortadora de manera que las puntas de la cuchilla queden sobre las ranuras en los dientes del protector. (Fig. A) Utilice su pulgar para empujar el protector hacia abajo, en donde se encuentra el número de tamaño, hasta que escuche un chasquido. (Fig. B)

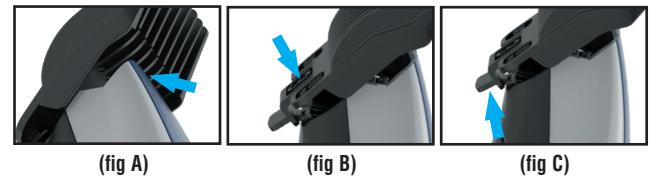

PEINES PROTECTORES ESPECIALES: No todos los juegos incluyen lo protectores que se muestran. La longitud de corte de los protectores para orejas va desde 3/16 pulg. (#1-1/2) a 1/4 pulg. (#4)



PROTECTORES PARA OREJAS:

Coloque el peine protector DERECHO (R) en la cortadora como se indicó antes.

Comenzando DETRÁS de la oreja derecha (de modo que la parte del protector con los dientes más cortos esté más cerca de la oreja), mueva la cortadora hacia arriba y alrededor, hacia la parte frontal de la oreja, repitiendo el movimiento si es necesario. (Fig. A)

Deje el peine protector "R" en la cortadora. Comenzando en la parte DELANTERA de la oreja izquierda (de modo que la parte del protector con los dientes más cortos esté más cerca de la oreja), mueva la cortadora hacia arriba y alrededor, hacia la parte trasera de la oreja, repitiendo el movimiento si es necesario. (Fig. B)

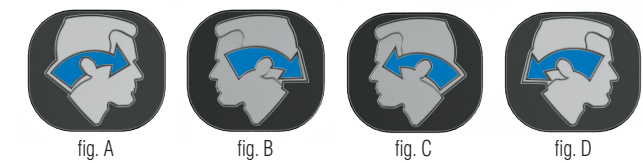


fig. A **fig. B** **fig. C** **fig. D**

Quite el peine protector DERECHO "R" y coloque el peine protector IZQUIERDO "L".

Comenzando DETRÁS de la oreja izquierda (de modo que la parte del protector con los dientes más cortos esté más cerca de la oreja), mueva la cortadora hacia arriba y alrededor, hacia la parte frontal de la oreja, repitiendo el movimiento si es necesario. (Fig. C)

Deje el peine protector "L" en la cortadora. Comenzando en la parte DELANTERA de la oreja derecha (de modo que la parte del protector con los dientes más cortos esté más cerca de la oreja), mueva la cortadora hacia arriba y alrededor, hacia la parte trasera de la oreja, repitiendo el movimiento si es necesario. (Fig. D).

SERVICIO AL CLIENTE

wahlUSA.com
help@wahlclipper.com
1.800.767.9245

Encuéntrenos en redes sociales:
@WAHLGROOMING

DESECHO Y RECICLAJE

REEMPLAZO Y DESECHO DE LA BATERÍA DE LITIO

Solamente 2240LP, 9179LP, 9649LP

- Para reemplazar la batería, envíe la unidad cortadora completa e intacta a: Wahl Annex 3001 North Locust, P.O. Box 578, Sterling, IL 61081
- **No intente extraer la batería. Las baterías de iones de litio pueden explotar, incendiarse y ocasionar quemaduras si se desarman, se dañan o se exponen al agua o a altas temperaturas.**
- Si decide no reemplazar la batería, debe desechar la unidad cortadora completa.
- No intente extraer la batería para desecharla. Pueden existir reglamentos locales que gobiernen el desecho de las baterías de iones de litio. Muchos lugares prohíben el desecho en recipientes de basura estándar. Consulte las leyes y reglamentos de su localidad.
- Para el reciclaje, comuníquese con un organismo de reciclaje gubernamental, servicio de eliminación de desechos o establecimiento minorista, o visite recursos de reciclaje en línea como www.batteryrecycling.com o www.rbrc.org.

REEMPLAZO Y DESECHO DE LA BATERÍA NIMH Solamente 9639, 9649, 9655N

Al final de su vida útil, cuando ya no puedan cargarse, no se pueden reemplazar. La cortadora debe desecharse, pero primero se debe extraer y reciclar la batería adecuadamente. Para ello, siga estos pasos.

- Asegúrese de que el interruptor de encendido/apagado está en la posición "O" o "APAGADO" y que el cable de carga no está conectado a la cortadora.
- Retire la cuchilla o el aditamento de la afeitadora (ver las instrucciones de "Cuchilla y cabezal de afeitadora desmontables").
- Quite los tornillos visibles **[rojos]**; quite los aditamentos de la tapa cuando sea necesario. **[azul]**
- Quite los demás tornillos después de quitar los aditamentos de la tapa como se indicó antes. **[verde]**
- Quite la tapa para exponer las partes internas. **[verde claro]**
- Saque la batería y el circuito y corte los cables para retirarla de la unidad.
- Coloque cinta aislante en ambos extremos de la batería antes de reciclarla o desecharla de forma adecuada, deseche toda la cortadora.

Vea las imágenes en el reverso como referencia

LIBRO DE INSTRUCCIONES



Puede ver el número de modelo en la parte inferior de la cortadora.

Cuchilla (1) Cuchilla desmontable (2) Palanca guía (3) Indicador de carga (4) Interruptor de encendido/apagado (5) Botón de encendido/apagado (6)

