1. Press and hold to enter the date setting.
2. After one setting done, Press again to get the next setting.

SET

1. On the normal using. press the [**—**] button to switch 12/24H time format.
2. On the time set, can set the date/time down

1. Under normal using, Press the [**+**] button to switch temperature unit to °C/°F
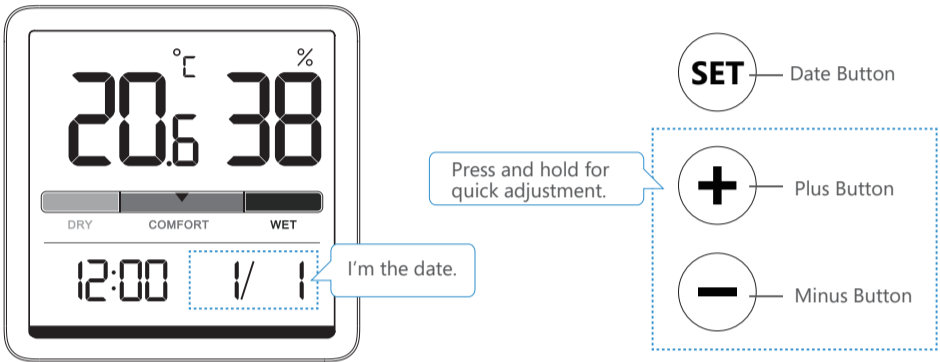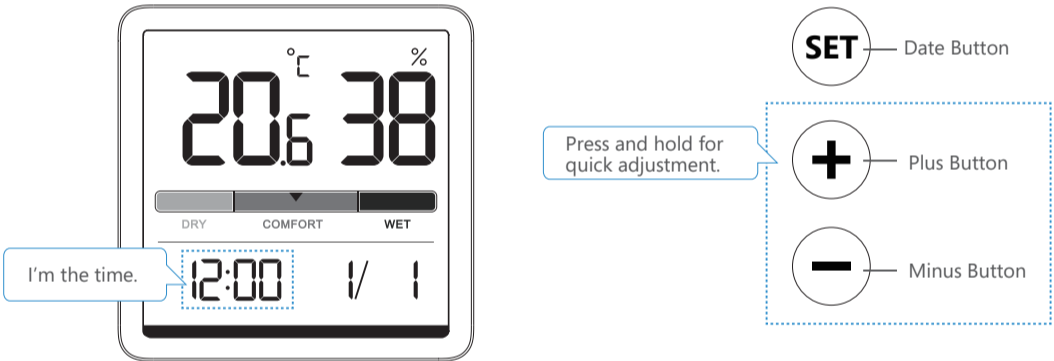2. On the time set, can set the date/time up

Chapter 1 Date and Time Setting

1. Press and hold the [**SET**] button to enter the DATE setting, the Year "2020" begins to flash, press the [**+**] to set the Year.
2. Press the [**SET**] button again, the Month "1" begin to flash, press the [**+**] or [**—**] button to adjust.
3. Press the [**SET**] button again, the Day "1" begins to flash, press the [**+**] or [**—**] button to adjust.

°C %

20.6 38

DRY   COMFORT   WET

12:00   1/ 1

I'm the date.

SET —— Date Button

Press and hold for quick adjustment.

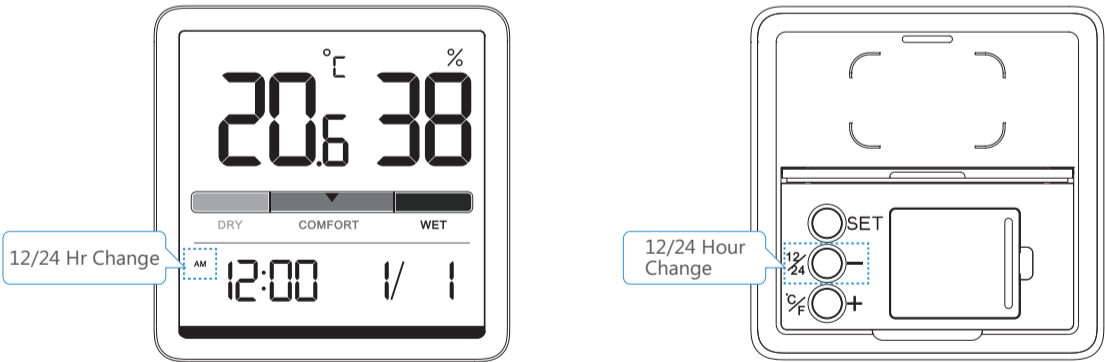**+** —— Plus Button

— —— Minus Button

→Go on

4. press the [**SET**] button again, enter Time Setting, the Hour number "12" starts to flash, press the [**+**] or [**—**] button to adjust the Hour.
5. Press the [**SET**] button again, the Minute digit "00" starts to flash, press the [**+**] or [**—**] button to adjust.
6. Press[**SET**] button to save Date and Time setting.
No operation 15S automatically can also save.

°C %

20.6 38

DRY   COMFORT   WET

12:00   1/ 1

I'm the time.

SET —— Date Button

Press and hold for quick adjustment.

+ —— Plus Button

— —— Minus Button

Chapter 2 12/24 Hr Change

Under normal using, Press the [**—**] button to switch 12/24H time format.
Note: When the 12H time format is selected, the "AM" or" PM" will display on the screen.

°C %

20.6 38

DRY   COMFORT   WET

12/24 Hr Change   AM 12:00   1/ 1

12/24 Hour Change

SET

12/24 —

°/F +

Chapter 3 °F/°C Switch

Under normal using, Press the [**+**] button to switch temperature unit to °C/°F

°F/°C Switch

°C %

20.6 30

DRY   COMFORT   WET

AM 12:57 12/30

SET

12/24 —

°F/°C Switch   °C/F +