EasyThreed®

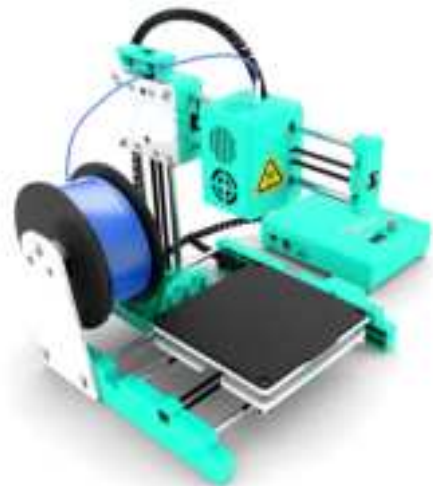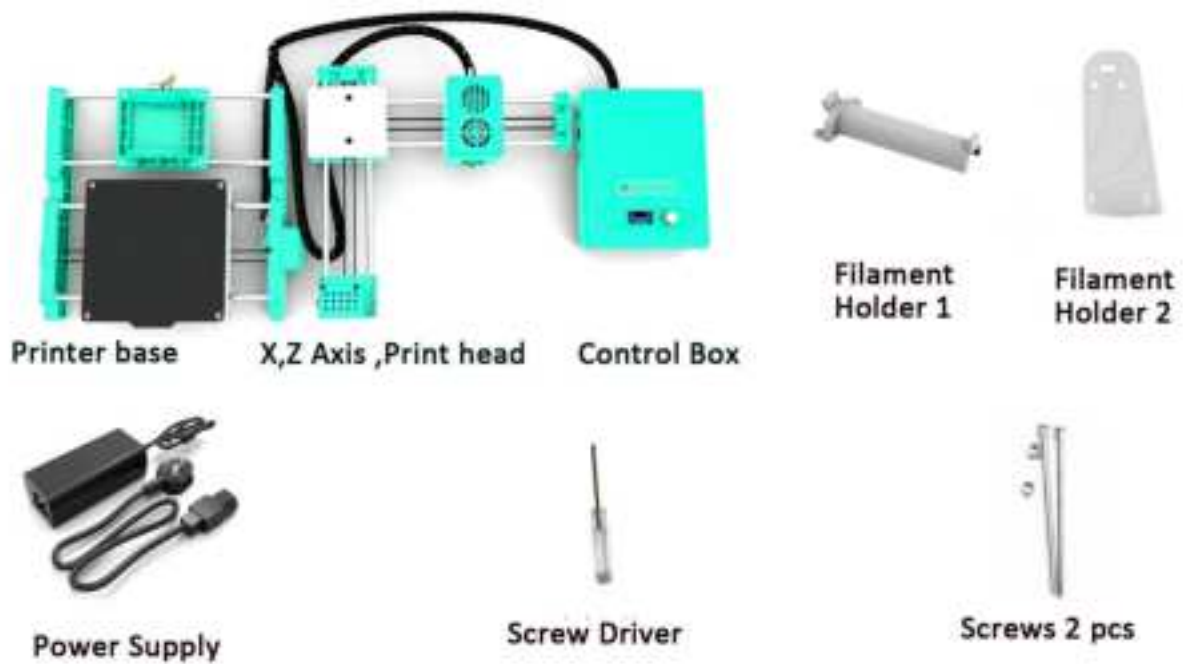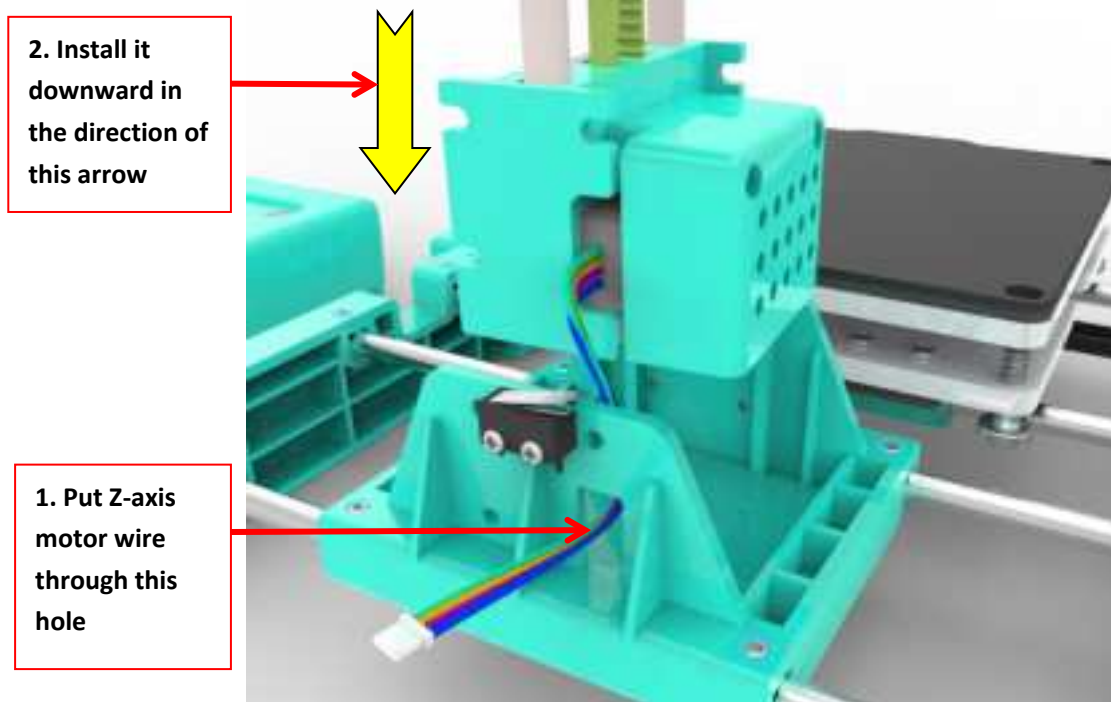# Easythreed X4 3D Printer

Install Manual

★ This manual is written in accordance

with EasyThreed X4 3D printer。

★ Printer upgrades and equipment models

are slightly different, is a normal phenomenon,

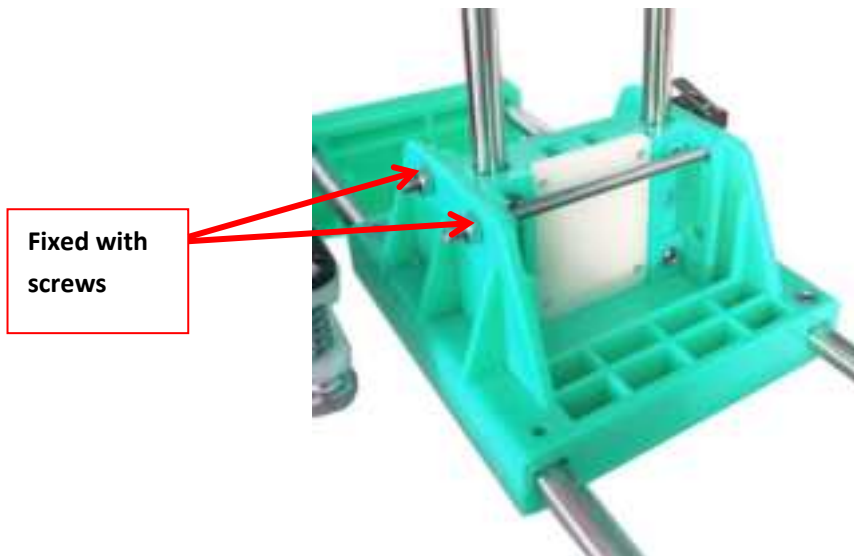based on the actual products received.

★ User's manual inside TF card.

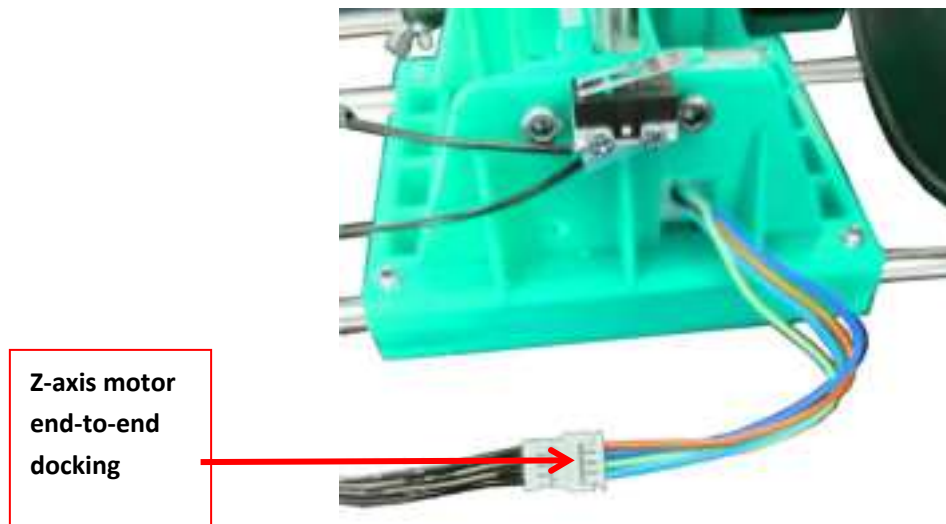Parts List：Take out parts from package , check if all parts have as listed below。

Printer base   X,Z Axis ,Print head   Control Box   Filament Holder 1   Filament Holder 2

Power Supply   Screw Driver   Screws 2 pcs

1. Install the XZ Axis set to the Printer Base.

2. Install it downward in the direction of this arrow

1. Put Z-axis motor wire through this hole

2.After insert the XZ Axis, Fixed with 2 screws.

Fixed with screws

3. Connect the Z-axis motor line to the output line of the printer control box as shown in the figure below..

Z-axis motor end-to-end docking

4.Install the Filament Holder as below.

Important Notice：This filament holder can only hang on 250g weight filament.

connect the power and start the 3D printing journey.。