


INNOKIN

EQ

QUICK START GUIDE[EN]

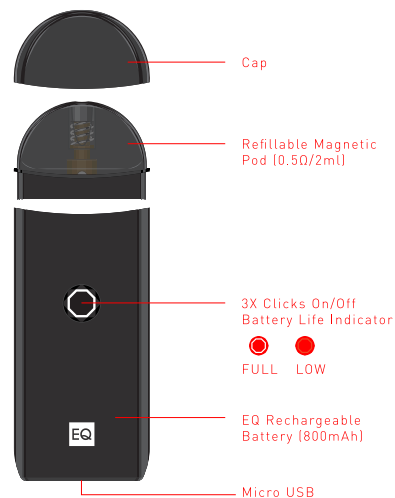

HOW TO FILL EQ POD

1 HOLD EQ POD AS SHOWN

2 TURN BASE TO OPEN

3 TURN TO FULLY CLOSE

4 INSERT POD INTO EQ

5 WAIT 5 MINUTES FOR COIL TO SATURATE



ACTIVATE BOOST MODE

● REGULAR MODE: 13.5 WATTS

● BOOST MODE: 15.5 WATTS

BOOST MODE: HEAT THE COILS WITH MORE POWER FOR MORE HEAT AND VAPOR.

1 POWER OFF THE EQ.

2 HOLD EQ POWER BUTTON FOR 3 SECONDS. LED WILL INDICATE CURRENT MODE.

● = REGULAR MODE.

● = BOOST MODE.

3 HOLD OR CLICK THE POWER BUTTON TO SWITCH BETWEEN REGULAR MODE AND BOOST MODE.

4 WAIT UNTIL THE LED POWERS OFF. ENJOY AND VAPE ON!

WARNING:

BOOST MODE IS WARMER. IF A COIL TASTES BURNED, REPLACE IMMEDIATELY AND DISPOSE OF SAFELY.

INSTRUCTION

- DO NOT LET BATTERY RUN EMPTY. RECHARGE WHEN LED IS RED.
- USE THE PROVIDED USB CABLE AND CERTIFIED WALL CHARGER TO CHARGE THE BATTERY.
- DO NOT LEAVE BATTERY UNATTENDED WHILE CHARGING.
- REPLACE THE POD IF THERE IS A BURNT TASTE.

facebook.com/Innokin.Technology

instagram.com/innokintech

twitter.com/innokintech

reddit.com/r/innokin


support@innokin.com



INNOKIN

EQ

GUIDE DE DÉMARRAGE RAPIDE[FR]

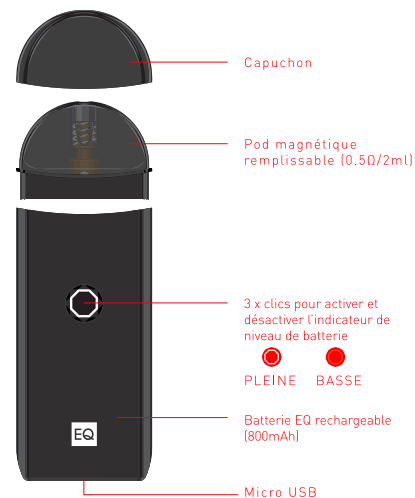

REPLIR LE POD EQ

1 TENEZ LE POD COMME ILLUSTRÉ

2 FAITES TOURNER LA BASE POUR OUVRIR

3 FAITES TOURNER POUR FERMER COMPLÈTEMENT

4 INSÉREZ LE POD DANS L'EQ

5 PATIENTEZ 5 MINUTES QUE LA RÉSISTANCE SE SATURE !



ACTIVER LE MODE HAUTE PUISSANCE

● MODE NORMAL: 13,5 WATTS

● MODE HAUTE PUISSANCE: 15,5 WATTS

MODE HAUTE PUISSANCE : CHAUFFE LES RÉSISTANCES AVEC PLUS D'INTENSITÉ POUR GÉNÉRER PLUS DE CHALEUR ET DE VAPEUR.

1 ÉTEINDRE EQ.

2 MAINTENEZ LE BOUTON D'ALIMENTATION EQ PENDANT 3 SECONDES. LA DEL INDIQUE LE MODE DE COURANT ACTUEL.

● = MODE NORMAL.

● = MODE HAUTE PUISSANCE.

3 MAINTENEZ APPUYÉ OU CLIQUEZ SUR LE BOUTON POUR BASCULER ENTRE LES MODES NORMAL ET HAUTE PUISSANCE.

4 ATTENDEZ QUE LA DEL S'ÉTEIGNE. PROFITEZ ET VAPOTEZ!

AVERTISSEMENT:

LE MODE HAUTE PUISSANCE DÉGAGE PLUS DE CHALEUR. SI UNE RÉSISTANCE DONNE UN GOÛT DE BRÛLÉ, REMPLACEZ-LA IMMÉDIATEMENT ET RECYCLEZ LACORRECTEMENT.

INSTRUCTIONS

- NE LAISSEZ PAS LA BATTERIE SE VIDER ENTIÈREMENT. RECHARGEZ QUAND LE VOYANT DEL S'ILLUMINE EN ROUGE.
- UTILISEZ LE CÂBLE USB FOURNI ET UN CHARGEUR SECTEUR CERTIFIÉ POUR CHARGER LA BATTERIE.
- NE LAISSEZ PAS LA BATTERIE SANS SURVEILLANCE PENDANT LA CHARGE.
- REMPLACEZ LE POD SI VOUS SENTEZ UN GOÛT DE BRÛLÉ.

facebook.com/Innokin.Technology

instagram.com/innokintech

twitter.com/innokintech

reddit.com/r/innokin

support@innokin.com

