

NiPOGi

User Manual

EN/IT

AK1/AK2/AK3/GK3

Thank you for choosing NiPoGi Mini PC, please read the manual carefully before using the product. If you have any unsolvable problems, please contact customer service as soon as possible, our customer service team will help you solve your problem in time.
Have a nice day. Thank you!

English user manual	01-06
Manuale utente in italiano	07-14

AK1 Series

Interface Introduction



How To Add 2.5 " DISK




1. Remove the bottom cover.
2. put in a 2.5 inch Disk , then gently push the Disk to the right card slot until it is stuck.
3. Cover the kit base.

01

AK2 Series

Interface Introduction

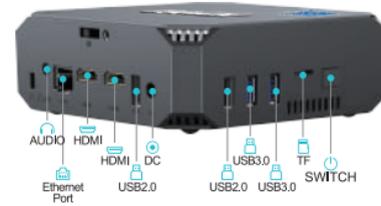

How To Add 2.5 " DISK



1. Move the switch/lever, there's a sliding "switch" on the top cover of the back that need to move over in order to remove the lid.
2. Then lift off the lid from that side, put in a 2.5 inch Disk.
3. Gently push the Disk to the right card slot until it is stuck.

02

GK3/AK3 Series(Grey/Silver) Interface Introduction



How To Add 2.5 " DISK



1. Remove one screw and then flipping a switch to take the cover off.
2. Put in a 2.5 inch Disk.
3. Gently push the Disk to the right card slot until it is stuck.

03

How To Use Mini Pc



1. Connect the Mini PC the HDMI connector of the TV or monitor with HDMI cable.
2. Connect the power adaptor into the wall socket, and the other end into the power input port of Mini PC.
3. Turn on the TV or Monitor.
4. Push the power button, then the device starts.

Package Contents



Mini PC

HDMI cable

Power adapter

VESA Mount

User manual

04

Questions And Answers

1. There was no product key in the box or email confirming the purchase of pc?

We have activated our Windows product key for you, and you can enter THIS PC. Right-click in the blank space to enter the properties, and then you can view your product key. It is not safe to send the product key in the box or e-mail. And the key has been used to activate your windows, so it cannot be used on other computers.

2. How to change the operating system of Windows OS?

First insert the flash drive, press the Delete key to enter the BIOS, then select boot, Then press Enter to enter the system priority boot menu and set the flash drive to priority boot. Then enter save.

3. Keyboard and mouse are not recognized.

We recommend that you use other keyboards, mice, and U disks to check whether the USB interface is normal. If it does not work, it means that the interface is broken, and we are willing to replace a new item for you.

4. Computer blue screen.

There are many reasons for the blue screen, such as abnormal shutdown, update, forced restart (restart halfway after power-on), and unexpected power failure. This is normal, and other computers will also, not mini PC. It is recommended that you restart, if not, it is recommended that you reinstall the system.

5. All audio is lost, no audio output.

Regarding the problem that audio cannot be output, we recommend that you do the following.

- 1) If the speaker icon shows a red X, it means the driver is lost it need to install the driver.
- 2) Check that the audio device is switched incorrectly. Right-click the speaker icon in the taskbar to open the sound control panel to set the output mode of the external amplifier. Confirm whether the default audio output of the system is HDMI (display speaker) or Speaker (external speaker).
- 3) Replace the HDMI cable and try the cable which come with the pc.
- 4) Try an external speaker.

Precautions

1. Please read all the instructions in the document before using the product.
2. The system is installed as the latest version.
3. Do not use this product in water or overheated places.

Manufacturer Information	
Name:	Shenzhen CYX Industrial CO., Ltd.
Address :	Building A, Corrent Low Carbon Industrial Zone, Huarong Road, Dalang Street, Longhua District, ShenZhen, China
After-Sales-Service-Email:	service@cyxtech.com

UK	REP	UK Representative Information
Name:		Sikes Electric Co., Ltd
Address :		63/66 Hatton Garden Fifth Floor, Suite 23, London, England, EC1N 8LE
E-mail :		yalanda.ma@outlook.com

EC	REP	EU-Bevollmächtigter
Name:		Brightstar consulting e.K.
Address :		Humboldtstr.5,31812 Bad Pyrmont Germany
E-mail :		utaundnico@hotmail.com



Manuale per l'uso

EN/DE/FR/IT/ES/NL/PL/SE/JP

Grazie per aver scelto il nostro Mini PC di marca, si prega di leggere attentamente il manuale prima dell'utilizzare il prodotto. Se avete problemi irrisolvibili, contatta il nostro servizio clienti il prima possibile, il nostro team di assistenza clienti vi aiuterà a risolvere il vostro problema in tempo. Buona giornata. Grazie mille!

Serie AK1

Introduzione all'interfaccia



Come aggiungere un disco da 2.5"?



1. Rimuovere il coperchio inferiore.
2. inserire un Disco da 2,5 pollici, quindi spingere delicatamente Disco nello slot per schede di destra finché non si blocca.
3. Coprire la base del kit.

09

Serie AK2

Introduzione all'interfaccia



Come aggiungere un disco da 2.5"?



1. Spostare l'interruttore / leva, c'è un "interruttore" scorrevole sul coperchio superiore del retro che deve essere spostato per rimuovere il coperchio.
2. Quindi sollevare il coperchio da quel lato, inserire un Disco da 2,5 pollici.
3. Spingere delicatamente Disco nello slot per schede di destra finché non si blocca.

10

Serie GK3 / AK3 (grigio / argento)

Introduzione all'interfaccia



Come aggiungere un disco da 2.5"?



1. Rimuovere una vite e quindi premere un interruttore per rimuovere il coperchio.
2. Inserisci un Disco da 2,5 pollici.
3. Spingere delicatamente il Disco nello slot per schede di destra finché non si blocca.

11

Come si usa il Mini pc?



1. Collegare il Mini PC al connettore HDMI della TV o del monitor con il cavo HDMI.
2. Collegare l'adattatore di alimentazione alla presa a muro e l'altra estremità all'ingresso di alimentazione porta del Mini PC.
3. Accendere la TV o il monitor.
4. Premere il pulsante di accensione, quindi il dispositivo si avvia.

Contenuto della confezione



Un Mini PC



Cavo HDMI



Adattatore di alimentazione



Staffa di montaggio VESA



Manuale utente

12

Domanda e risposta

1. Nella confezione o nell'e-mail di conferma dell'acquisto del PC non era presente alcun codice Product Key?

Abbiamo attivato il nostro codice Product Key di Windows per te e puoi accedere a QUESTO PC. Fare clic con il pulsante destro del mouse nello spazio vuoto per immettere le proprietà, quindi è possibile visualizzare il codice Product Key. Non è sicuro inviare il codice Product Key nella casella o nell'e-mail. E la chiave è stata utilizzata per attivare le finestre, quindi non può essere utilizzata su altri computer.

2. Come cambiare il sistema operativo di Windows OS?

Per prima cosa inserire l'unità flash, premere il tasto Canc per accedere al BIOS, quindi selezionare avvio, quindi premere Invio per accedere al menu di avvio con priorità del sistema e impostare l'unità flash per l'avvio prioritario. Quindi inserisci salva.

3. Tastiera e mouse non vengono riconosciuti.

Si consiglia di utilizzare altre tastiere, mouse e dischi U per verificare se l'interfaccia USB è normale. Se non funziona, significa che l'interfaccia è rotta e siamo disposti a sostituire un nuovo articolo per te.

4. Schermata blu del computer.

Ci sono molte ragioni per la schermata blu, come arresto anomalo, aggiornamento, riavvio forzato (riavvio a metà dopo l'accensione) e interruzione di corrente imprevista. Questo è normale e anche altri computer, non mini PC. Si consiglia di riavviare, in caso contrario, si consiglia di reinstallare il sistema.

5. Tutto l'audio viene perso, nessuna uscita audio.

Per quanto riguarda il problema che l'audio non può essere emesso, ti consigliamo di fare quanto segue.

- 1) Se l'icona dell'altoparlante mostra una X rossa, significa che il driver è stato perso, è necessario installarlo.
- 2) Verificare che il dispositivo audio sia commutato in modo errato. Fare clic con il pulsante destro del mouse sull'icona dell'altoparlante nella barra delle applicazioni per aprire il pannello di controllo del suono e impostare la modalità di uscita dell'amplificatore esterno. Verificare se l'uscita audio predefinita del sistema è HDMI (altoparlante del display) o Altoparlante (altoparlante esterno).
- 3) Sostituire il cavo HDMI e provare il cavo fornito con il computer.
- 4) Prova un altoparlante esterno.

Precauzioni

1. Leggere tutte le istruzioni nel documento prima di utilizzare il prodotto.
2. Il sistema viene installato come l'ultima versione.
3. Non utilizzare questo prodotto in acqua o in luoghi surriscaldati.

Informazioni sul produttore	
Nome:	"Shenzhen CYX Industrial CO., Ltd. "
Indirizzo:	Building A, Corrent Low Carbon Industrial Zone, Huarong Road, Dalang Street, Longhua District, ShenZhen, China
mail di servizio post-vendita:	service@cyxtech.com

UK	REP	UK Representative Information
Name:		Sikes Electric Co., Ltd
Address:		63/66 Hatton Garden Fifth Floor, Suite 23, London, England, EC1N 8LE
E-mail:		yalanda.ma@outlook.com

EC	REP	EU-Bevollmächtigter
Name:		Brightstar consulting e.K.
Address:		Humboldtstr.5,31812 Bad Pyrmont Germany
E-mail:		utaundnico@hotmail.com

