



Scan to Visit Our Website

✉ contact@oraimo.com

🌐 us.oraimo.com

oraimo

Keep Exploring


UltraCleaner Scrubber 4

OSS-204A | ELECTRIC SPIN SCRUBBER

Package Contents

- 1 x Spin Scrubber
- 1 x Flat brush
- 1 x Corner brush
- 1 x Connector bracket
- 1 x Scouring pad
- 1 x Soft cloth
- 1 x Cleaning ball
- 1 x Charging cable
- 1 x Mesh bag

Product Overview

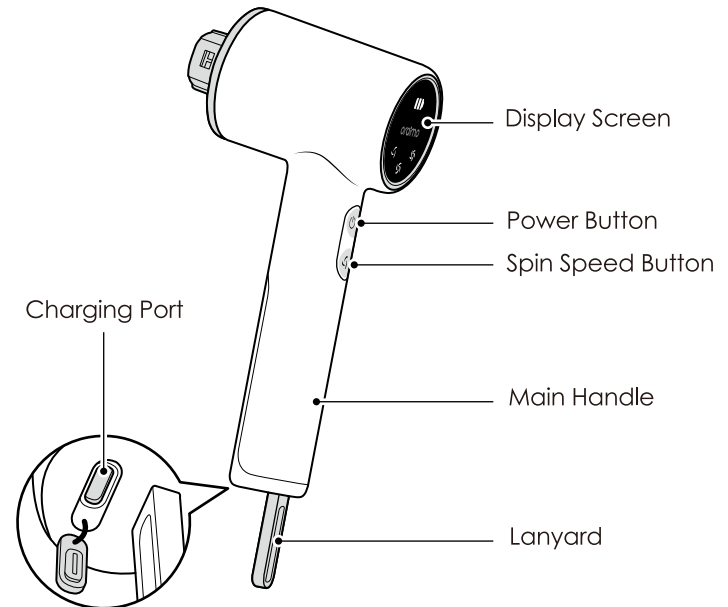

EN

User Manual

1-10



ES

Manual de usuario

11-20

LED Display

-  **Lack of power:** the last frame of power light white light flashes
-  **Charging:** the corresponding power light flashes white
-  **When fully charged:** the power icon lights up for a long time
-  **When blocking the rotation:** the white light of the corresponding gear icon flashes

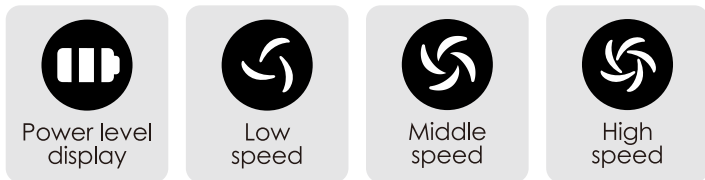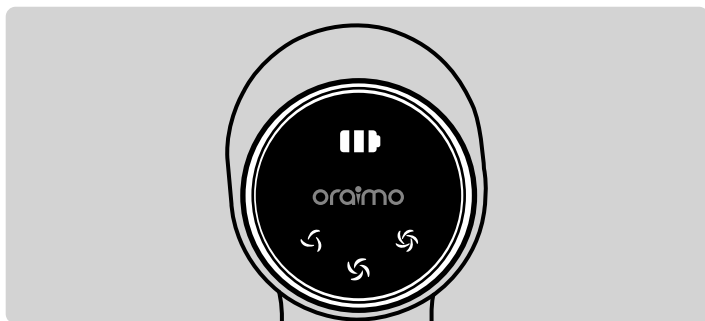

Specifications

Model	OSS-204A
Battery Capacity	2500mAh
Input	5V== 2A
Rated Voltage	DC 3.7V
Waterproof Rating	IPX7

Product Operation Instructions

Accessories Usage



Flat Brush

For cleaning small areas such as hand basins, bathtubs, showers, bathroom countertops, kitchen counters, tile walls, etc.



Corner Brush

For cleaning faucets, countertop crevices, edges, corners, cracks, kick lines and narrow places



Scouring Pad

For stubborn stains in the kitchen and bathroom areas, stoves, and hard surfaces (such as tiles, metal), this accessory can play a certain role in polishing the surface, please use it on surfaces that may not be easily scratched.



Soft Cloth Brush


For mirrors, glass windows, paint surfaces, leather sofas, cars, etc.



Cleaning Ball


For kitchen utensils, tableware, stoves, kitchen countertops, etc.

1

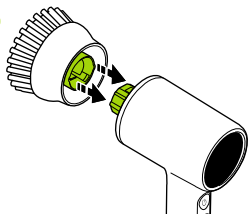


Select the brush head what you need and attach the brush head to the machine.

2

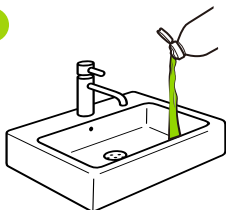


Pre-treat the clean surfaces: Immerse the clean area in water and the corresponding cleaning agent to remove dirt, stains, grease, paint, old sealant, etc.

3

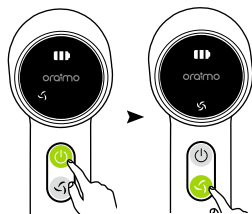

Place the brush head tip on the clean surface, switch on the machine by pressing the power button, then select the required speed to clean by pressing the spin speed button.

4

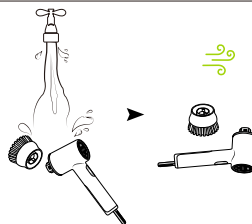

After cleaning, switch off the machine, rinse and dry the machine and brush the head before stowing them away.


Tips:

1. Please fully charge the machine before using it for the first time. (Only a type-C charging cable is provided for this product due to waste-reduction purposes. You can use a conventional 5V 2A charger to charge the machine.)
2. When you stop using the machine, please turn off the machine first and then lift the machine to remove the brush head. This prevents the remaining liquid on the brush head from splashing.
3. This product is set with three gears of speed, and the medium and low gears can meet the needs of most scenarios. The high gear is set to solve the stubborn stains and improve the cleaning efficiency, but the high speed will bring spray, please choose the speed gear reasonably according to the requirements.
4. The scouring pad and cleaning ball are for strong cleaning, and it is not recommended to use them on surfaces that are easily scratched, such as those painted with paint.

Charging Instructions



Please keep the machine charging port dry before charging

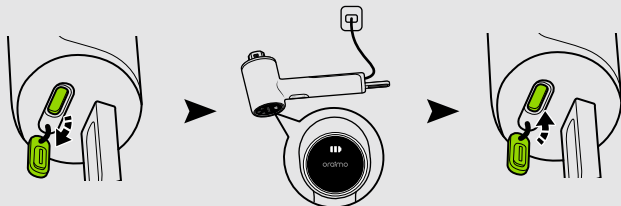

- 1 Open the silicone plug of the charging port at the tail of the handle and connect the charging cable to the charging port.
- 2 Plug the charger into the socket to start charging. The power icon on the screen will flash, and the machine will begin to charge normally. When the machine is finished charging, the power icon will stay lit.
- 3 After it is fully charged, please tighten the silicone plug of the charging port to prevent water from entering.

Troubleshooting

The troubleshooting guide addresses the most common problems. If problems persist, feel free to contact the Customer Support at contact@oraimo.com

PROBLEM	SOLUTION
Can't be charged	· Please check if the charging cable and charger are working properly. · The screen icon is abnormal: Please contact customer service for processing. · It usually takes 2-3 hours to fully charge the product. If the charging time is more than 3 hours, please contact customer service for processing.
The brush head stops working	· Please connect the power supply and recharge the machine before retesting. · Brush head is easily affected by external force and blocked. Please restart the machine. · Check whether the corresponding icon on the screen is lit. If the icon is lit but the brush head does not work, please contact after-sales for processing.

Brush hair deformation Brush head damage

- It is not advisable to apply too much external force during use. The brush can generally recover naturally after it is stationary.
- The lifespan of a brush is generally half a year. It's recommended to replace it every half a year. If you need to purchase replacement brush heads, please search for our brand on Amazon website or contact our customer service:
contact@oraimo.com

Short usage time

- Please check if there is enough power and retest after fully charging.
- Different users will use different pressures in different scenarios when using the machine. If they keep pressing the brush head or clean the surface with strong friction, or keep selecting the highest gear, the working time of the product will be less than 60 minutes. Under full charge, endurance should not be less than 20 minutes. If less than 20 minutes, please contact after-sales for processing.

Attention

1. Please read the instructions carefully before the first operation and keep the instructions for reference.
2. This product is not a toy. Close supervision is required when children are using the device or around. Please keep the product out of the reach of children.
3. If any abnormal noise, odor, smoke or any other malfunction or damage is found during operation, please turn off the switch and pull out the plug; then contact the customer support team immediately. Do not repair it by yourself.
4. DO NOT store or use it near high temperatures.
5. This device is only suitable for home use, not for commercial or industrial use.
6. Keep hair, loose clothing and body parts away from the moving parts of the product.
7. DO NOT use the device while charging.
8. It is recommended to wear rubber gloves and proper eye protection when using the product to avoid splashing soap or detergent to the skin or eyes when operating the brush head, dismantling or connecting the brush.
9. DO NOT use the product in water for a long time. If the machine is soaked in water for too long or water enters the "charging port" accidentally, please shake out the liquid and let the machine air dry for at least 24 hours.
10. After use, please rinse the brush head in clean water and thoroughly clean it. Then put it in a cool and dry environment for air drying. It is not advised to wash the machine in a washing machine.

11. After long use, there will be some heat radiation from the head of the product, which is normal heat radiation from the motor during operation. If it affects operation, please stop working for a while and then use it again.
12. Avoid pressing the brush head with force for a long time. Frequent or long press operations may damage the brush head.

Warranty Certificate

Customer's Name	
Order ID:	
Product Model:	
Problem Description:	

This product is covered by a guarantee from the date of purchase. The warranty is valid only when the warranty card is properly completed. Warranty is limited to the core product. Accessories included in the package are not covered is limited to the core product. Please contact us if you have a question or experience a problem with Spin Scrubber you purchased, we promise we will give you a satisfied shopping experience within 24 hours.



Scan to Visit Our Website

✉ contact@oraimo.com

🌐 us.oraimo.com

Made in China




Keep Exploring

ES

Contenido del Paquete

- 1 x Fregadora giratoria
- 1 x Cepillo plano
- 1 x Cepillo de esquina
- 1 x Soporte de conector
- 1 x Almohadilla limpiadora
- 1 x Paño suave
- 1 x Bola de limpieza
- 1 x Cable de carga
- 1 x Bolsa de malla

Descripción General del Producto

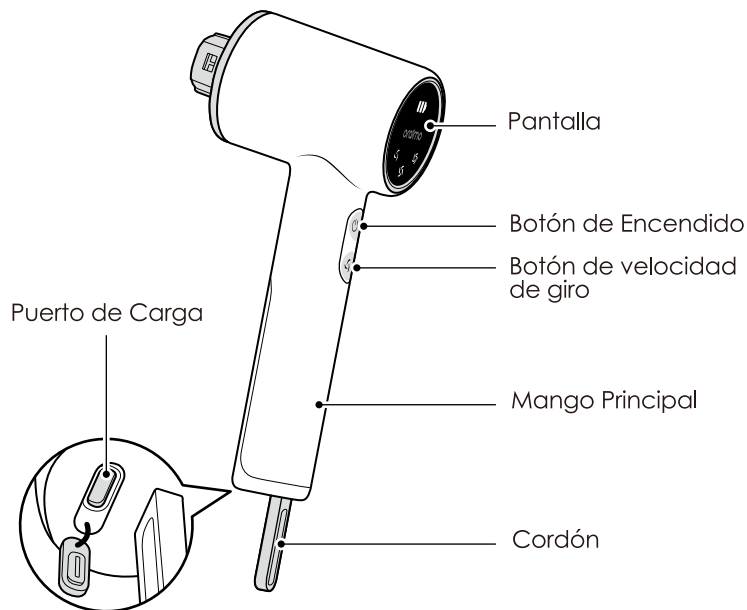

Pantalla LED



Falta de energía: el último fotograma de la luz de encendido, la luz blanca parpadea



Carga: la luz de alimentación correspondiente parpadea en blanco



Cuando está completamente cargado: el ícono de encendido se ilumina durante mucho tiempo



Al bloquear la rotación: la luz blanca del ícono de engranaje correspondiente parpadea



Visualización
de nivel de
potencia



Baja
velocidad



Velocidad
media



Alta
velocidad

Especificaciones

Modelo	OSS-204A
Capacidad de Batería	2500 mAh
Entrada	5 V $\equiv$ 2 A
Tensión Nominal	3,7 VCC
Clasificación de Impermeabilidad	IPX7

Instrucciones de Operación del Producto

Uso de Accesorios



Cepillo Plano

Para limpiar áreas pequeñas como lavabos, bañeras, duchas, encimeras de baño, encimeras de cocina, paredes de azulejos, etc.



Cepillo de esquina

Para limpiar grifos, grietas de encimera, bordes, esquinas, grietas, líneas de patada y lugares estrechos



Almohadilla limpiadora

Para manchas persistentes en las áreas de la cocina y el baño, estufas y superficies duras (como azulejos, metal), este accesorio puede desempeñar un cierto papel en el pulido de la superficie, por favor, úselo en superficies que no se puedan rayar fácilmente.



Cepillo de tela suave


Para espejos, ventanas de vidrio, superficies de pintura, sofás de cuero, automóviles, etc.



Bola de limpieza


Para utensilios de cocina, vajilla, estufas, encimeras de cocina, etc.

1

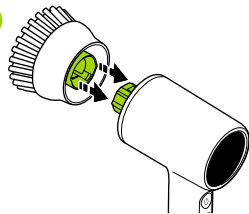


Seleccione la cabeza del cepillo que necesita y fije la cabeza del cepillo a la máquina.

2

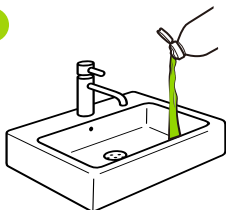


Pretratar las superficies limpias: Sumerja el área de limpieza en agua y los limpiadores correspondientes para eliminar suciedad, manchas, grasa, pintura, selladores viejos, etc.

3

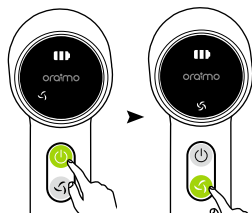

Coloque la punta de la cabeza del cepillo en la superficie limpia, encienda la máquina pulsando el botón de encendido, luego seleccione la velocidad requerida para limpiar pulsando el botón de velocidad de giro.

4

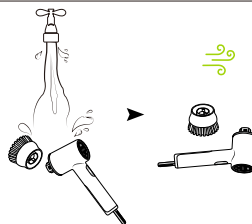

Después de la limpieza, apague la máquina, enjuague y seque la máquina y cepille el cabezal antes de almacenarlos.


Consejos:

1. Cargue completamente la máquina antes de usarla por primera vez. (Solo se proporciona un cable de carga tipo C para este producto debido a los fines de reducción de desechos. Puede utilizar un cargador convencional de 5 V 2 A para cargar la máquina.)
2. Cuando deje de usar la máquina, apague la máquina primero y luego levante la máquina para quitar la cabeza del cepillo. Esto evita que el líquido restante en la cabeza del cepillo salpique.
3. Este producto está configurado con tres marchas de velocidad, y las marchas media y baja pueden satisfacer las necesidades de la mayoría de los escenarios. El engranaje alto está configurado para resolver las manchas persistentes y mejorar la eficiencia de limpieza, pero la alta velocidad traerá aerosol, elija el engranaje de velocidad razonablemente de acuerdo con los requisitos.
4. La almohadilla limpiadora y la bola de limpieza son para una limpieza fuerte, y no se recomienda usarlos en superficies que se rayan fácilmente, como las pintadas con pintura.

Instrucciones de Carga



Por favor, mantenga el puerto de carga de la máquina seco antes de cargar

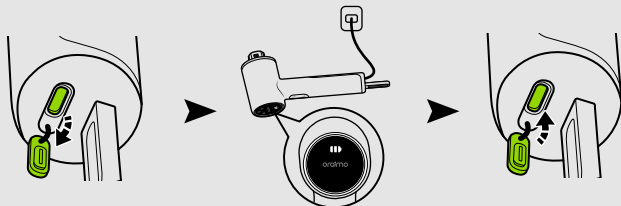

- 1 Abra el enchufe de silicona del puerto de carga en la cola del mango y conecte el cable de carga al puerto de carga.
- 2 Enchufe el cargador en la toma para iniciar la carga. El ícono de encendido en la pantalla parpadeará y la máquina comenzará a cargarse normalmente. Cuando la máquina termine de cargarse, el ícono de alimentación permanecerá encendido.
- 3 Después de que esté completamente cargado, apriete el tapón de silicona del puerto de carga para evitar que entre agua.

Solución de problemas

La guía de solución de problemas aborda los problemas más comunes. Si los problemas persisten, no dude en ponerse en contacto con la Atención al cliente en contact@oraimo.com

PROBLEMA	SOLUCIÓN
No se puede cargar	· Por favor, compruebe si el cable de carga y el cargador están funcionando correctamente. · El ícono de la pantalla es anormal: póngase en contacto con el servicio al cliente para su procesamiento. · Por lo general, se tardan 2-3 horas para cargar completamente el producto. Si el tiempo de carga es superior a 3 horas, póngase en contacto con el servicio al cliente para su procesamiento.
La cabeza del cepillo deja de funcionar	· Conecte la fuente de alimentación y recargue la máquina antes de volver a realizar la prueba. · La cabeza del cepillo se ve fácilmente afectado por una fuerza externa y se bloquea. Por favor, reinicie la máquina. · Compruebe si el ícono correspondiente en la pantalla está iluminado. Si el ícono está encendido pero la cabeza del cepillo no funciona, póngase en contacto con el servicio posventa para su procesamiento.

**Deformación del
cabello del cepillo
Daño en la cabeza
del cepillo**

- No es aconsejable aplicar demasiada fuerza externa durante el uso. El cepillo generalmente puede recuperarse naturalmente después de que está estacionario.
- La vida útil de un cepillo es generalmente de medio año. Se recomienda reemplazarlo cada medio año. Si necesita comprar cabezas de cepillo de repuesto, busque nuestra marca en el sitio web de Amazon o póngase en contacto con nuestro servicio de atención al cliente: contact@oraimo.com

Tiempo de uso corto

- Por favor, compruebe si hay suficiente energía y vuelva a probar después de cargar completamente.
- Diferentes usuarios utilizarán diferentes presiones en diferentes escenarios al usar la máquina. Si siguen presionando la cabeza del cepillo o limpian la superficie con una fuerte fricción, o siguen seleccionando el engranaje más alto, el tiempo de funcionamiento del producto será inferior a 60 minutos. Bajo carga completa, la resistencia no debe ser inferior a 20 minutos. Si es menos de 20 minutos, póngase en contacto con el servicio posventa para su procesamiento.

Atención

1. Lea atentamente las instrucciones antes de la primera operación y conserve las instrucciones como referencia.
2. Este producto no es un juguete. Se requiere una estrecha supervisión cuando los niños usan el dispositivo o alrededor. Mantenga la batería fuera del alcance de los niños.
3. Si se encuentra algún ruido, olor, humo o cualquier otro mal funcionamiento o daño anormales durante el funcionamiento, apague el interruptor y quite el enchufe; luego póngase en contacto con el equipo de atención al cliente inmediatamente. No lo repare usted mismo.
4. NO lo almacene o utilice cerca de altas temperaturas.
5. Este dispositivo solo es adecuado para el uso doméstico, no para el uso comercial o industrial.
6. Mantenga el cabello, la ropa suelta y las partes del cuerpo lejos de las partes móviles del producto.
7. NO utilice el dispositivo mientras se carga.
8. Se recomienda usar guantes de goma y protección ocular adecuada al usar el producto para evitar salpicaduras de jabón o detergente en la piel o los ojos al operar la cabeza del cepillo, desmontar o conectar el cepillo.
9. NO use el producto en el agua durante un tiempo prolongado. Si la máquina se empapa en agua durante demasiado tiempo o si el agua entra accidentalmente en el "puerto de carga", agite el líquido y deje que la máquina se seque al aire durante al menos 24 horas.

10. Después de su uso, enjuague la cabeza del cepillo con agua limpia y límpielo a fondo. Luego colóquelo en un ambiente fresco y seco para secarlo al aire. No se aconseja lavar la máquina en una lavadora.
11. Después de un uso prolongado, habrá algo de radiación de calor de la cabeza del producto, que es la radiación de calor normal del motor durante el funcionamiento. Si afecta al funcionamiento, deje de trabajar por un tiempo y luego úselo de nuevo.
12. Evite presionar la cabeza del cepillo con fuerza durante un tiempo prolongado. Las operaciones de presión frecuentes o largas pueden dañar la cabeza del cepillo.

Warranty Certificate

Customer's Name	
Order ID:	
Product Model:	
Problem Description:	

This product is covered by a guarantee from the date of purchase. The warranty is valid only when the warranty card is properly completed. Warranty is limited to the core product. Accessories included in the package are not covered is limited to the core product. Please contact us if you have a question or experience a problem with Spin Scrubber you purchased, we promise we will give you a satisfied shopping experience within 24 hours.



Scan to Visit Our Website

✉ contact@oraimo.com

🌐 us.oraimo.com



Made in China

Keep Exploring