

Manual de utilizare

D100



service@lingdu.us

Răspuns în doar 12 ore



LINGDU

www.lingdu.us

www.lingdu.us



ID FCC: 2ASWVD100

V20230629

D100

© Sunnysoft sro, distribuitor



service@lingdu.us

Scanați codul QR pentru a descărca manualul



1. Serviciu clienți



Articol defect sau deteriorat?

Descriere inexactă? Piese lipsă
sau accesorii?

Performanța sau calitatea nu este la egalitate? Ea era

Articol greșit trimis?



service@lingdu.us

Răspuns în doar 12 ore

Vă rugăm să ne contactați înainte de a returna mărfurile.

Vă vom ajuta să rezolvați orice problemă ați putea avea.

cel mai frumos.



Nota:

1. Este necesar un card microSD U3 pentru a utiliza această cameră de bord (nu este inclusă).
(părți ale livrării). Formatați-l împreună cu camera de card microSD
bord când o utilizați pentru prima dată.

Folosiți ÎNTOTDEAUNA 2.

la sursa de alimentare. Din moment ce este în

supercondensator încorporat (pentru memorie, o baterie litiu este folosit numai
metal de 1 mAh).

2. Informații importante privind siguranța

Vă mulțumim că ați achiziționat această cameră de bord LINGDU.

Acest manual de utilizare conține informații despre modul de operare a camerei de bord.
folosind o cameră de acest ghid pentru

bord pentru a asigura o utilizare adecvată.

Pentru a îmbunătăți performanța produsului, conținutul acestuia
fără

- Nu dezamblați, reparați sau modificați singur produsul .

Ea incendiu, șoc electric sau defecțiune. Pentru inspecție și
reparație pentru service

- Dacă un obiect străin intră în produs, deconectați-l imediat.
cablu de alimentare.

la serviciu și cere o reparație.

- Reglați produsul în timpul conducerii.

Ea accident. instalarea și configurarea produsului
opriți sau parcați vehiculul la

- Nu instalați produsul într-o locație în care poate interfera
câmpul vizual al șoferului.

Ea accident.

- Nu utilizați un cablu de alimentare deteriorat sau modificat.

Utilizați numai cabluri furnizate de producător.

Cablurile de alimentare deteriorate sau modificate pot provoca
explozii, incendii sau defecțiuni.

- Nu manipulați produsul cu mâinile ude.

Ea șoc electric.

- Nu instalați produsul într-un mediu cu umiditate ridicată sau inflamabil
gaze sau lichide.

Ea explozie și/sau incendiu.

- Nu lăsați produsul în apropierea sugariilor, copiilor sau animalelor de companie.
animalelor. Există riscul de a înghiți mici și/ sau

saliva lor ajunge pe produs, care explozie.

în scurt-circuit.

- Când curățați interiorul mașinii, nu pulverizați apă sau ceară direct pe
produs.

Ea incendiu, șoc electric sau defecțiune.

- Dacă cablul de alimentare emite fum sau are un miros neobișnuit
miros, deconectați-l imediat.

la serviciu sau distribuitorul dvs.

- Păstrați bornele cablului de alimentare curate.

în să se îndâmpnească și foc.

- Folosiți tensiunea de intrare corectă.

în pot apărea explozii, incendii sau defecțiuni.

- Conectați ferm cablul de alimentare, astfel încât să nu poată fi scos cu ușurință.
deconecta.

în se poate produce un incendiu.

- Nu acoperiți produsul cu niciun material.

deformarea produsului sau incendiu. Produs și

Acel periferic utilizați pe

3. În cutie

prin instalarea camerei de bord
a următoarelor elemente.

pentru fiecare dintre

4. Specificații


Model	D100
Deschidere	F=1,8
Culoare	negru
Limbă	/ japoneză / germană / franceză / spaniola/italiana/
Card de memorie	Card Micro SD Clasa 10, viteză U3, suport maxim 256 GB (nu este inclus)
Cod video	H.264
Format foto	JPG
Compresie video Regim	MP4
Rezoluție video	2560 x1440P 30 de cadre pe secundă 1920 x 1080P 30 de cadre pe secundă
Wifi	Încorporat
Baterie	Supercondensator încorporat
Interfață de alimentare	5V/1A
Temperatura de functionare	-20°C până la 70°C (-4°F până la 158°F)



Nota:

1. Pentru a îmbunătăți performanța produsului, conținutul acestuia
fără

5. Diagrama produsului

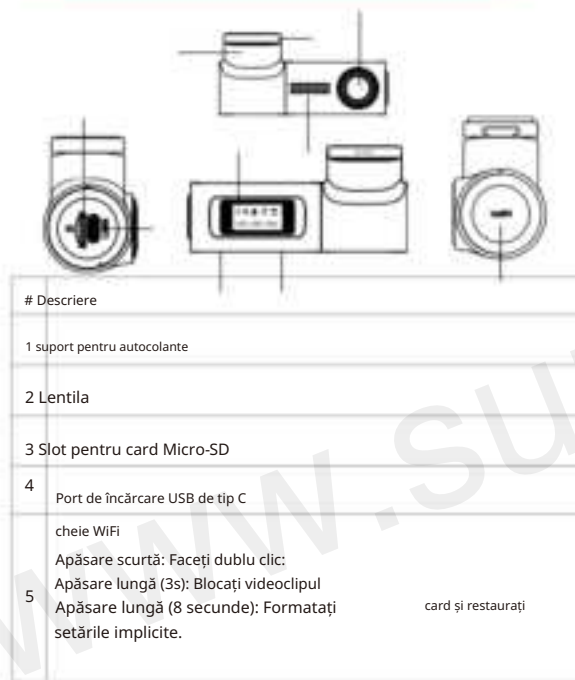


6 Difuzor

7 Display de 0,96 inch

8 Microfon

9 Butonul de resetare

10 GPS

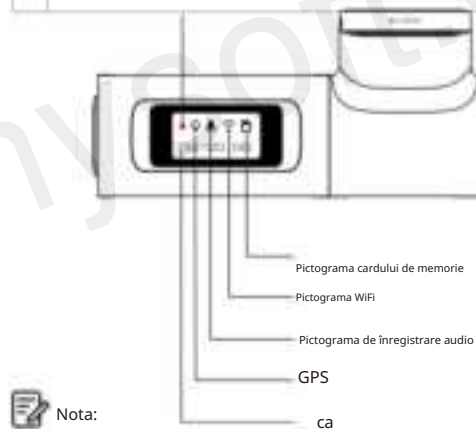

Nota:

În timpul înregistrării normale, ceasul este afișat, în timp ce
În timpul înregistrării de urgență, este afișată durata de înregistrare
a segmentului video.

	Culoare	Stat
REC	 Sclipitor	Înregistrarea unui videoclip obișnuit
	 Sclipitor	Înregistrarea unui videoclip înregistrat

6. Să începem

Camera este proiectată să pornească și să înregistreze automat, de îndată ce primește putere. Apoi salvează videoclipul și automat oprește oprirea vehiculului.

1. Pornire/oprire automată:

Conectați-
o, camera de bord se va porni automat și
După rotirea cheii în poziția LOCK, înregistrarea este salvată automat și se stinge.

2. Pornire/oprire manuală

pornit:
oprit:
secunde.



Nota:

1. Este necesar un card microSD U3 (nu este inclus) pentru a utiliza această cameră de bord. Formatați-l împreună cu card microSD camera de bord când o utilizați pentru prima dată.

2. utilizați ÎNTOTDEAUNA un la sursa de alimentare.
supercondensator încorporat (de reținut, o baterie litiu-metal de 1 mAh). Deoarece este folosit doar în

3. Camera de bord va actualiza automat aplicația când este la
LINGDU de pe telefonul dvs Wifi.

4. U camioane/autovehicule de pasageri Priza de
brichetă de 12 V este întotdeauna FIERBINĂ, ceea ce înseamnă că este alimentată constant, chiar și
când este oprit și atunci priza Dacă este vehiculul dvs.,
automată este


Funcția ON/OFF nu va funcționa. Și dacă părăsiți camera

înregistrați când mașina este oprită, atunci bateria se va descărca
a ta și este posibil să nu aveți suficientă energie
pentru fluierul de pornire al mașinii. Pentru a remedia această
situație, faceți unul dintre cele două lucruri:

camera ta de bord la cutia de siguranțe. masina folosind
automat

Schimbați în cutia de siguranțe prize de 12 V per priză,
care furnizează energie numai la de la vehicul la poziție
ACC sau ON.

7. Instalare

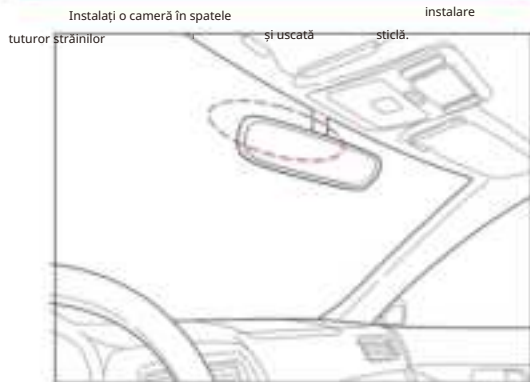

1. Introduceți cardul în slotul până când se fixează în poziție (utilizați un card micro-SD de mare viteză 10 sau mai mare).

2. la instalare sticlă loc potrivit care nu blochează tot stratul în vedere, protector străin sticlă


de autocolante electrostatice și autocolante electrostatice pe

sticlă pentru a preveni formarea pe

3. Îndepărtați folia


de protecție de pe banda cu două fețe și reglați unghiul obiectivului față de camera electrostatică.

camera de luat vederi

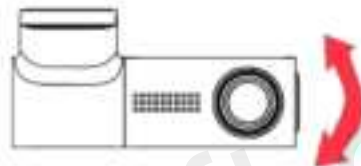

4. Conectați cablul de alimentare a brichetei și

țigară în sertar, ridicați marginile sticla si cablu de alimentare.

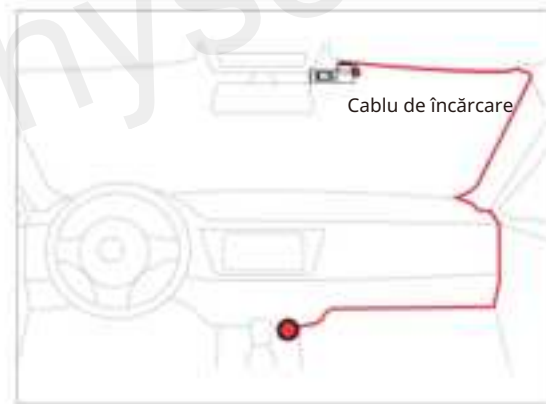

Cablul de încărcare

5. motor. camera pornește și înregistra.
Fișierele video sunt salvate automat pe motor.
cardul camerei înregistrare și se oprește.



8. Redarea unui fișier video folosind un smartphone

8.1 Verificarea videoclipurilor în timp real folosind un smartphone



Scanați codul QR și
descărcati aplicația LINGDU
APP

- 1 Căutați LINGDU
aplicații din magazinul Google Play
sau Apple App Store și
instalați-l în dvs
smartphone.

2

Accesați Setări telefon > WiFi > Selectați Dash Cam WiFi. După conectarea la WiFi, apare mesajul „No Internet Connection”, ceea ce era normal.

Deoarece camera de bord WiFi este NUMAI pentru funcția de transmisie video/foto, NU este concepută pentru a difuza înregistrări în cloud sau pe internet, ignorați acest prompt.

Nume SSID WiFi: D100 PAROLA *****

implicită: 12345678

3

După conectarea cu succes Va fi afișat modelul D100 cu camera de bord. Apăsați butonul „Verificați videoclipul în timp real”.
Va apărea interfața de previzualizare live a videoclipurilor.

4

Acum puteți vizualiza video înregistrat în prezent în timp real prin conectarea unui smartphone la camera de bord prin Wi-Fi Direct.

5

Mai întâi, opriți înregistrarea, apoi apăsați butonul „Album dispozitiv” pentru a prelua fotografii, videoclipuri și fișiere de urgență.


8.2 Descărcați fișiere video pe smartphone-ul dvs



1 **Accesați interfața**
vizualizarea camerei de bord.
Mai întâi opriți
înregistrarea și apoi
apăsați "Album dispozitiv",
pentru a prelua fotografiile,
videoclipuri și fișiere de urgență.



2 Selectați fișierele video pe
care
doriți să le descărcați pe
smartphone.

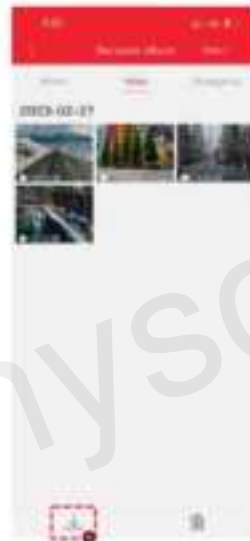

3 Apăsați pictograma
pentru a descărca fișiere video.
Cu toate acestea,
descărcarea unui singur fișier
video va dura ceva timp.



4 Puteți găsi apoi aceste
fișiere video descărcate în
meniul
interfeței originale
APP cu numele "Video local."

Aplicația nu va afișa videoclipuri live pe telefon. Numai afișaje
poza cu plaja?

Date mobile că videoclipul în direct nu va fi afișat. Dacă cererea
Aplicația nu afișează videoclipuri live date mobile „LINGDU” ale dvs
pe telefon. că „LINGDU” local este pornit.

1. Pentru iOS: „Date fără fir” Selectați pe
„WLAN”.

2. Pentru iOS mai vechi: date”. “Mobil

Cel mai recent iOS



iOS mai vechi



Nota:

1. Funcția WiFi Direct la 2. smartphone

WiFi la 10 metri.

După data aplicației LINGDU este actualizată automat

3. LINGDU este disponibil pentru iOS cu Android 5.0 și
9.0 și versiuni ulterioare.

Ce este funcția WiFi?

Funcția WiFi a fost concepută astfel încât să puteți asocia camera de bord cu
smartphone-ul și să aveți acces instantaneu la camera de bord. Iată pentru consemnare
videoclipuri cu familia. Vizualizați, descărcați și partajați cu ușurință

ca tine vorbitorul

Bluetooth la smartphone-ul dvs. pentru muzică fără fir, precum și
Camerele de bord ale mașinii folosesc un semnal WiFi (în loc de Bluetooth) pentru
asocierea unui smartphone cu camera LINGDU D100.

Pot să vizionez videoclipuri în jurul mașinii mele de la distanță?

NU. Camera de bord LINGDU D100 NU este pentru cloud sau streaming
pe internet. Aceasta NU este o cameră cloud sau IP și NU este destinată nimănui.

În aplicația pentru camera de bord LINGDU, puteți obține videoclipuri în direct și dacă
vă aflați la 10 metri de camera de bord.

Care este raza WiFi?

Gama semnalului WiFi este 10 picioare, dacă nu există niciunul care ca WiFi acasă
să nu ai semnal, atunci intervalul WiFi este de 10 FT de acest
WiFi în afara casei, mic

Pentru telefoanele Android:


Când instalați aplicația LINGDU, va apărea o fereastră pop-up cu solicitări: selectați opțiunea „Utilizați aplicația” pentru a permite aplicației LINGDU să vă acceseze locația și selectați opțiunea „Permiteți” pentru a permite aplicației LINGDU să acceseze fotografiile și conținutul media de pe dispozitivul dvs. Odată ce v-ați conectat la Internet pentru prima dată, va trebui să „permiteți” aplicației să acceseze locația și

fotografiile dvs. media. Care este încă un pas.
în aproximativ la rețeaua WiFi D100, mesajul „Nu


10-15 secunde până când

nu va afișa fereastra pop-up sau notificarea de mai jos. Atingeți notificarea pop-up care va apărea în câteva secunde și selectați pe care doriți să accesați


internetul. După ce ați selectat această chiar dacă nu există
opțiune, OK

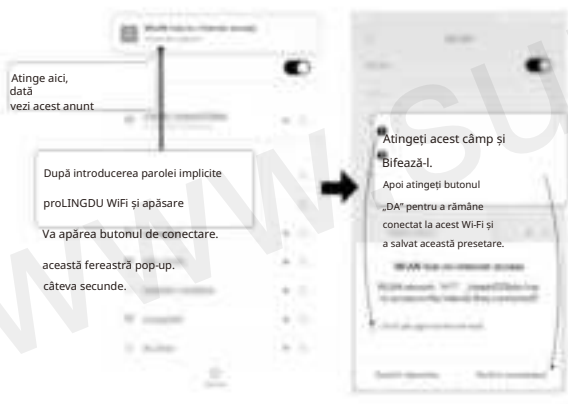

Pentru iPhone:

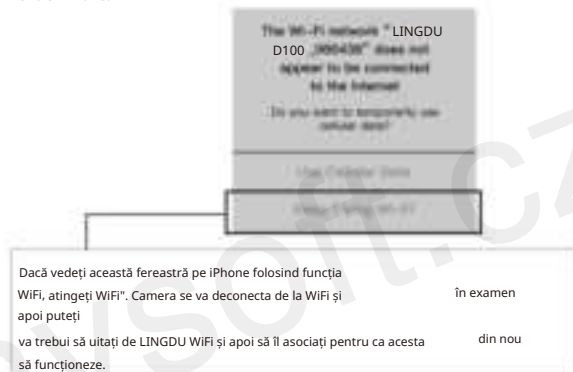

9. Setări generale

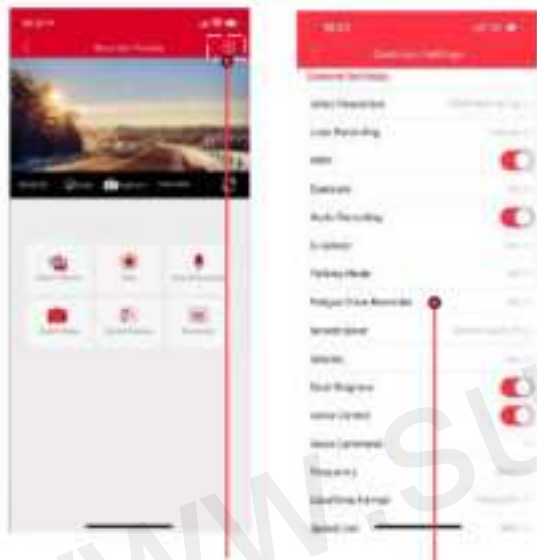

1 Accesați interfața Dashcam Previzualizări. Mai întâi, opriți înregistrarea și apoi apăsați pictograma setări.

2 Selectați ceea ce doriți să setați.

9.1 Setări video

Rezoluție video

selectați rezoluția video dorită și o secundă.

pentru

2560x1440P @30fps (implicit) / 1920 x1080P 30fps

Înregistrare în buclă - 1 min (implicit)/3 min/5 min

Pentru înregistrare în alegeți durata fiecărui videoclip (1/3/5 minute). Această funcție înregistrează pe o cameră de bord.

este după camera de bord cu card
șterge automat cele mai vechi fișiere pentru a face loc celor noi înregistrări. Adică că în înregistrare fără

WDR - activat (implicit)/dezactivat

WDR înseamnă „Wide Dynamic Range”, ceea ce înseamnă că camera foto sau afișajul poate gestiona scene cu diferențe mari de luminozitate, astfel încât detaliile sunt afișate și în zonele întunecate.

Expunere --3,0/ -2,0/ -1,0/ +0,0 (implicit)/ +1,0/ +2,0/ +3,0

Ajustați setările de expunere video după preferințele sau video mai întunecat dvs.

Înregistrare audio - activată (implicit)/dezactivată

Camera de bord are microfon pentru înregistrare audio cu video. La alegere Opțiuni OFF Dezactivați înregistrarea video.

Senzor G - Oprit / Scăzut (implicit) / Mediu / Înalt

Senzorul G forța de accelerometru a detecta este un fizic și impact asupra camerei de bord. Odată G-senzorul în fizic

sau porniți camera, fișierul video curent va fi
ca dosar de urgență astfel încât să nu fie o funcție de ciclu
Cu cât sensibilitatea senzorului G este mai mare, cu atât forța va fi mai mică.
la protecție automată a fișierelor.

Mod parcare

Această caracteristică va funcționa NUMAI cu că este instalat
kitul de cabluri cu 3 derivații. Acest mod de parcare are opțiuni. că



Nota:

Pentru a utiliza această nouă caracteristică este necesar un kit 3-in-1 de tip C proiectat la comandă.

Kit de cabluri de plumb. Nu există ambalaj,

pe Amazon: [Kit de cabluri tip C cu 3 fire pentru LINGDU](#)

[Cameră de bord D100](#)

*Mod de parcare asociat:

1. Când opriți motorul și camera SE la poziția de . Apoi
OPRIȘTE înregistrare video și înregistrați automat la
regim 1fps.
2. Dacă îți lovește mașina și impactul ajunge pe platou
Senzor G, cameră înregistrați un videoclip continuu de 1 minut,
salvează și blochează acest videoclip în dosarul Evenimente > apoi revine la
înregistrarea de 1 fps.
3. Acum, data viitoare când porniți vehiculul, camera va intra automat
în modul de parcare. Apoi va intra automat la normal
în modul video și va porni înregistrare video.

*Mod parcare cu detectare a coliziunii:

1. Când opriți motorul și se a poziționa Apoi camera
OPRIȘTE înregistrare video și în modul de detectare a impactului
iar camera se stinge.
2. Când camera intră în modul de detectare a impactului dacă va întâlni
în mașină și impactul ajunge la platou Senzor G, cameră
pornește > apoi înregistrați un videoclip continuu de 1 minut, salvați și
blochează acest videoclip în dosarul Evenimente > apoi camera se oprește.
3. Data viitoare când vehiculul este pornit, camera se va întoarce automat la
modul video normal și pornește înregistrare video.

*Mod normal de înregistrare a parcării:

1. Când opriți motorul și este a poziționa Camera foto
în înregistrarea normală.
2. Acum camera se află în modul de detectare a impactului, dacă este în va întâlni
mașina dvs. și dacă impactul ajunge la set, camera va bloca videoclipul senzor G,
curent în videoclipul din folderul Evenimente > salvează și blochează acest lucru
atunci camera va in normal
înregistrare.

Memento de oboseală de conducere - dezactivat (implicit) / 2H

Când activați această funcție, camera de bord va emite un bip la fiecare 2 ore pentru a vă
alerta. că ești Conducerea oboseală.

Screen saver - protector de ecran dezactivat (implicit)/dezactivat ecran după 1 minut

Ecran oprit: acest ecran va fi mereu pornit.
Ecranul oprit după 1 minut: se stinge după 1 minut. ecranul

Volum - Oprit / Scăzut (implicit) / Mediu / Ridic

Această funcție set volum
sunet , volumul prompt al intern
difuzorului camerei.

Ton de apel de pornire - Activat (implicit)/Dezactivat

Această funcție pornire/oprire apel de cameră.

Control vocal - activat (implicit)/dezactivat

Acceptă numai pornirea WiFi, imagine, oprire
înregistrare, WiFi oprit, înregistrarea, videoclipuri



Nota:

ca funcția de control vocal să fie activată de
90% și către persoanele din jur, dezactivați-o în meniul
dacă setați această funcție în
aplicația LINGDU.

Comandă vocală

Spune-o. dar suportă doar limba engleză

• Pentru a activa Wi-Fi, Porniți WiFi

• Pentru a dezactiva Wi-Fi, • Pentru Opriți WiFi
a face un instantaneu, • Pentru a Fă o poză
bloca fișierele video curente, • Pentru a începe înregistrarea, Blocați videoclipul.
• Pentru a opri înregistrarea, • Pentru Deschideți înregistrarea
a ecran, Opriți înregistrarea
Deschide ecranul
• Pentru a opri ecranul, Opriți afișajul

Frecvență - 50 Hz / 60 Hz (implicit)

Aici ai vrea selecția frecvenței în funcție de specificațiile sursei de alimentare utilizate în
să ajungi în țara ta a ta pozitii.

Format data/ora

Această funcție selecția formatului de dată.

Unitate de viteză - KM/H/MPH (implicit)

Alegeți între MPH și KMH.

Informații GPS

Verifica satelit / lungime / / viteza.

9.2 Viteza

timbre video

Activați/dezactivați ștampila de viteză afișată pe fișierele încărcate.

Informații GPS

Activați/dezactivați
fișierele înregistrate.

Ștampila GPS este afișată

Data/ora

Activați/dezactivați afișarea datei/ora pe fișierele înregistrate.

LOGO

Activați/dezactivați sigla LINGDU. Ștampila afișată pe fișierele încărcate.

Model

Activați/dezactivați ștampila model afișată pe imaginile încărcate
fișiere.

9.3 Setări

fus orar

sistem

-UTC/GMT -7:00 (implicit)

-UTC/GMT -12:00 până la UTC/GMT +12:00

Întă
selecția setărilor zonei locale pentru a seta mai întâi
valorile UTC/GMT. Este o trupă. cele corecte

Pe al tău îl poți găsi la <https://www.timeanddate.com/time/map/>
valoarea corectă GMT (Greenwich Mean Time).



Nota:

LINGDU D100 are

GPS, trebuie mai întâi să setați zona în aplicație, astfel

încât data și ora de pe videoclip să fie corecte. Ia

LINGDU APP și utilizați meniul de funcții pentru a seta ora
zonă.

Fusuri orare SUA	Cand e vara? ca noiembrie - gol	Cand incepe vara ? în afara sezonului - noiembrie
Hawaii	GMT (-10:00)	
Alaska	GMT (-9:00)	GMT (-8:00)
Pacific Inc. Zonă	GMT (-8:00)	GMT (-7:00)
Muntele ca Zonă	GMT (-7:00)	GMT (-6:00)
Medie ca Zonă	GMT (-6:00)	GMT (-5:00)
Zona de est	GMT (-5:00)	GMT (-4:00)

fusuri orare Unit regat	British Summer as	iarna britanica ca
	GMT/UTC +1	GMT/UTC ±0

ca sincronizare

Sincroniza telefon cu această cameră de bord D100.

Informații card SD

Vizualizați spațiul rămas pe cardul de memorie.

Formatarea unui card SD

Procesul de formatare asigură că formatul sistemului de fișiere al cardului este optimizat pentru cameră.



Nota:

Notă: Pentru o performanță stabilă, înlocuiți cardul la fiecare 1-2 format

Există două formate de carduri Micro-SD

1. și țineți apăsat WiFi timp de 10 secunde pentru a formatare și setări implicite, după formatarea cu succes veți auzi sunetul „di”.

2. accesați aplicația LINGDU folosind meniul de funcții cu numit „Format”.

Nume WiFi

Aici Nume WiFi în APP, nume implicit:
D100****

Parola WiFi

Aici Parola WiFi în APP, parola implicită: 12345678.

Setări implicite

Restabiliți setările implicite ale camerei de bord. Înregistrările tale nu vor


Versiune de firmware

Aici verificați versiunea curentă de firmware instalată în aparat de fotografiat. Veți verifica aceste informații în viitor pentru a vedea dacă sunt disponibile. versiunea de firmware.

pentru

10. Redarea fișierelor video folosind un computer

1. card microSD de la camera de bord.
2. Introduceți cardul în carduri microSD și ea la computer.

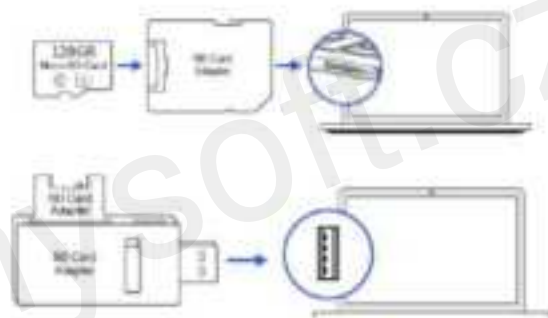

3. În funcție de hard disk-uri pe care le-ai face fi o capabil să unitate flash ca unitatea „D”, „E” sau mai jos și vei primi găsească un alt nume. După ce ai căutat unitatea, faceți dublu clic pe ea la componente care includ foldere Normal, Eveniment și Fotografie. Normal Modul normal de înregistrare salvează fișierele video în care lor în spațiu de depozitare. Eveniment În modul de înregistrare Evenimentul va fi un fișier video prin ștergerea utilizând funcția de înregistrare în FotoAcesta este folderul pentru salvare fotografiilor. Dacă vrei videoclipuri Faceți dublu clic pe n. folosiți VLC Media Player, care poate fi descărcat gratuit descărcarea la: www.videolan.org.

4. LINGDU GPS Player este descărcat și de pe [adresă](http://www.lingdu.us) www.lingdu.us > Asistență > Descărcări și instalați-l în calculator.

5. Instalați în (Notă: vă rog, software, vă confirmăm că nu va avea niciunul dintre dvs

6. Faceți clic pe "Fișiere" și selectați Film sau folder EMR activat microSD în LINGDU GPS Player. Toate fișierele din folderul Normal sau Eveniment vor fi afișate sau Parcare. Sau asemenea fișiere video pe ecran

7. Video poate fi

R, Faceți clic pe pictograma File-Open pentru a selecta folderul dorit și faceți clic pe el


nu selectați DOAR un folder pentru vedeți niciun fișier video).

B, Selectați disc carduri, selectați fișierul video pe care doriți ÎN fișier pentru a obține informații GPS.



11. Actualizare firmware

1. card microSD de la camera de bord.
2. Introduceți cardul în carduri microSD și ea la computer.

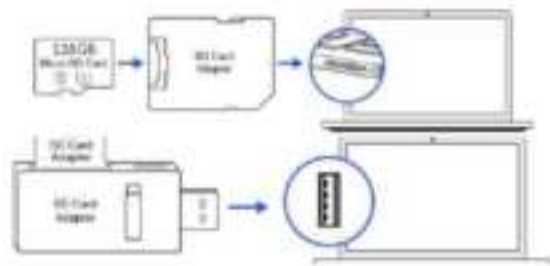

3. tu Firmware-ul D100 de la www.lingdu.us

> Asistență > Fișiere descărcate pe computer.

4. Dezarhivați firmware-ul descărcat (fișier Zip) și copiați fișierul firmware-ul numit „FW96562A.bin” pe card microSD.

5. camera pentru în mașină și procesul de actualizare firmware. tine indicator actualizare, ceea ce înseamnă

că camera dvs. de bord D100 se actualizează la un firmware nou.

Actualizare firmware durează până la 1 minut.

Vă rog

că actualizarea firmware-ului nu se va deconecta

alimentare electrică. După actualizarea firmware-ului, camera se va opri automat.

Versiunea de firmware 6

porțiți și verificați setările

APP > Versiune de firmware.

12. Instrucțiuni vocale

Voce promptă	Descriere
Video de urgență	Înregistrarea de îndată ce G-pornește senzor
WIFI PORNIT	Pornit implicit, după pornire că este
WIFI oprit	Apăsăți și mențineți apăsat timp de 3 secunde pentru a opri, Wifi ea.
Eroare card de memorie	Card de memorie prost/greșit/fals
Începeți înregistrarea	După ce a pornit i invitat /operație aplicare, ea
Înregistrarea sa oprit	Controla aplicare, ea
Sună ca „Click”	Imagine folosind aplicația, -I
Formați cu succes	Formatare reușită carduri
Formatul a eșuat	Formatare cardurile sunt a eșuat
Modul parcare este activat	Modul parcare este activat
Modul de parcare este dezactivat	Modul de parcare a fost dezactivat

13. CELE MAI ANUMITE ÎNTREBĂRI

Î1: Camera pornește/oprește automat?

că curentul de ieșire către
mașină. ajunge la 5V/1.5A și folosește-o

Întrebarea 2: Imaginea video este neclară?

folie protectoare
sticlă si fara grasime, că este

Î3: Camera se încălzește?

Este normal ca camera să se
încălzească atunci când înregistrează
video la viteză mare. (Nu mai mult de 158°F/70°C). Deoarece este o utilizare a
camerei de bord

Întrebarea 4: Fișierele video nu pot fi redatate pe computerul meu?

Fișierele video de la camera de bord sunt în format MP4 și este posibil să nu fie
compatibil cu dacă software-ul corespunzător nu este instalat
pentru

Întrebarea 5: Videoclipul nu are sunet?

Asigurați-vă că setarea „Înregistrare audio” este activată.

Întrebarea 6: videoclipul este neclar?

Dash Cam are o lungime focală minimă
Obiectele mai apropiate decât această valoare vor fi
neclară. 2 metri.

Î7: Avertisment vocal Eroare de memorie?

Utilizarea cardurilor SD sau a cardurilor necalificate va afecta
performanța camerei de bord și a
înregistrării camerei de bord. departe
deja
repornește. Dacă este
lucru, TF, un card necalificat
care cerințe pentru înregistrarea cu camera de bord.
contactați-ne și obțineți unul nou card.

14. Notificare



Acest produs respectă cerințele europene
la interfața radio.



Acest simbol înseamnă că produsul nu trebuie aruncat ca
deșeurile menajere și ar trebui să fie predate unei reciclări adecvate
ajută la protejarea resurse, sănătatea umană și mediu Alte
informațiilor privind eliminarea și reciclarea acestui produs pot fi obținute de la localitatea dumneavoastră
unde este asta servicii sau în

Au achiziționat produsul.



sau modificări care nu sunt în aprobat de partid
conformitate cu utilizator să
operare
Acest a fost testat și s-a dovedit a fi conform cu B pentru normele
conform digitale 15 FCC. Aceste limite sunt concepute pentru a oferi o
pentru a asigura instalarea protecție rezonabilă împotriva interferențelor
rezidențială. Acest dăunătoare în echipamentele
care generează, utilizează și utilizează energie și, dacă nu sunt instalate
și utilizate în conformitate cu instrucțiunile, interferențe dăunătoare pentru comunicațiile radio.
Cu toate acestea, nu există nicio garanție că interferențele nu vor apărea într-o anumită instalație.

Dacă aceasta interferețe dăunătoare la radio sau televiziune care poate fi determinat prin oprirea și pornirea acestuia utilizatorul să încerce să elimine interferența cu una sau mai multe

mai multe dintre următoarele

-- sau antene.
-- distanța între iar noi primim.
-- într-o priză pe un circuit diferit de cel în care se află

conectat --

Consultați distribuitorul sau un tehnician radio și televiziune cu experiență.

Aceasta este o cerință a 15 reguli FCC. Operațiunea

este supusă următoarelor condiții: (1) aceasta nu trebuie

interferențe dăunătoare și (2) trebuie să accepte acest lucru
toate interferență, interferență nedorită

trafic.

Acest Limitele de expunere FCC stabilite pentru

necontrolat Acesta ar fi instalat și

operate la o distanță minimă de 20 cm între dvs

Acesta nu trebuie să fie sau operat
cu o altă antenă sau

Furnizor/Distribuitor

Sunnysoft sro
Kovanecka 2390/1a
190 00 Praga 9

Republica Cehă
www.sunnysoft.cz



service@lingdu.us

Response in just 12 hours

Product | Car Dashcam
Manufacturer | Dong Guan KAKA Electronic Technology Co., Ltd.
Address | No.395,HuanshiEast Road Shitanpu Tangxia Town
Dongguan CN. 518000
Product Warranty | One-Year Limited Warranty
Customer Support | service@lingdu.us

www.lingdu.us




FCC ID: 2ASWVD100

V20230629

D100

User Manual

D100

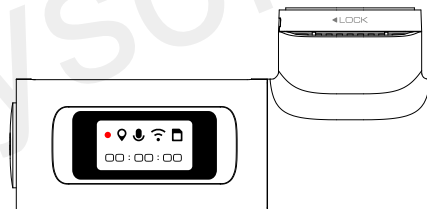

LINGDU

www.lingdu.us

Table of Contents

English	01
---------------	----



service@lingdu.us

Scan QR code to download Manual



Index

1. Customer Service.....	2
2. Important Safety Information	3
3. In The Box.....	5
4. Specification.....	6
5. Product Diagram.....	7
6. Getting Started	9
7. Installation	11
8. Playing Video Files Using Your Smartphone	14
9. General Setting.....	23
10. Playing Video Files Using Your Computer	32
11. Firmware Update.....	35
12. Voice Prompts	36
13. FAQ.....	37
14. Notice	38

1. Customer Service

-  Defective or damaged item?
Inaccurate description?
Missing parts or accessories?
Performance or quality not adequate?
Wrong item was sent?



service@lingdu.us

Response in just 12 hours

Contact us before returning the item.
We will help you resolve any issue asap.



Note:

1. **A U3 type microSD card (Not included)** is required to use this Dash Cam. Be sure to format your microSD card with your dash cam for the first time use.
2. Please ALWAYS connect with power when using. As it is built in Super Capacitor (Only has a 1mAh Lithium Metal Battery used to memorize time).

2. Important Safety Information

Thank you for purchasing this LINGDU dashcam.

This instruction manual contains information on how to operate your dashcam.

Before using your dashcam, we recommend that you read through this manual to ensure correct usage.

To improve the performance of the product, the contents of this manual are subject to change without prior notice.

·Do not disassemble, repair, or modify the product yourself.

Doing so may cause fire, electric shock, or malfunction. For internal inspection and repair, contact the service center.

·If any foreign matter gets inside the product, detach the power cord immediately.

Contact the service center for repair.

·Do not adjust the product while driving.

Doing so may cause an accident. Stop or park your car in a safe place before installing and setting up the product.

·Do not install the product in a location where the product can interfere with the driver's field of vision.

Doing so may cause an accident.

·Do not use a damaged or modified power cord. Only use the cords provided by the manufacturer.

Damaged or modified power cords may cause an explosion, fire, or malfunction.

·Do not operate the product with wet hands.

Doing so may cause electric shock.

·Do not install the product in an environment with high humidity, or combustible gases or liquids.

Doing so may cause an explosion and/or fire.

·Do not leave the product near infants, children, or pets.

There is a risk of them swallowing small components, and/or their saliva may get into the product, causing an explosion due to a short circuit.

·Do not spray water or wax directly onto the product while cleaning the inside of the car.

Doing so may cause fire, electric shock, or malfunction.

·If smoke or an unusual smell is emitted from the power cord, detach the power cord immediately.

Contact the service center or your distributor.

·Keep the terminals of the power cord clean.

Failure to do so may cause excessive heat and fire.

·Use the correct input voltage.

Failure to do so may cause explosion, fire, or malfunction.

·Plug in the power cord firmly so that it cannot easily be disconnected.


Failure to do so may cause fire.

·Do not cover the product with any material.


Doing so may cause external deformation of the product or fire. Use the product and peripherals in a well-ventilated location.

3. In The Box

Check the box for each of the following items before installing the dash cam.

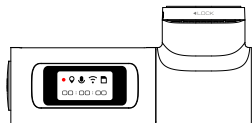

Dash camera x1




Electrostatic films x2



Type-C car charger
with 3.5m/12ft cable x1



Cable clips x 5
Pry tool x 1



User manual x 1




Note:

1. To improve the performance of the product, the contents of this manual are subject to change without prior notice.

4. Specification


Model	D100
Aperture	F=1.8
Color	Black
Language	English / 日本語 / Deutsch / Français / Español / Italiano / Русский.etc
Memory Card	Micro SD Card Class 10 , U3 Speed, Max Support 256 GB (Not included)
Video Code	H.264
Photo Format	JPG
Video Compression Mode	MP4
Video Resolution	2560 x1440P 30fps 1920 x1080P 30fps
WiFi	Built-in
Battery	Built-in Super Capacitor
Power Interface	5V/1A
Operation Temperature	-20°C to 70°C (-4°F to 158°F)

5. Product Diagram

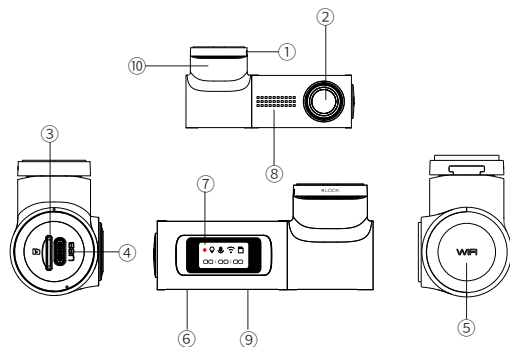

#	Description
1	Sticker mount
2	Lens
3	Micro-SD card slot
4	Type-C USB charging port
5	WiFi Key Short press: Turn on/off WIFI Double click: Turn on/off audio Long press (3s): Lock video Long press (8s): Format memory card and restore default settings.

6	Speaker
7	0.96 inch display
8	Microphone
9	Reset button
10	GPS

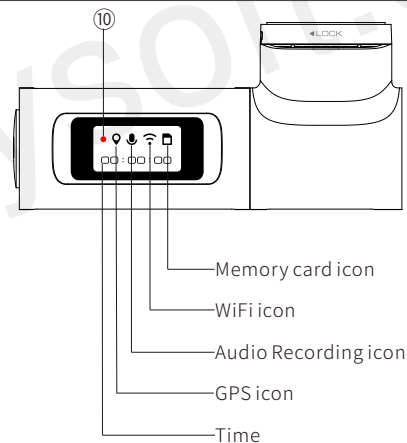

Note:

The clock is displayed during normal recording, while the recording duration of the locked video segment is displayed during emergency recording.

	Color	Status
⑩ REC	 Blinking	Recording normal video
	 Blinking	Recording locked video

6. Getting Started

The camera is designed to power up and record automatically when it receives power. Then saves the video record and turns off automatically when the car shuts off.

1. Auto Power ON/OFF:

Plug car charger to cigarette lighter socket. When the car engine is on, dash cam will turn ON and start recording automatically. When the car key is turned to LOCK position, dash cam automatically saves the recording and turns OFF.

2. Manual Power ON/OFF

Manually Turn ON: Press the power button once.

Manually Turn OFF: Press and hold the power button for at least 2 seconds.



Note:

1. A U3 type microSD card (Not included) is required to use this Dash Cam. Be sure to format your microSD card with your dash cam for the first time use.

2. Please ALWAYS connect with power when using. As it is built in Super Capacitor (Only has a 1mAh Lithium Metal Battery used to memorize time).

3. The dash cam will automatically update its time when it is connected to the LINGDU APP on a phone via WiFi.


4. Some trucks/cars's 12V cigarette outlet is always HOT, which means it provides constant power even when the car is turned off and locked. If this is the case for your vehicle, then the auto ON/OFF feature will not work. And if you leave the camera continuously recording when the car is turned off, then it will drain your car/truck's battery and you might not have enough power to start your car for next time. To remedy this situation, you can do one of the two options:

① Hardwire your dash cam to your car's fuse box with 3-Lead Auto Trigger Hardwire Kit.


② Change the connection in the fuse box for your 12V outlet to socket which only supplies power when car key is turned to ACC or ON position.

7. Installation


Install the front camera behind the rear view mirror. Remove any foreign matter and clean and dry the windshield before installation.

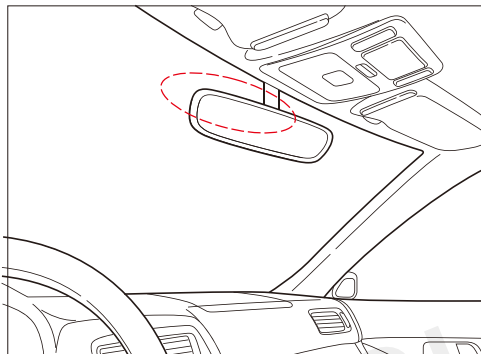


1. Turn off the engine, gently push the card into the slot until it locks into place. (Please using class 10 or above high-speed U3 micro-SD card)
2. Find a suitable place on windshield where don't obstruct the driver's field of vision and remove any foreign matter and clean and dry the windshield before installation. Tear off the protective layer of the electrostatic sticker and adhere the electrostatic sticker to the windshield to prevent mark/glue on your windshield after removing it.
3. Peel off the protective film from the double-sided tape and attach the front camera to the electrostatic sticker. Adjust the angle of the lens by rotating the body of the front camera.

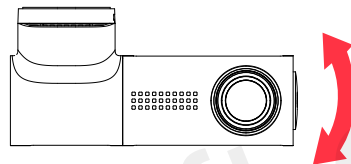

4. Plug the cigarette lighter power cable into the cigarette lighter socket and the front camera. Use the pry tool to lift the edges of the windshield trim/molding and tuck in the power cord.

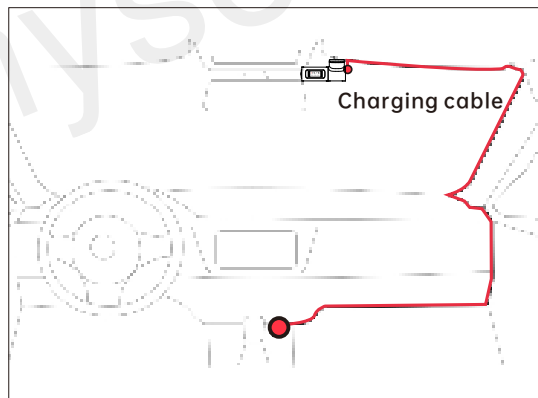


5. Turn on the engine. The dashcam will power up and start recording. Video files are stored on the microSD card. Turn off the engine. The dashcam will automatically stop recording and power down.

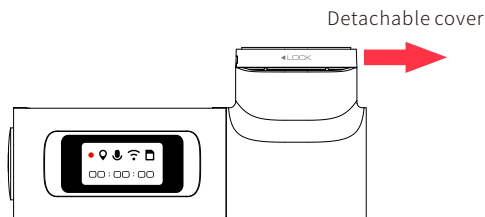


8. Playing Video Files Using Your Smartphone

8.1 Check real-time video using your smartphone

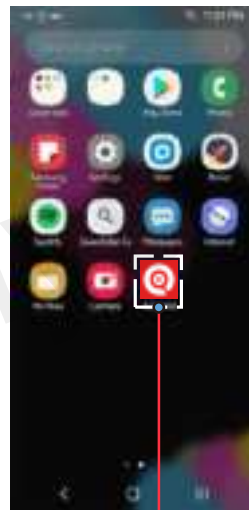


Scan QR code to
download LINGDU APP

1 Search for the LINGDU app in the Google Play Store or Apple App Store and install it on your smartphone.

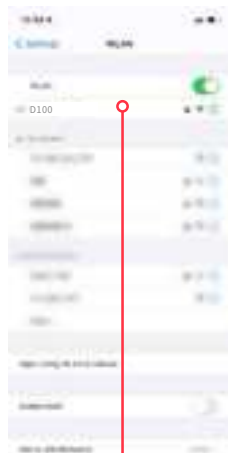


2 Go to Phone's Settings > WiFi > Select WiFi of the dash cam. After it's connected to the WiFi, it will say 'No Internet Connection' which was normal. Because dash cam WiFi is ONLY for video/photo transfer function, NOT made to broadcast footage over the cloud or internet, please ignore the prompt.


WiFi Name SSID: D100 *****
Default PASSWORD: 12345678

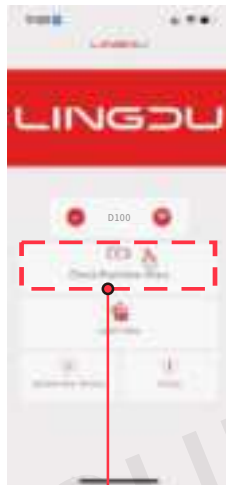

3 There will show dash cam model D100 when connect successfully. Press "Check Real-time Video" to live video preview interface.

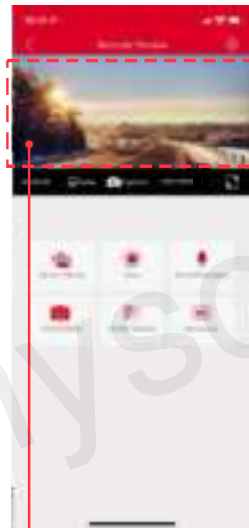


4 Now you can view the video currently being recorded real-time by connecting your smartphone to the dashcam via Wi-Fi Direct.

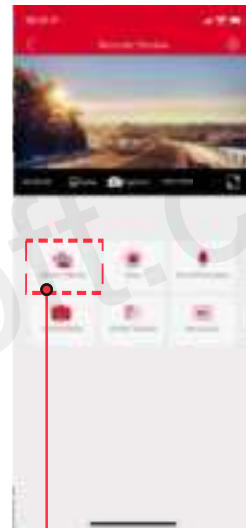

5 Please STOP recording first, then press the 'Device Album' to get Photo, Video, Emergency files.


8.2 Download the video files into your smartphone

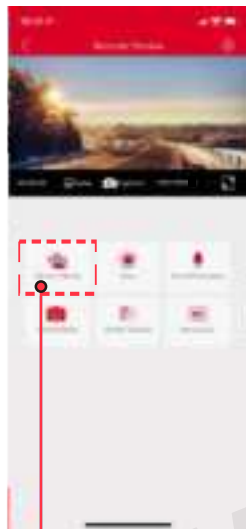


1 Go to Dashcam Preview interface. Please STOP recording first, then press the 'Device Album' to get Photo, Video, Emergency files.



2 Select the video files to download into your smartphone.

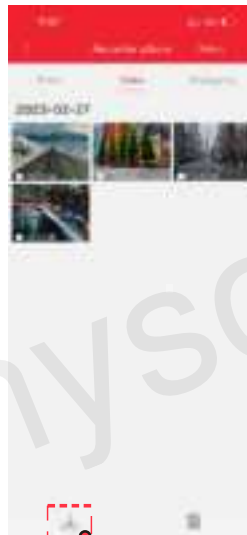

3 Press the icon to download the video files. However, it will take a bit of time to download one video file.

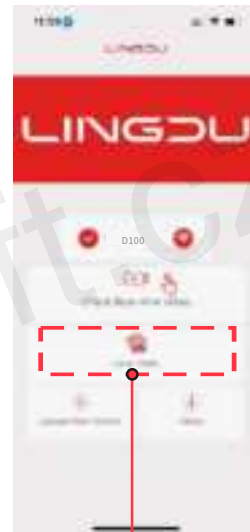

4 Then you can find these downloaded video files in APP original interface menu named 'Local Video'.

The app won't show the live video on your phone. It only shows a picture of the beach?

The cellular data will cause the live video not to be viewed. If the APP won't show the live video, please disable the 'LINGDU' cellular data of your phone. Sure that the Local Network of the 'LINGDU' is turned on.

1. For Latest iOS System: Setting→LINGDU→Click 'Wireless Data'→Select 'WLAN' .

2. For Older iOS System: Setting→LINGDU→Disable the 'Cellular Data'.



Note:

1. WiFi Direct lets you directly connect your smartphone to your dash cam via WiFi within a range of 10FT.
2. Once it is connected to the LINGDU APP it will automatically update the date/time.
3. The LINGDU is available for devices running Android 5.0 and higher, or iOS 9.0 and higher.

What is a WiFi Feature?

The WiFi feature has been designed so you can pair your dash camera wirelessly with your smartphone and access your recording instantly from the dash cam. Here you can view, download and share your videos easily with your friends and family. Just like how you would connect your Bluetooth speaker to your smartphone for wireless music play, the same way dash cameras use WiFi signal (instead of a Bluetooth) to pair your smartphone with LINGDU D100.

Can I watch the videos around my car remotely?


NO. LINGDU D100 dash cam is NOT made to broadcast footage over the cloud or internet. It is NOT a cloud or an IP camera and it is NOT meant to do that. You can get live video and footage on LINGDU dash cam's APP as long as you stay within the 10FT range from the dashcam.

What is the WiFi Range?


The WiFi signal range is about 10FT when there are NO obstructions in the middle. Please NOTE that just like your home WiFi network, you don't have WiFi signal outside your home, the same way, WiFi range is 10FT from this small device.

For Android phones:


When installing the LINGDU APP, it will have two pop-up prompts, select 'While using the APP' to allow LINGDU to access this device's location, and select 'Allow' to allow LINGDU to access photos and media on your device. There is one extra step you will have to take for the first time. Once you connect to the WiFi of D100, it will say 'No Internet'. Which is fine. Wait about 10-15 seconds until you see the below pop up or notification. You just have to tap on the pop up notification that will show up in few seconds to select that you still want to stay connected even though there is NO Internet. Once you select this OK, you are set to go.

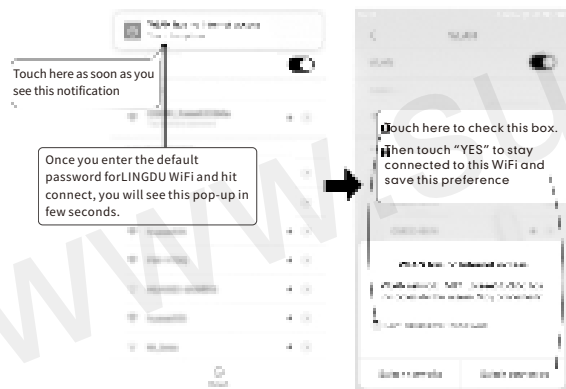

For iPhone:

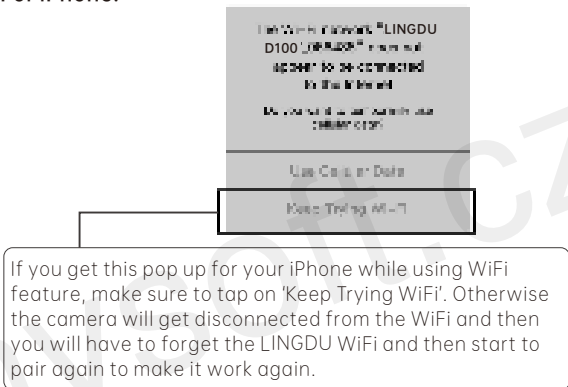

9. General Setting

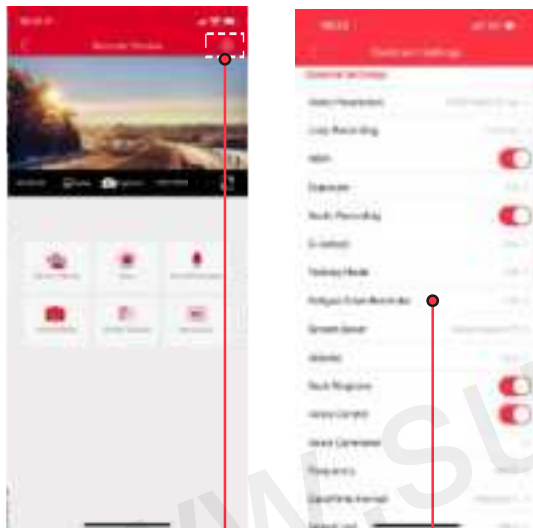

1 Go to Dashcam Preview interface.
Please STOP recording first,
then press the settings icon.

2 Select what you
need to set.

9.1 Video Settings

Video Resolution

Allow to choose the desired video resolution and fps(frames per second).

2560x1440P @30fps (Default) / 1920 x1080P 30fps

Loop Recording — 1min(Default)/ 3mins/5mins

Please select the length of each video clip (1/3/5 minutes) for loop recording. This function enables continuous recording on the dash cam. Please note that when the memory card becomes full, the dash cam will automatically delete the oldest files to make space for new recordings. This ensures that it can continue recording without interruption.

WDR— On(Default)/Off

WDR stands for "Wide Dynamic Range," which means the camera or display can adapt to scenes with large differences in brightness, allowing details in both dark and bright areas to be clearly displayed.

Exposure — -3.0/ -2.0/ -1.0/ +0.0(Default)/ +1.0/ +2.0/ +3.0

To adjust video exposure setting for either brighter or darker video according to your preference.

Audio Recording — On(Default)/Off

The dashcam has built-in microphone to record audio with video. You can choose to record mute video by choosing OFF.

G-Sensor — Off/ Low(Default)/ Medium/ High

G-sensor is a 3-axis impact gravitational accelerometer, designed to detect physical and gravitational forces on the dash cam. Once G-sensor has been triggered due to physical

or gravitational impact force on the camera, the current video file will be locked as an emergency file so it won't be deleted by loop cycle function. The higher the G-Sensor sensitivity is, the less force will be needed to trigger automatic file protection.

Parking Mode

This function will ONLY work when 3-Lead Hardwire Kit is installed properly. This parking mode has three options to choose from.



Note:

Custom-designed Type-C 3-Lead Hardwire Kit is required to use this new feature. Not included in the packaging, on Amazon search: **Type-C 3-Lead Hardwire Kit for LINGDU D100 Dash Cam**

*Time-Lapse Parking Mode:

1. When you turn OFF the car's engine and turn the key to the lock position. Then the camera will STOP the continuous video recording and it will go into the timelapse 1fps recording mode automatically.
2. Now while this timelapse is being recorded, if someone hits your car and if the impact reaches the set G-Sensor level, then the camera will start to record 1-min continuous video, save & lock that video in Event folder > then return to the timelapse 1fps recording.
3. Now when you start your car for the next time, the camera will automatically STOP the timelapse parking mode. Then it will go into normal video mode automatically to start the continuous video recording.

*Collision Detection Parking Mode:

1. When you turn OFF the car's engine and turn the key to the lock position. Then the camera will STOP the continuous video recording and it will go into the impact detection mode and the camera will turn OFF.
2. Now while the camera stays in impact detection mode, if someone hits your car and if the impact reaches the set G-Sensor level, then the camera will turn ON > then it will start to record 1-min continuous video, save & lock that video in Event folder > then the camera will turn OFF.
3. Now when you start your car for the next time, the camera will automatically go back into normal video mode automatically to start the continuous video recording.

*Normal Recording Parking Mode:

1. When you turn OFF the car's engine and turn the key to the lock position. The camera will continue to record normally.
2. Now the camera stays in impact detection mode, if someone hits your car and if the impact reaches the set G-Sensor level, then the camera will lock the current looping video clip, save & lock that video in Event folder > then the camera will continue to record normally.

Fatigue Driving Reminder— Off(Default)/ 2H

When you activate this feature, the dash cam will beep every 2 hours to remind you if you are experiencing fatigue while driving.

Screen Save— Screen Saver Off(Default)/ Screen Off After 1-Min

Screen Saver Off: This screen will always be on.

Screen Off After 1-Min: The screen will turn off after 1 minute of inactivity.

Volume — Off/ Low(Default)/ MID/ High

This feature allows you to set the volume level for the boot sound volume, prompt volume through camera's internal built-in speaker.

Boot Ringtone — On(Default)/ Off

This feature allows you to turn ON/OFF the camera's Boot Ringtone.

Voice Control — On(Default)/ Off

ONLY support English: turn on WiFi, take picture, turn off recording, turn off WiFi, open recording, lock the video



Note:

Kindly be informed that the voice control feature has an accuracy of approximately 90%, and it may get activated unintentionally due to surrounding environmental noises. Hence, if you do not require this function, you can deactivate it from the settings menu in the LINGDU APP.

Voice Command

Say a command, but ONLY support English

- To turn on WiFi, say **Turn on WiFi**

- To turn off WiFi, say **Turn off WiFi**
- To take a picture, say **Take picture**
- To lock the current video files, say **Lock the video**
- To start recording, say **Open recording**
- To stop recording, say **Turn off recording**
- To open screen, say **Open screen**
- To turn of screen, say **Turn off display**

Frequency — 50HZ/ 60HZ(Default)

Here you should choose the frequency accordingly to your power supply specification used in your country based on your geographical location.

Date/Time Format

This feature allows you to select the date format.

Speed Unit — KM/H/MPH(default)

Choose between MPH and KMH.

GPS Info

Check the satellite number / Longitude / Latitude / Speed.

9.2 Video Stamps

Speed

Turn On/Off the Speed Stamp shown on recorded files.

GPS Information

Turn On/Off the GPS Information Stamp shown on recorded files.

Date/Time

Turn On/Off the Date/TimeStamp shown on recorded files.

LOGO

Turn On/Off the LINGDU logo Stamp shown on recorded files.

Model

Turn On/Off the Model Stamp shown on recorded files.

9.3 System Setting

Timezone

-UTC/GMT -7:00 (Default)

-UTC/GMT -12:00 to UTC/GMT +12:00

You can select your local time zone setting here, based on the UTC/GMT value. It's important to ensure that you set the correct time zone first.

Go to <https://www.timeanddate.com/time/map/> to find out your Correct GMT (Greenwich Mean Time) value.



Note:

LINGDU D100 is built-in GPS, need to set Timezone first in APP so that the video date/time stamp will be correct. Please connect to LINGDU APP, using the function menu to set Timezone.

USA Time Zones	When Daylight Savi-ngs Ends Nov - March	When Daylight Savi-ngs Begins March - Nov
Hawaii	GMT (-10:00)	
Alaska	GMT (-9:00)	GMT (-8:00)
Pacific Time Zone	GMT (-8:00)	GMT (-7:00)
Mountain Time Zone	GMT (-7:00)	GMT (-6:00)
Central Time Zone	GMT (-6:00)	GMT (-5:00)
Eastern Time Zone	GMT (-5:00)	GMT (-4:00)

UK Time Zones	British Summer Time	British Winter Time
	GMT/UTC +1	GMT/UTC ±0

Synchronization Time

Sync the time of the phone to this D100 dash cam.

SD Card Information

Display remaining storage space on the memory card.

Format SD Card

The formatting process will make sure that the card's file system format is optimized for the camera.

Note:

Note: For stable performance, it is recommended that you format the memory card every 1-2 months.

There are two ways to format Micro-SD card

1. Press and hold WiFi button for 10 seconds to format and default settings, you will hear sound "di" when format successfully.
2. Please connect to LINGDU APP, using the function menu named "Format" to do.

WiFi Name

Here you can change the WiFi Name in APP, the default name: D100_*****

WiFi Password

Here you can change the WiFi Password in APP, the default password: **12345678**

Default Settings


Reset the Dash Cam to default settings. Your recordings will not be affected.

Firmware Version

Here you can check the current firmware version installed on your camera. You will need this information in the future to check if newer version of firmware is available.

10. Playing Video Files Using Your Computer

1. Remove the microSD card from the dashcam.
2. Insert the card into a microSD card reader and connect it to your computer.

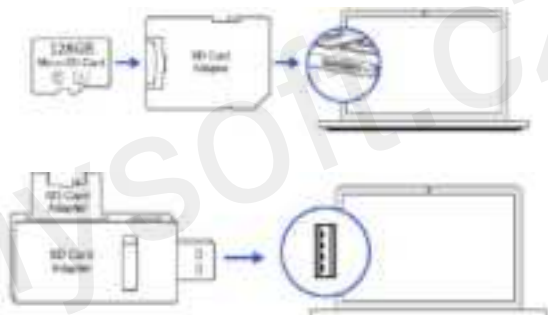

3. Depending on the pre-installed hard drives, you should be able to locate the added flash drive as drive "D," "E," or another name. Once you have located the drive, double-click it to access the file folders, which include Normal, Event, and Photo.
Normal: Normal recording mode saves video files in a loop, allowing them to be overwritten when storage space is needed.
Event: In Event recording mode, the video file will be locked and protected from deletion by the loop recording function.
Photo: This is the folder for storing captured photos.
To play the videos, simply double-click on them.
We recommend using VLC Media Player, which can be downloaded for free at: www.videolan.org.

4. You can also download LINGDU GPS Player from www.lingdu.us > **Support** > **Downloads** and install it on your computer.

5. Install the LINGDU GPS Player on your computer. (Note: Please close or ignore the prompt of the anti-virus software, we confirm that it will not bring any security impact to your computer.)

6. You can click the 'Open Files' button to browse and select the Movie or EMR folder of the microSD card on the LINGDU GPS Player. It will show all files in the Normal or Event or Parking folder. Or you can also drag the video files directly to the launcher screen.

7. There are two ways to play video.

A, Click File-Open icon to choose the folder which you want to play, click to start play.


(Note that you can ONLY select one folder to play and see no video files)

B, Select from 'My Computer' and find the memory card disk, choose the video file you want to play, you can drag and drop the file directly to the player. You can get the GPS information on the player.



11. Firmware Update

1. Remove the microSD card from the dashcam.
2. Insert the card into the microSD card reader and connect it to a computer.

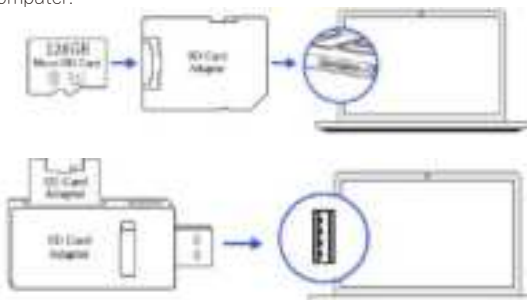

3. Download the latest D100 Firmware from www.lingdu.us > **Support** > **Downloads** on your computer.
4. Unzip the downloaded firmware (Zip file) and copy the firmware file named "FW96562A.bin" to the root directory of microSD card.
5. Connect the camera to the car charger to start the firmware update process. You should see the upgrade progress bar which means your D100 dash camera is updating the new firmware. Please NOTE:
The firmware update may take up to about 1mins. So please be patient. Make sure the POWER does NOT get disconnected while the firmware is being updated. Once the firmware is updated, the camera will turn OFF automatically.
6. You can turn on and check the latest firmware version by going into the APP's settings > Firmware Version.

12. Voice Prompts

Prompt Voice	Description
Emergency Video	During recording once G-Sensor triggered
WiFi ON	Default ON, after powered on, say it
WiFi OFF	Press and hold Wi-Fi button for 3s to switch off, say it
Memory card error	Wrong/bad/fake memory card
Recording started	After powered on and boot ringtone /operate via App, say it
Recording stopped	Operate via App, say it
Sound as "Click"	Take picture via App, say it
Format Successfully	Format memory card successfully
Format Failed	Format memory card failed
Parking mode is on	Parking Mode has been turned on
Parking mode is off	Parking Mode has been turned off

13. FAQ

Q1: Camera turns ON / OFF automatically?

Ensure that the output current can reach 5V/1.5A and use our car charger.

Q2: Video Image is blurred?

Remove the protective lens film, clean the lens, make sure the windshield is clean and clear of grease, dirt, and debris.

Q3: Camera gets HOT?

It is normal for your camera to run slightly hot. Due to video being recorded at high speed, the dash cam may be hot during using. (No more than 158°F/70°C).

Q4: Video Files cannot be played on my computer?

The video files from the Dash Cam are in MP4 format and may not be compatible with your PC if suitable playback software is not installed.

Q5: Video has no sound?

Ensure that 'Audio Recording' setting is turned ON.

Q6: Video is blurred?

The Dash Cam has a minimum focal range of around 2 meters. Objects closer than this are likely to become blurred.

Q7: Voice prompt Memory Error?

Using unqualified SD or third party cards can affect dashcam's performance and in some cases, force the dashcam to reboot randomly during recording. If it still can not work normally, it should be that the TF card is unqualified and can not meet the recording requirements of the dash cam. Please contact us to get a new memory card.

14. Notice

CE This product complies with the radio interface requirements of the European Community.

X This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.

FC Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.