



FocusPRO Smart S200 Series Thermostat

TH2320WF4011

EN User Guide

Thermostat controls

Time, outdoor temperature, or indoor humidity
(depends on configuration by installer)

Mode
Heat/Off/Cool/
Auto/EM Heat
(emergency heat)

Menu
Press to display
options. (Schedule,
WiFi, active alerts,
reminders)

Fan
Auto/On/Circulate

WiFi status

Note: "Waiting for Equipment"
shown during compressor
protection delay

Indoor temperature setpoint
Press or to
change temperature
setting

Temperature/Navigation
Increase or decrease
temperature setpoint
and navigate menus

System status
Cool On/Heat
On/Aux Heat On

Schedule information
Following time based
schedule

Actual indoor temperature

Compatible with 2.4 or 5 GHz WiFi network

Scan for the full User Manual



You can search online for **Resideo 33-00694EFS**
for the User's Manual or scan the QR code.


Scan to Download First Alert App



33-00713EA-01

System operation settings

- 1 Press the **Mode** button to cycle to the next available System mode (Ex: Heat, off, cool).
- 2 Cycle through the modes until the required System mode is displayed and leave it to activate.

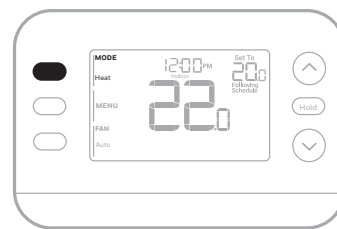


MA39511

Fan operation settings

- 1 Press/release the **Fan** button to cycle to the next available Fan mode.
- 2 When the desired Fan mode is displayed, stop pressing fan button.

Fan modes:

- **Auto:** Fan runs only when the heating or cooling system is on.
- **On:** Fan is always on.
- **Circ:** Fan runs about 33% of the time to circulate air.

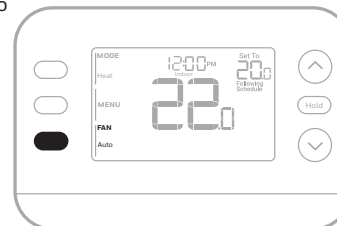


MA39512

Set the time and date

Note: If time/date is set by the Internet, only the 12 or 24 hour clock option is available to edit.

Time


- 1 Press **Menu** on the thermostat.
- 2 Press or to go to **TIME**. Press **Select**.
- 3 Press or to choose 12 or 24 hour clock format and press **Next**.
- 4 Press or to adjust the **hour** and press **Next**.
- 5 Press or to adjust the minute and press **Save & Exit**.

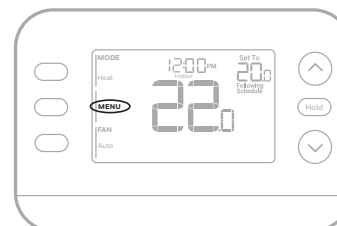

MA39509

Date



- 1 Press **Menu** on the thermostat.
- 2 Press or to go to **DATE** and press **Select**.
- 3 Press or to choose **YEAR** and press **Next**.
- 4 Press or to adjust the **MONTH** and press **Next**.
- 5 Press or to choose **DATE** and press **SAVE & EXIT**.

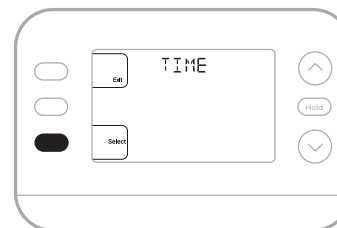

M39510

To adjust program schedules

- 1 Press **Menu**. Then press or until **SCHED** is displayed. Press **Select**.
- 2 A square appears around **ON** or **OFF** in the display. If you want to use a schedule, press or to select **ON**. Press **NEXT** to edit the schedule or press **EXIT** to exit the menu.
- 3 If editing the schedule, press **NEXT** to edit the day or days flashing in the display.
- 4 The word **Wake** should be flashing. Press **NEXT**. Press or to turn this schedule period on or off. Press **NEXT**.
- 5 If the schedule period was set to **ON**, the time will be flashing. Press or to adjust the time for this period. Press **NEXT**.
- 6 The Heat setpoint will be flashing. Press or to adjust the Heat setpoint for this period. Press **NEXT**.
- 7 The Cool setpoint will be flashing. Press or to adjust the Cool setpoint for this period. Press **NEXT**.
- 8 The display will show the next schedule period flashing. Repeat steps 4-7 for the other schedule periods and days.
- 9 Press the **SAVE & EXIT** button at upper left.

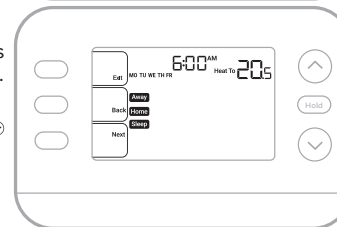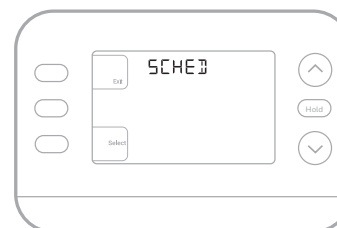

MA39512



CAUTION

Equipment damage hazard.

To prevent possible compressor damage, do not operate cooling system when outdoor temperature is below 50°F (10°C).

Troubleshooting

If you have difficulty with your thermostat, please try the following suggestions. Most problems can be corrected quickly and easily.

Display is blank

- Check circuit breaker and reset if necessary.
- Make sure power switch at heating and cooling system is on.
- Make sure furnace door is closed securely.

“Waiting for equipment” appears on the screen

- Compressor protection feature is engaged. Wait 5 minutes for the system to restart safely, without damage to the compressor.

Temperature settings do not change

- If display says “unlock”, thermostat owner has set a lockout setting. If not, verify you are in the correct mode (heat, cool, em heat or auto); see page 1.
- If you are in the correct mode, but you cannot set the heat from 32 °F to 90 °F (0 °C to 32 °C), or set the cool from 50 °F to 99 °F (10 °C to 37 °C), you may have range-stops restricting your setting. Check with the installer to see if they set range-stops.

FROM

resideo

www.resideo.com

Resideo Technologies Inc.
Scottsdale, AZ 85254

33-00713EA KK 01-25

© 2025 Resideo Technologies, Inc. All rights reserved.

The Honeywell Home trademark is used under license from Honeywell International, Inc. This product is manufactured by Resideo Technologies, Inc. and its affiliates.




ترمودستات FocusPRO ذکی سلسله S200

ترموستات TH2320WF4011

دليل المستخدم

عناصر التحكم في الترموستات

- 1 اضغط على زر Mode للانتقال إلى وضع النظام المتاح التالي (على سبيل المثال: تدفئة، إيقاف، تبريد).
- 2 قم بالتفعل بين الأوضاع حتى يتم عرض وضع النظام المطلوب وانزعه للتفعيل.

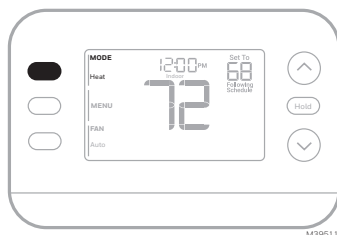


إعدادات تشغيل المروحة

- 1 اضغظ/حزّر زر Fan للانتقال إلى وضع المروحة التالي المتاح.
- 2 عند عرض وضع المروحة المطلوب، يُوقف عن الضغظ على زر Fan.

المروحة أوضاع المروحة:

- Auto: تعمل المروحة فقط عندما يكون نظام التدفئة أو التبريد قيد التشغيل.
- On: المروحة تعمل دائماً.
- Circ: تعمل المروحة حوالي 33% من الوقت لتدوير الهواء.

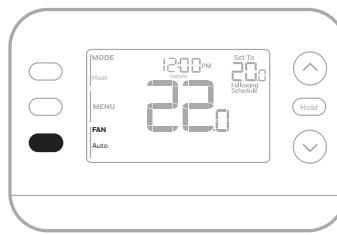


ضبط الوقت والتاريخ

ملاحظة: إذا تم ضبط الوقت/التاريخ عن طريق الإنترنت، يتوفر للتعديل فقط خيار الساعة 12 أو 24 ساعة.


الوقت

- 1 اضغط على Menu في الترموستات.
- 2 اضغط على ☹ أو ☺ للانتقال إلى Time.
اضغط على Select.
- 3 اضغط على ☹ أو ☺ لاختيار تنسيق الساعة
12 أو 24 ساعة واضغط على Next.
- 4 اضغط على ☹ أو ☺ لضبط تنسيق الساعة
واضغط على Next.
- 5 اضغط على ☹ أو ☺ لضبط الدقيقة واضغط
على Save & Exit.

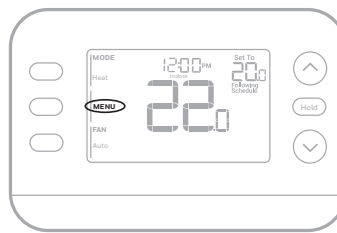

التاريخ

- 1 اضغط على القائمة في الثرؤمستات.
- 2 اضغط على  أو  للانتقال إلى التاريخ واضغط على Select.
- 3 اضغط على  أو  لاختيار سنة واضغط على Next.
- 4 اضغط على  أو  لضبط الشهر واضغط على Next.
- 5 اضغط على  أو  لاختيار تاريخ واضغط على Save & Exit.

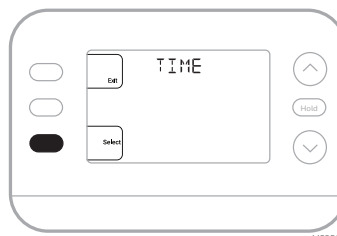

1 اضغط على Menu. ثم اضغط على ⌵ أو ⌶ حتى Schedule يتم عرضها. اضغط على Menu.

2 يظهر مربع حول On أو Off في الشاشة. إذا كنت تريد استخدام جدول زمني، اضغط على  أو  لتحديد On. اضغط على Next لتعديل الجدول أو اضغط على Exit للخروج من القائمة.

3 إذا كنت تريد تحرير الجدول، اضغط على
Next لتحرير اليوم أو الأيام التي تظهر على
الشاشة.

4 يجب أن تومض كلمة Wake . اضغط
Next. اضغط على (⊕) أو (⊖) لتشغيل أو
إيقاف تشغيل فترة الجدول الزمني هذه. اضغط
Next.

5 إذا تم ضبط فترة الجدول الزمني على On، سيومض الوقت. اضغط على (⊕) أو (⊖) لضبط الوقت لهذه الفترة. اضغط Next.

6 ستومض نقطة ضبط الحرارة. اضغط $\odot$ أو $\odot$ لضبط نقطة ضبط الحرارة لهذه الفترة. تالي، اضغط.

7 ستومض نقطة ضبط التبريد. اضغط $\odot$ أو $\odot$ لضبط نقطة ضبط التبريد لهذه الفترة. لتالي، اضغط.

8 ستعرض الشاشة وميض فترة الجدول الزمني التالية. كرر الخطوات من 4-7 لفترات الجدول الزمني والأيام الأخرى.

9 اضغط على زر Save & Exit في أعلى اليسار.

The diagram shows a remote control with the following functions labeled in Arabic:

- الوقت أو درجة الحرارة الخارجية أو الترطيب الداخلي (يعتمد على التكوين من قبل المصنّع)**: Points to the top of the remote.
- الوضع الحرارة/إيقاف التشغيل/التبريد/التدفئة**: Points to the left side of the remote.
- التدفئة التلقائية/التدفئة الإلكترونية/تدفئة الطوارئ**: Points to the left side of the remote.
- اضغط على القائمة لعرض الخيارات (الجدول، والواي فاي، والتنبؤات النشطة، والتذكيرات)**: Points to the left side of the remote.
- المروحة**: Points to the left side of the remote.
- تلقائي/تشغيل/تدوير حالة الواي فاي**: Points to the left side of the remote.
- نقطة ضبط درجة الحرارة الداخلية اضغط على ☺ أو ☹ لتغيير إعداد درجة الحرارة**: Points to the top right of the remote.
- الحرارة/التنقل زيادة أو تقليل نقطة ضبط درجة الحرارة و التنقل بين القوائم**: Points to the right side of the remote.
- حالة النظام تبريد/تشغيل/تبريد/تدفئة/تشغيل/تدفئة إضافية/تدفئة إضافية على**: Points to the right side of the remote.
- معلومات الجدول الزمني إتباع الجدول الزمني القائم على الوقت**: Points to the right side of the remote.
- الحرارة الداخلية الفعلية**: Points to the bottom of the remote.

ملاحظة: تظهر عبارة "Waiting for Equipment" أثناء تأخير حماية الضاغط

متوافق مع شبكة 2.4 WiFi أو 5 جيجاهرتز

المسح بحثاً عن دليل المستخدم الكامل



يمكنك البحث على الإنترنت عن Resideo 33-00694EFS للحصول على دليل المستخدم أو مسح رمز الاستجابة السريعة.

المسح الضوئي لتنزيل تطبيق First Alert





تحذير
خطر تلف المعدات.
لمنع حدوث تلف محتمل للضاغط، لا تقم بتشغيل نظام التبريد عندما تكون درجة الحرارة الخارجية أقل من 50 درجة فهرنهايت (10 درجات مئوية).

استكشاف الأخطاء وإصلاحها

إذا واجهتك مشكلة في منظم الحرارة، يُرجى تجربة الاقتراحات التالية. يمكن تصحيح معظم المشاكل بسرعة وسهولة

الشاشة فارغة

- تحقق من قاطع الدائرة وأعد ضبطه إذا لزم الأمر.
- تأكد من تشغيل مفتاح الطاقة في نظام التدفئة والتبريد.
- تأكد من إغلاق باب السخان بشكل محكم.
- تم تفعيل خاصية حماية الضاغط. انتظر لمدة 5 دقائق حتى يتم إعادة تشغيل النظام بأمان، دون إلحاق الضرر بالضاغط.

تظهر على الشاشة رسالة

“Waiting for Equipment”

لا تتغير إعدادات درجة الحرارة

- إذا كانت الشاشة تقول “Unlocked”، فقد قام مالك الترموستات بتعيين إعداد القفل. إذا لم يكن الأمر كذلك، فتأكد من أنك في الوضع الصحيح (تدفئة، تبريد، تدفئة كهربائية أو تلقائي)؛ راجع الصفحة 1.
- إذا كنت في الوضع الصحيح، ولكنك لا تستطيع ضبط الحرارة من 32 درجة فهرنهايت إلى 90 درجة فهرنهايت (0 درجة مئوية إلى 32 درجة مئوية)، أو ضبط التبريد من 50 درجة فهرنهايت إلى 99 درجة فهرنهايت (10 درجات مئوية إلى 37 درجة مئوية)، فقد يكون لديك إيقافات النطاق التي تقيد إعدادك. تحقق مع المثبت لمعرفة ما إذا كان قد قام بضبط إيقافات النطاق.