Porodo Soundtec
CLAP ANC Wireless Headphone

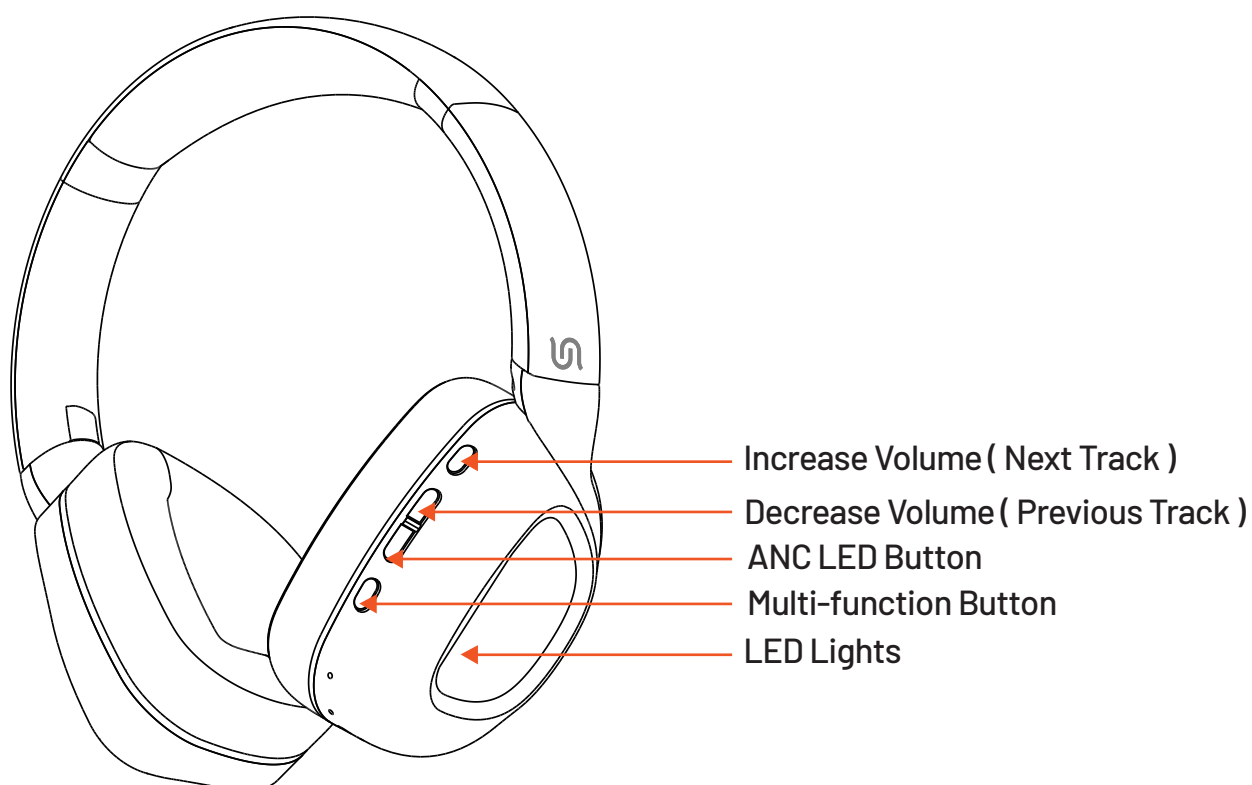SKU: PDSTQYSV7

Table of Contents

Specifications

Model	PDSTQYSV7
Input	5V/1A
Battery Capacity	500mAh
Recharge Time	2H
Speaker Diameter	Φ 40mm
Bluetooth Version	V5.4
Transmission Distance	>15M
Bluetooth Frequency	2402 - 2480 GHz
Speaker Frequency	20Hz-20KHz
Maximum Radiated Power	1.66dbm
Playtime	50H (ANC OFF & Lights OFF), 29H (ANC ON & Lights OFF), 14H (ANC OFF & Lights ON), 12H (ANC ON & Lights ON)

Schematic View

Increase Volume (Next Track)

Decrease Volume (Previous Track)

ANC LED Button

Multi-function Button

LED Lights

Charging Guide

Before using the headphones for the first time, fully charge the battery. To charge, insert the Type-C cable into the charging port and connect it to a power source. When charging, the red indicator light will turn on. Once fully charged, the indicator will turn off. Charging takes approximately 3-2 hours. When the battery is running low, an alarm sound will be heard. Please charge the headphones immediately.

Power ON/OFF

Power On: Press and hold the Multi-function button (power button) for 3 seconds. The indicator will flash red and blue, signaling that the device is ready for wireless connection.
Power Off: Press and hold the Multi-function button (power button) for 4 seconds. The indicator will turn off.

Bluetooth Connection

The wireless mode allows you to enjoy hands-free calling and wireless music playback. To connect, power on the headphones. The indicator will flash blue and red. Then, turn on the Bluetooth function on your phone, search for the device named ' PD_Clap', and select it to connect. Once the connection is successful, you can freely play music and make or answer calls.

ANC Mode

Press the ANC button once to enter or exit ANC mode. When ANC mode is activated, the indicator will turn green.

LED Mode

Double-click the LED button to activate LED mode.

Wireless Mode

1. Answering a Call: When a call comes in while the headphones are connected to your phone, press the Multi-function button (power button) once to answer. Press it again to end the call.

2. Rejecting a Call: Hold the Multi-function button (power button) for 2 seconds and then release to reject the call.

3. Controlling Music:

Short press the (+) or (-) button to adjust the volume.

Long press the (+) or (-) button to skip to the next or previous track.

Short press the Multi-function button (power button) to play or pause the music.

Wired Headphone Function

To use the headphones in wired mode, plug a 3.5mm audio cable into the headphone jack and connect the other end to a computer or any other music device. When using the headphones in wired mode, the Bluetooth function will be disabled, and the volume cannot be adjusted through the headset.

Warning

1. Do not use the headset while charging.

2. Keep the headset out of reach of children.

3. Avoid exposure to water or other liquids.

4. Never leave the headset unattended while charging.

5. Protect the headset from impacts and drops.

6. Do not use the headset under extreme conditions.

7. Never immerse the headset in water.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net
Website: **porodo.net**
Service Support: **support@porodo.net**
Instagram: **porodo**