



**DUALSHOCK®4 Back Button Attachment**  
Instruction Manual

## Precautions

Before using this product, carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference. For assistance with this product, visit [playstation.com/get-help/](http://playstation.com/get-help/).

### Safety

Keep this product out of the reach of small children. Small children may swallow small parts, which may cause injury or damage the product.

- Do not touch the product with wet hands.
- Check that there is no dust or foreign object on the connectors when connecting this product to your wireless controller.


### Use and handling

- Use this product only with a DUALSHOCK®4 wireless controller.
- Do not let any other metal items come in contact with the connectors.
- Do not place any objects on top of the product. Do not stand on the product.
- Do not throw or drop the product, or otherwise expose it to strong physical impact.
- Do not place the product on surfaces that are unstable, tilted or subject to vibration.
- Never disassemble or modify the product.
- Follow the instructions below to help prevent the product exterior from deteriorating or becoming discoloured.
  - Wipe with a soft, dry cloth.
  - Do not place any rubber or vinyl materials on the product exterior for an extended period of time.
  - Do not use solvents or other chemicals. Do not wipe with a chemically treated cleaning cloth.

### Storage conditions

- Do not expose the product to dust, smoke or steam.
- Do not expose the product to high temperatures, high humidity or direct sunlight.
- Do not allow liquid or small particles to get into the product.

## Part names

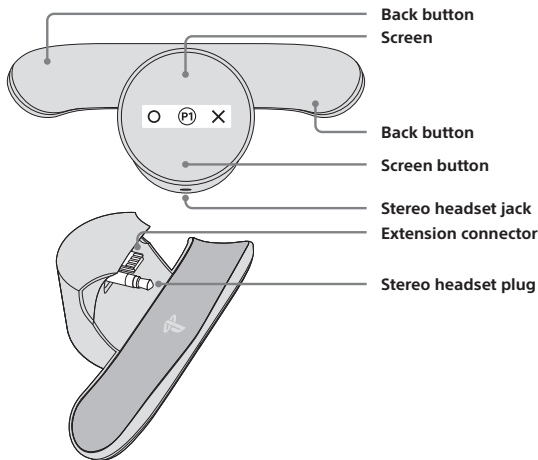

## Getting started

The DUALSHOCK®4 back button attachment adds two extra buttons to the back of your DUALSHOCK®4 wireless controller, allowing unused fingers to get into the game.


You can program these extra buttons, allowing you to customise your set-up and get the edge with important controls at your fingertips. Each saved assignment is called a profile.

### Before connecting:


Follow these instructions carefully to avoid damaging the connectors on the DUALSHOCK®4 back button attachment and DUALSHOCK®4 wireless controller.

- Turn off your PlayStation®4 system or put it in rest mode before connecting the attachment to your DUALSHOCK®4 wireless controller. If you leave your system on, your controller might not connect properly to the back button attachment.
- Also, your controller must already be paired with your PS4™ system.

- 1** Hold the back button attachment with your thumb behind the stereo headset plug.

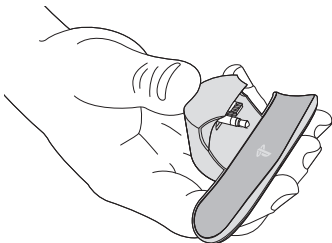


- 2** With the attachment's stereo headset plug and the controller's stereo headset jack aligned, firmly push the attachment toward the controller to insert.

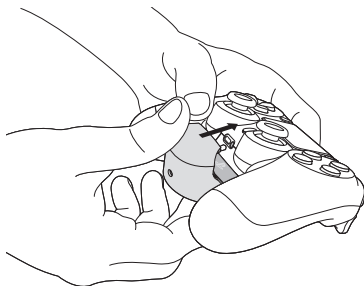

## Powering up



- 1 Press the  (PS) button to turn on your controller.
- 2 Click the screen button on the attachment. The default profile (P1) appears on the screen.

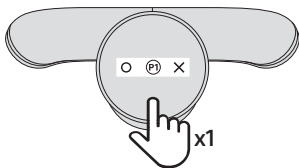

## Creating profiles


You can save up to 3 different profiles (button assignments). The default profiles are as follows:

### Default profiles

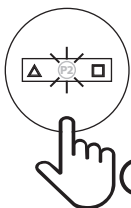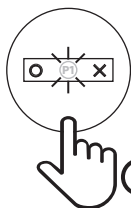


### Customise a profile


- 1 Hold the screen button down for 1 second to enter programming mode.  
The profile number in the centre of the screen flashes to let you know you're in programming mode.

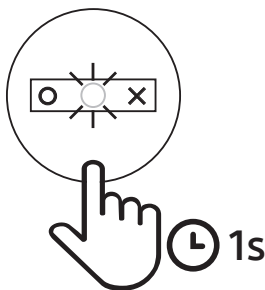

- 2** Press the back buttons to select from among the available button assignments.  
Press and hold a back button to scroll through the possible assignments for that back button.

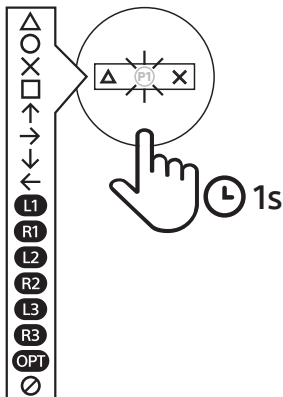

- 3** Click the screen button once to exit programming mode and save your profile.

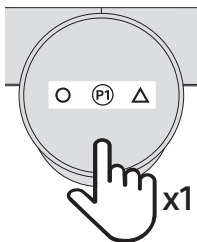


If you want to create another profile, click the screen button once to enter programming mode again, and then click twice to program the next profile.

#### Hints

- In programming mode, the screen turns itself off after 10 seconds of inactivity. When not in programming mode, the screen turns itself off after 3 seconds of inactivity.
- Any customised button assignments made within PS4™ system settings also apply to the attachment.
-  indicates that no button is assigned. When you assign both back buttons in a profile to , that profile is hidden when not in programming mode.

## Starting over

If you want to reset your attachment to the factory default profiles, press and hold the left back button, right back button, and screen button at the same time. Once the reset  icon appears on the screen, continue to hold for 5 seconds. When    appears, the reset is done.

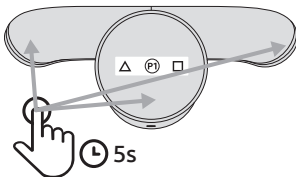

## Specifications

|                                                                 |                                                           |
|-----------------------------------------------------------------|-----------------------------------------------------------|
| Input power rating                                              | 3.2 V $\approx$ 100 mA                                    |
| External dimensions<br>(excluding projecting parts)             | Approx. 101.2 x 4.5 x 39.4 mm<br>(width x height x depth) |
| Weight                                                          | Approx. 26.2 g                                            |
| Screen                                                          | 4,096 pixel OLED display                                  |
| Operating temperature                                           | 5 °C to 35 °C                                             |
| Design and specifications are subject to change without notice. |                                                           |

## GUARANTEE

This product is covered for 12 months from date of purchase by the manufacturer's guarantee. Please refer to the guarantee supplied in the PS4™ package for full details.

This product is manufactured for Sony Interactive Entertainment LLC, 2207 Bridgepointe Parkway, San Mateo, CA 94404, United States of America.

Made in China.



"PS", "PlayStation", "PS4", "DUALSHOCK" and "PlayStation Shapes Logo" are registered trademarks or trademarks of Sony Interactive Entertainment Inc.

" " is a registered trademark of Sony Corporation.



Sony  
Interactive  
Entertainment

“”, “PlayStation”, “PS4”, “DUALSHOCK” and “PlayStation Shapes Logo” are registered trademarks or trademarks of Sony Interactive Entertainment Inc.

“” is a registered trademark of Sony Corporation.




Sony  
Interactive  
Entertainment



## התחלה מחדש

אם ברצונך לאפס את רכיב החיבור לפרופילי ברירת המחדל של היצרן, לחץ ממושכות על הכפתור האחורי השמאלי, הכפתור האחורי הימני וכפתור המסך באותו הזמן. אחרי שסמל ⌚ לאיפוס מופיע על המסך, המשך ללחוץ על הכפתורים למשך 5 שניות. כאשר מופיעים הסמלים □, ○, △, האיפוס נעשה.

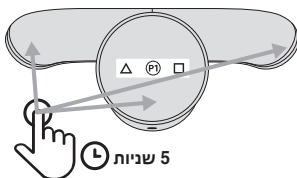

## מפרטים

|                                           |                             |
|-------------------------------------------|-----------------------------|
| דירוג קלט חשמל                            | 3.2 V --- 100 mA            |
| מידות חיצוניות                            | בערך 101.2 x 4.5 x 39.4 מ"מ |
| (ללא חלקים בולטים)                        | (רוחב x גובה x עומק)        |
| משקל                                      | בערך 26.2 ג'                |
| מסך                                       | צג OLED של 4,096 פיקסלים    |
| טמפרטורת הפעלה                            | 5 °C עד 35 °C               |
| העיצוב והמפרטים עשויים להשתנות ללא הודעה. |                             |


## אחריות

אחריות היצרן עבור מוצר זה היא למשך 12 חודשים מיום הרכישה. לפרטים מלאים פנו לכתב האחריות המסופק עם מערכת PS4™.


מוצר זה מיוצר עבור, Sony Interactive Entertainment LLC, 2207 Bridgepointe Parkway, San Mateo, CA 94404, United States of America.

מיוצר בסין.

**2** לחץ על הכפתורים האחוריים כדי לבחור מבין הקצאות הכפתורים הזמינות. לחץ ממושכות על כפתור אחורי כדי לגלול בין ההקצאות האפשריות לאותו כפתור אחורי.

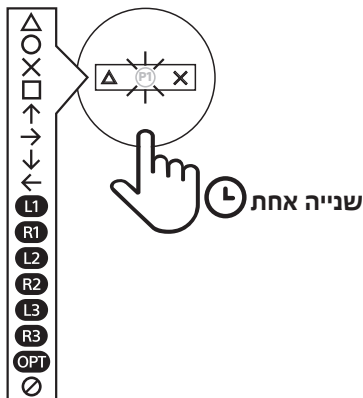

**3** לחץ על כפתור המסך פעם אחת כדי לצאת ממצב תכנות ולשמור את הפרופיל שלך.

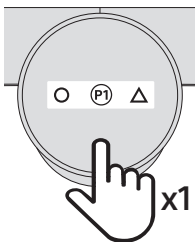


אם ברצונך ליצור פרופיל נוסף, לחץ על כפתור המסך פעם אחת כדי לעבור שוב למצב תכנות, ולאחר מכן לחץ פעמיים כדי לתכנת את הפרופיל הבא.

#### עצה

- במצב תכנות, המסך מכבה את עצמו אחרי 10 שניות של חוסר פעילות. מחוץ למצב תכנות, המסך מכבה את עצמו אחרי 3 שניות של חוסר פעילות.
- כל הקצאות הכפתורים המותאמות אישית שנעשו במסגרת הגדרות המערכת של PS4™ חלות גם הן על רכיב התיבור.
- ❌ מציין ששום כפתור לא הוקצה. כשאתה מקצה את שני הכפתורים האחוריים בפרופיל למצב ❌, פרופיל זה מוסתר כשאינך במצב תכנות.



- 1 לחץ על לחצן (PS) כדי להפעיל את הבקור.
- 2 לחץ על כפתור המסך של רכיב החיבור. פרופיל ברירת המחדל (P1) מופיע על המסך.

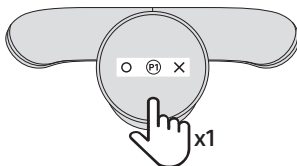

### יצירת פרופילים


יכולים להיות לך עד 3 פרופילים שונים (הקצאות כפתורים). פרופילי ברירת המחדל הם:

#### פרופילי ברירת מחדל



#### התאמה אישית של פרופיל

- 1 החזק את כפתור המסך לחוץ למשך שנייה אחת כדי לעבור למצב תכנות. מספר הפרופיל במרכז המסך מהבהב כדי ליידע אותך שאתה נמצא במצב תכנות.

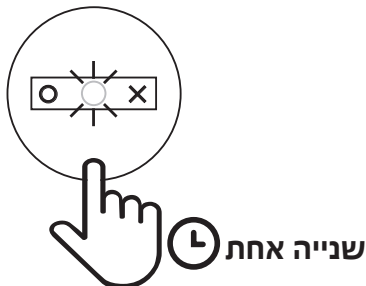

רכיב חיבור הכפתורים האחוריים ל-DUALSHOCK®4 מוסיף שני כפתורים נוספים לחלק האחורי של הבקר האלחוטי DUALSHOCK®4, וכך מאפשר לאצבעות הלא מנוצלות להצטרף למשחק.


ניתן לתכנת כפתורים נוספים אלה ולהתאים אישית את ההגדרות, וכך ליהנות ממיקום נוח של פקדים חשובים. כל הקצאה שנשמרת נקראת פרופיל.

### לפני החיבור:


פעל לפי הוראות אלה בקפידה כדי שלא לגרום נזק למחברים ברכיב חיבור הכפתורים האחוריים ל-DUALSHOCK®4 ובבקר האלחוטי DUALSHOCK®4.

- כבה את מערכת PlayStation®4 או העבר אותה למצב מנוחה לפני החיבור של רכיב החיבור לבקר האלחוטי DUALSHOCK®4. אם תשאיר את המערכת פועלת, ייתכן שהבקר לא יתחבר כראוי לרכיב חיבור הכפתורים האחוריים.
- בנוסף, חייבת כבר להתבצע התאמה בין הבקר לבין מערכת PS4™.

## 1 החזק את רכיב חיבור הכפתורים האחוריים כשהאגודל מאחורי תקע אוזניות הסטריאו.

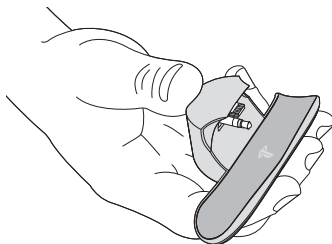

## 2 כאשר תקע אוזניות הסטריאו של רכיב החיבור ושקע אוזניות הסטריאו של הבקר מיושרים זה מול זה, דחוף היטב את רכיב החיבור לעבר הבקר כדי להחדיר אותו.

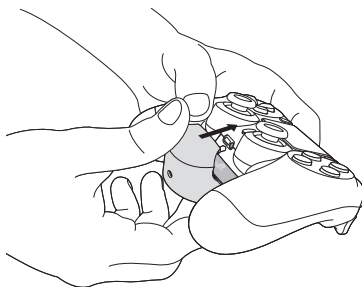

לפני השימוש במוצר זה, קרא בעיון מדריך זה ואת המדריכים של החומרה התואמת. שמור את ההוראות לצורך עיון בעתיד. לקבלת סיוע עם מוצר זה, בקר בכתובת [playstation.com/get-help/](http://playstation.com/get-help/)

## בטיחות

יש להרחיק את המוצר מהישג ידם של ילדים קטנים. ילדים קטנים עלולים לבלוע חלקים קטנים, דבר שעלול להוביל לפציעה או לנזק למוצר.

- אין לנעת במוצר בידיים רטובות.
- בדוק שאין אבק או חפצים זרים על גבי המחברים בעת חיבור מוצר זה לבקר האלחוט.


## שימוש וטיפול

- השתמש במוצר זה רק עם בקר אלחוטי DUALSHOCK®4.
- אין לאפשר לפריטים מתכתיים אחרים לבוא במגע עם המחברים.
- אין להניח חפצים על גבי המוצר. אין לעמוד על המוצר.
- אין לזרוק או להפיל את המוצר, או לחשוף אותו ללחץ פיזי חזק בצורה אחרת.
- אין להניח את המוצר על משטחים לא יציבים, נטויים או שנוטים לתעוד.
- לעולם אין לפרק או לשנות את המוצר.
- עקוב אחר ההוראות שלהלן כדי למנוע בלאי או דהייט צבע של החלקים החיצוניים של המוצר.
- נגב בעזרת מטלית רכה ויבש
- אין להניח חומרי גומי או וינל על צדו החיצוני של המוצר למשך פרק זמן ארוך.
- אין להשתמש בחומרים ממסים או בכימיקלים אחרים. אין לנגב באמצעות מטלית ניקוי הספוגה בחומרים כימיים.

## תנאי אחסון

- אין לחשוף את המוצר לאבק, לעשן או לאדים.
- אין לחשוף את המוצר לטמפרטורות גבוהות, ללחות גבוהה או לאור שמש ישיר.
- אין לאפשר חדירת נוזלים או חלקיקים קטנים לתוך המוצר.

## שמות החלקים

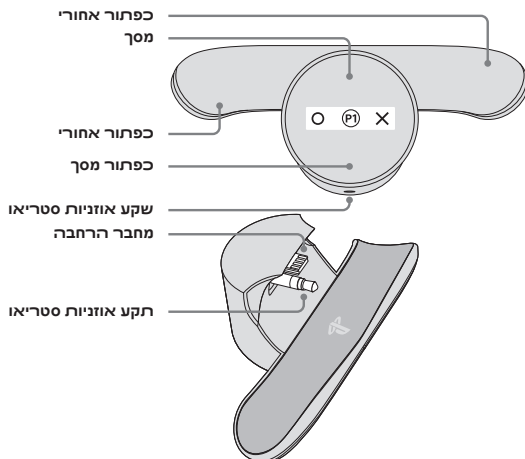



**רכיב חיבור כפתורים אחוריים ל-DUALSHOCK®4**

הוראות הפעלה

CUHYA-0100