



Premier *HomeLine* WR06

USER'S MANUAL

GB

NL




I. Inleiding


Wifi laat u toe een draadloze verbinding tussen uw smartphone, tablet of PC en het internet tot stand brengen. De sterkte van het Wifi signaal kan variëren: hoe verder u verwijderd bent van uw Wifi Internet modem, hoe lager de sterkte van het signaal zal zijn.

Om voldoende snelheid te garanderen voor uw internet verbinding, of om een groter Wifi bereik te krijgen, kunt u de Premier Homeline WR06 Wifi repeater gebruiken. De wifi repeater zal draadloos verbinding maken met zowel uw internetmodem als met uw smartphone/tablet of PC. Lees deze handleiding zorgvuldig door voordat u het product voor de eerste keer gebruikt!

II. Onderdelen en toetsen

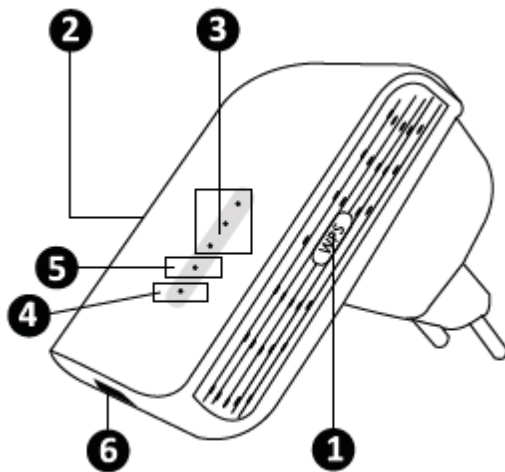

1. WPS knop
2. Reset knop
3. Indicator signaalsterkte
4. Toestelstatusindicator
5. Statusindicator verbinding
6. Ingang LAN internetkabel

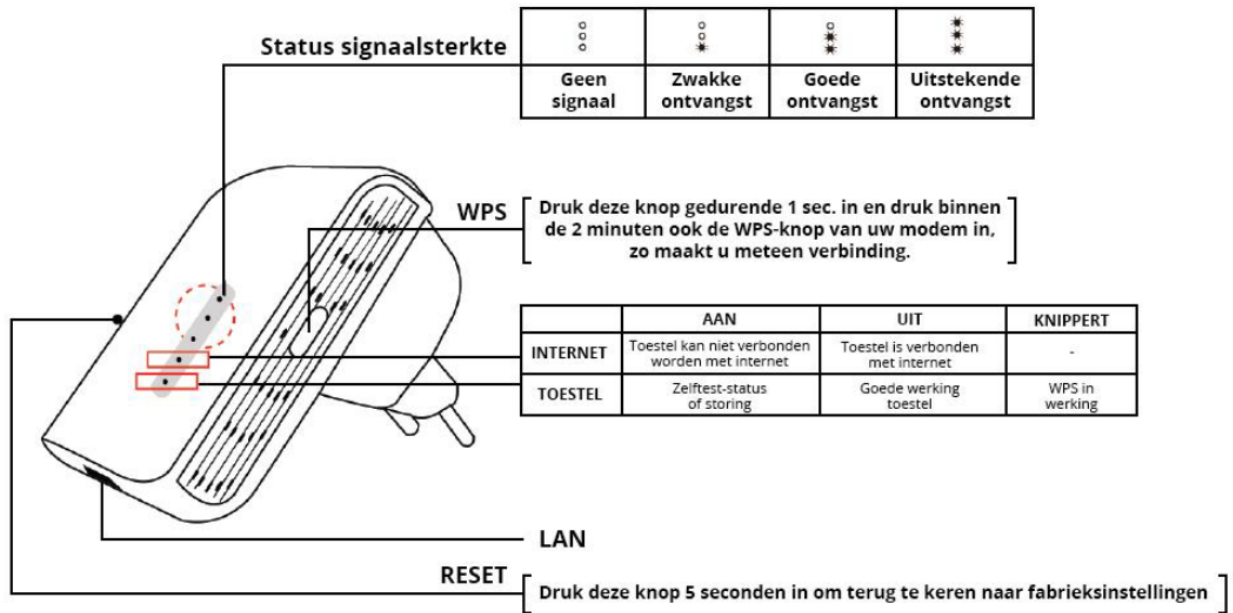

III. Configuratie

De Wifi repeater heeft vele mogelijkheden. We beperken ons in dit hoofdstuk tot de functionaliteit van 'Repeater'. Zie hoofdstuk IV voor andere functionaliteiten zoals Access Point, WISP of router/client.


Een wifi repeater wordt draadloos verbonden met uw modem / router en draadloos met het eindtoestel zoals laptop, smartphone, tablet, etc.

Uw huidige internetmodem heeft al wifi die een bepaald bereik heeft. Aan de rand van dat bereik is de snelheid zeer laag. Om toch voldoende snelheid te behouden, adviseren wij u om de wifi-repeater niet helemaal aan de rand van het bereik van uw bestaande internetmodem te plaatsen.


Uw Wi-Fi Repeater WR06 kan worden geïnstalleerd door gebruik van een computer of smartphone. Bijkomend kan u kiezen voor installatie van de repeater via WPS.

1. Installatie van de repeater met een computer of smartphone

- Steek de Wi-Fi Repeater WR06 in een beschikbaar stopcontact in de buurt van uw internetmodem, en wacht tot de toestelstatusindicator (4) uit gaat.
- Ga via uw computer of smartphone naar de Wi-Fi instellingen.
- Zoek en verbind met het Wi-Fi repeater netwerk **WR06-XXXX(2.4G)** of **WR06-XXXX(5G)**. Het standaard paswoord is **12345678**.

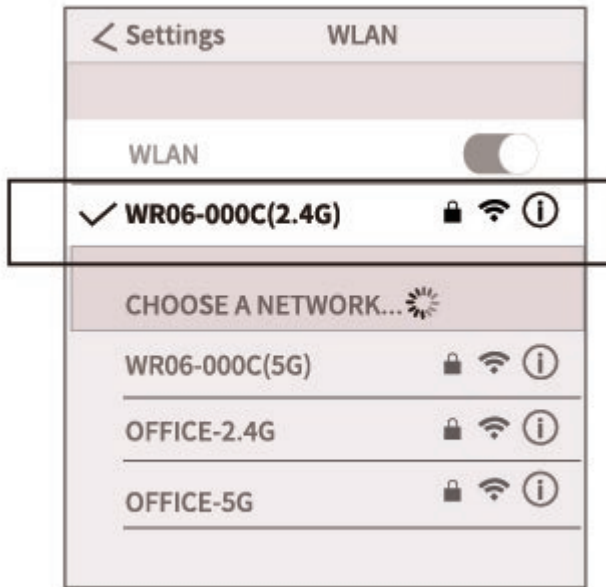

- Scan nu de QR code, of typ **<http://premier.repeater>** in de URL balk van uw browser. Er wordt een login scherm weergegeven. De standaard gebruikersnaam is hier **admin**, en het standaard wachtwoord is **admin**. Beide zijn hoofdlettergevoelig.

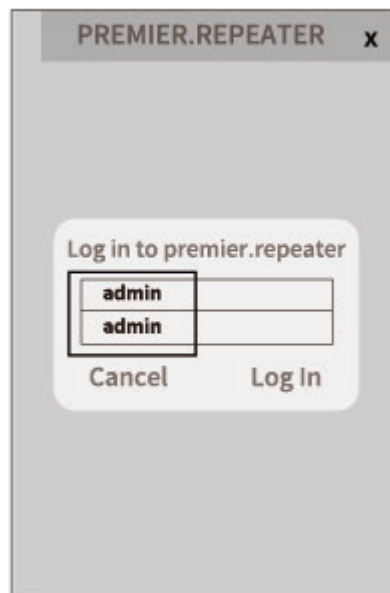

- Selecteer 'Scan Router' op de landingspagina om te zoeken naar een lokaal wifi-netwerk. Voer het paswoord van uw wifi-modem in. Er verschijnt een melding. Druk op OK. Uw Wi-Fi Repeater WR06 wordt opnieuw opgestart, waarna de installatie is voltooid.

go home

Premier Homeline Wi-Fi Repeater WR06

REPEATER

Access Point

CLIENT

WISP

Name of 5G SSID: WR06-002E(5G)

Wireless Password: 12345678

Name of 2.4G SSID: WR06-002E(2.4G)

Wireless Password: 12345678

Switch connection band from 2.4G to 5G

Save above settings and reboot

Router could be connected: None

Please select the router which you want to connect and input it's password(if need), then click "Next".

Scan Router

WIRELESS-1107		Join
TEST-2.4G		Join
OFFICE-2.4G		Join

Password of router:

Next

← → ⌂ 1 ⋮

Notice from webpage

ATTENTION!!!

Please don't power off!

This device will reboot!

Please wait 1 minute and check the LEDs on panel.

If the LEDs are Green, congratulation, the repeater is setup successfully.

If there is no Green on the panel, you need to check the password of router and repeat the setup.

Click the below button to continue.

OK

Paswoorden:

Er zijn verschillende paswoorden:

1. De wifi van uw modem heeft een paswoord.
2. De toegang van de webpagina om de repeater te configureren heeft naam en paswoord **admin** en **admin**
3. De wifi van de repeater heeft een wachtwoord. Dit is standaard **12345678**. Om veiligheidsredenen wordt het aanbevolen dit wachtwoord te wijzigen.

2. Uw repeater instellen met WPS

Met behulp van de WPS-knop op de Wi-Fi Repeater kunt u automatisch verbinding maken met uw lokale Wi-Fi-netwerk zonder dat u instellingen zoals wachtwoorden hoeft te configureren.

Houd er rekening mee dat uw verbindende apparaat ook een WPS-knop of een geïntegreerde WPS-functie moet hebben. Als de WPS-verbinding mislukt, kan dit erop wijzen dat de WPS-modus van uw modem niet compatibel is met de WPS-modus van de Wi-Fi Repeater. In dat geval installeert u de repeater met een computer of smartphone zoals hierboven beschreven in punt 1.

- Sluit de Wi-Fi Repeater WR06 aan op een leeg stopcontact en wacht tot de toestelstatusindicator (4) dimt.
- Druk kort op de WPS-knop (1) op uw Wi-Fi Repeater. De toestelstatusindicator begint te knipperen.
- • Druk vervolgens binnen twee minuten op de WPS-knop op uw modem om direct verbinding te maken. Mogelijk moet u de WPS-knop van uw modem minstens 3 seconden ingedrukt houden. Raadpleeg de handleiding van uw modem voor meer informatie.
- Uw Wi-Fi Repeater WR06 wordt opnieuw opgestart, waarna de installatie is voltooid.

OPMERKING: Als u verbinding wilt maken met een ander wifinetwerk terwijl uw wifi-repeater WR06 al eerder was geconfigureerd, reset u eerst uw wifi-repeater door 5 seconden op de resetknop (2) te drukken. De wifi-repeater wordt dan gereset en herstart zichzelf.

3. Een toestel aansluiten op uw repeater

- Zoek naar nieuwe wifi-verbindingen vanaf uw apparaat.
- Selecteer **WR06-XXXX (2.4G)** of **WR06-XXXX (5G)**. De 5 GHz-verbinding is sneller en selecteert automatisch Wi-Fi-AC als deze op beide apparaten beschikbaar is. Het standaardwachtwoord is **12345678**.

4. Een toestel verbinden met uw repeater via WPS

U kunt er ook voor kiezen om een WPS-compatibel apparaat met uw Wi-Fi Repeater WR06 te verbinden op dezelfde manier als bij het instellen van uw repeater.

- Druk kort op de WPS-knop (1) op uw Wi-Fi Repeater. De toestelstatusindicator (4) begint te knipperen.
- Druk vervolgens binnen twee minuten op de WPS-knop op uw apparaat om verbinding te maken.

IV. Andere componenten en mogelijkheden van de Wi-Fi Repeater

De Premier wifi-repeater WR06 heeft vele mogelijkheden. De meest gebruikte functie is de 'Repeater' functie. In dit geval is het toestel draadloos verbonden met uw modem en draadloos verbonden met eindapparaten zoals laptops, tablets, smartphones etc.

Uw Premier WR06 kan eveneens worden ingesteld als Access Point of AP. Een Access Point is via een internetkabel (LAN) verbonden met uw modem. Het Access Point gebruikt alle wificapaciteit van de Premier WR06 voor de verbinding tussen uw eindapparaat en het WR06 toestel.

U kan het toestel ook instellen als Router of Client. U gebruikt dan een wifiverbinding naar uw modem en een kabelverbinding naar uw eindapparaat. Met behulp van een ethernetkabel kan het LAN-kabelverbindingspunt aan de onderkant van het apparaat worden gebruikt om verbinding te maken met uw modem/router, computer, printer, IP-camera of een ander bekabeld netwerkapparaat.

Als u problemen ondervindt met IP-adressen op de eindapparaten, is de WISP-functie wellicht interessant voor u. Ook als u een repeater op een hotspot, camping, hotel enz. wil gebruiken, moet u mogelijk WISP gebruiken. .

Als u problemen ondervindt met IP-adressen op de eindapparaten, is de WISP-functie wellicht interessant voor u. Ook als u een repeater op een hotspot, camping, hotel enz. wil gebruiken, moet u mogelijk WISP gebruiken.

1. Access point configuratie

- Sluit de Wi-Fi Repeater WR06 aan op een leeg stopcontact en wacht tot de toestelstatusindicator (4) dimt.
- Ga met uw computer of smartphone naar uw Wi-Fi-instellingen. Zoek en maak verbinding met de netwerk-SSID **WR06-XXXX (2.4G)** of **WR06-XXXX (5G)** van uw repeater. Het standaardwachtwoord is **12345678**.
- Scan vervolgens de QR-code of voer **http: //premier.repeater** in de url balk van uw browser in. Er wordt een inlogschermbalk weergegeven. Hier is de standaardgebruikersnaam **admin** en het standaardwachtwoord is **admin**. Zowel gebruikersnaam als wachtwoord zijn hoofdlettergevoelig.
- Selecteer op de landingspagina *Access Point*, wijzig eventueel het wachtwoord om de beveiliging te verbeteren en druk op 'Instellingen opslaan en opnieuw opstarten'.
- Uw Wi-Fi Repeater WR06 wordt opnieuw opgestart, waarna de installatie is voltooid.

2. WISP configuratie

WISP wordt alleen gebruikt als er een IP-adresprobleem is, b.v. omdat er te veel apparaten tussen de repeater en de echte internetverbinding zitten. Met een normale modem in uw huis is WISP meestal niet nodig. De configuratie van WISP is als volgt:

- Sluit de Wi-Fi Repeater WR06 aan op een leeg stopcontact en wacht tot de toestelstatusindicator (4) dimt.
- Ga met uw computer of smartphone naar uw Wi-Fi-instellingen. Zoek en maak verbinding met de netwerk-SSID **WR06-XXXX (2.4G)** of **WR06-XXXX (5G)** van uw repeater. Het standaardwachtwoord is **12345678**.
- Scan vervolgens de QR-code of voer **http: //premier.repeater** in de kop van uw browser in. Er wordt een inlogschermbalk weergegeven. Hier is de standaardgebruikersnaam **admin** en het standaardwachtwoord is **admin**. Zowel gebruikersnaam als wachtwoord zijn hoofdlettergevoelig.
- Selecteer *WISP* op de landingspagina. Op de volgende pagina stelt u het 'WAN Access type' in op *DHCP Client*. Wijzig desgewenst het wachtwoord om de beveiliging te verbeteren.
- Selecteer *Scan Router* om te zoeken naar een lokaal Wi-Fi-netwerk. Voer het wachtwoord van uw wifi-modem in en druk op 'Volgende'.
- Uw Wi-Fi Repeater WR06 wordt opnieuw opgestart, waarna de installatie is voltooid.

3. Client / Router configuratie

- Sluit de Wi-Fi Repeater WR06 aan op een leeg stopcontact en wacht tot de toestelstatusindicator (4) dimt. Ga met uw computer of smartphone naar uw Wi-Fi-instellingen. Zoek en maak verbinding met de netwerk-SSID **WR06-XXXX (2.4G)** of **WR06-XXXX (5G)** van uw repeater. Het standaardwachtwoord is **12345678**.
- Scan vervolgens de QR-code of voer **http: //premier.repeater** in de kop van uw browser in. Er wordt een inlogschermbeweergegeven. Hier is de standaardgebruikersnaam **admin** en het standaardwachtwoord is **admin**. Zowel gebruikersnaam als wachtwoord zijn hoofdlettergevoelig.
- Selecteer *Client* op de landingspagina en vervolgens *Scan Router* om te zoeken naar een lokaal Wi-Fi-netwerk. Voer het wachtwoord van uw wifi-modem in.
- Druk op 'Volgende'. Er verschijnt een melding. Druk op OK.
- Uw Wi-Fi Repeater WR06 wordt opnieuw opgestart, waarna de installatie is voltooid.

VI. Probleemoplossing

1. Ik heb de repeater mogelijk niet goed ingesteld, en wil deze opnieuw instellen.

Reset uw wifi-repeater als volgt:

- Sluit eerst de repeater aan op een stopcontact en wacht tot de toestelstatusindicator (4) dimt.
- Druk vervolgens gedurende 5 seconden op de resetknop (2). De wifi-repeater wordt dan gereset en herstart zichzelf.

2. Ik heb de Wifi repeater via WPS verbonden met mijn internet modem, maar kan niet inloggen of krijg geen Premier WR06 netwerk te zien.

Sommige internet modems hebben wel een WPS knop, maar deze is uitgezet of met een afwijkend wachtwoord ingesteld. In dat geval dient u de verbinding tussen de repeater en uw internet modem uit te voeren volgens hoofdstuk III, onderdeel 1: *Installatie van de repeater met een computer of smartphone*

3. Ik wil de repeater instellen met mijn PC, maar krijg geen verbinding via de LAN kabel.

- Steek de LAN kabel langs de ene kant in de repeater en de andere kant in de PC. Deze verbinding dient rechtstreeks te zijn, dus niet met een apparaat ertussen.
- Als de repeater eerder al geconfigureerd werd, moet u deze resetten.
- De wifi op uw PC moet ook tijdelijk uitgezet worden.
- Ook dient uw PC ingesteld zijn op het automatisch verkrijgen van een IP adres, wat meestal standaard is. Indien uw PC ingesteld staat op een vast IP adres of Proxy, dan dient u de PC tijdelijk in te stellen op 'Automatisch een IP adres verkrijgen'. Deze instelling vindt u via 'Start' - 'Configuratieschermbeweergegeven' - 'Netwerk' - 'Adapterinstellingen' - 'LAN verbinding' - 'Eigenschappen' - 'Internet Protocol versie 4 (IP / IP4)'. Noteer de huidige instellingen en kies 'Automatisch een IP adres verkrijgen' en 'OK'.

- Nadat de Repeater is ingesteld dient u de oorspronkelijke instellingen weer in te vullen.
*** Afhankelijk van uw Windowsversie kunnen sommige opties anders genoemd worden, bijv.
- 'Netwerkcentrum' i.p.v. 'Netwerk'.

4. Mijn repeater is geconfigureerd, maar ik krijg geen toegang tot het internet met mijn telefoon of tablet.

- Controleer uw paswoord.
- Zorg ervoor dat u de wifi-repeater dicht bij de internetmodem plaatst en deze pas later in een verder verwijderd stopcontact plaatst.
- Als bovenstaande geen oplossing geeft, raden wij u aan uw modem in te stellen op een ander beveiligingstype en deze te updaten naar de laatste softwareversie.

5. Mijn internetverbinding bestaat niet uit een gewone modem met Wifi en bekabelde verbinding, maar heeft afzonderlijke componenten zoals modem, router, Wifi-router of accesspoint en dergelijke. De Wifi repeater werkt niet.

De Wifi repeater is ontworpen voor standaard internetverbindingen met een geïntegreerde modem / Wifi box. U kunt een probleem vanwege IP NAT hebben. Gebruik een geïntegreerde modem / Wifi box of configureer uw netwerk opnieuw.

6. Ik gebruik "MAC address filtering", maar kan mijn repeater niet verbinden.


Antwoord: Het MAC adres op het label van de repeater is het MAC adres van de internetkabel verbinding. Schakel de MAC adres filtering in uw internet modem uit, en verbindt daarna de wifi repeater volgens de stappen die in de handleiding zijn beschreven.

Voor meer informatie, technische vragen of retouraanvragen met betrekking tot dit product dient u rechtstreeks contact op te nemen met support@eldap.eu.


I. Introduction

Wi-Fi allows you to establish a wireless connection between your smartphone, tablet, or computer, and the internet. The strength of the Wi-Fi signal may vary: the further you are from your Wi-Fi internet router, the lower the strength of the signal will be. To ensure sufficient speed for your internet connection, or to get a bigger Wi-Fi range, you can use the Premier Homeline Wi-Fi Repeater WR06. The Wi-Fi Repeater WR06 will strengthen and expand your Wi-Fi signal into areas it can't reach on its own. Your repeater will connect wirelessly to both your internet router, and your smartphone, tablet, or computer. If your Wi-Fi network is password protected, you will have to set up your Wi-Fi Repeater WR06 according to the instructions described below. Please read this manual carefully, when using the product for the first time.

II. Parts & Buttons

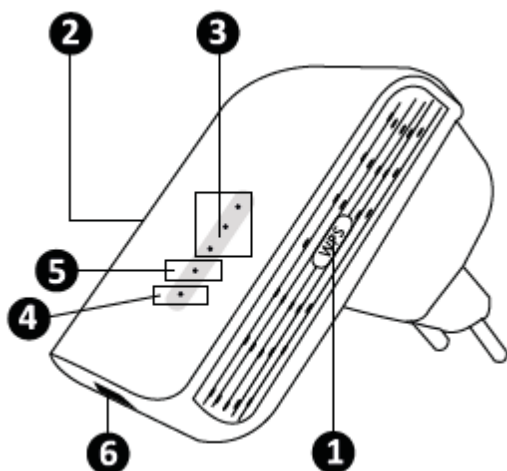

1. WPS button
2. Reset button
3. Signal strength indicator
4. Device status indicator
5. Connection status indicator
6. LAN cable connection point

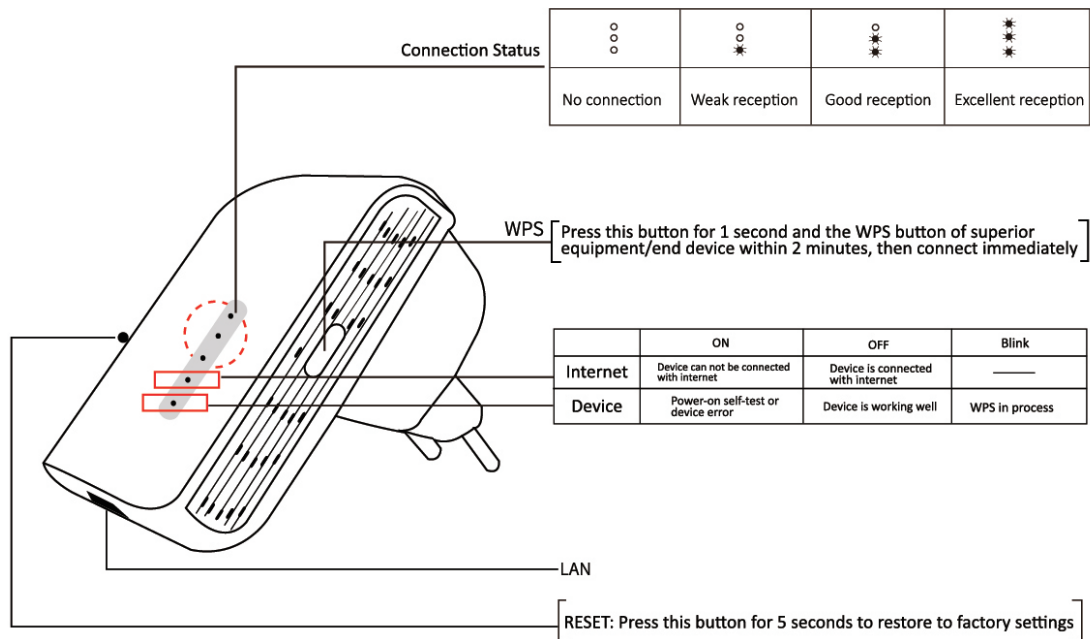

III. Configuration

In this section, we restrict ourselves to the functionality of Wi-Fi Repeater. See chapter IV for other operation modes such as Access Point, WISP or router/client.


A Wi-Fi repeater is connected wirelessly to your modem / router and wirelessly to the end device, such as laptop, smartphone, tablet, etc.

Your current internet router is already broadcasting Wi-Fi up to a certain range. At the edge of its range, internet speed may be very low. In order to maintain sufficient speed, it is advisable not to install the Wi-Fi Repeater at the very edge of its existing internet range.


Your Wi-Fi Repeater WR06 can be set up using a computer or smartphone. Alternatively, you may choose to set up your repeater using WPS.

1. Setting up your repeater using your computer or smartphone

Plug the Wi-Fi Repeater WR06 into an empty power outlet, and wait for the Device status indicator (4) to dim. Using your computer or smartphone, go to your Wi-Fi settings. Find and connect to your repeater's network SSID **WR06-XXXX(2.4G)** or **WR06-XXXX(5G)**. The default password is **12345678**.

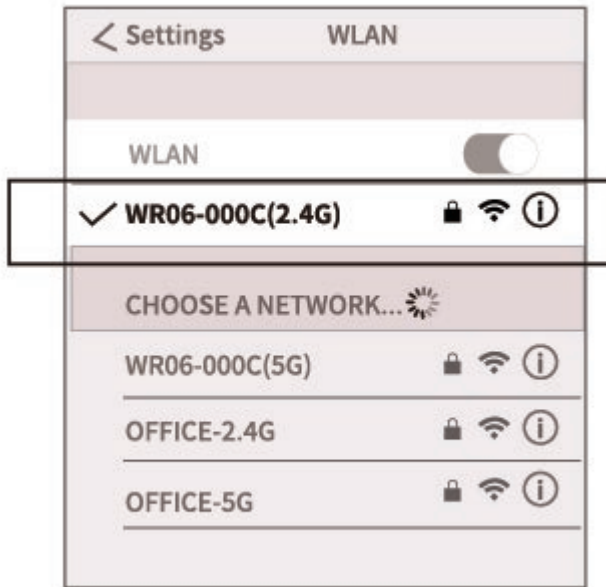

Then, scan the QR code, or enter **<http://premier.repeater>** in your browser heading. A login screen will prompt. Here, the default username is **admin**, and the default password is **admin**. Please note both username and password are case sensitive.

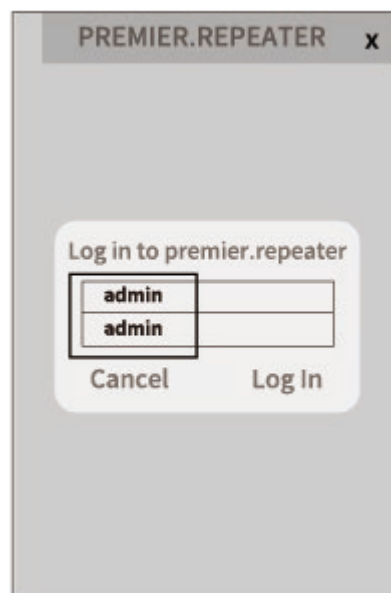

On the landing page, select *Scan Router* to search for local Wi-Fi network. Input your Wi-Fi router password. A notice will appear. Press OK. Your Wi-Fi Repeater WR06 will reboot, after which setup is completed.

go home

Premier Homeline Wi-Fi Repeater WR06

REPEATER

Access Point

CLIENT

WISP

Name of 5G SSID: WR06-002E(5G)

Wireless Password: 12345678

Name of 2.4G SSID: WR06-002E(2.4G)

Wireless Password: 12345678

Switch connection band from 2.4G to 5G

Save above settings and reboot

Router could be connected: None

Please select the router which you want to connect and input it's password(if need), then click "Next".

Scan Router

WIRELESS-1107		Join
TEST-2.4G		Join
OFFICE-2.4G		Join

Password of router:

Next

← → ⏮ ⏭ ⋮

Notice from webpage

ATTENTION!!!

Please don't power off!

This device will reboot!

Please wait 1 minute and check the LEDs on panel.

If the LEDs are Green, congratulation, the repeater is setup successfully.

If there is no Green on the panel, you need to check the password of router and repeat the setup.

Click the below button to continue.

OK

Passwords:

There are several passwords:

1. The Wi-Fi of your modem has a password.
2. The access of the webpage to configure the repeater has name and password admin and admin
3. The Wi-Fi of the repeater has a password. This is default 12345678. For security, it is recommended to change this password.

2. Setting up your repeater using WPS

Using the WPS button on the Wi-Fi Repeater, you may automatically connect to your local Wi-Fi network without having to configure any settings such as passwords. Please note your connecting device should also either have a WPS button, or a WPS function integrated. If WPS connection fails, this may indicate your router's WPS mode is not compatible with the Wi-Fi Repeater's WPS mode.

Plug the Wi-Fi Repeater WR06 into an empty power outlet, and wait for the Device status indicator (4) to dim. Briefly press the WPS button (1) on your Wi-Fi Repeater. The Device status indicator will start blinking. Then, press the WPS button on your router within two minutes to

connect instantly. You may need to press and hold your router's WPS button for at least 3 seconds. Please refer to your router's manual for more information. Your Wi-Fi Repeater WR06 will reboot, after which setup is completed.

NOTE: If you wish to connect to a different Wi-Fi network while your Wi-Fi Repeater WR06 was already configured before, reset your Wi-Fi Repeater first by pressing the Reset button (2) for 5 seconds. The Wi-Fi Repeater will then reset, and restart itself.

3. Connecting a device to your repeater

Search for new Wi-Fi connections from your device. Select **WR06-XXXX(2.4G)** or **WR06-XXXX(5G)**. The 5GHz connection is quicker and will automatically select Wi-Fi-AC if this is available on both devices. The default password is **12345678**.

4. Connecting a device to your repeater using WPS

You may also choose to connect any WPS compatible device to your Wi-Fi Repeater WR06 using the same method provided when setting up your repeater. Briefly press the WPS button (1) on your Wi-Fi Repeater. The Device status indicator (4) will start blinking. Then, press the WPS button on your device within two minutes to connect.

IV. Other components and possibilities of the Wi-Fi Repeater

The Premier Homeline Wi-Fi Repeater WR06 has many possibilities. The most frequently used function is the 'Repeater' function. Your WR06 will be wirelessly connected to your router, and wirelessly connected to end devices such as laptops, tablets, or smartphones.

Your WR06 may also be set up as Access Point or AP. As an Access Point, your Wi-Fi Repeater WR06 is connected directly to your modem using a LAN cable. The Access Point uses full Wi-Fi capacity of the Premier Homeline WR06 to ensure connection to your end device.

Alternatively, you may also set the device as a Router or Client. This means that you use a Wi-Fi connection to your router, and a cable connection to your end device. Using an ethernet cable, the LAN cable connection point at the bottom of the unit can be used to connect to your router, computer, printer, IP camera or any other wired network device.

If you experience problems with IP addresses on the end devices, then the WISP function may be interesting for you. Also when you like to use a repeater on a hotspot, camping, hotel etc., you may need to use WISP.

1. Access point configuration

Plug the Wi-Fi Repeater WR06 into an empty power outlet, and wait for the Device status indicator (4) to dim. Using your computer or smartphone, go to your Wi-Fi settings. Find and connect to your repeater's network SSID **WR06-XXXX(2.4G)** or **WR06-XXXX(5G)**. The default password is **12345678**. Then, scan the QR code, or enter **http://premier.repeater** in your browser heading. A login screen will prompt. Here, the default username is **admin**, and the default

password is **admin**. Please note both username and password are case sensitive. On the landing page, select *Access Point*, optionally change the password to enhance security, and press '*Save above settings and reboot*'. Your Wi-Fi Repeater WR06 will reboot, after which setup is completed.

2. WISP configuration

WISP is only used when there is an IP address problem, e.g. because too many devices are in between the repeater and the real internet connection. With a normal modem in your home, WISP is usually not necessary. The setup of WISP is as follows:

Plug the Wi-Fi Repeater WR06 into an empty power outlet, and wait for the Device status indicator (4) to dim. Using your computer or smartphone, go to your Wi-Fi settings. Find and connect to your repeater's network SSID **WR06-XXXX(2.4G)** or **WR06-XXXX(5G)**. The default password is **12345678**. Then, scan the QR code, or enter **http://premier.repeater** in your browser heading. A login screen will prompt. Here, the default username is **admin**, and the default password is **admin**. Please note both username and password are case sensitive. On the landing page, select *WISP*. In the next page, you set the 'WAN Access type' to *DHCP Client*. Optionally change the password to enhance security.

Select *Scan Router* to search for local Wi-Fi network. Input your Wi-Fi router password. Press 'Next'. Your Wi-Fi Repeater WR06 will reboot, after which setup is completed.

3. Client / Router configuration

Plug the Wi-Fi Repeater WR06 into an empty power outlet, and wait for the Device status indicator (4) to dim. Using your computer or smartphone, go to your Wi-Fi settings. Find and connect to your repeater's network SSID **WR06-XXXX(2.4G)** or **WR06-XXXX(5G)**. The default password is **12345678**. Then, scan the QR code, or enter **http://premier.repeater** in your browser heading. A login screen will prompt. Here, the default username is **admin**, and the default password is **admin**. Please note both username and password are case sensitive. On the landing page, select *Client*, and then *Scan Router* to search for local Wi-Fi network. Input your Wi-Fi router password. Press 'Next'. A notice will appear. Press OK. Your Wi-Fi Repeater WR06 will reboot, after which setup is completed.

VI. Troubleshooting

1. I may have set up the Wi-Fi Repeater wrongly, and want to change the settings.

Answer: Please reset your Wi-Fi Repeater. First, plug the repeater in a power outlet and wait until the Device status indicator dims. Then, press the Reset button (2) for 5 seconds. The Wi-Fi Repeater will then reset, and restart itself.

2. I have connected the Wi-Fi Repeater using WPS with the internet router, but cannot log in or cannot detect the Premier Homeline WR06 network.

Answer: Some internet modems do have a WPS button, but that is deactivated or equipped with a different password. In that case, you need to set the connection between the Repeater and internet modem as stated in chapter III, part 1: *Setting up your repeater using your computer or smartphone*.

3. I want to set up the repeater using my PC, but cannot connect using the LAN cable.

Answer: You need to plug one side of the LAN cable in the repeater, and the other side of the cable in the PC. This connection needs to be direct, without any other device in-between. If the repeater was set up before, please reset the repeater. Please also temporarily turn off your PC's Wi-Fi. Also, your PC needs to be set to 'Obtain IP address automatically', which is commonly the case. If your PC is set to a fixed IP address or Proxy, please temporarily set your PC to 'Obtain IP address automatically.' This setting can be found under 'Start' - 'Control Panel' - 'Network' - 'Adapter Settings' - 'LAN connection' - 'Properties' - 'Internet Protocol version 4 (IP / IP4)'. Make sure to write down the current settings before choosing 'Obtain IP address automatically' and 'OK'. After the repeater is set up, you need to enter the original settings. *** Depending on your Windows version, some options may have a different name, e.g. 'Network Center' instead of 'Network'.

4. My repeater is set up, but I cannot access internet with my phone or tablet.

Answer: Please check your password. Make sure you firstly place the Wi-Fi Repeater near the internet router to configure. Afterwards, you may plug the repeater into a more distant power outlet. If still unable to connect to the internet, you are advised to change the security type of your modem, and update to latest software version of your internet modem.

5. My internet connection has not been set up using a regular modem with Wi-Fi/wired connection. Instead, I have set up several separate components, such as a modem, router, Wi-Fi-router or Access Point, and more. The Wi-Fi Repeater isn't working.

Answer: The Wi-Fi Repeater is designed for standard internet connections with an integrated modem / Wi-Fi box. You may have a problem because of IP NAT. Please use an integrated modem / Wi-Fi box or reconfigure your network.

6. I'm using MAC address filtering, but cannot connect my repeater.

Answer: The MAC address on the label of the repeater is the MAC address of the cable connection. Please turn off MAC address filtering in your internet modem, and then connect the Wi-Fi Repeater by following the steps described in the manual.

For more information, technical questions and return requests concerning this product, you should contact support@eldap.eu.