


FR



MANETTES DUO PRO PACK pour Switch

Prise en main

- Lisez attentivement ce guide avant d'utiliser la manette.
- La lecture de ce guide vous aidera à apprendre à utiliser correctement la manette.
- Conservez ce guide en lieu sûr pour pouvoir l'utiliser à l'avenir.



Manuel d'utilisation

DESCRIPTION DU PRODUIT



- 1 Capture d'écran
- 2 Touches directionnelles
- 3 Stick gauche
- 4 Bouton -
- 5 Bouton L
- 6 Indicateurs Joueurs LED
- 7 Bouton R
- 8 Bouton +
- 9 Boutons A/B/X/Y
- 10 Stick Droit
- 11 Bouton HOME
- 12 Bouton ZL
- 13 Bouton déverrouillage
- 14 Bouton déverrouillage
- 15 Bouton ZR

- 16 Bouton SL
- 17 Bouton Mode
- 18 Bouton SR
- 19 Bouton SR
- 20 Bouton SL
- 21 Ports de Charge

PREMIÈRE CONNEXION SANS FIL

1. Paramétrage de la console - la connexion Bluetooth doit être activée
Allumez la console, allez dans le menu «Paramètres de la console», puis sélectionnez «Mode avion» et assurez-vous qu'il est sur Off et que «Communication avec les manettes (Bluetooth)» est activé, sinon activez-le sur.




2. Connexion à la console
-Dans le menu «Home», sélectionnez «Controllers» et ensuite «Change style/order». Appuyez sur le bouton Mode (17) de la manette droite ou gauche et maintenez-le enfoncé pendant 3 secondes. La LED clignote rapidement et passe en mode de synchronisation Bluetooth. Dès que les deux manettes apparaissent à l'écran, suivez les instructions qui s'affichent. Vos manettes sont maintenant synchronisées et fonctionnent sur votre console.



COMMENT CONNECTER LA MANETTE ?

Faites glisser la manette vers le bas jusqu'à ce qu'elle émette un clic, en vous assurant qu'elle est correctement orientée et insérée jusqu'au bout.

Mode console

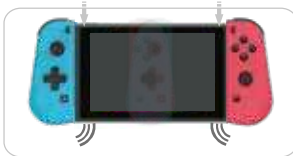

Mode pro



COMMENT RECONNECTER LA MANETTE ?

Allumez les manettes en appuyant sur une des touches HAUT/BAS/GAUCHE/DROITE ou A/B/X/Y. Une fois les manettes allumées, les LED clignotent lentement de façon alternative. Appuyez pendant 3 secondes sur le bouton de synchronisation pour accéder au paramètre de connexion et relâchez quand les 4 LED clignotent plus rapidement. Les LED restent allumées si les manettes sont bien appairées.


Pour désappairer les manettes, restez appuyé sur le bouton de synchronisation pendant 3 secondes.

COMMENT CHARGER LES MANETTES ?

Uniquement par chargement USB :

Branchez les manettes à un câble micro USB. Les 4 LED clignotent lentement pendant la charge. Une fois la charge terminée, les 4 LED restent éteintes.

Lorsque les manettes se chargent, veillez à ne pas les connecter à la console pour éviter tout dommage.

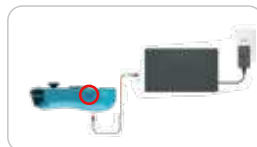

MODE VEILLE

Les manettes se mettent en veille automatiquement si elles ne sont connectées à aucun appareil compatible et après 5 minutes sans activité.

PROCEDURE DE REINITIALISATION

Si un fonctionnement anormal est constaté, si la manette ne répond pas aux commandes, si elle se bloque automatiquement et pour d'autres raisons, une réinitialisation peut être effectuée. Pour cela, appuyez brièvement sur le bouton "MODE" (17).

CALIBRAGE DES CAPTEURS

La manette est connectée à la console Switch, allez dans le menu "Console Settings", sélectionnez "controller and sensor", puis sélectionnez "sensor calibration", suivez les instructions à l'écran.


EN



PRO DUO CONTROLLERS PACK for Switch

Getting Started

- Make sure you read this guide,before using the Controller.
- Reading this guide will help you learn to use the Controller properly.
- Store this guide safely so that you can use it in the future.



Instruction Manual

PRODUCT DESCRIPTION



- 1 Screenshot button
- 2 Directional Buttons
- 3 Left Stick
- 4 - Button
- 5 LB button
- 6 LED player indicators
- 7 R B button
- 8 + Button
- 9 A / B / X / Y B buttons
- 10 Right Stick
- 11 HOME B button
- 12 ZLB button
- 13 Release B button
- 14 Release B button
- 15 ZRB button

- 16 SLB button
- 17 Mode Button
- 18 SRB button
- 19 SRB button
- 20 SLB button
- 21 Charing Port

HOW TO CONNECT WIRELESSLY ?

1. Console settings: the Bluetooth connection must be enabled
Turn on the console, go to the "Console Settings" menu, then select "Flight Mode" and make sure it is set to Off and that "Communication with controllers (Bluetooth)" is enabled, otherwise set it to On.




2. Connecting to the console
-In the "Home" menu, select "Controllers" and then "Change grip/order". Press and hold the Mode button (17) on the left or right controller for 3 seconds. The LED flashes rapidly and switches to Bluetooth sync mode. As soon as both controllers appear on the screen, follow the instructions on the screen. Your controllers are now synchronised and working on your console.



HOW TO CONNECT THE CONTROLLER?

Handheld mode

Slide the controller own until it make a sound,ensuring that it is correctly oriented and inserted all the way.

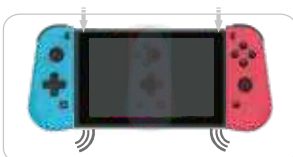

Grip mode



HOW TO RECONNECT

ACTIVATION :


1. To activate the controllers press UP / DOWN / LEFT / RIGHT on the left controller and A / B / X / Y on the right controller. The LEDs flash slowly in circular mode.
2. Press the "MODE" button for 3 seconds to access the connection mode and release when the LEDs flash faster. Once connected, the LEDs remain steady.

DISABLING: To deactivate the controllers press and hold the MODE button for 3 seconds.

HOW TO CHARGE THE CONTROLLER ?

USB charging only:

Connect the controllers to a micro USB cable. The 4 LEDs flash slowly during charging. When charging is complete, all 4 LEDs remain off.
When the controllers are charging, make sure not to connect them to the console to avoid damage.

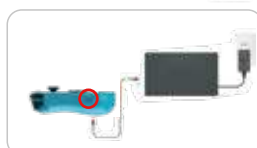

STAND-BY

Controllers automatically set to Stand-by mode if they do not detect compatible devices during the connection procedure and if not in use for 5 minutes.

RESET

If abnormal operation is noted,if the controller does not respond to commands,automatic crashes and other causes,a Reset can be performed. To short press the "MODE" button (17).

SENSOR CALIBRATION

The controller is connected to the Switch console, go to the "Console Settings" menu , select "controller and sensor", then select "sensor calibration", follow the instructions on the screen.

CALIBRAGE 3D

La manette est connectée à la console Switch, allez dans le menu " Paramètres de la console ", sélectionnez " manette et capteur ", puis sélectionnez "calibrage 3D", suivez les instructions à l'écran.

CARACTÉRISTIQUES TECHNIQUES

Batterie	Lithium Polymère
Capacité de la batterie	350mA
Autonomie de la batterie	Environ 4 à 6 heures
Temps de charge	Environ 2 à 5 heures
Méthode de charge	USB DC 5V
Ampérage	≤ 300mA
Port de recharge	Micro USB
Fonction vibration	Double

FONCTIONNEMENT DES LED

- Pour allumer la manette : Lorsque la manette est éteinte, appuyez sur une des touches HAUT/BAS/GAUCHE/DROITE ou A / B / X / Y.
- Pour connecter une manette : Appuyez sur le bouton MODE pendant 3 secondes, les 4 LED clignoteront rapidement. Après la connexion, les voyants restent fixes.
- Lorsque la batterie est faible, les LED clignotent lentement et les manettes s'éteignent automatiquement lorsque la batterie est vide.
- Si la connexion Bluetooth de la console est interrompue ou si elle est en mode veille, les manettes s'éteignent automatiquement.
- Chargement par câble USB : Lors de la charge, les LED clignotent lentement. Une fois la charge terminée, les 4 LED s'éteignent.
- La console permet la connexion de 7 manettes simultanément. Chaque voyant indique le canal de connexion relatif. La LED 1 allumée indique la connexion au premier canal, LED1 + la LED2 indique la connexion au deuxième canal, LED1 + LED2 + la LED3 indique la connexion au troisième canal et LED1 + LED2 + la LED3 + LED4 indique la connexion au quatrième canal.
- La durée d'utilisation est d'environ 10 heures avec le mode vibration actif et d'environ 20 heures avec le mode vibration inactif.

MISE A JOUR

Après mise à jour de la console, il peut être nécessaire de mettre à jour les manettes via PC avec un câble de charge.

Allez sur le site www.freaksandgeeks.fr et sur la page du produit pour télécharger le pilote. Si vos manettes fonctionnent bien avec votre console, NE FAITES PAS DE MISE A JOUR.

Seulement avec le jeu Switch Sports :

1.Lors du lancement du jeu Switch Sports, lorsque la mise à jour de la manette est demandée, cliquez sur OK.



2.un message annonce que la connexion de la manette a été perdue, cliquez sur OK. Vous pouvez reprendre votre jeu.



3. reconnectez vos manettes en maintenant L+R. Vous pouvez commencer votre jeu.



Remarque : Le jeu Switch Sports contient 6 mini-jeux, lorsque vous changez de mini-jeu, vous devez répéter cette opération.

3D CALIBRATION

The controller is connected to the Switch console, go to the "Console Settings" menu , select "controller and sensor", then select "3D calibration", follow the instructions on the screen.

SPECIFICATIONS

Battery	Built-in polymer lithium battery
Battery capacity	350mA
Battery using time	About 4,6 hours
Charging time	About 2,5 hours
Charging method	USB DC 5V
Charging current	≤ 300mA
Charging port	Micro USB
vibration function	Supports double motor

LED

When the gamepad is off, press UP / DOWN / LEFT / RIGHT on the left gamepad and A / B / X / Y on the right gamepad to activate. • Press the "MODE" button for 3 seconds, the 4 LEDs flash quickly. Following the connection, the LEDs remain fixed. • When the battery is almost flat, the LEDs flash slowly and with a low battery the gamepads turn off automatically. • If the console's Bluetooth connection is interrupted or if in standby mode, the gamepads automatically turn off. • The console allows the connection of 7 gamepads simultaneously. Each LED indicates the relative connection channel. LED1 lit indicates connection to the first channel, LED1 + LED2 indicate connection to the second channel, LED1 + LED2 + LED3 indicate connection to the third channel and LED1 + LED2 + LED3 + LED4 to the fourth channel. • The usage time is about 10 hours in vibration mode and about 20 hours in inactive vibration mode.

HOW TO TURN OFF CONTROLLERS?

1.When controller is connecting with Switch console,by holding down the POWER Button to Power Off the Console, controller will power off as well.

2.When controllers turned on,disconnected with console,by pressing[Power-off Button]at side of controller to turn it off.

WARNING

- Use only the supplied charging cable to charge this product.
- If you hear a suspicious sound, smoke, or a strange smell, stop using this product.
- Do not expose this product or the battery it contains to microwaves, high temperatures, or direct sunlight.
- Do not let this product come in contact with liquids or handle it with wet or greasy hands. If liquid gets inside, stop using this product
- Do not subject this product or the battery it contains to excessive force. Do not pull on the cable or bend it sharply.
- Do not touch this product while it is charging during a thunderstorm.
- Keep this product and its packaging out of reach of young children. Packaging elements could be ingested. The cable could wrap around children's necks.
- People with injuries or problems with fingers, hands or arms should not use the vibration function
- Do not attempt to disassemble or repair this product or the battery pack. If either is damaged, stop using the product.
- If the product is dirty, wipe it with a soft, dry cloth. Avoid the use of thinner, benzene or alcohol.

SOFTWARE UPDATE

If Nintendo updates the system in future, your controllers should need an update. Go to www.freaksandgeeks.fr and follow instructions. If your controller work well, DO NOT update your controller,which maybe cause controller's system confusion.

Only with the game Switch Sports :

1.When launching the Switch Sports game, when the controller update is requested, click OK.



2.A message announces that the controller connection has been lost, click OK. You can resume your game.



3.Reconnect your controllers by holding L+R. You can start your game.



Note: The Switch Sports game contains 6 mini games, when you change the mini game, you will have to repeat this operation.