

2.4G Wireless
Keyboard and Mouse Combo

User Manual



Model: KB7001+MS2237

20220609

Product Specification

Dimension: 440*220*76mm
Weight: 795g ± 5g
Connection: 2.4G Wireless Connection
Receiver type: USB Nano Receiver
Standby hours: 900 hours
Working time: 180 hours of typing
Working distance: 10 meters from the receiver without obstruction.
DPI: 800-1200-1600
Power: Two AAA battery for mouse, two AAA batteries for keyboard (NOT INCLUDED)
Battery saving: Enter sleep mode after 5 minutes without action

You will receive



- 1 -

How to set up


1

Step 1: Plug the USB receiver to the USB port.




2

Step 2: Put the batteries(2AAA batteries for keyboard, 2AAA batteries for mouse). Turn on the switch of the keyboard and mouse.

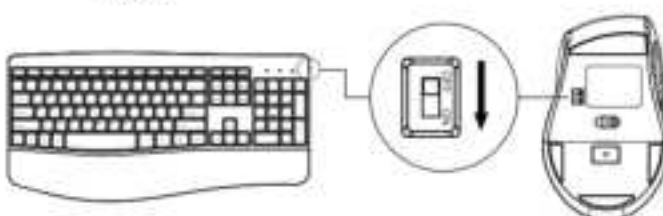

3

Step 3: The wireless keyboard and mouse can be used directly when finished pairing, and no need to install any drivers.

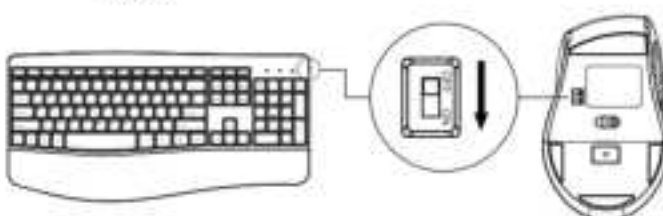

- 2 -

FAQ:

Q1: What should I do if the keyboard become sticky after a period of usage?
A1: This usually happens due to low power. Please replace the battery on the keyboard and try again. If this issue repeats, please contact us again.

Q2: What should I do if I can't type with the keyboard?
A2: First, please make sure whether the keyboard can be turned on. If you can't turn on the keyboard, please change the battery and try again, if it still won't work, please contact us
If you can turn on the keyboard just it won't type, please try repairing the Keyboard with the USB receiver.

Q3: What should I do if my mouse stopped working.
A3: First, please confirm whether the mouse can be turned on. If you can't successfully turn on the mouse, change the battery and try again. If it can successfully turn on, try to use the repair method for the mouse.

- 3 -

How to repair the keyboard to the USB receiver

Step 1: Insert the USB receiver and turn on the power, the power light keeps on, and then place the keyboard as closely as possible to the USB receiver.



Step 2: Press and hold the "ESC" and the "K" key together for 3-5 seconds.



Step 3: Wait until the power light is flashing and then turn off.



- 4 -

How to repair the mouse to the USB receiver

Step 1: Unplug the usb receiver from the computer port.



Step 2: Press and hold the right button wheel button for 5s;



Step 3: Plug the receiver to the computer, keep the wireless mouse near to the usb receiver again. The pairing is completed.



NOTE: If the code is not successful, pls repeat the above steps.

- 5 -

Instruction of the multifunction keys

F1

F2

F3

F4

F5

F6

F7

F8

F9

F10

F11

F12

If you press these keys directly, they will be served as "F1-F12". Press and hold "Fn", then press "F1...F12", they will be served as multimedia keys.

WARNING

- Do not expose this product to water, Prevent liquid from entering this product, Water or humidity may cause short-circuit and damage this keyboard.
- Do not drop or hit this product. Shocks may damage the components inside.
- Do not put this product near extreme heat or fire.
- Do not try to disassemble or modify this product on your own.

- 6 -

2.4G Kabelloses
Tastatur und Maus Set

Bedienungsanleitung



Modell: KB7001+MS2237

20220609

Spezifikation

Abmessung: 440*220*76mm
Gewicht: 795±5g
Verbindung: 2.4G USB
Dongle Typ: USB Nano Empfänger
Standby Zeit: 900 Stunden
Arbeitszeit: 180 Stunden
Reichweite: 10 M
Maus DPI: 800-1200-1600
Betreiben: Maus : 2 AAA Batterien, Tastatur: 2 AAA Batterien(Die Batterien sind nicht im Lieferumfang)
Energiesparmodus: Nach 5 Leerlauf geht die in den Schlafmodus, drücken Sie irgendeine Taste, um die wieder zu aktivieren

Packung



- 7 -

Verbindungsschritte


1

Stecken Sie den USB Empfänger in den USB Anschluss ein.




2

Legen Sie die nutzbare Batterien (2 AAA Batterien für die Tastatur, 2 AAA Batterien für die Maus) hinein, schalten Sie die Tastatur und Maus an.

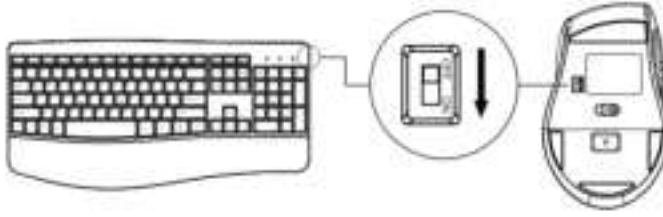

3

Dann können Sie direkt die Tastatur und Maus benutzen, keine Treiber muss installiert werden.

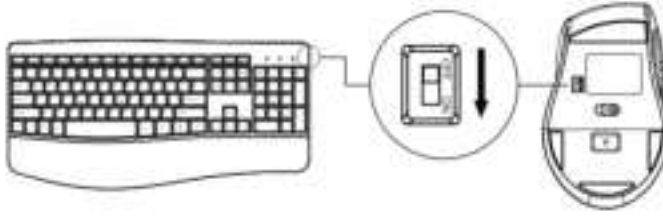

- 8 -

FAQ:

Q1: Was soll ich tun, wenn die Tastatur/Maus verzögert?
A1: Dies geschieht normalerweise aufgrund eines geringen Stromverbrauchs. Bitte wechseln Sie für die Tastatur oder Maus 2 neue Batterien. Falls sich dies Problem wiederholt, bitte kontaktieren Sie uns via Amazon.

Q2: Was soll ich tun, wenn ich mit der Tastatur nicht tippen kann?
A2: Zuerst überprüfen Sie ob die Tastatur eingeschaltet werden kann. Falls nicht, bitte wechseln Sie für sie 2 neuen Batterien und dann schalten Sie erneut an. Wenn es immer nicht funktioniert, bitte wenden Sie sich an uns.

Q3: Was kann ich machen, wenn meine Maus nicht mehr funktioniert?
A3: Zuerst überprüfen Sie ob die Maus eingeschaltet werden kann. Falls nicht, bitte wechseln Sie für sie 2 neuen Batterien und dann schalten Sie erneut an. Wenn es immer nicht funktioniert, bitte wenden Sie sich an uns.

Wenn sich die Maus einschalten lässt, also die rote Anzeige an der Rückseite beim ON leuchtet, aber die Maus arbeitet nicht, versuchen Sie die Reparaturmethode mit dem USB Empfänger.

- 9 -

SO reparieren Sie die Tastatur mit dem USB Empfänger

Schritt 1: Starten Sie Ihr Gerät erneut an., stecken Sie den USB Dongle in einen anderen USB Anschluss, schalten Sie die Tastatur an (Legen Sie die Tastatur möglichst nah am USB Dongle)



Schritt 2: Drücken Sie "ESC" und "K" zusammen für 3-5 Sekunden.



Schritt 3: Halten Sie die Tasten und warten Sie bis die Ladeanzeige schnell blinkt und dann ausgeht. Dann ist die Verbindung erneut gesetzt.



- 10 -

SO reparieren Sie die Maus mit dem USB Empfänger

Schritt 1: Stecken Sie den USB Empfänger heraus.



Schritt 2: Schalten Sie die Maus an und drücken Sie die rechte Taste und das Scrollrad zusammen für 5 Sekunden.



Schritt 3: Stecken Sie den USB Empfänger wieder in den USB Anschluss (Legen Sie die Maus so nah wie möglich am PC)



Hinweis: Wenn die noch nicht reagiert, bitte wiederholen die obige Schritte.

- 11 -

Multimedia Tasten

F1

F2

F3

F4

F5

F6

F7

F8

F9

F10

F11

F12

Wenn Sie die obige Tasten allein drücken, funktionieren sie als F1-F12: Wenn Sie die obige Tasten mit Fn zusammen drücken, funktionieren sie als Multimedia wie Lautstärke, Helligkeit, Email.

Warnung

- Setzen Sie dieses Produkt keinem Wasser aus. Verhindern Sie, dass Flüssigkeit in dieses Produkt eindringt. Wasser oder Feuchtigkeit können keinen Kurzschluss verursachen und das Produkt beschädigen.
- Lassen Sie das Produkt nicht fallen oder schlagen Sie nicht darauf. Stöße können die inneren Komponenten beschädigen.
- Setzen Sie das Produkt nicht extremer Hitze oder Feuer aus.
- Versuchen Sie nicht, das Produkt selbst zu zerlegen oder zu modifizieren.

- 12 -