DENON

AVR-4520CI

INTEGRATED NETWORK AV RECEIVER

Owner's Manual

❑ SAFETY PRECAUTIONS

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION:
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Hot surface mark

CAUTION:
HOT SURFACE. DO NOT TOUCH.
The top surface over the internal heat sink may become hot when operating this product continuously.
Do not touch hot areas, especially around the "Hot surface mark" and the top panel.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings.
   Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION:
To completely disconnect this product from the mains, disconnect the plug from the wall socket outlet.
The mains plug is used to completely interrupt the power supply to the unit and must be within easy access by the user.

FCC INFORMATION (For US customers)

1. COMPLIANCE INFORMATION
Product Name: Integrated Network AV Receiver
Model Number: AVR-4520CI
This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation.
Denon Electronics (USA), LLC
(a D&M Holdings Company)
100 Corporate Drive
Mahwah, NJ 07430-2041
Tel. (201) 762-6665

2. IMPORTANT NOTICE: DO NOT MODIFY THIS PRODUCT
This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modification not expressly approved by DENON may void your authority, granted by the FCC, to use the product.

3. IMPORTANT
When connecting this product to network hub or router, use only a shielded STP or ScTP LAN cable which is available at retailer.
Follow all installation instructions. Failure to follow instructions could void your authority, granted by the FCC, to use the product.

4. NOTE
This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the local retailer authorized to distribute this type of product or an experienced radio/TV technician for help.

For Canadian customers:
This Class B digital apparatus complies with Canadian ICES-003.

❑ NOTES ON USE

WARNINGS

- Avoid high temperatures.
  Allow for sufficient heat dispersion when installed in a rack.
- Handle the power cord carefully.
  Hold the plug when unplugging the cord.
- Keep the unit free from moisture, water, and dust.
- Unplug the power cord when not using the unit for long periods of time.
- Do not obstruct the ventilation holes.
- Do not let foreign objects into the unit.
- Do not let insecticides, benzene, and thinner come in contact with the unit.
- Never disassemble or modify the unit in any way.
- Ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths or curtains.
- Naked flame sources such as lighted candles should not be placed on the unit.
- Observe and follow local regulations regarding battery disposal.
- Do not expose the unit to dripping or splashing fluids.
- Do not place objects filled with liquids, such as vases, on the unit.
- Do not handle the mains cord with wet hands.
- When the switch is in the OFF (STANDBY) position, the equipment is not completely switched off from MAINS.
- The equipment shall be installed near the power supply so that the power supply is easily accessible.
- Do not keep the battery in a place exposed to direct sunlight or in places with extremely high temperatures, such as near a heater.

❑ CAUTIONS ON INSTALLATION

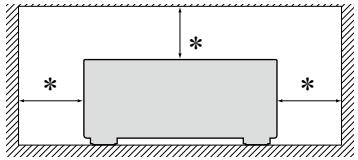

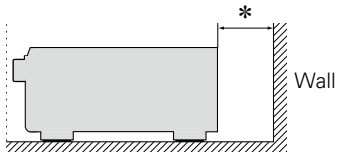

∗ **For proper heat dispersal, do not install this unit in a confined space, such as a bookcase or similar enclosure.**
- More than 12 in. (0.3 m) is recommended.
- Do not place any other equipment on this unit.

Getting started

Thank you for purchasing this DENON product. To ensure proper operation, please read this owner's manual carefully before using the product.
After reading them, be sure to keep them for future reference.

Contents

Getting started 1
- Accessories 2
- Features 2
- Cautions on handling 4

Basic version 5

Connections 6
- Important information 6
- Connecting an HDMI-compatible device 9
- Connecting an HDMI-incompatible device 15
- Connecting a device with a multi-channel output connector 28
- Connecting a external power amplifier 29
- Connecting an external control device 30
- Connecting to a home network (LAN) 31
- Connecting the power cord 32

Setup 33
- Set up speakers (Audyssey® Setup) 33
- Making the network settings (Network) 40

Playback (Basic operation) 41
- Important information 41
- Playing a Blu-ray Disc player/DVD player 42
- Playing a Blu-ray Disc player compatible with Denon Link HD 42
- Playing Super Audio CD 43
- Playing a CD player 43
- Playing an iPod 44
- Playing a USB memory device 47
- Listening to HD Radio stations 50

Network contents 59
- Listening to Internet Radio 59
- Playing back files stored on a PC and NAS 62
- Using online services 66
- Convenient functions 76
- AirPlay function 82

Selecting a listening mode (Sound Mode) 84
- Selecting a listening mode 84

Advanced version 90

Installation/connection/setup of speakers (Advanced) 91
- Speaker installation 91
- Speaker connection 93
- Set up speakers 99

Playback (Advanced operation) 102
- HDMI control function 102
- InstaPrevue function 104
- Sleep timer function 105
- Quick select function 106
- REC OUT mode 107
- Web control function 108
- Various memory functions 110

Playback in ZONE2/ZONE3/ZONE4 (Separate room) 111
- Audio output 111
- Video output 112
- Playback 113
- Sleep timer function 113

How to make detailed settings 114
- Menu map 114
- Examples of menu screen displays 116
- Examples of menu and front display 117
- Inputting characters 118
- Audio 120
- Video 128
- Inputs 134
- Speakers 139
- Network 146
- General 150

Operating external devices with the remote control 157
- Registering preset codes 157
- Operating external devices 160
- Operating devices 161
- Operating learning function 163
- Operating macro function 165
- Specifying the zone used with the remote control unit 167
- Setting the Remote ID 167
- Setting the display time length of the remote control unit display 167
- Setting the back light 168
- Restoring all settings of the remote control unit to default 168

Informations 169

Part names and functions 170
- Front panel 170
- Display 172
- Rear panel 173
- Remote control unit 174

Other information 176
- Trademark information 176
- Relationship between the Amp Assign mode settings and audio output 177
- Surround 184
- Relationship between video signals and monitor output 190
- Explanation of terms 193

Troubleshooting 196
- Resetting the microprocessor 201

Specifications 202

Accessories

Check that the following parts are supplied with the product.

① Getting Started	1
② CD-ROM (Owner's manual)	1
③ Safety Instructions	1
④ Warranty (for North America model only)	1
⑤ Service network list	1
⑥ Power cord	1
⑦ Remote control unit (RC-1165)	1
⑧ LR6/AA batteries	2
⑨ AM loop antenna	1
⑩ FM indoor antenna	1
⑪ Setup microphone (ACM1HB)	1

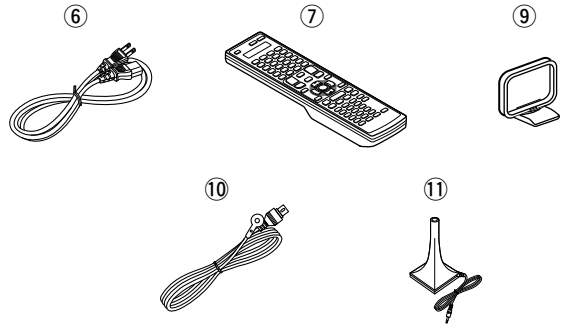

Features

Digital video processor up-scales analog video signals (SD resolution) to 4K

This unit is equipped with the 4K video upscaling function, which allows for outputting analogue or SD (standard video quality) video to HDMI at 4K (3840 × 2160 pixels). This enables the unit and a TV connected with a single HDMI cable and any video source to be reproduced precisely with HD level of quality.

DENON's unique high quality playback technology "Denon Link HD" (☞page 42)

By connecting to a DENON Blu-ray Disc player compatible with Denon Link HD, the sound localization becomes more precise, reproducing a clear and three-dimensional sound image. Because this unit makes the integrated circuits operate while sharing the same clock with the Blu-ray Disc player, the transmitted digital audio has less jitter. This effect applies to any media audio source from the Blu-ray Disc player.

Equipped with "Hybrid PLL Jitter Reducer" capable of reducing jitter and phase noise that negatively affect sound quality

"Hybrid PLL Jitter Reducer" provided with this unit improves the sound localization, reproducing a natural sound field.

Equipped with a Multi-Zone Function 4 source, 4 zone output

This unit is equipped with a multi-zone function, so you can enjoy separate sound sources in four rooms including MAIN ZONE.

Equipped with an HDMI output for ZONE4

This unit is equipped with an HDMI output for ZONE4, which allows you to enjoy video and audio in a room in ZONE4 as well. You can enjoy video sources other than those in MAIN ZONE.

With a discrete-circuit configuration, the power amplifier provides identical quality for all 9 channels (190 W x 9ch)

The unit is equipped with a power amplifier that reproduces high-fidelity sound in sound mode with equal quality and power for all channels, true to the original sound.
The power amplifier circuit adopts a discrete-circuit configuration that achieves high-quality surround sound reproduction.

Supports Internet Radio, music, and photograph streaming
Supports AirPlay® (☞page 82)

You can enjoy a wide variety of content, including listening to Internet Radio, playing the audio files stored on your PC, and displaying on a TV the photographs stored on your PC.
This unit also supports AirPlay that lets you stream your music library from an iPhone®, iPad®, iPod touch® or iTunes®.

Compatible with "Denon Remote App" for performing basic operations of the unit with an iPad, iPhone*1 or Android smartphone

"Denon Remote App" is application software that allows you to perform basic operations with an iPad, iPhone, Android smartphone or Android tablet such as turning the unit ON/OFF, controlling the volume, and switching the source.

*1 Download "Denon Remote App" from iTunes® App Store. The unit needs to be connected to a LAN and the iPhone/iPod touch needs to be connected to the same network by Wi-Fi (wireless LAN).

☞ See overleaf

"Setup Assistant", providing easy-to-follow setup instructions
First select the language when prompted. Then simply follow the instructions displayed on the TV screen to set up the speakers, network, etc.

Easy to use, Graphical User Interface
This unit is equipped with an easy to see "Graphical User Interface" that uses menu displays and levels. The use of level displays increases operability of the this unit.

HDMI connectors enable connection to various digital AV devices (input: 7, output: 3)
The unit is equipped with 7 HDMI input connectors for connecting devices with HDMI connectors, such as a Blu-ray Disc player, game machine, HD digital camcorder, etc.

Supports HDMI (3D, ARC, Deep Color, "x.v.Color", Auto Lip Sync, 4K) and HDMI control function (☞page 9)
In addition to HDMI 3D and ARC (Audio Return Channel) functions, this unit supports the video pass-through function, which outputs video to TV without changing the video quality when video signals of 4K (3840×2160 pixels) are input, and the GUI overlay function, which overlays the menu screen (GUI) on the 4K video screen.

Simultaneous playback on two HDMI channels (for MAIN ZONE)
This unit is equipped with two HDMI MONITOR outputs. You can connect one output to a projector and the other output to a TV for simultaneous signal outputs.

Direct play for iPod and iPhone via USB (☞page 23)
Music data from an iPod can be played back if you connect the USB cable supplied with the iPod via the iPod/USB port of this unit, and also an iPod can be controlled with the remote control unit for this unit.

Audyssey DSX®
This unit is equipped with Audyssey DSX® processor. By connecting front height speakers to this unit and playing back through Audyssey DSX®, you can experience a more powerful playback expression in the height audio range. By connecting front wide speakers, you can experience a more powerful playback expression in the wide audio range.

DTS Neo:X
This technology enables the playback of 2-channel source audio or 7.1/5.1 multi-channel source audio through a maximum 11.1 channel speakers, achieving an even broader sound field.

Audyssey LFC™ (Low Frequency Containment)
Audyssey LFC™ solves the problem of low frequency sounds disturbing people in neighboring rooms or apartments. Audyssey LFC™ dynamically monitors the audio content and removes the low frequencies that pass through walls, floors and ceilings. It then applies psychoacoustic processing to restore the perception of low bass for listeners in the room. The result is great sound that no longer disturbs the neighbors.

Discrete subwoofers and Audyssey Sub EQ HT™
The unit has two subwoofer output capability and can adjust the level and delay for each subwoofer individually.
Audyssey Sub EQ HT makes the integration seamless by first compensating for any level and delay differences between the two subwoofers and then applying Audyssey MultEQ® XT 32 to both subwoofers together.

InstaPrevue Technology
Live picture-in-picture preview of HDMI input connected to an AV receiver.

MHL (Mobile High-Definition Link) function
You can charge your mobile device that supports MHL by providing power from this unit while outputting video from that mobile device. You can also control mobile devices that support MHL through this unit.

Cautions on handling

- **Before turning the power on**
  Check once again that all connections are correct and that there are no problems with the connection cables.
- Power is supplied to some of the circuitry even when the unit is set to the standby mode. When going on vacation or leaving home for long periods of time, be sure to unplug the power cord from the power outlet.
- **About condensation**
  If there is a major difference in temperature between the inside of the unit and the surroundings, condensation (dew) may form on the operating parts inside the unit, causing the unit not to operate properly.
  If this happens, let the unit sit for an hour or two with the power turned off and wait until there is little difference in temperature before using the unit.
- **Cautions on using mobile phones**
  Using a mobile phone near this unit may result in noise. If that occurs, move the mobile phone away from this unit when it is in use.
- **Moving the unit**
  Turn off the power and unplug the power cord from the power outlet. Next, disconnect the connection cables to other system units before moving the unit.
- **About care**
  - Wipe the cabinet and control panel clean with a soft cloth.
  - Follow the instructions when using a chemical cleaner.
  - Benzene, paint thinner or other organic solvents as well as insecticide may cause material changes and discoloration if brought into contact with the unit, and should therefore not be used.

Basic version

Here, we explain the connections and basic operation methods for this unit.

- **Connections** ☞page 6
- **Setup** ☞page 33
- **Playback (Basic operation)** ☞page 41
- **Network contents** ☞page 59
- **Selecting a listening mode (Sound Mode)** ☞page 84

Connections

Important information

Make connections before using this unit.
To create a home theater that can play back higher quality video and audio by fully utilizing the capabilities of this unit and your video devices, connect this unit to each of your video devices with HDMI cables.

❑ HDMI-compatible device

If your video device does not support HDMI connections, use the following connection.

❑ HDMI-incompatible device

This unit can change the source that is assigned to the DIGITAL AUDIO IN, ANALOG AUDIO IN, COMPONENT VIDEO IN and VIDEO IN connectors.
For details on assigning a source to connectors, see "Changing the source assigned to connectors" (☞page 15). For the setting method, see "Input Assign" (☞page 135).

NOTE

- **While signals are being upscaled to 4K, the menu screen is only displayed on a TV that is connected to this unit via HDMI.**
- **Do not plug in the power cord until all connections have been completed. However, when the "Setup Assistant" is running, follow the instructions in the "Setup Assistant" (📖 page 7) screen for making connections. (During "Setup Assistant" operation, the input/output connectors do not conduct current.)**
- When running the "Setup Assistant" (📖 page 7), turn off the power supply of connected devices.
- When making connections, also refer to the operating instructions of the other devices being connected.
- Be sure to connect the left and right channels properly (left with left, right with right).
- Do not bundle power cords together with connection cables. Doing so can result in noise.

❑ HDMI-compatible device

TV ☞page 10	CBL/SAT ☞page 12	DVD ☞page 12
Blu-ray ☞page 12	GAME ☞page 12	MEDIA PLAYER ☞page 12
AUX ☞page 12		

❑ HDMI-incompatible device

TV ☞page 16	CBL/SAT ☞page 17	DVD ☞page 18
Blu-ray ☞page 19	GAME ☞page 20	AUX ☞page 21
MEDIA PLAYER ☞page 22	iPod/USB ☞page 23	CD ☞page 25
PHONO ☞page 26	TUNER ☞page 27	NETWORK ☞page 31

❑ Others

SPEAKER ☞page 93	AC IN ☞page 32

Converting input video signals for output (Video conversion function)

This unit is equipped with three types of video input connectors (HDMI, Component video and video) and three types of video output connectors (HDMI, Component video and video).
This function automatically converts various formats of video signals input to this unit into the formats used to output the video signals from this unit to a monitor.

[Flow of video signals for MAIN ZONE]

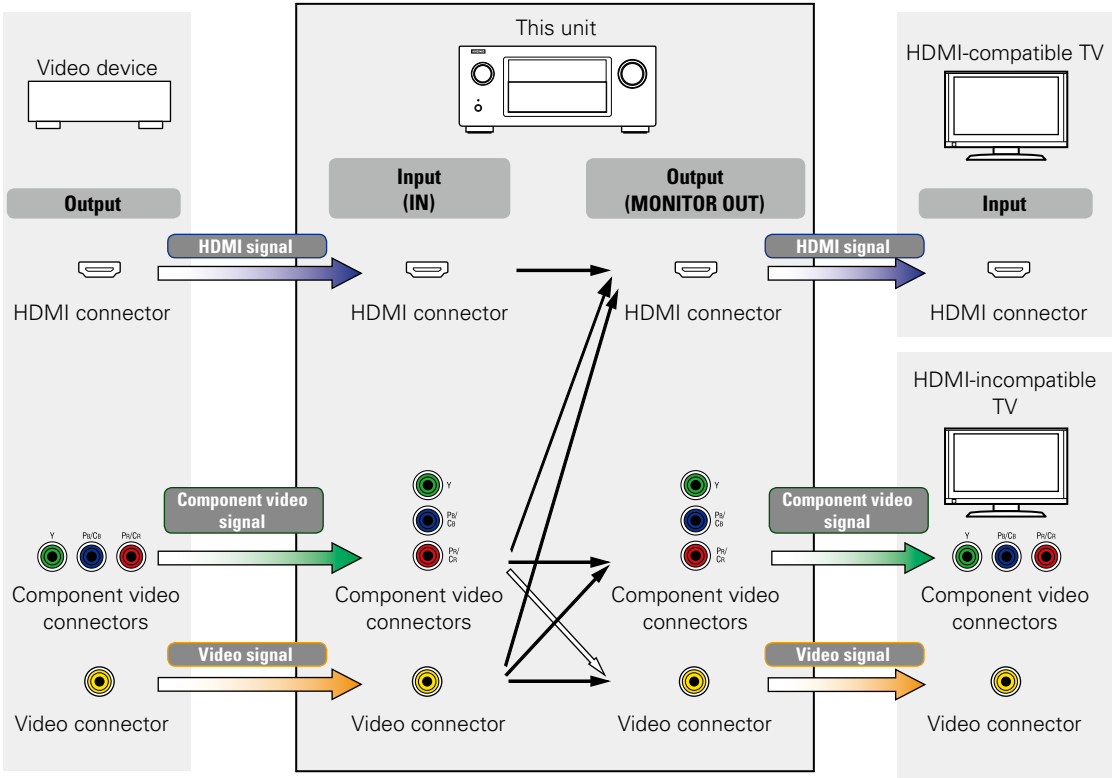

For example, when an HDMI-compatible TV is connected to this unit with an HDMI cable, input signals other than HDMI video signals are automatically converted to HDMI signals that are then output from the HDMI connector to the TV. Only one type of video signals is output, so video signals output from this unit to the TV do not change even when the source for playback is switched to a device that outputs video signals in a different format, which allows you to continue with playback without the need to switch the video input source on the TV. Furthermore, the video quality improves because analog video signals such as video and component video signals that are input to this unit are converted to digital HDMI video signals with a higher resolution for output. When a TV does not support the HDMI connection, make an analog connection between this unit and the TV for video signals. This unit cannot convert HDMI input signals to analog video signals, so when signals are input from an HDMI device, use the component video input connector or video input connector. In this case, the component video signals that are input to this unit are converted to video signals.

Make Settings as Necessary

- If you do not want this unit to convert video signals automatically, use the following setting item to disable this function.
  "Video Conversion" (☞page 131)
- If you want to change the resolution of video signals output to the TV, use the following setting item to do so.
  "Resolution" (☞page 132)

- The video conversion function supports the NTSC, PAL, SECAM, NTSC 4.43, PAL-N, PAL-M and PAL-60 formats.
- Resolutions of HDMI-compatible TVs can be checked at "Video" – "HDMI Monitor 1" or "HDMI Monitor 2" (☞page 153).

NOTE

- **While signals are being upscaled to 4K, the menu screen is only displayed on a TV that is connected to this unit via HDMI.**
- When a non-standard video signal from a game machine or some other source is input, the video conversion function might not operate.

【Flow of video signals for ZONE4】

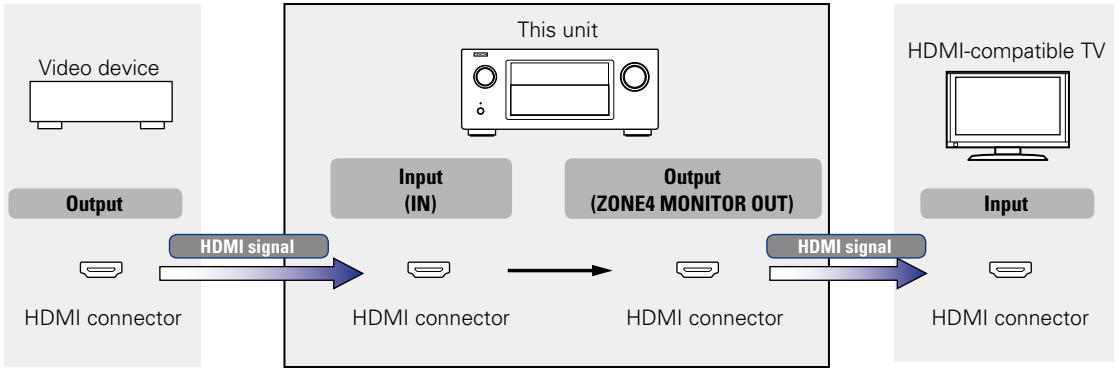

【Flow of video signals for ZONE2】

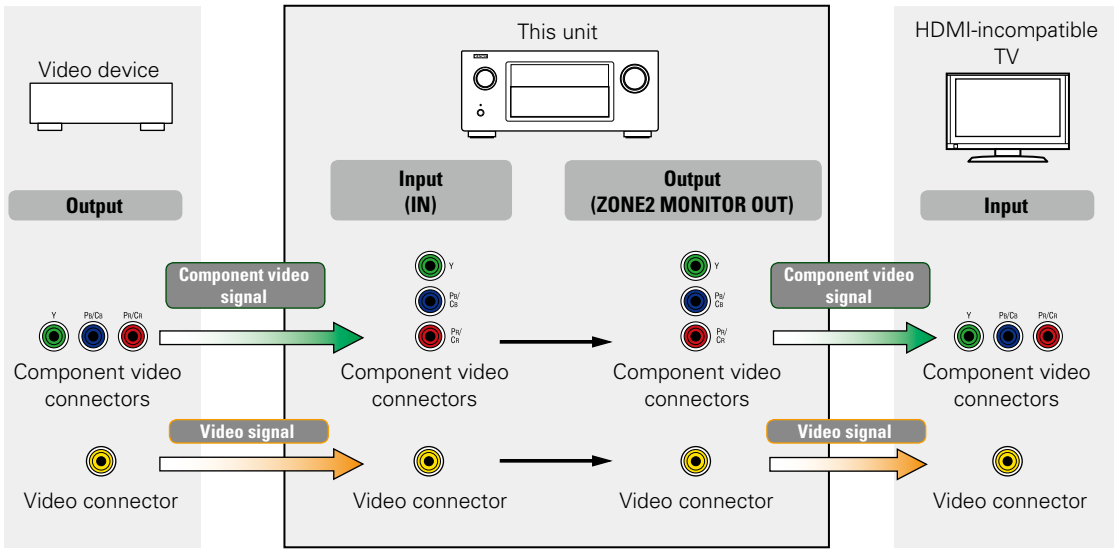

NOTE

- HDMI signals are digital. HDMI signals cannot be converted into analog signals.
- The HDMI ZONE4 function is only compatible with the HDMI 1 – 6 IN connectors. It is not compatible with the HDMI 7 IN connector.

Connecting an HDMI-compatible device

You can connect up to ten HDMI-compatible devices (7-inputs/3-outputs) to the unit.
When a TV is connected to the HDMI ZONE4 OUT connector, you can play back a video or audio from the device connected to the HDMI 1 – 6 IN connector in ZONE4 (☞page 111).
If the device connected to this unit is equipped with an HDMI connector, it is recommended to use HDMI connections. Connections with an HDMI cable offer the following benefits that can not be achieved with other connection methods.

- **High quality playback by transmitting audio and video via digital signals**
  HDMI connections can transmit high definition video and high quality audio formats adopted by Blu-ray disc players (Dolby Digital Plus, Dolby TrueHD, dts-HD, dts-HD Master Audio).
  HDMI connections also convey information required for playback between devices. The information is used for copyright protection and TV resolution recognition, the ARC function, the HDMI control function, etc.
- **Transmission of audio and video signals with a single HDMI cable**
  Previous connections require multiple audio and video cables, but HDMI connections require only a single HDMI cable to transmit audio and video signals. This allows wires in a home theater system, which tend to be complicated, to be more organized.
- **Mutual control through the HDMI control function (☞page 102)**
  This unit and the HDMI device connected via HDMI can be linked to perform operations such as power control, volume control, and input source switching.
- **Other video and audio functions, such as 3D video playback, Content Type, the ARC function, are supported (☞page 13).**

- There is more than one version of HDMI standard. The supported functions and the performance vary according to the version. This unit complies with the HDMI standard, supporting the ARC and 3D playback functions. To enjoy these functions, the HDMI device connected to this unit also needs to use the same version of the standard. For the version of the HDMI standard on the device connected to this unit, see the device's manual.
- Some TVs do not support audio input via HDMI connections. For details, see your TV's manual.

❏ **Before connecting this unit to TV via HDMI connections** (☞page 10)
❏ **Connecting this unit to a TV via HDMI connections** (☞page 11)
❏ **Connecting this unit to video devices via HDMI connections** (☞page 12)
❏ **HDMI function** (☞page 13)
❏ **Settings related to HDMI connections** (☞page 14)

Before connecting this unit to TV via HDMI connections

There are 2 methods to connect HDMI-compatible TV to this unit.
Use the connection method that suits your TV.

Does the TV to be connected to this unit support the ARC function?

Yes

Connecting this unit to a TV via HDMI connections (☞page 11)

No

Connecting this unit to a TV via HDMI connections (☞page 11)

+

Connecting a TV (☞page 16)

For audio connections, use a method other than HDMI connections.

❑ About ARC (Audio Return Channel) function

This function plays TV audio on this unit by sending the TV audio signal to this unit via HDMI cable.
If a TV without the ARC function is connected via HDMI connections, video signals of the playback device connected to this unit are transmitted to the TV, but this unit can not play back the audio from the TV. If you want to enjoy surround audio for TV program, a separate audio cable connection is required.
In contrast, if a TV with the ARC function is connected via HDMI connections, no audio cable connection is required. Audio signals from the TV can be input to this unit through the HDMI cable between this unit and the TV. This function allows you to enjoy surround playback on this unit for the TV.

When the ARC function is used, connect a device with a "Standard HDMI cable with Ethernet" or "High Speed HDMI cable with Ethernet" for HDMI.
Refer to the owner's manual for your TV for details about TV connection and settings.

NOTE

The HDMI ZONE4 OUT connector is not compatible with the ARC function.

【Connection to a TV with the ARC function】

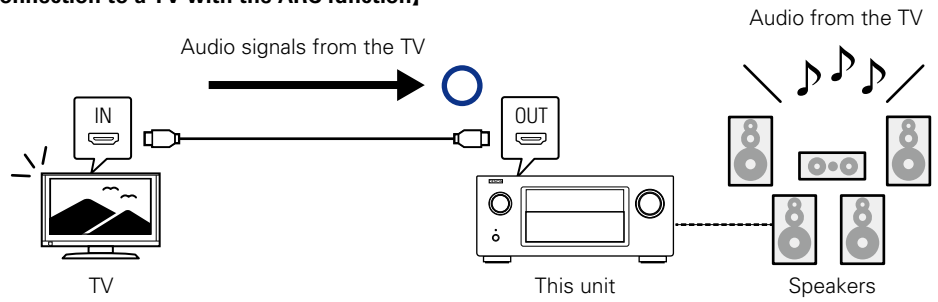

【Connection to a TV without the ARC function】

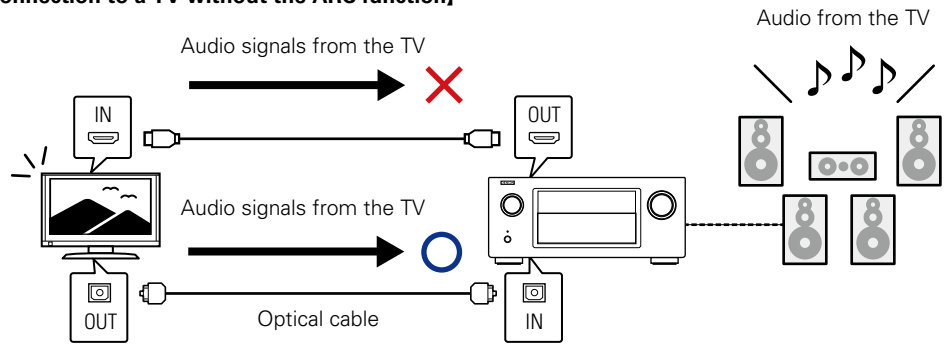

Connecting this unit to a TV via HDMI connections

When a TV is connected to the HDMI ZONE4 OUT connector, you can play back a video or audio from the device connected to the HDMI 1 – 6 IN connector in ZONE4 (☞page 111).

Cables used for connections

Audio and video cable (sold separately)
HDMI cable

- This interface allows transfer of digital video signals and digital audio signals over a single HDMI cable.

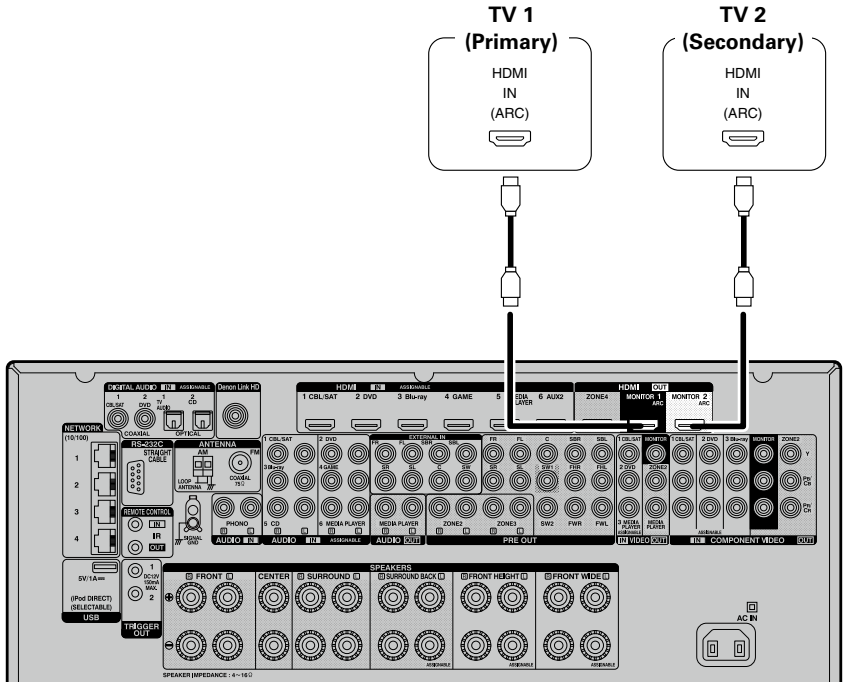

- Video signals are not output if the input video signals do not match the monitor's resolution. In this case, switch the Blu-ray Disc/DVD player's resolution to a resolution with which the monitor is compatible.
- When this unit and monitor are connected with an HDMI cable, if the monitor is not compatible with HDMI audio signal playback, only the video signals are output to the monitor. Make audio connections (☞page 16 "Connecting a TV").

NOTE

- The HDMI 7 / MHL connector on the front panel does not support the HDMI ZONE4 function.
- The audio signal from the HDMI output connector (sampling frequency, number of channels, etc.) may be limited by the HDMI audio specifications of the connected device regarding permissible inputs.
- **When connecting a TV that does not support the ARC function, an audio cable connection is required in addition to the HDMI cable. In this case, refer to "Connecting a TV" (☞page 16) for the connection method.**
  For the ARC function, see "About ARC (Audio Return Channel) function" (☞page 10).

Connecting to a device equipped with a DVI-D connector

The DVI-D (Digital Visual Interface) method is also used for video transmission via digital signals. This is developed mainly for computers, and some AV devices such as projectors are equipped with this interface. To output HDMI video signals to a DVI-D video input compatible device, use an HDMI/DVI conversion cable, which converts HDMI video signals to DVI signals.
The DVI-D connector can transmit high quality digital signals, but the copy guard and other issues may hinder normal operations for some device combinations.

NOTE

- No sound is output when connected to a device equipped with a DVI-D connector. Make audio connections as described in "Connecting a TV" (☞page 16).
- Signals cannot be output to DVI-D devices that do not support HDCP.
- Depending on the combination of devices, the video signals may not be output.

Settings required when using a TV that supports the ARC function

When using a TV that supports the ARC function, make the following settings.
- Set "HDMI Control" (☞page 130) to "On".
- Set "Control Monitor" (☞page 130) to match the number of the HDMI MONITOR connector connected to the TV that supports the ARC function.

NOTE

If the TV that supports the ARC function is connected to both HDMI MONITOR 1 and HDMI MONITOR 2 connectors, you cannot use ARC function at the same time.

Connecting this unit to video devices via HDMI connections

Cables used for connections

Audio and video cable (sold separately)
HDMI cable

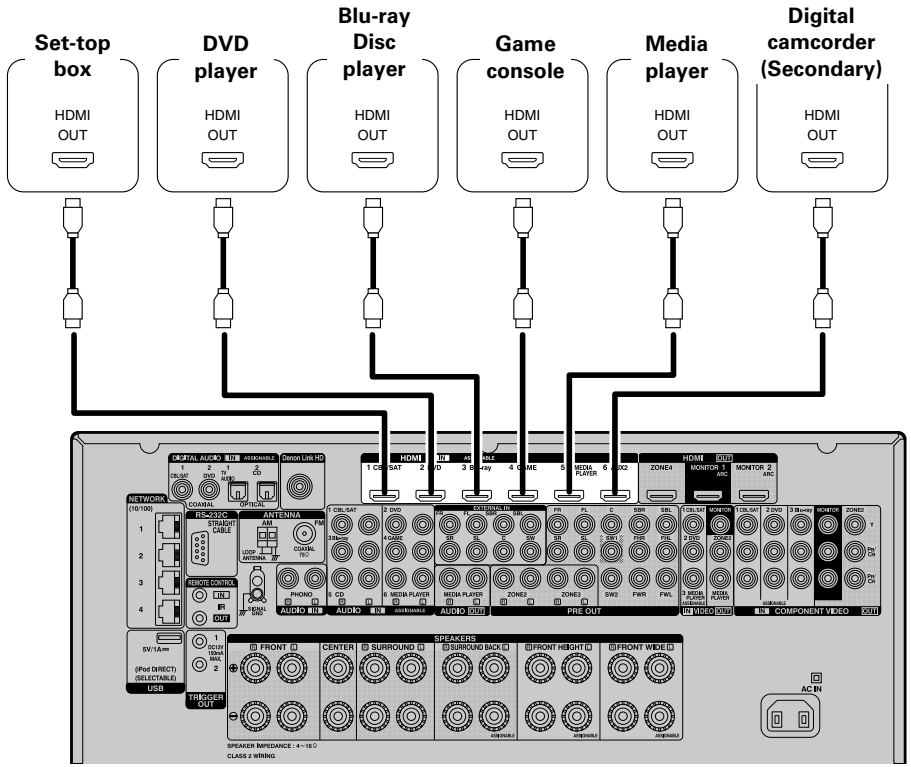

【Rear panel】

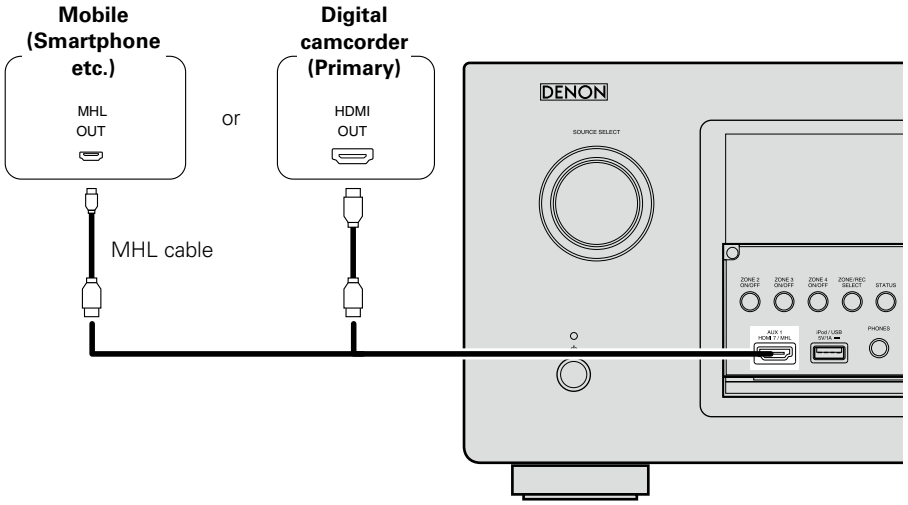

【Front panel】

- Connect Mobile (Smartphone etc.) to the HDMI 7 / MHL connector on the front panel.
- When this unit is connected to other devices with HDMI cables, connect this unit and TV also with an HDMI cable.
- When connecting a device that supports Deep Color or 4K, please use a “High Speed HDMI cable” or “High Speed HDMI cable with Ethernet”.
- Video signals are not output if the input video signals do not match the monitor’s resolution. In this case, switch the Blu-ray Disc/DVD player’s resolution to a resolution with which the monitor is compatible.

NOTE

- The HDMI 7 / MHL connector on the front panel does not support the HDMI ZONE4 function.
- The HDMI 7 / MHL connector on the front panel does not support the InstaPrevue function.
- The HDMI 7 / MHL connector on the front panel does not support the 4K.

See overleaf

❑ Connecting a player compatible with the Denon Link HD function

By making a Denon Link HD connection to a player compatible with the Denon Link HD function, you can enjoy higher quality playback compared with when only the HDMI connector connection is made.
For the playback method, see "Playing a Blu-ray Disc player compatible with Denon Link HD" (☞page 42).
When making this connection, set "Input Assign" – "DIGITAL" (☞page 136) to "D.LINK".

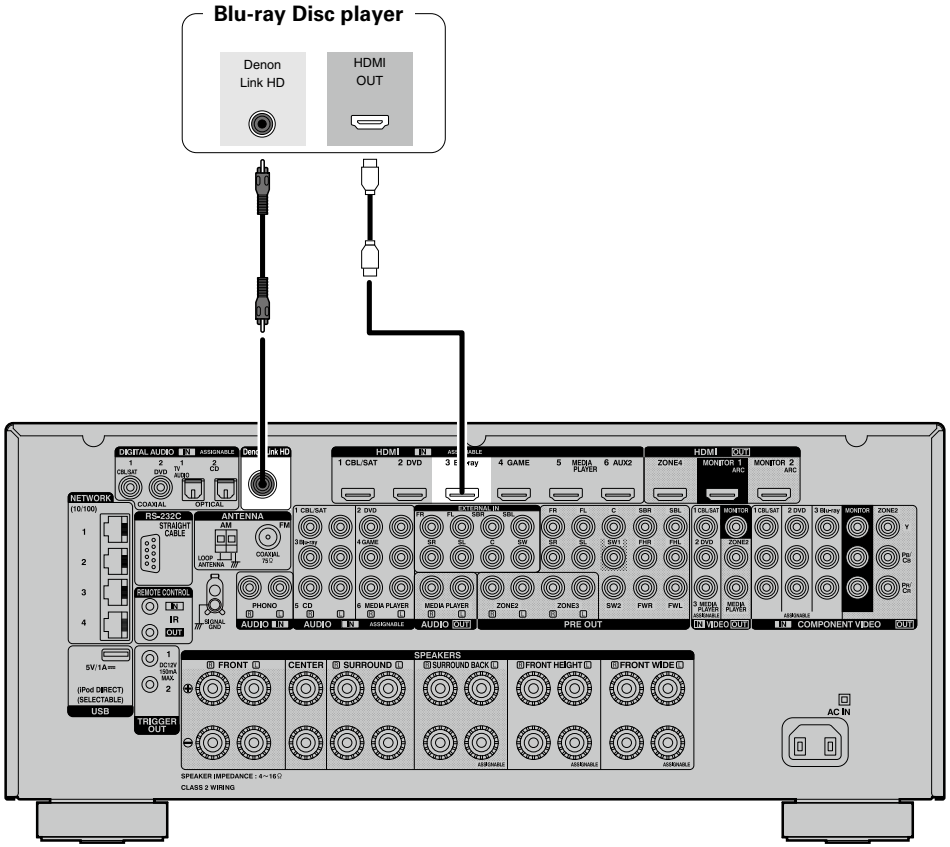

NOTE

The Denon Link HD connector is not an audio signal input connector. Audio signals cannot be played back only by making a connection with the Denon Link HD connector.

HDMI function

This unit supports the following HDMI functions:

❑ About 3D function

This unit supports input and output of 3D (3 dimensional) video signals of HDMI.
To play back 3D video, you need a TV and player that provide support for the HDMI 3D function and a pair of 3D glasses.

NOTE

- When playing back 3D video, refer to the instructions provided in the manual of your playback device together with this manual.
- When playing back 3D video content, the menu screen or status display screen can be superimposed over the image. However, the menu screen or status display screen cannot be superimposed over certain 3D video content.
- If 3D video with no 3D information is input, the menu screen and status display on this unit are displayed over the playback video.
- If 2D video is converted to 3D video on the television, the menu screen and status display on this unit are not displayed correctly. To view the menu screen and status display on this unit correctly, turn the television setting that converts 2D video to 3D video off.

❑ About 4K function

This unit supports input and output of 4K (3840 x 2160 pixels) video signals of HDMI.

When a device supporting 4K is connected, use a cable compatible with "High Speed HDMI cable" or "High Speed HDMI cable with Ethernet".

❑ HDMI pass through function (☞page 130)

Signals input to the HDMI input connector are output to the television or other device connected to the HDMI output connector, even if the power of this unit is in standby.

☞ See overleaf

❑ HDMI control function (☞page 102)

This function allows you to operate external devices from the unit and operate the unit from external devices.

NOTE

- The HDMI control function may not work depending on the device it is connected to and its settings.
- You cannot operate a TV or Blu-ray Disc player/DVD player that is not compatible with the HDMI control function.
- The HDMI ZONE4 function is compatible with the HDMI control function. To enable the HDMI control for the ZONE4 HDMI monitor, set "Control Monitor" (☞page 130) to "ZONE4".

❑ About Content Type

This function was added with the HDMI standard. It automatically makes settings suitable for the video-output type (content information).

NOTE

To enable the Content Type, set "Video Mode" to "Auto" (☞page 131).

❑ Deep Color (☞page 193)

When a device supporting Deep Color is connected, use a cable compatible with "High Speed HDMI cable" or "High Speed HDMI cable with Ethernet".

❑ Auto Lip Sync (☞page 129, 193)

❑ "x.v.Color", sYCC601 color, Adobe RGB color, Adobe YCC601 color (☞page 193, 195)

❑ High definition digital audio format

❑ ARC (Audio Return Channel) (☞page 10)

Copyright protection system
In order to play back digital video and audio such as BD-Video or DVD-Video via HDMI connection, both this unit and TV or the player need to support the copyright protection system known as HDCP (High-bandwidth Digital Content Protection System). HDCP is copyright protection technology comprised of data encryption and authentication of the connected AV devices. This unit supports HDCP. • If a device that does not support HDCP is connected, video and audio are not output correctly. Read the owner's manual of your television or player for more information.

Settings related to HDMI connections

Set as necessary. For details, see the respective reference pages.

❑ HDMI Setup (☞page 129)

Make settings for HDMI video/audio output.

- Auto Lip Sync
- HDMI Audio Out
- Video Output
- Vertical Stretch
- HDMI Pass Through
- HDMI Control*
- Pass Through Source
- Control Monitor*
- Power Off Control

* Only these items are supported for HDMI ZONE4.

NOTE

To output audio signals that are input from the HDMI input connector to a TV connected via HDMI, set "HDMI Audio Out" (☞page 129) to "TV".
Audio signals input via the Analog/Coaxial/Optical input connectors cannot be output from the HDMI MONITOR output connector.

Connecting an HDMI-incompatible device

For high quality video and surround playback, it is recommended to use an HDMI cable to connect this unit to TV and other video devices (☞page 9 “Connecting an HDMI-compatible device”).
This section describes connections when your device does not support HDMI connections.

Connection methods for various devices

TV ☞page 16	CBL/SAT ☞page 17
DVD ☞page 18	Blu-ray ☞page 19
GAME ☞page 20	AUX ☞page 21
MEDIA PLAYER ☞page 22	iPod/USB ☞page 23
CD ☞page 25	PHONO ☞page 26
TUNER ☞page 27	NETWORK ☞page 31

Cables used for connections

Video cable (sold separately)	
Component video cable	
Video cable	
Audio cable (sold separately)	
Coaxial digital cable	
Optical cable	
Audio cable	
Cable (sold separately)	
Ethernet cable	

Changing the source assigned to connectors

This unit can change the source that is assigned to the HDMI IN, DIGITAL AUDIO IN, COMPONENT VIDEO IN, VIDEO IN and AUDIO IN connectors.

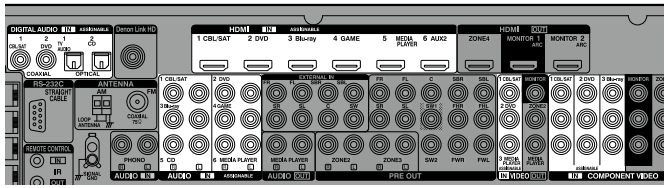

Let us take a digital audio connection for Blu-ray Disc players for an example. The rear panel digital audio input connectors do not have the input connector indication for Blu-ray disc players (Blu-ray). However, DIGITAL AUDIO IN connectors have the “ASSIGNABLE” indication, which means that you can change the source assigned to these connectors. You can assign Blu-ray disc players to these connectors to use them for Blu-ray disc players. Select “Blu-ray” when switching functions on this unit to play back the source connected to these connectors.

❑ How to change the source assigned to connectors (☞page 135)

Connecting a TV

- This section describes how to connect when your TV does not support HDMI connections.
  For instructions on HDMI connections, see "Connecting an HDMI-compatible device" (☞page 9).
- To listen to TV audio through this device, use the optical digital connection.

For video connections, see "Converting input video signals for output (Video conversion function)" (☞page 7).

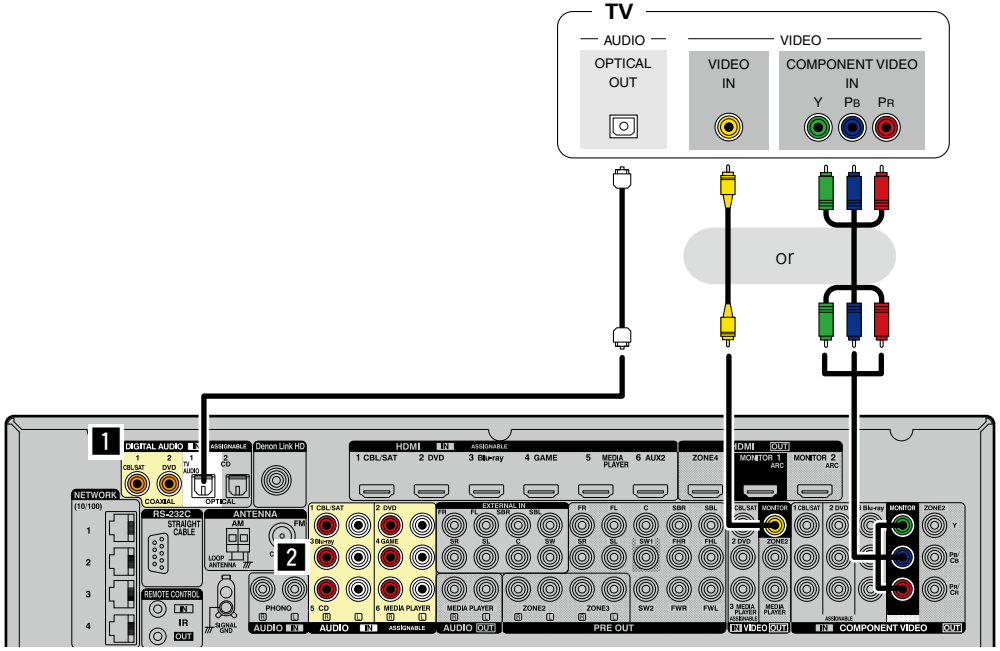

You can also make connections for the part on the connection diagram. To make connections for these connectors, you need to make the input connector settings.

To make connections for connectors indicated by 1

Assign a connector to which an audio cable is inserted to "TV AUDIO" in "Input Assign" – "DIGITAL" (☞page 136).

To make connections for connectors indicated by 2

Assign a connector to which an audio cable is inserted to "TV AUDIO" in "Input Assign" – "ANALOG" (☞page 136).

Connecting a set-top box (Satellite tuner/cable TV)

This section describes how to connect when your satellite tuner or cable TV does not support HDMI connections.
For instructions on HDMI connections, see "Connecting an HDMI-compatible device" (☞page 9).

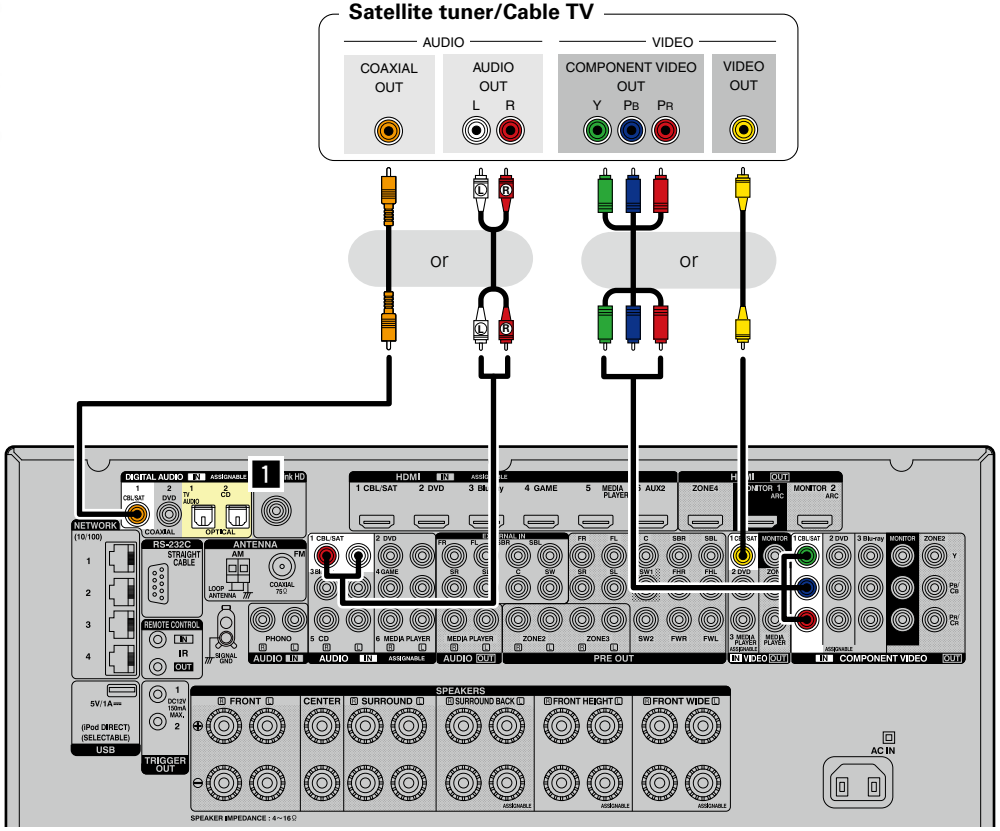

You can also make connections for the part on the connection diagram. To make connections for these connectors, you need to make the input connector settings.

To make connections for connectors indicated by 1

Assign a connector to which an audio cable is inserted to "CBL/SAT" in "Input Assign" – "DIGITAL" (☞page 136).

Connecting a DVD player

This section describes how to connect when your DVD player does not support HDMI connections.
For instructions on HDMI connections, see "Connecting an HDMI-compatible device" (☞page 9).

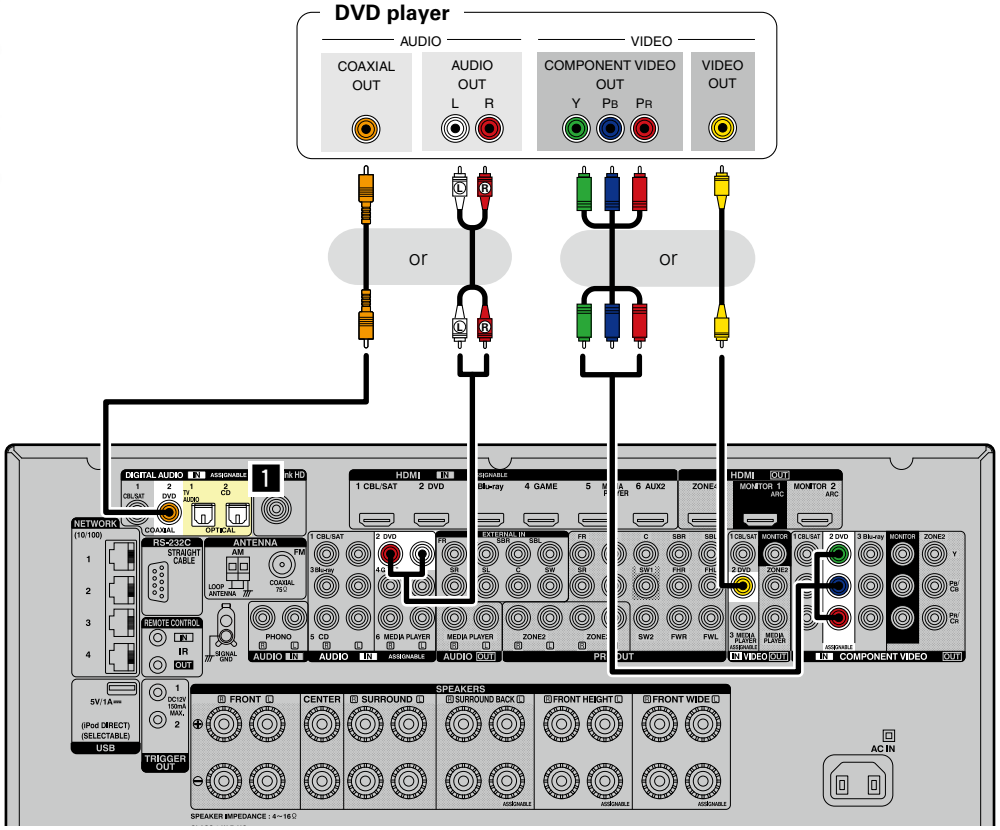

You can also make connections for the part on the connection diagram. To make connections for these connectors, you need to make the input connector settings.

To make connections for connectors indicated by 1

Assign a connector to which an audio cable is inserted to "DVD" in "Input Assign" – "DIGITAL" (☞page 136).

Connecting a Blu-ray Disc player

This section describes how to connect when your Blu-ray disc player does not support HDMI connections. For instructions on HDMI connections, see "Connecting an HDMI-compatible device" (☞page 9).

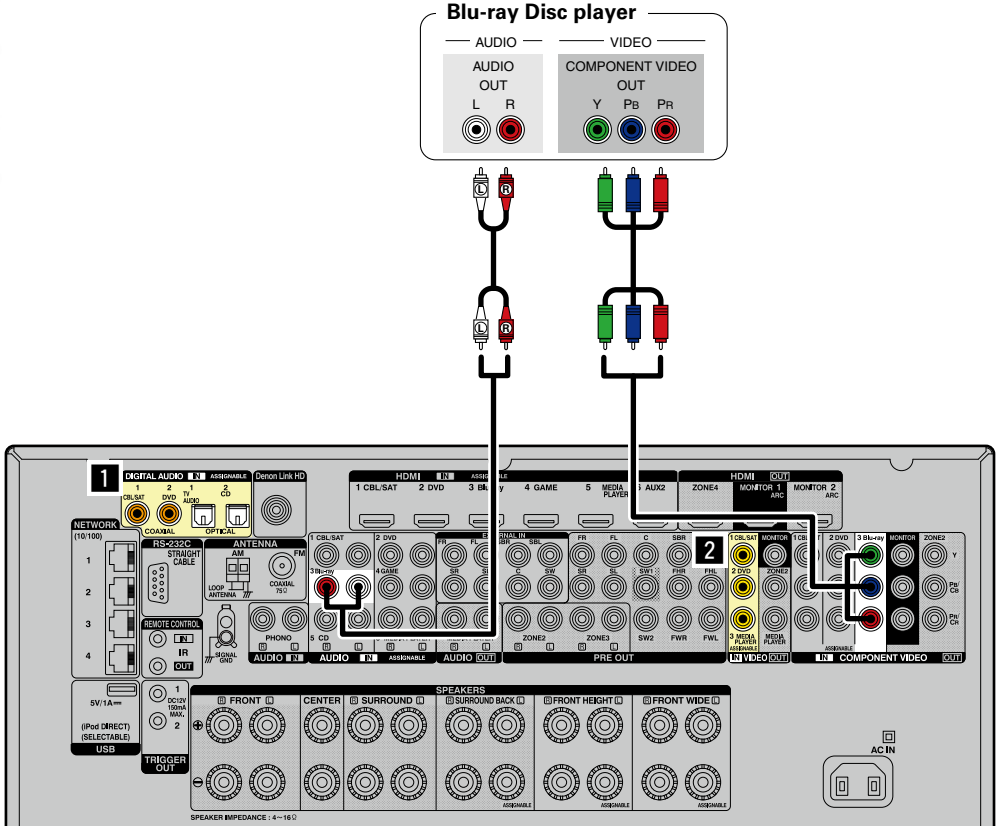

When you want to play back HD Audio (Dolby TrueHD, DTS-HD, Dolby Digital Plus, DTS Express) and Multi-channel PCM with this unit, use an HDMI connection (☞page 9 "Connecting an HDMI-compatible device").

You can also make connections for the part on the connection diagram. To make connections for these connectors, you need to make the input connector settings.

To make connections for connectors indicated by 1

Assign a connector to which an audio cable is inserted to "Blu-ray" in "Input Assign" – "DIGITAL" (☞page 136).

To make connections for connectors indicated by 2

Assign a connector to which a video cable is inserted to "Blu-ray" in "Input Assign" – "VIDEO" (☞page 136).

Connecting a game console

This section describes how to connect when your game console does not support HDMI connections. For instructions on HDMI connections, see "Connecting an HDMI-compatible device" (☞page 9).

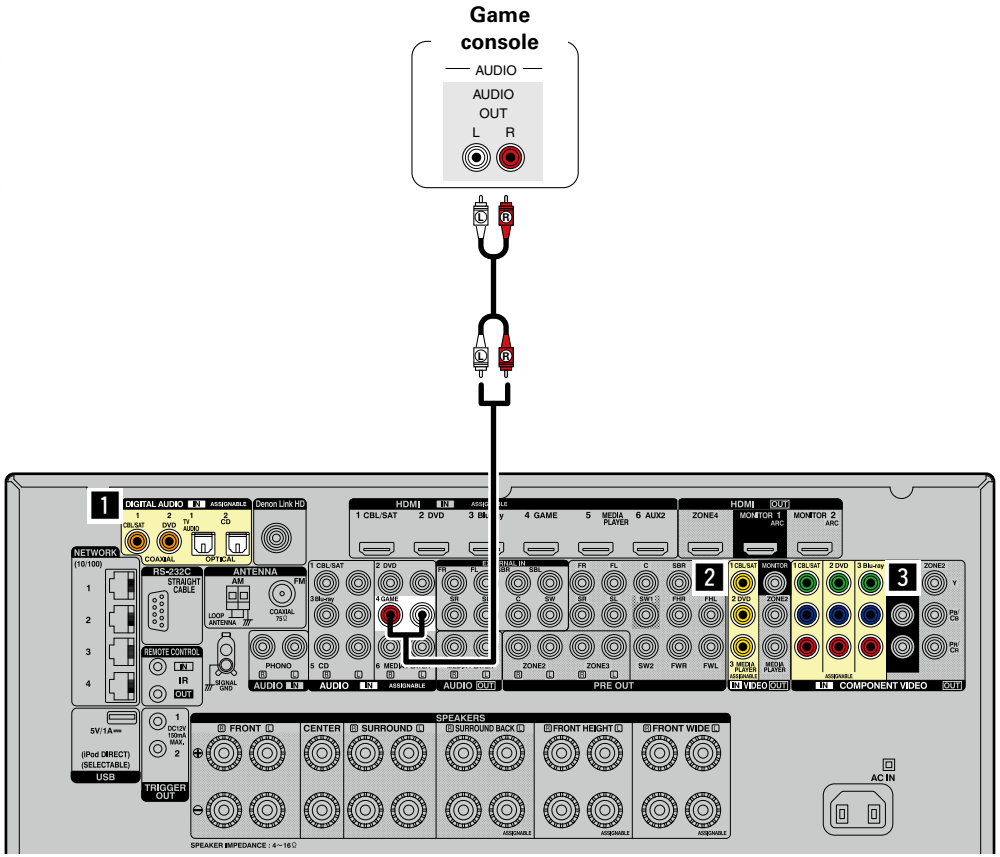

You can also make connections for the part on the connection diagram. To make connections for these connectors, you need to make the input connector settings.

To make connections for connectors indicated by 1

Assign a connector to which an audio cable is inserted to "GAME" in "Input Assign" – "DIGITAL" (☞page 136).

To make connections for connectors indicated by 2

Assign a connector to which a video cable is inserted to "GAME" in "Input Assign" – "VIDEO" (☞page 136).

To make connections for connectors indicated by 3

Assign a connector to which a video cable is inserted to "GAME" in "Input Assign" – "COMP" (☞page 136).

Connecting a digital camcorder

This section describes how to connect when your digital camcorder does not support HDMI connections. For instructions on HDMI connections, see "Connecting an HDMI-compatible device" (☞page 9).

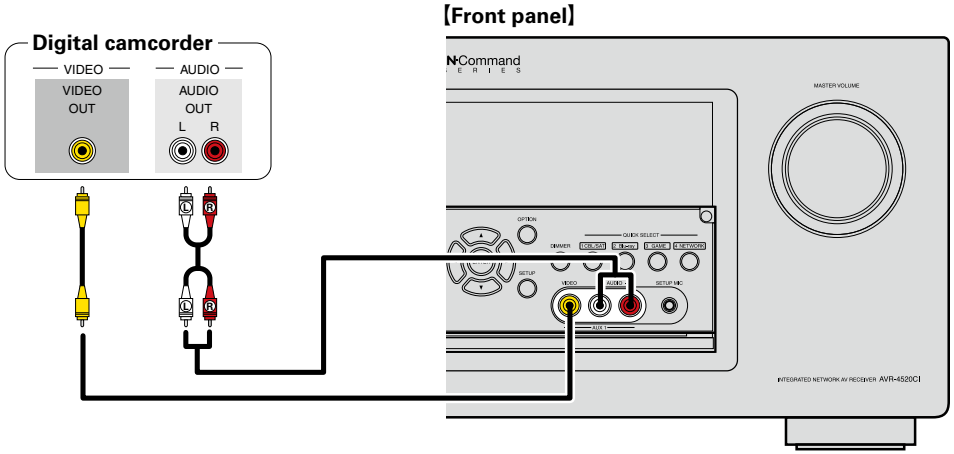

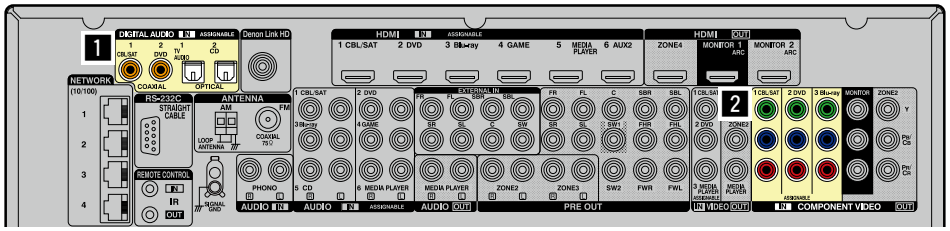

You can enjoy games by connecting a game machine via the AUX1 input connector. In this case, select the input source to "AUX1".

NOTE

When a non-standard video signal from a game machine or some other source is input, the video conversion function (☞page 7) might not operate. In this case, use the monitor output of the same connector as the input.

You can also make connections for the part on the connection diagram. To make connections for these connectors, you need to make the input connector settings.

To make connections for connectors indicated by 1

Assign a connector to which an audio cable is inserted to "AUX1" in "Input Assign" – "DIGITAL" (☞page 136).

To make connections for connectors indicated by 2

Assign a connector to which a video cable is inserted to "AUX1" in "Input Assign" – "COMP" (☞page 136).

Connecting a media player

- This section describes how to connect when your media player does not support HDMI connections. For instructions on HDMI connections, see "Connecting an HDMI-compatible device" (☞page 9).
- When recording analog audio, use the analog connection.
- See "REC OUT mode" (☞page 107) for operating instructions.

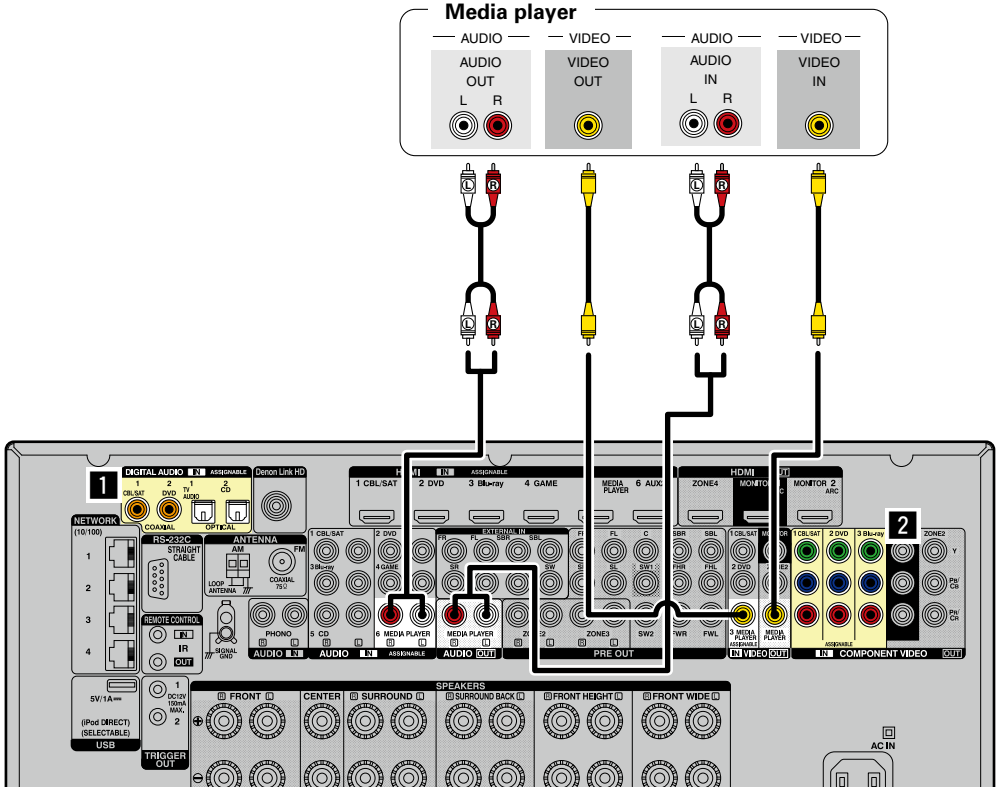

NOTE

To record video signals through this unit, use the video cable for connection between this unit and the player.

You can also make connections for the part on the connection diagram. To make connections for these connectors, you need to make the input connector settings.

To make connections for connectors indicated by 1

Assign a connector to which an audio cable is inserted to "MEDIA PLAYER" in "Input Assign" – "DIGITAL" (☞page 136).

To make connections for connectors indicated by 2

Assign a connector to which a video cable is inserted to "MEDIA PLAYER" in "Input Assign" – "COMP" (☞page 136).

Connecting an iPod or USB memory device to the iPod/USB port

- You can enjoy music stored on an iPod or USB memory device.
- For operating instructions see "Playing an iPod" (☞page 44) or "Playing a USB memory device" (☞page 47).

DENON does not guarantee that all USB memory devices will operate or receive power. When using a portable USB connection type HDD of the kind to which an AC adapter can be connected to supply power, use the AC adapter.

NOTE

- **You cannot use the USB ports on the front panel and rear panel simultaneously.** Select and connect the USB port to use (☞page 76).
- USB memory devices will not work via a USB hub.
- It is not possible to use this unit by connecting the unit's iPod/USB port to a PC via a USB cable.
- Do not use an extension cable when connecting a USB memory device. This may cause radio interference with other devices.
- When connecting an iPhone to this unit, keep the iPhone at least 20 cm away from this unit. If the iPhone is kept closer to this unit and a telephone call is received by the iPhone, noise may be output from this device.
- If the iPod is connected using an iPod cable (commercially available) that is longer than 6.6 ft (2 m), sound may not be played correctly. In this case, use a genuine iPod cable, or a cable that is shorter than 3.3 ft (1 m).

Cables used for connections

To connect an iPod to this unit, use the USB cable supplied with the iPod.

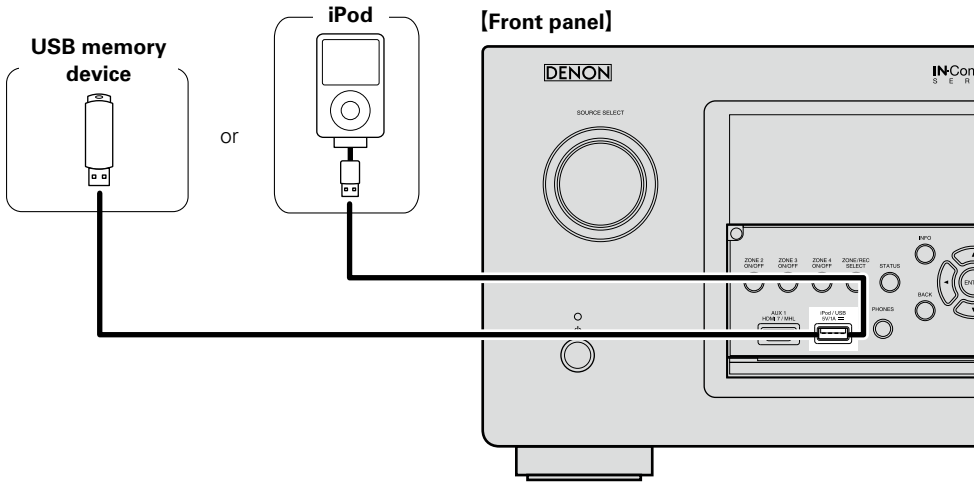

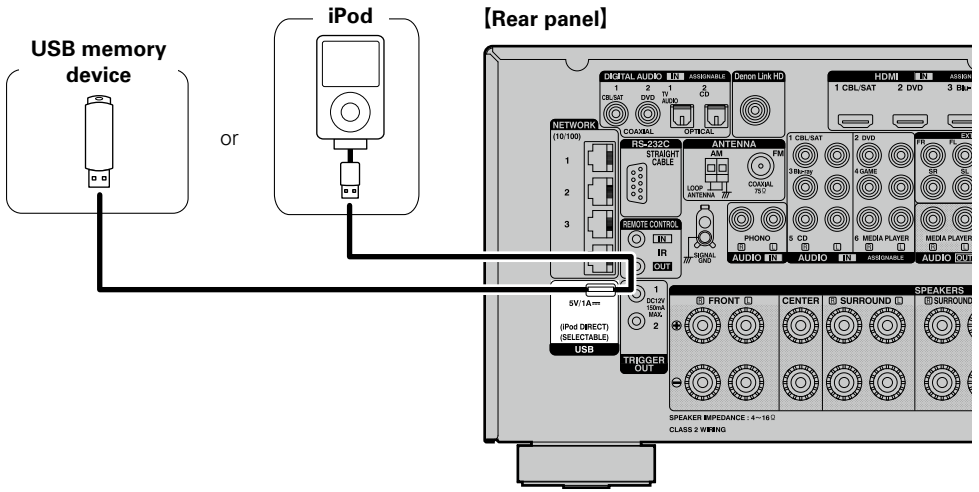

☞ See overleaf

Supported iPod models

- **iPod classic**

iPod classic
80GB

iPod classic
160GB (2007)

iPod classic
160GB (2009)

- **iPod nano**

iPod nano
3rd generation
(video)
4GB 8GB

iPod nano
4th generation (video)
8GB 16GB

iPod nano
5th generation (video camera)
8GB 16GB

iPod nano
6th generation
8GB 16GB

- **iPod touch**

iPod touch
1st generation
8GB 16GB 32GB

iPod touch
2nd generation
8GB 16GB 32GB

iPod touch
3rd generation
32GB 64GB

iPod touch
4th generation
8GB 32GB 64GB

- **iPhone**

iPhone
4GB 8GB 16GB

iPhone 3G
8GB 16GB

iPhone 3GS
8GB 16GB 32GB

iPhone 4
8GB 16GB 32GB

iPhone 4S
16GB 32GB 64GB

(as of August 2012)

Connecting a CD player

You can enjoy CD sound.

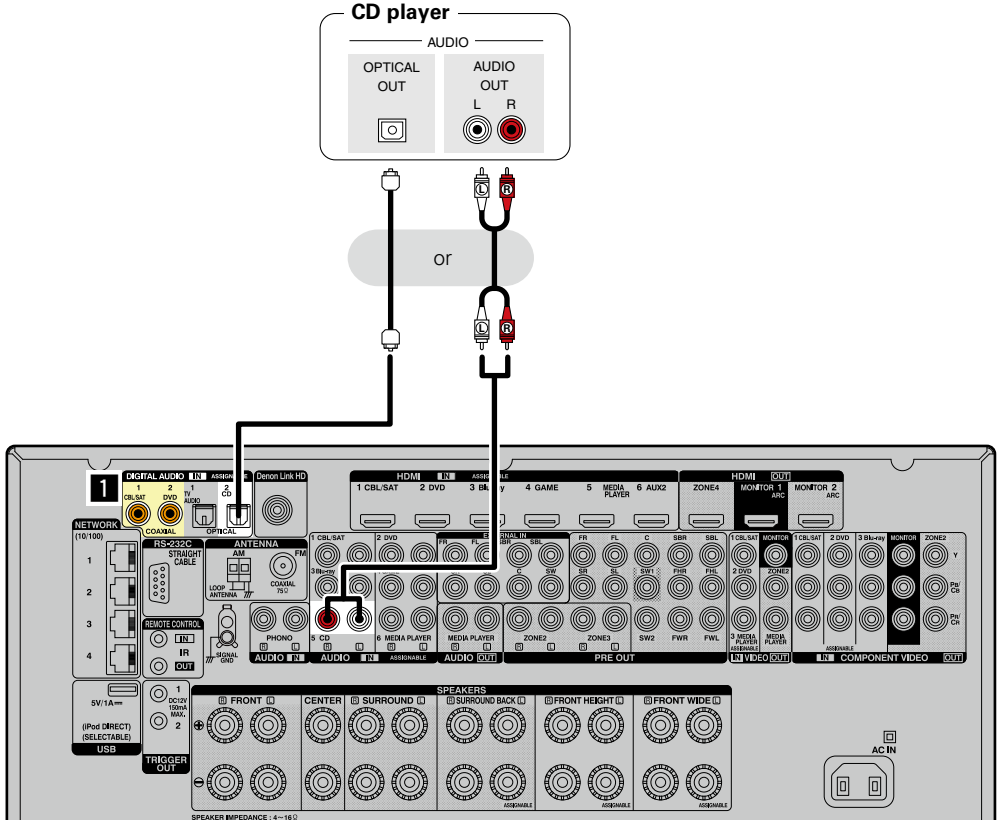

When you want to play back HD Audio (Dolby TrueHD, DTS-HD, Dolby Digital Plus, DTS Express), DSD and Multi-channel PCM with this unit, use an HDMI connection (☞page 9 "Connecting an HDMI-compatible device").

You can also make connections for the part on the connection diagram. To make connections for these connectors, you need to make the input connector settings.

To make connections for connectors indicated by 1

Assign a connector to which an audio cable is inserted to "CD" in "Input Assign" – "DIGITAL" (☞page 136).

Connecting a record player

You can enjoy playing records.

- This unit is compatible with record players with an MM cartridge. When you connect to a record player with an MC cartridge, use a commercially available MC head amp or a step-up transformer.
- If you set this unit's input source to "PHONO" and increase the volume without connecting the record player, there may be a "booming" noise from the speakers.

NOTE

The SIGNAL GND terminal of this unit is not a safety ground connection. Connect it to reduce noise when noise is excessive. Note that depending on the record player, connecting the ground line may have the reverse effect of increasing noise. In this case, it is not necessary to connect the ground line.

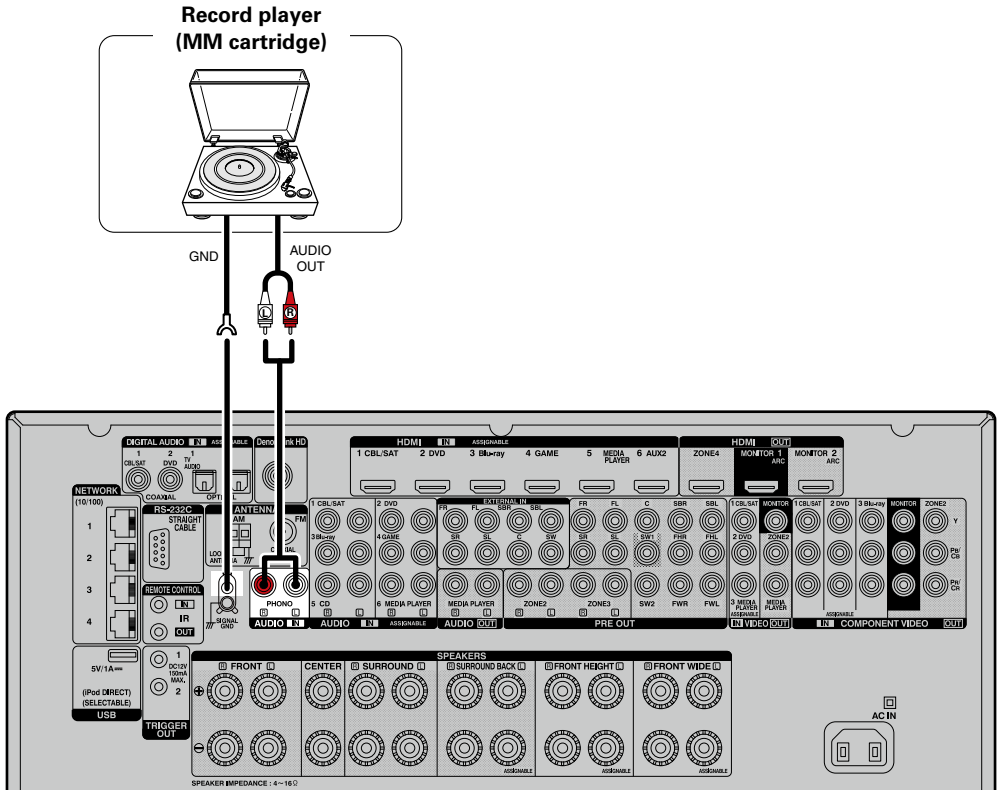

Connecting an HD Radio receiver

- By connecting a HD Radio antenna to this unit, you can receive HD Radio programs.
- HD Radio broadcasting currently is available in the United States and select other countries.
- After connecting the antenna and receiving a broadcast signal (☞page 51 "Listening to HD Radio stations"), fix the antenna with tape in a position where the noise level becomes minimal.

❑ AM loop antenna assembly

1 **Put the stand section through the bottom of the loop antenna from the rear and bend it forward.**

2 **Insert the projecting part into the square hole in the stand.**

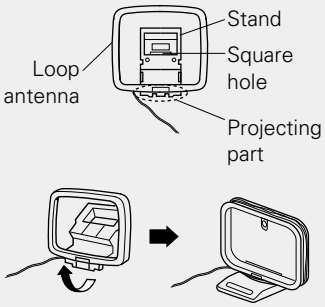

❑ Using the AM loop antenna

Suspending on a wall

Suspend directly on a wall without assembling.

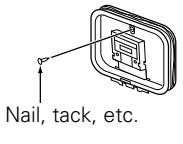

Standing alone

Use the procedure shown above to assemble.

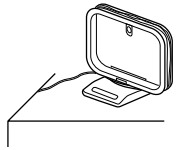

NOTE

- Do not connect two FM antennas simultaneously.
- Even if an external AM antenna is used, do not disconnect the AM loop antenna.
- Make sure the AM loop antenna lead terminals do not touch metal parts of the panel.
- If the signal has noise interference, connect the ground terminal (GND) to reduce noise.
- If you are unable to receive a good broadcast signal, we recommend installing an outdoor antenna. For details, inquire at the retail store where you purchased the unit.

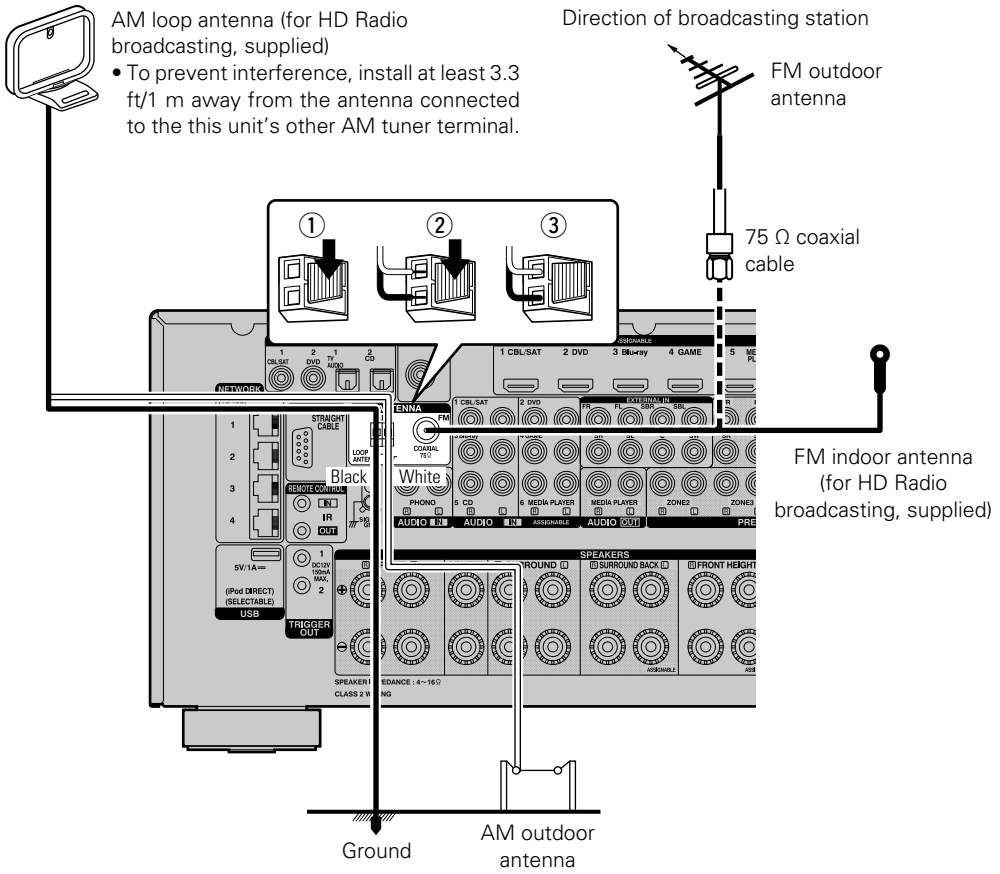

Connecting a device with a multi-channel output connector

- You can connect this unit to an external device fitted with multi-channel sound audio output connectors to enjoy music and video.
- To play analog signals input from EXTERNAL IN connectors, set "Input Mode" (☞page 138) to "EXTERNAL IN".
- The video signal can be connected in the same way as a Blu-ray Disc player / DVD player (☞page 18 "Connecting a DVD player", ☞page 19 "Connecting a Blu-ray Disc player").

Devices with a multi-channel output connector (Blu-ray Disc player, DVD player, External decoder etc.)

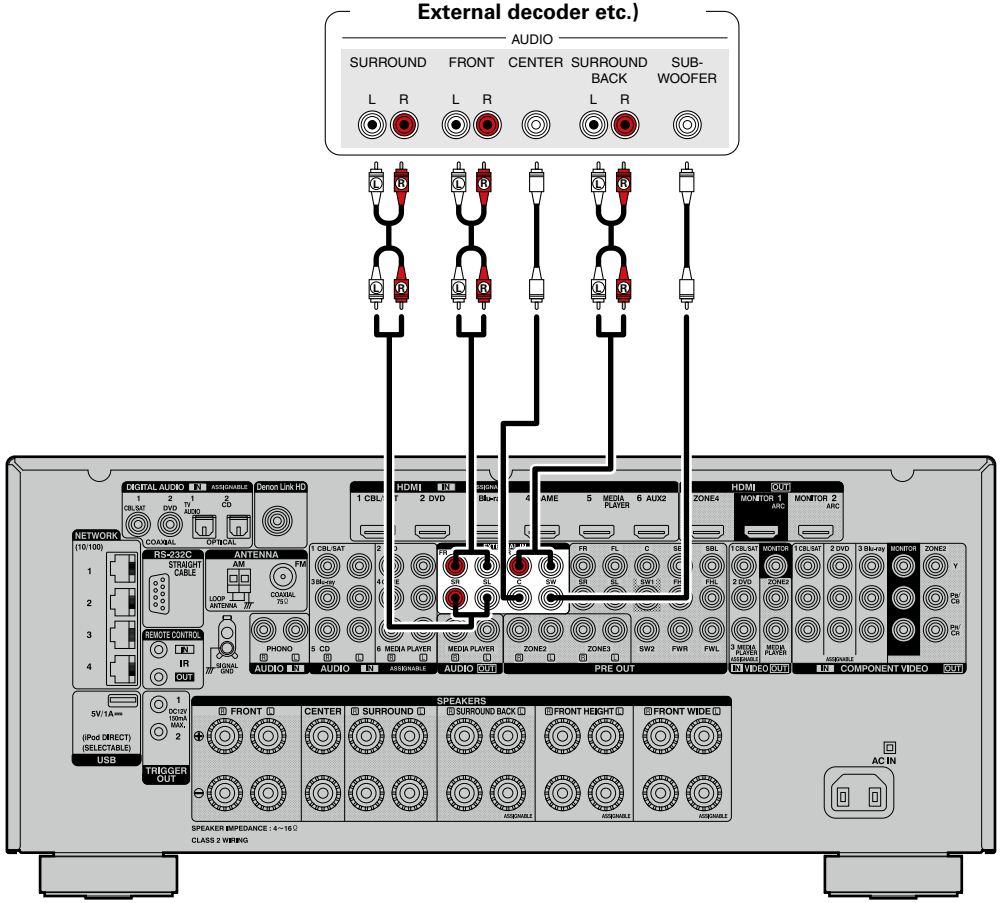

Connecting an external power amplifier

- You can use this unit as a pre-amp by connecting a commercially available power amp to the PRE OUT connector. Adding a power amp to each of the channels provides an even greater sound presence.
- Select the terminal to use and connect the device.

- When using just one surround back speaker, connect it to the left channel (L) terminal.
- Use the volume control on the subwoofer to control subwoofer volume.
- If the subwoofer volume sounds low, use the volume control provided on the subwoofer to adjust the volume.

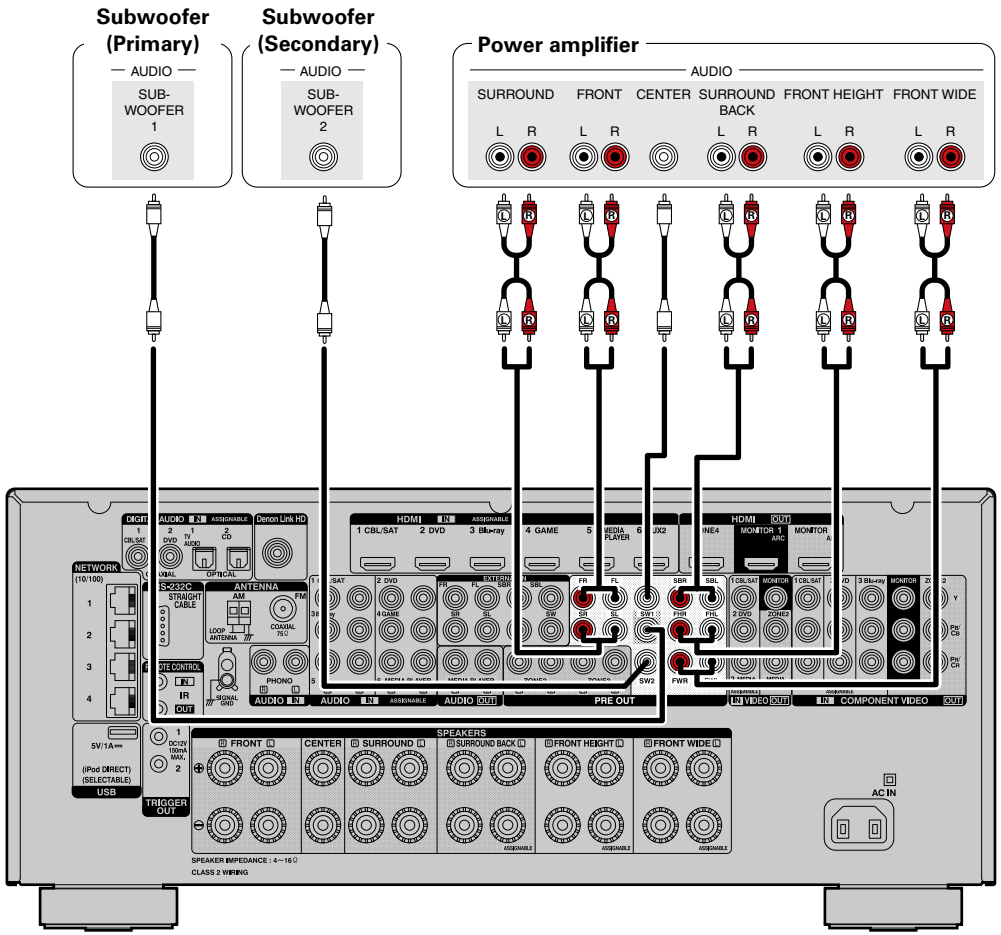

Connecting an external control device

REMOTE CONTROL jacks

If this unit is installed in a location that is out of range of the signal from the remote control unit, you can still operate the unit and the devices connected to it by using a commercially available IR receiver. You can also use it to remotely control ZONE2, ZONE3 and ZONE4 (another room).

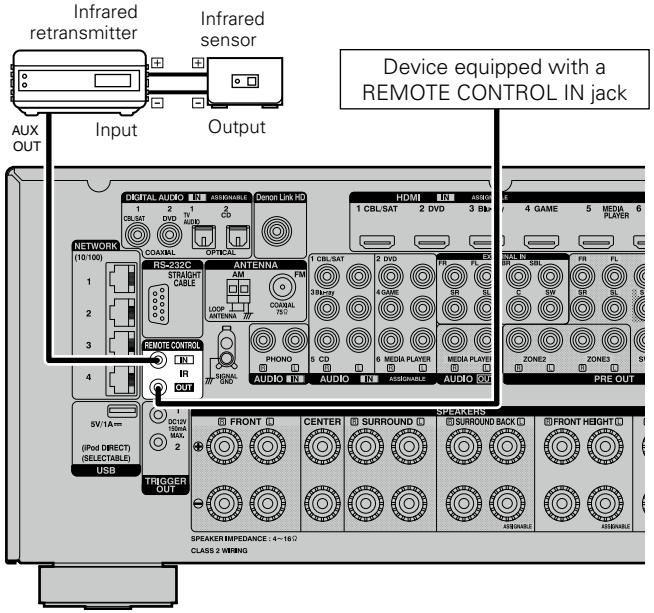

RS-232C connector

When you connect an external control device, you can control this unit with the external control device (such as power supply operation, volume adjustment, and input source switching).

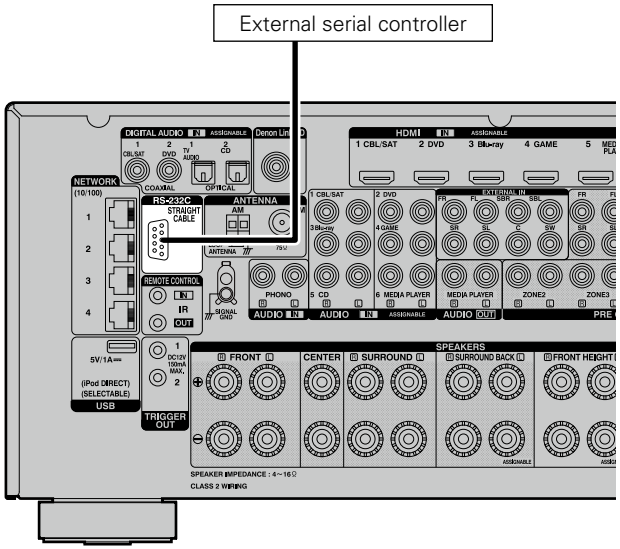

Perform the operation below beforehand.
① Turn on the power of this unit.
② Turn off the power of this unit from the external controller.
③ Check that the unit is in the standby mode.

TRIGGER OUT jacks

When a device with TRIGGER IN jack is connected, the connected device's power on/standby can be controlled through linked operation to this unit.
The TRIGGER OUT jack outputs a maximum 12 V/150 mA electrical signal.

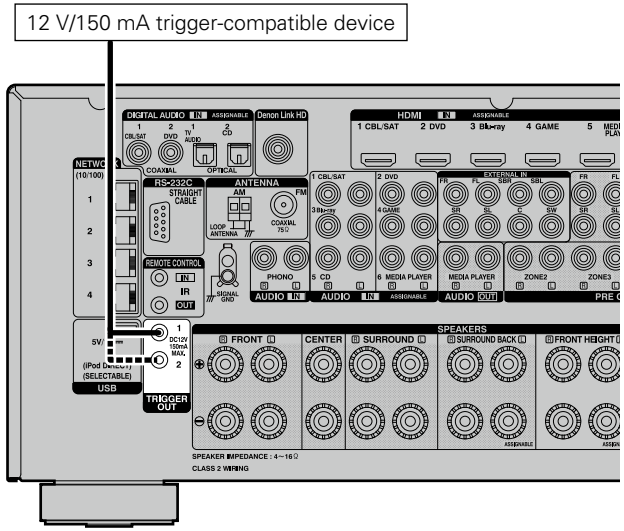

NOTE

- Use the monaural mini-plug cable for connecting TRIGGER OUT jacks. Do not use the stereo mini-plug cable.
- If the permissible trigger input level for the connected device is larger than 12 V/150 mA, or has shorted, the TRIGGER OUT jack cannot be used. In this case, turn off the power to the unit, and disconnect it.

Connecting to a home network (LAN)

You can connect this unit to your home network (LAN) to perform various types of playbacks and operations as follows. This unit is also equipped with a switching hub function. Make network connections for this unit by carefully reading information on this page.

- Playback of network audio such as the Internet Radio and Media Servers
- Playback of music from online services
- AirPlay
- Operations on this unit via the network

In addition, when an updated firmware becomes available for improving this unit, the update information is delivered from us to this unit over the network. You can then download the latest firmware.
For more information, on the menu, select "Update" (☞page 154).

Network settings are necessary. See "Network" on the menu (☞page 146) for more information on network setting.

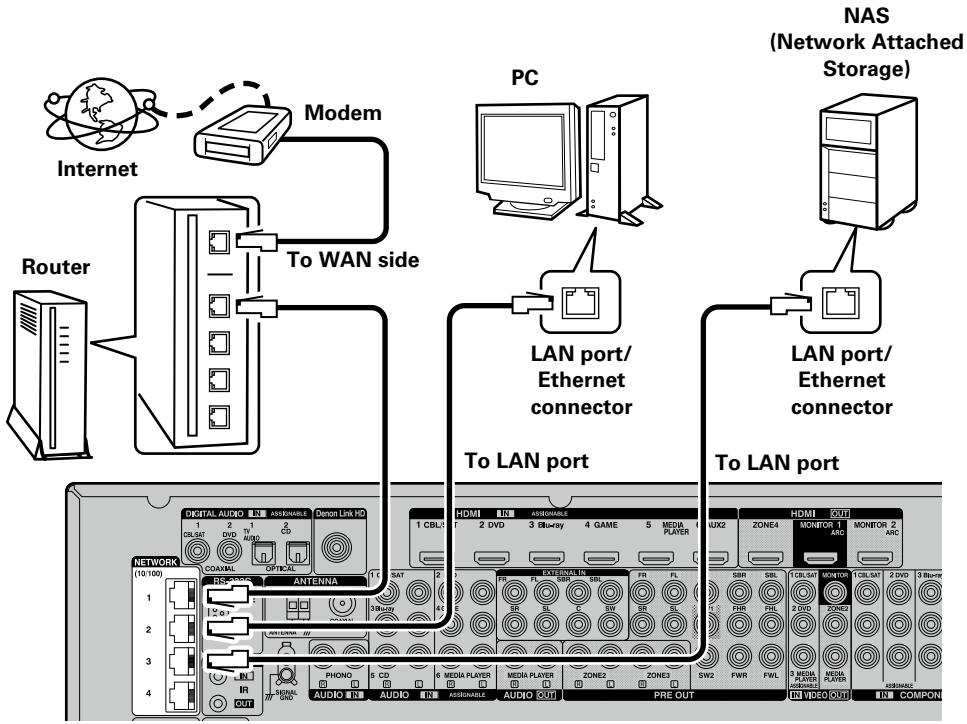

The figure above is an example. Connect the LAN cable to any of the NETWORK connectors from 1 – 4.

For connections to the Internet, contact an ISP (Internet Service Provider) or a computer shop.

Required system

❑ Broadband internet connection

❑ Modem

Device that connects to the broadband circuit and conducts communications on the Internet.
A type that is integrated with a router is also available.

❑ Router

When using this unit, we recommend you use a router equipped with the following functions:

- Built-in DHCP server
  This function automatically assigns IP addresses on the LAN.
- Built-in 100BASE-TX switch
  When connecting multiple devices, we recommend a switching hub with a speed of 100 Mbps or greater.

NOTE

- Connect the router to one of the NETWORK connectors on this unit. Furthermore, do not use more than 2 LAN cables when connecting this unit with a router.
- When connecting a hub to this unit, connect using just 1 LAN cable per hub. Connecting with two or more LAN cables may cause a malfunction.
- To use a NETWORK connector as a hub, set "Network" (☞page 147) in the menu to "Always On" (default).
- The loop detection function is not provided.
- Do not connect in the following ways.

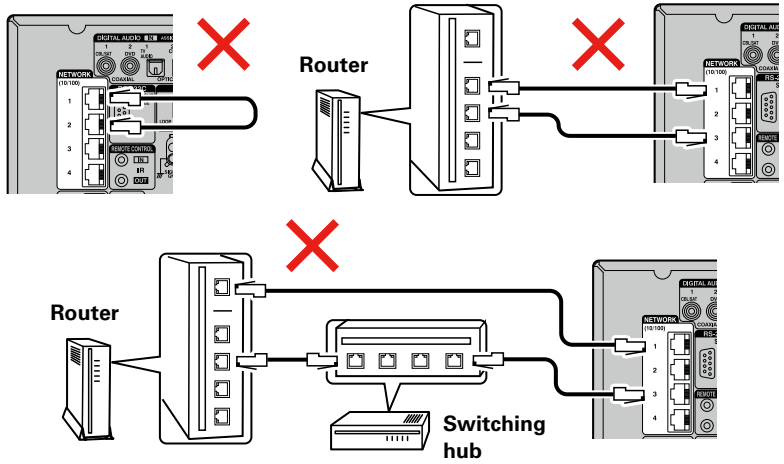

☞ See overleaf

❑ Ethernet cable (CAT-5 or greater recommended)

- Use only a shielded STP or ScTP LAN cable which is available at retailer.
- The normal shielded-type Ethernet cable is recommended. If a flat-type cable or unshielded-type cable is used, other devices could be affected by noise.
- This product is equivalent to the crossover cable.

- If you have an Internet provider contract for a line on which network settings are made manually, make the settings at "Network" (☞page 146).
- With this unit, it is possible to use the DHCP and Auto IP functions to make the network settings automatically.
- When using this unit with the broadband router's DHCP function enabled, this unit automatically performs the IP address setting and other settings.
  When using this unit connected to a network with no DHCP function, make the settings for the IP address, etc., at "Network" (☞page 146).
- When setting manually, check the setting contents with the network administrator.

NOTE

- A contract with an ISP is required to connect to the Internet.
  No additional contract is needed if you already have a broadband connection to the Internet.
- The types of routers that can be used depend on the ISP. Contact an ISP or a computer shop for details.
- DENON assumes no responsibility whatsoever for any communication errors or troubles resulting from customer's network environment or connected devices.
- This unit is not compatible with PPPoE. A PPPoE-compatible router is required if you have a contract for a type of line set by PPPoE.
- To listen to audio streaming, use a router that supports audio streaming.

Connecting the power cord

After completing all the connections, insert the power plug into the power outlet.

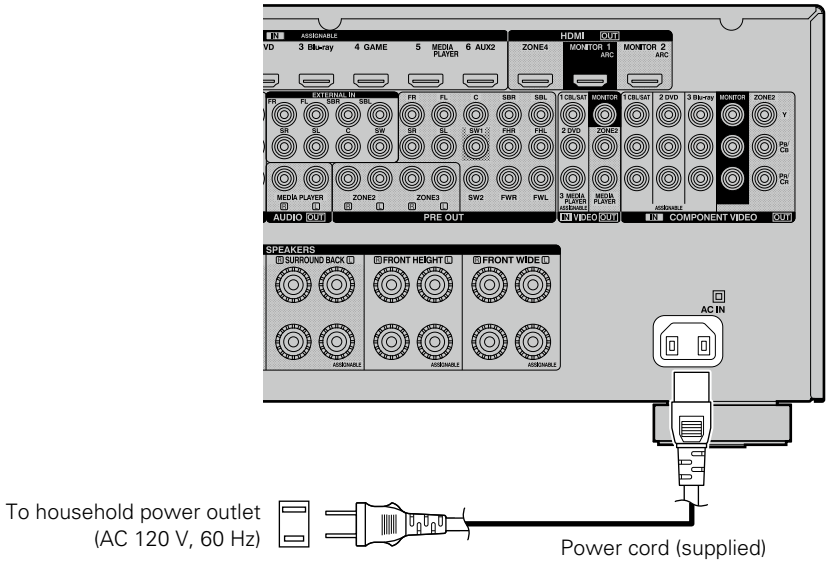

NOTE

- **Do not plug in the power cord until all connections have been completed.**
- **Do not plug in the power cord until all connections have been completed. However, when the "Setup Assistant" is running, follow the instructions in the "Setup Assistant" (page 7) screen for making connections. (During "Setup Assistant" operation, the input/output connectors do not conduct current.)**
- Do not bundle power cords together with connection cables. Doing so can result in humming or noise.

Here, we explain "Audyssey® Setup", which allows you to automatically make the optimal settings for your speakers, and "Network", which allows you to connect this unit to a home network (LAN).
This unit lets you play via your home network (LAN) music files stored on a computer and music content such as that from Internet Radio.

❑ **Speaker connection** (☞page 93)

❑ **Set up speakers (Audyssey® Setup)** (☞page 33)
❑ **Making the network settings (Network)** (☞page 40)

Playback (Basic operation) (☞page 41)

Selecting a listening mode (Sound Mode) (☞page 84)

Playback (Advanced operation) (☞page 102)

Set up speakers (Audyssey® Setup) GUI

The acoustic characteristics of the connected speakers and listening room are measured and the optimum settings are made automatically. This is called "Audyssey® Setup".
To perform measurement, place the setup microphone in multiple locations all around the listening area. For best results, we recommend you measure in six or more positions, as shown in the illustration (up to eight positions).

- When performing Audyssey® Setup, Audyssey MultEQ® XT 32/ Audyssey Dynamic EQ®/Audyssey Dynamic Volume® functions become active (☞page 125, 126).
- To set up the speakers manually, use "Speakers" (☞page 139) on the menu.

NOTE

- Make the room as quiet as possible. Background noise can disrupt the room measurements. Close windows and turn off the power on electronic devices (TVs, radios, air conditioners, fluorescent lights, etc.). The measurements could be affected by the sounds emitted by such devices.
- During the measurement process, place cell phones outside the listening room. Cell phone signals could disrupt the measurements.
- Do not unplug the setup microphone from the main unit until Audyssey® Setup is completed.
- Do not stand between the speakers and setup microphone or allow obstacles in the path while the measurements are being made. This will cause inaccurate readings.
- During the measurement process, loud test sounds may be played, but this is part of normal operation. If there is background noise in room, these test signals will increase in volume.
- Operating **VOLUME ▲▼** on the remote control unit or **MASTER VOLUME** on the main unit during the measurements will cancel the measurements.

- Measurement cannot be performed when headphones are connected. Unplug the headphones before performing Audyssey® Setup.

About setup microphone placement

- Measurements are performed by placing the setup microphone successively at multiple positions throughout the entire listening area, as shown in **【Example ①】**. For best results, we recommend you measure in six or more positions, as shown in the illustration (up to eight positions).
- Even if the listening environment is small as shown in **【Example ②】**, measuring at multiple points throughout the listening environment results in more effective correction.

【Example ①】

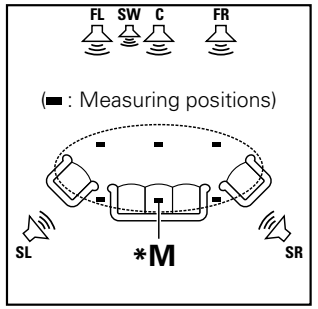

【Example ②】

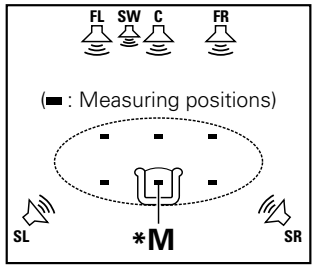

FL Front speaker (L)
FR Front speaker (R)
C Center speaker
SW Subwoofer
SL Surround speaker (L)
SR Surround speaker (R)

About the main listening position (*M)

The main listening position is the position where listeners would normally sit or where one would normally sit alone within the listening environment. Before starting Audyssey® Setup, place the setup microphone in the main listening position. Audyssey MultEQ® XT 32 uses the measurements from this position to calculate speaker distance, level, polarity, and the optimum crossover value for the subwoofer.

☞ See overleaf

1 Prepare the included setup microphone

Mount the setup microphone on a tripod or stand and place it in the main listening position.

When placing the setup microphone, adjust the height of the sound receptor to the level of the listener's ear.

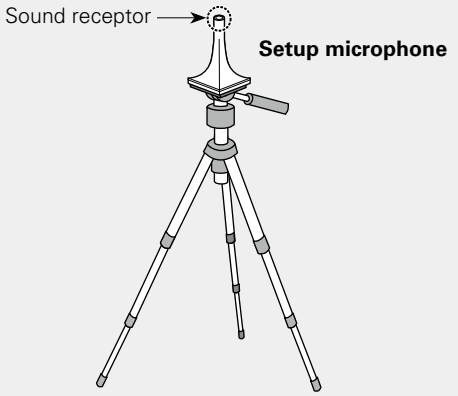

If you do not have a tripod or stand, set up the microphone on, for example, a seat without a back.

NOTE

- Do not hold the setup microphone in your hand during measurements.
- Avoid placing the setup microphone close to a seat back or wall as sound reflections may give inaccurate results.

About Audyssey Sub EQ HT™

Audyssey Sub EQ HT™ makes the integration seamless by first compensating for any level and delay differences between the two subwoofers and then applying Audyssey MultEQ® XT 32 to both subwoofers together.

* To run Audyssey Sub EQ HT™ you must select "Measure (2 spkrs)" in "Set up "Channel Select"" (☞page 101).

2 Set up the subwoofer

If using a subwoofer capable of the following adjustments, set up the subwoofer as shown below.

For details, see your subwoofer's manual.

❑ **When using a subwoofer with a direct mode**

Set the direct mode to "On" and disable the volume adjustment and crossover frequency setting.

❑ **When using a subwoofer without a direct mode**

Make the following settings:

- **Volume** : "12 o'clock position"
- **Crossover frequency** : "Maximum/Highest Frequency"
- **Low pass filter** : "Off"
- **Standby mode** : "Off"

NOTE

When using 2 subwoofers at the same time, before starting Audyssey® Setup. adjust the volume of the subwoofers by using "Subwoofer Level" (☞page 121) from the menu. You cannot set the volume for individual subwoofers.

3 Set up the zone mode

Press ZONE SELECT to switch the zone mode.

The [M] indicator lights.

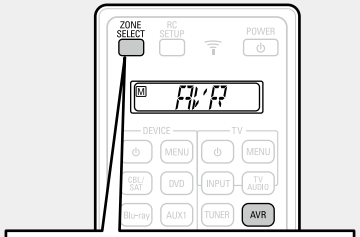

NOTE

When using a remote control with preset codes registered (☞page 160), press **AVR** to set the remote control to the AVR-operation mode before operation.

Preparation

4 Connect the setup microphone to the SETUP MIC jack of this unit.

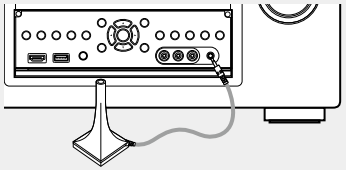

When the setup microphone is connected, the following screen is displayed.

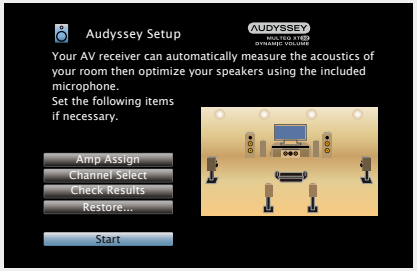

- Here, we explain setup using the example of 7.1-channel speaker playback.
  For settings other than 7.1-channel speaker playback, select "Amp Assign" and perform step 3 to 10 of "Set up "Amp Assign"" (☞page 99).
  If unused channels are set with "Channel Select", measuring time can be shortened. For setting, perform steps 13 to 19 of "Set up "Channel Select"" (☞page 101).

☞ See overleaf

Preparation (Continued)

Detection & Measurement (Main)

5 **Select "Start" and then press ENTER.**

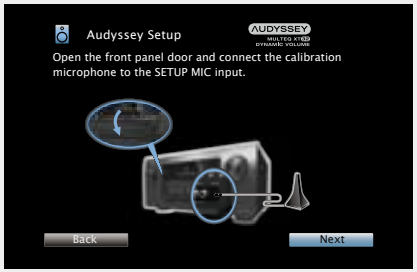

6 **Select "Next" and then press ENTER.**
The subwoofer volume setting screen is displayed.

This step automatically checks the speaker configuration and speaker size, and calculates the channel level, distance, and crossover frequency.
It also corrects distortion in the listening area.

7 **Select "Begin Test" and then press ENTER.**
The volume level for the subwoofer is measured.

- If the volume level for the subwoofer is not appropriate, an error message is displayed. See "Subwoofer level error message and how to adjust" (☞page 39) and adjust the volume level for the subwoofer.
- Measurement requires several minutes.
- To stop measuring, select "Cancel" and then press **ENTER**.

8 **The detected speakers are displayed.**

- The illustration below shows an example of when the front speakers, center speaker, subwoofer, surround and surround back speakers have been detected.

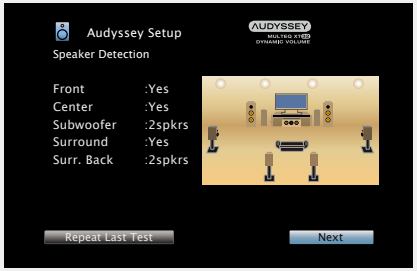

NOTE

If a connected speaker is not displayed, the speaker may not be connected correctly. Check the speaker connection.

9 **Select "Next" and then press ENTER.**

NOTE

If "Caution!" is displayed on TV screen:
Go to "Error messages" (☞page 38). Check any related items, and perform the necessary procedures.
If the problem is resolved, return and restart "Audyssey® Setup".

Going back to the previous screen

Select "Back" and then press **ENTER**.

When measuring has stopped

① Press **BACK** to display the popup screen.
② Press ◁ to select "Yes", and then press **ENTER**.

Setting up the speakers again

Repeat the operation from step 4.

☞ See overleaf

Measurement (2nd – 8th)

Calculation

- In this step, you will perform measurements at multiple positions (two to eight positions) other than the main listening position.
- Just one position can be measured but measuring multiple positions increases the accuracy of the correction of acoustic distortion within the listening area.

10 Move the setup microphone to position 2, select "Continue", and then press ENTER.

The measurement of the second position starts. Measurements can be made in up to eight positions.

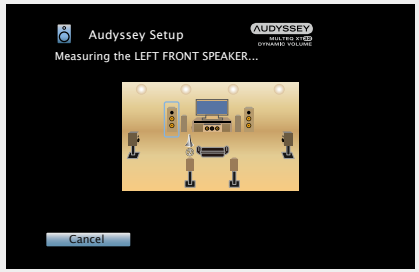

- To skip measuring the third and subsequent listening position, use △▽ to select "Calculation" and press **ENTER** to proceed to step 13.
- To measure the second position again, use △▽ to select "Repeat Last Test" and press **ENTER**.

11 Repeat step 10, measuring positions 3 to 8.

When measurement of position 8 is completed, a "Measurements finished." message is displayed.

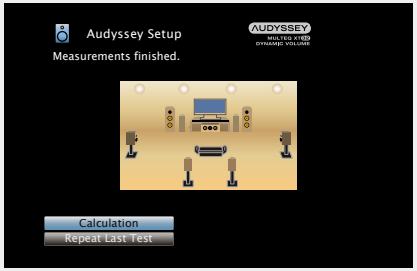

12 Select "Calculation" and then press ENTER.

Measuring results are analyzed, and the frequency response of each speaker in the listening room is determined.

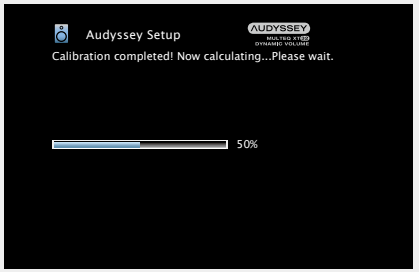

- Analysis takes several minutes to complete. The more speakers and measurement positions that there are, the more time it takes to perform the analysis.

See overleaf

Check

13 Use △▽ to select the item you want to check, and then press ENTER.

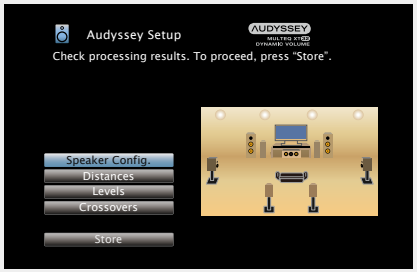

- Subwoofers may measure a greater reported distance than the actual distance due to added electrical delay common in subwoofers.
- If you want to check another item, press **BACK**.

NOTE

- If the result differs from the actual connection status, or if "Caution!" is displayed, see "Error messages" (☞page 38). Then carry out Audyssey® Setup again.
- If you change speaker positions or orientation, perform Audyssey® Setup again to find the optimal equalizer settings.

Store

14 Select "Store" and then press ENTER.

Save the measurement results.

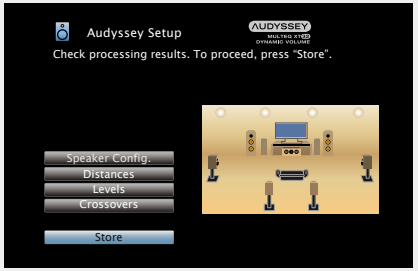

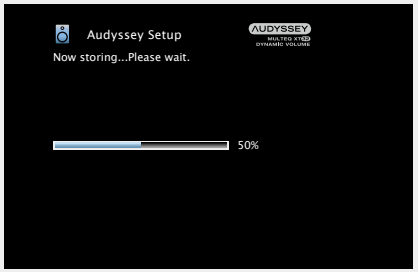

- Saving the results requires about 20 seconds.
- During saving of measurements results, "Now storing...Please wait." is displayed. When saving is completed, "Storing complete. Audyssey® Setup is now finished. Please unplug microphone." is displayed.

NOTE

During saving of measurement results, be sure not to turn off the power.

Finish

15 Unplug the setup microphone from the unit's SETUP MIC jack.

16 Set Audyssey Dynamic Volume®.

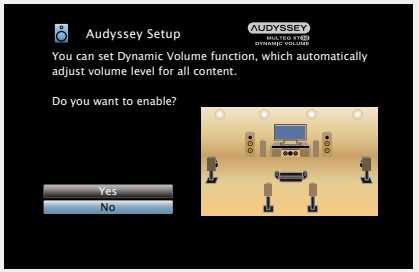

- This feature adjusts the output volume to the optimal level while constantly monitoring the level of the audio input to the unit. Optimal volume control is performed automatically without any loss in the dynamism and clarity of the sound when, for example, the volume suddenly increases for commercials shown during television programs.

❑ When turning Dynamic Volume on

- Press △ to select "Yes", and then press **ENTER**. The unit automatically enters "Medium" (☞page 126) mode.

❑ When turning Dynamic Volume off

- Press ▽ to select "No", and then press **ENTER**.

NOTE

After performing Audyssey® Setup, do not change the speaker connections or subwoofer volume. In event of a change, perform Audyssey® Setup again.

Error messages

NOTE

- An error message is displayed if Audyssey® Setup could not be completed due to speaker placement, the measurement environment, etc. If an error message is displayed, check the relevant items and perform the necessary measures. Then perform Audyssey® Setup again.
- If the result still differs from the actual connection status after remeasurement or the error message still appears, it is possible that the speakers are not connected properly. Turn this unit off, check the speaker connections and repeat the measurement process from the beginning.
- Be sure to turn off the power before checking speaker connections.

Examples	Error details	Measures
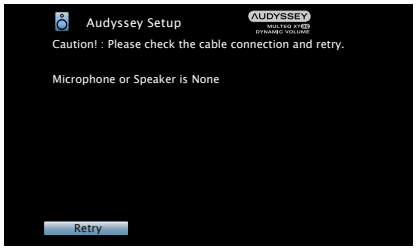	• The connected setup microphone is broken, or a device other than the supplied setup microphone is connected. • Not all speakers could be detected.	• Connect the included setup microphone to the SETUP MIC jack of this unit. • Check the speaker connections.
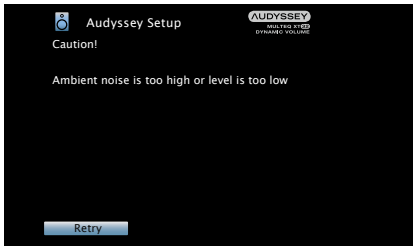	• There is too much noise in the room for accurate measurements to be made. • Speaker or subwoofer sound is too low for accurate measurements to be made.	• Either turn off any device generating noise or move it away. • Perform again when the surroundings are quieter. • Check the speaker installation and the direction in which the speakers are facing. • Adjust the subwoofer's volume.
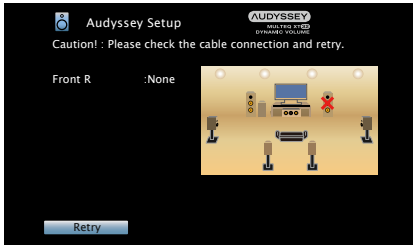	• The displayed speaker could not be detected. (The screen on the left indicates that the front right speaker cannot be detected.)	• Check the connections of the displayed speaker.
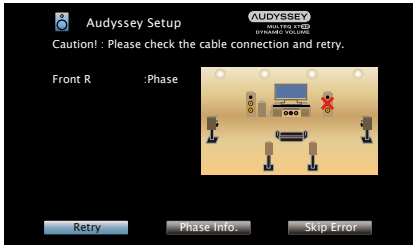	• The displayed speaker is connected with the polarity reversed. (The screen on the left indicates that the polarity phases of the front right speakers are reversed.)	• Check the polarity of the displayed speaker. • For some speakers, this error message may be displayed even if the speaker is properly connected. If you are sure the connection is correct, use ◁ ▷ to select "Skip Error", then press **ENTER**. 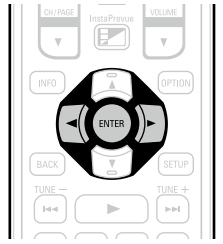

❑ Subwoofer level error message and how to adjust

The optimal level of each subwoofer channel for Audyssey Setup measurement is 75 dB.

During subwoofer level measurement (☞page 33 "Set up speakers (Audyssey® Setup)"), an error message is displayed when one level of subwoofers is outside the 72 – 78 dB range.

When using a subwoofer with built-in amplifier (active type), adjust the subwoofer volume so that the subwoofer level is within the 72 to 78 dB range.

[Error message]

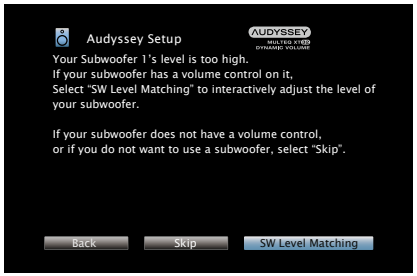

1 Select "SW Level Matching" and then press ENTER.

Subwoofer level measurement begins.

During measuring, a "Calibrating…" message is displayed.

The measured level appears on the level indicator after about 3 to 5 seconds.

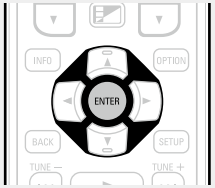

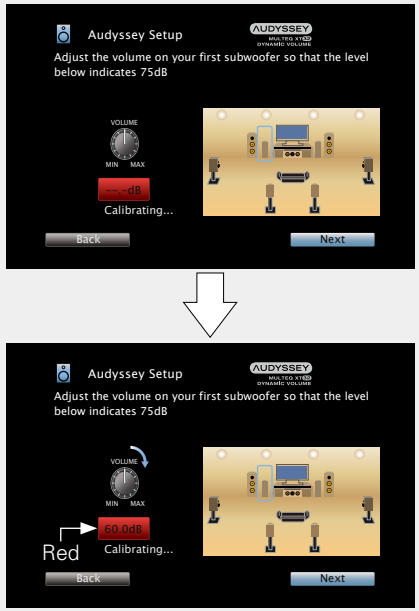

- If the measured level is outside the 72 to 78 dB range, the level indicator is red.
- When measuring finishes, select "Back" and then press **ENTER**.

2 Adjust the volume control on your subwoofer so that the measured level is within the 72 to 78 dB range.

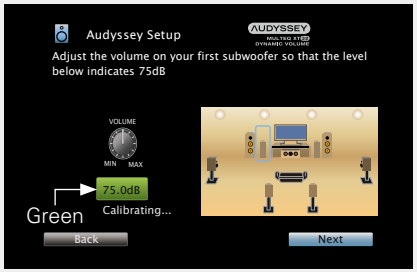

- If the measured level is within the 72 to 78 dB range, the level indicator is green.

3 When the measured level is within the 72 to 78 dB range, select "Next" and then press ENTER.

- If you use two subwoofers, the second subwoofer's adjust will be started.
  Repeat the operation from step 2, 3.

When you use two subwoofers, adjust each subwoofer so that the volume levels of Subwoofer 1 and Subwoofer 2 are appropriate for your needs.

Check Results

This function enables you to check the measurement results and equalizer characteristics after Audyssey® Setup.

1 **Press SETUP to display the menu on the TV screen.**

2 **Use △▽ to select "Speakers" – "Audyssey® Setup" and then press ENTER or ▷.**

3 **Use △▽ to select "Check Results" and then press ENTER.**

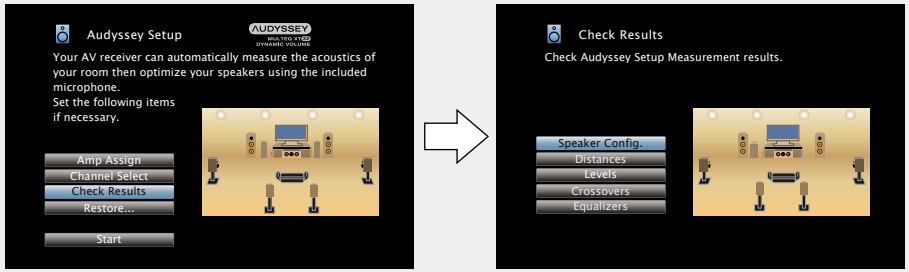

4 **Use △▽ to select the item you want to check, then press ENTER.**
Measurement results for each speaker are displayed.

Speaker Config.	Check the speaker configuration.
Distances	Check the speaker distance.
Levels	Check the speaker channel level.
Crossovers	Check the speaker crossover frequency.
Equalizers	Check the equalizer.

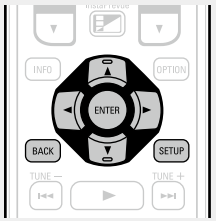

- If "Equalizers" is selected, press △▽ to select equalizing curve ("Audyssey" or "Audyssey Flat") to be checked.
  Use △▽ to switch the display between the different speakers.

5 **Press ◁ or BACK.**
The confirmation screen reappears. Repeat step 2.

Retrieving Audyssey® Setup settings

If you set "Restore..." to "Restore", you can return to Audyssey® Setup measurement result (value calculated at the start by MultEQ® XT 32) even when you have changed each setting manually.

Making the network settings (Network)

GUI

This unit can be connected to a home network (LAN) to listen to Internet Radio or play back music files and still image (JPEG) files stored on a computer.

1 **Connect the Ethernet cable (☞page 31 "Connecting to a home network (LAN)").**

2 **Turn on this unit (☞page 41).**
This unit performs automatic network setup due to the DHCP function.
When connecting to a network that has no DHCP function, perform the setting in "Settings" (☞page 148).

Playback (Basic operation)

Setup (☞page 33)

- ❑ **Turning the power on** (☞page 41)
- ❑ **Selecting the input source** (☞page 41)
- ❑ **Adjusting the master volume** (☞page 42)
- ❑ **Turning off the sound temporarily** (☞page 42)

- ❑ **Playing a Blu-ray Disc player/DVD player** (☞page 42)
- ❑ **Playing a Blu-ray Disc player compatible with Denon Link HD** (☞page 42)
- ❑ **Playing Super Audio CD** (☞page 43)
- ❑ **Playing a CD player** (☞page 43)
- ❑ **Playing an iPod** (☞page 44)
- ❑ **Playing a USB memory device** (☞page 47)
- ❑ **Listening to HD Radio stations** (☞page 50)

- ❑ **Listening to Internet Radio** (☞page 59)
- ❑ **Playing back files stored on a PC and NAS** (☞page 62)
- ❑ **Using online services** (☞page 66)
- ❑ **Convenient functions** (☞page 76)
- ❑ **AirPlay function** (☞page 82)

Selecting a listening mode (Sound Mode) (☞page 84)

Playback (Advanced operation) (☞page 102)

Important information

Before starting playback, make the connections between the different devices and the settings on the unit.

NOTE

Also refer to the operating instructions of the connected devices when playing them.

Turning the power on

Press POWER ⏻ to turn on power to the unit.

The power indicator flashes green and the power turns on.

You can also switch the power to standby by pressing ⏻ on the main unit.

❑ When power is switched to standby

Press **POWER** ⏻.

[Power indicator status in standby mode]

- Normal standby : Off
- When "HDMI Pass Through" or "HDMI Control" (☞page 130) is set to "On" : Red
- When "Network" (☞page 147) is set to "Always On" : Red
- When a mobile device that supports MHL is being charged : Red

Selecting the input source

Press the input source select button (CBL/SAT, Blu-ray, GAME, MEDIA PLAYER, DVD, AUX1, AUX2, CD, TUNER, PHONO, NETWORK, TV AUDIO, iPod/USB or INTERNET RADIO) to be played back.

The desired input source can be selected directly.

You can also use the following operation to select an input source.

❑ Select the input source using the main unit

Turn **SOURCE SELECT**.

- Turning **SOURCE SELECT** switches the input source, as shown below.

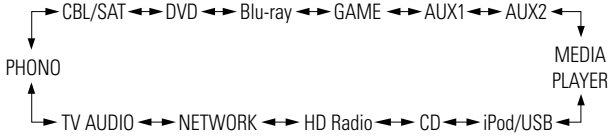

Adjusting the master volume

Use VOLUME ▲▼ to adjust the volume.

- The volume display method varies depending on the "Scale" setting (☞page 124).

❑ **When the "Scale" setting (☞page 124) is "0 – 98"**

[Adjustable range] 0.0 | 0.5 – 98.0

❑ **When the "Scale" setting (☞page 124) is "–79.5dB – 18.0dB"**

[Adjustable range] ---.- | –79.5dB – 18.0dB

- The variable range differs according to the input signal and channel level setting.

You can also adjust the master volume by turning **MASTER VOLUME** on the main unit.

Turning off the sound temporarily

Press MUTE 🔇.

- "MUTE" indicator on the display flashes.
- 🔇 appears on a TV screen.

- The sound is reduced to the level set at "Mute Level" (☞page 124).
- To cancel, press **MUTE** 🔇 again. Muting can also be canceled by adjusting the master volume.

Playing a Blu-ray Disc player/DVD player

The following describes the procedure for playing Blu-ray Disc player/DVD player.

1 Prepare for playback.

① Turn on the power of the TV, subwoofer and player.
② Change the TV input to the input of this unit.
③ Load the disc in the player.

2 Press POWER ⏻ to turn on power to the unit.

3 Press Blu-ray or DVD to switch an input source for a player used for playback.

4 Play the Blu-ray Disc player or DVD player.

- Make the necessary settings on the player (language setting, subtitles setting, etc.) beforehand.

Playing a Blu-ray Disc player compatible with Denon Link HD

- Denon Link HD uses the clock of the AV amplifier connected by Denon Link to achieve HDMI signal transfer with low jitter when playing BD.
- To play Denon Link HD signals, make HDMI and Denon Link connections with a compatible Blu-ray disc player (☞page 13 "Connecting a player compatible with the Denon Link HD function").

1 Prepare for playback.

① Turn on the power of the TV, subwoofer and player.
② Change the TV input to the input of this unit.
③ Load the disc in the player.

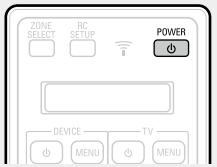

2 Press POWER ⏻ to turn on power to the unit.

3 Perform the settings of the "Input Assign" menu (☞page 135).

① Assign HDMI connectors for the input source (example: Blu-ray).
② Set "DIGITAL" to "D.LINK".
- The default assign of "D.LINK" is "Blu-ray".

4 Press the input source select button (example: Blu-ray) to switch an input source assigned in step 3 - ①.

5 Set the audio input mode to "Auto" or "HDMI" using the "Input Mode" menu (☞page 138).

- The default setting of "Input Mode" is "Auto".

6 Play the component connected to this unit.

- Make the necessary settings on the player (language setting, subtitles setting, etc.) beforehand.

☞ See overleaf

Playing a Blu-ray Disc player compatible with Denon Link HD

NOTE

- Set the Blu-ray disc player's "Denon Link" setting to "On". For instructions on operation, refer to the Blu-ray disc player's manual.
- When a Blu-ray disc is played with the "Input Mode" (☞page 138) set to "Auto" or "HDMI", playback is performed in the Denon Link HD mode.

Playing Super Audio CD

The following describes the procedure for playing Super Audio CD.

1 Prepare for playback.
① Turn on the power of the subwoofer and player.
② Load the disc in the player.

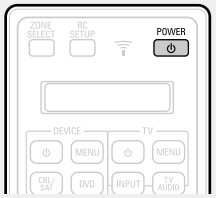

2 Press POWER ⏻ to turn on power to the unit.

3 Perform the settings of the "Input Assign" menu (☞page 135).
Assign HDMI connectors for the input source(example: DVD).

4 Press the input source select button (example: DVD) to switch an input source assigned in step 3.

5 Set the audio input mode to "Auto" using the "Input Mode" menu (☞page 138).
- The default setting of "Input Mode" is "Auto".

6 Play the component connected to this unit.
The DSD indicator lights on the display.

When playing back Super Audio CD, DSD signals are converted into PCM signals which are then converted into analog signals.

Playing a CD player

The following describes the procedure for playing CD player.

1 Prepare for playback.
① Turn on the power of the subwoofer and player.
② Load the disc in the player.

2 Press POWER ⏻ to turn on power to the unit.

3 Press CD to switch the input source to "CD".

4 Play the CD player.

Playing an iPod

You can use the USB cable provided with the iPod to connect the iPod with the unit's iPod/USB port and enjoy music stored on the iPod.
For information on the iPod models that can be played back with this unit, see "Connecting an iPod or USB memory device to the iPod/USB port" (☞page 23).

Listening to music on an iPod

The iPod display modes include "From iPod" and "On-Screen".
By default, "From iPod", where you directly operate iPod itself while seeing the iPod screen, is set.
To change to "On-Screen", where you perform operations while having the iPod information displayed on the TV screen, see "Setting operation mode (iPod Browse Mode)" (☞page 45).

1 **Using the USB cable provided with the iPod, connect the iPod to the iPod/USB port (☞page 23).**

2 **Press POWER ⏻ to turn on power to the unit.**

3 **Press iPod/USB to switch the input source to "iPod/USB".**
"Remote iPod" is displayed on the display of this unit.
• Nothing is displayed on the TV screen.

4 **Operate iPod itself directly while seeing the iPod screen to play back music.**

❑ **Streaming music stored in iPhone, iPod touch, or iPad directly to the unit** (☞page 82)

❑ **Playing iTunes music with this unit** (☞page 82)

Operations available through the OPTION button

Press the **OPTION** button to display a menu of functions that can be used on the TV screen. Select the function you want to use from this menu. You can easily find and use the desired function.

❑ **Setting the USB port to use (USB Select)** (☞page 76)

❑ **Setting operation mode (iPod Browse Mode)** (☞page 45)

❑ **Performing repeat playback (Repeat)** (☞page 46)

❑ **Performing random playback (Random)** (☞page 46)

❑ **Adjusting the picture quality for your viewing environment (Picture Mode)** (☞page 80)

❑ **All Zone Stereo function** (☞page 80)

❑ Setting operation mode (iPod Browse Mode)

In this mode, various lists and screens during playback on iPod are displayed on the TV screen.
This section describes the steps up to playing back tracks on iPod in "On-Screen".

1 Press iPod/USB to switch the input source to "iPod/USB".

2 Press OPTION.
The option menu screen is displayed.

3 Select "iPod Browse Mode", then press ENTER.
The "iPod Browse Mode" screen is displayed.

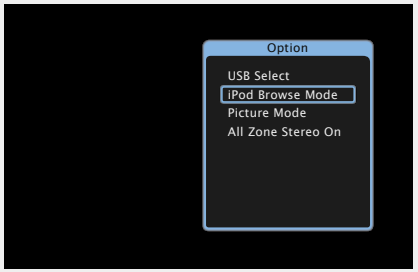

4 Use ◁ ▷ to select "On-Screen", then press ENTER.
The iPod screen is displayed.

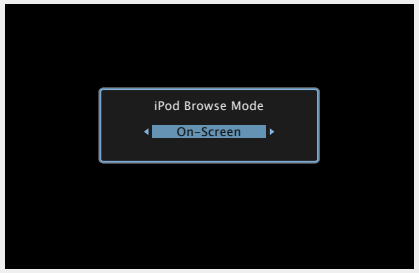

- English letters, numbers and certain symbols are displayed. Incompatible characters are displayed as "." (period).
- Operations available for "On-Screen" and "From iPod" are listed below.

Display mode		From iPod	On-Screen
Playable files	Music file	✓	✓
	Video file	*	
Active buttons	Remote control unit (This unit)	✓	✓
	iPod	✓	

* Only the sound is played.

5 Use △▽ to select the item, then press ENTER or ▷ to select the file to be played.

6 Press ENTER, ▷ or ►.
Playback starts.

❑ Adjusting the sound quality (Restorer)

Make this setting at "Restorer" (☞page 124) in the menu.
You can use the "Restorer" function to restore to a state close to the audio before compression while correcting the bass feel to enjoy a richer playback experience. The default setting is "Mode 3 (Low)".

❑ Changing the screen display duration

Make this setting at "Now Playing" (☞page 133) in the menu.
The default setting is "Always On".
When "Auto Off" is set, the on-screen display is turned off 30 seconds after an operation.
Press △▽◁ ▷ while the display is off to return to the original screen.

❑ Switching the screen display

Press **STATUS** on this unit during playback with "iPod Browse Mode" set to "On-Screen".
The display switches between track title, artist name, and album title etc. each time the button is pressed.

NOTE

- Depending on the type of iPod and the software version, some functions may not operate.
- Note that DENON will accept no responsibility whatsoever for any problems arising with the data on an iPod when using this unit in conjunction with the iPod.

❑ Performing repeat playback (Repeat)

1 **Press OPTION with "iPod Browse Mode" set to "On-Screen".**
The option menu screen is displayed.

2 **Use △▽ to select "Repeat", then press ENTER.**

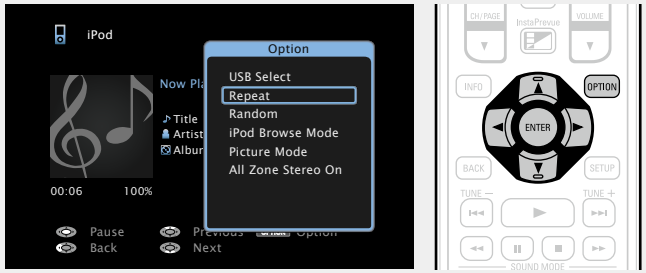

3 **Use ◁ ▷ to select repeat playback mode.**

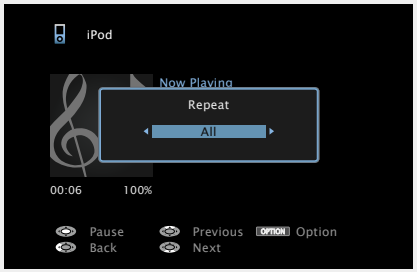

• Each time ◁ ▷ is pressed, the setting is changed as shown below.

Off ⟷ One
All

Off	Repeat playback mode is canceled.
One	A file being played is played repeatedly.
All	All files in the folder currently being played are played repeatedly.

4 **Press ENTER.**
The display returns to the playback screen.

❑ Performing random playback (Random)

1 **Press OPTION with "iPod Browse Mode" set to "On-Screen".**
The option menu screen is displayed.

2 **Use △▽ to select "Random", then press ENTER.**

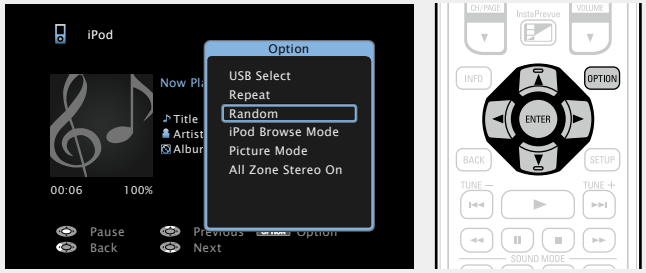

3 **Use ◁ ▷ to select random playback mode.**

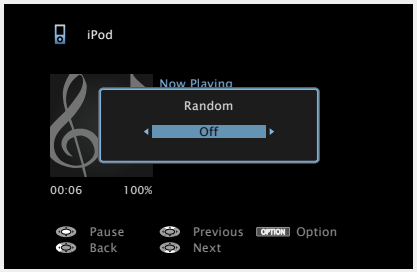

• Each time ◁ ▷ is pressed, the setting is changed as shown below.

Off ⟷ On

Off	Disable random playback.
On	Enable random playback.

4 **Press ENTER.**
The display returns to the playback screen.

The random playback randomly selects a track to play back from all tracks every time a track ends. Therefore, the same track may be played back consecutively.

❑ iPod operation buttons

Operation buttons	Function
CH/PAGE ▲▼	Page search
INFO	Display of information such as the source name, volume, and sound mode name
OPTION	USB Select / Repeat playback / Random playback / iPod Browse Mode switching / Picture Mode / All Zone Stereo
△▽◁ ▷	Cursor operation / Auto search (cue, △▽) / Manual search (Press and hold, △▽)
ENTER (Press and release)	Enter
ENTER (Press and hold)	Stop
BACK	Return
SETUP	Setup menu
I◀◀ ▶▶I	Auto search (cue)
▶	Playback / Pause
◀◀ ▶▶ (Press and hold)	Manual search (fast-reverse/fast-forward)
II	Pause
■	Stop

Playing a USB memory device

Playing back music or still picture (JPEG) files recorded on a USB memory device.

Important information

- Only USB memory devices conforming to mass storage class and MTP (Media Transfer Protocol) standards can be played on this unit.
- This unit is compatible with USB memory devices in "FAT16" or "FAT32" format.
- This unit is compatible with MP3 files conforming to "MPEG-1 Audio Layer-3" standards.
- File types that this unit can play back and specifications are shown below.

【Supported file types】

Supported file types	USB memory devices *1
WMA (Windows Media Audio)	✓*2
MP3 (MPEG-1 Audio Layer-3)	✓
WAV	✓
MPEG-4 AAC	✓*3
FLAC (Free Lossless Audio Codec)	✓
JPEG	✓
ALAC (Apple Lossless Audio Codec)	✓

*1 USB memory device
- This unit is compatible with MP3 ID3-Tag (Ver. 2) standard.
- This unit can show the artwork that was embedded by using MP3 ID3-Tag Ver. 2.3 or 2.4.
- This unit is compatible with WMA META tags.
- If the image size (pixels) of an album artwork exceeds 500 × 500 (WMA/MP3/WAV/FLAC) or 349 × 349 (MPEG-4 AAC), then music may not be played back properly.
- WAV format Quantization bit length: 16 or 24 bits.
- FLAC format Quantization bit length: 16 or 24 bits.

*2 Copyright-protected files can be played on certain portable players compatible with MTP.

*3 Only files that are not protected by copyright can be played on this unit.
Content downloaded from pay sites on the Internet are copyright protected. Also, files encoded in WMA format when ripped from a CD, etc. on a computer may be copyright protected, depending on the computer's settings.

NOTE

File types that this unit does not support are not displayed.

【Compatible formats】

	Sampling frequency	Bit rate	Extension
WMA (Windows Media Audio)	32/44.1/48 kHz	48 – 192 kbps	.wma
MP3 (MPEG-1 Audio Layer-3)	32/44.1/48 kHz	32 – 320 kbps	.mp3
WAV	32/44.1/48/88.2/96/ 176.4/192 kHz	–	.wav
MPEG-4 AAC	32/44.1/48 kHz	16 – 320 kbps	.aac/ .m4a/ .mp4
FLAC (Free Lossless Audio Codec)	32/44.1/48/88.2/96/ 176.4/192 kHz	–	.flac
ALAC (Apple Lossless Audio Codec)*	32/44.1/48/88.2/96 kHz	–	.m4a

* Copyright [2012] [D&M Holdings. Inc.]
Licensed under the Apache License, Version 2.0 (the "License"); you may not use this file except in compliance with the License. You may obtain a copy of the License at http://www.apache.org/licenses/LICENSE-2.0

❑ Maximum Number of Playable Files and Folder

The limits on the number of folders and files that can be displayed by this unit are as follows.

Item \ Media	USB memory devices
Memory capacity	FAT16 : 2 GB, FAT32 : 2 TB
Number of folder directory levels *1	8 levels
Number of folders	500
Number of files *2	5000

*1 The limited number includes the root folder.

*2 The allowable number of files may differ according to the USB memory device capacity and the file size.

Playing files stored on USB memory devices

1 **Connect the USB memory device to the iPod/USB port (☞page 23).**

2 **Press iPod/USB to switch the input source to "iPod/USB".**

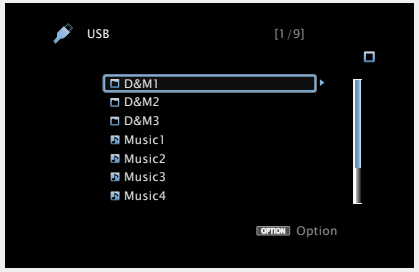

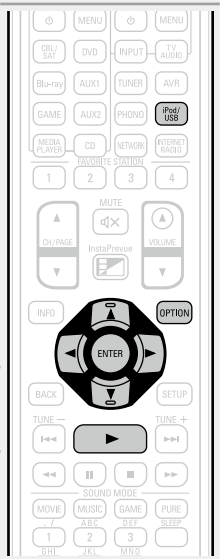

3 **Use △▽ to select the search item or folder, then press ENTER or ▷.**

4 **Use △▽ to select the file, then press ENTER, ▷ or ►.**
Playback starts.

❑ Adjusting the sound quality (Restorer)

Make this setting at "Restorer" (☞page 124) in the menu.
You can use the "Restorer" function to restore to a state close to the audio before compression while correcting the bass feel to enjoy a richer playback experience. The default setting is "Mode 3 (Low)".

❑ Going back to the previous screen

Press ◁ or **BACK**.

❑ Changing the screen display duration

Make this setting at "Now Playing" (☞page 133) in the menu. The default setting is "Always On".
When "Auto Off" is set, the on-screen display is turned off 30 seconds after an operation.
Press △▽◁ ▷ while the display is off to return to the original screen.

- When an MP3 music file includes album art data, the album art can be displayed while playing the file.
- If the USB memory device is divided into multiple partitions, only the first partition is played back.

NOTE

- Note that DENON will accept no responsibility whatsoever for any problems arising with the data on a USB memory device when using this unit in conjunction with the USB memory device.
- USB memory devices will not work via a USB hub.
- DENON does not guarantee that all USB memory devices will operate or be supplied power. When using a USB portable hard disk that can draw power from an AC adapter, we recommend using the AC adapter.
- It is not possible to connect and use a computer via the iPod/USB port of this unit using a USB cable.

Operations available through the OPTION button

Press the **OPTION** button to display a menu of functions that can be used on the TV screen. Select the function you want to use from this menu. You can easily find and use the desired function.

- ❑ **Setting the USB port to use (USB Select)** (☞page 76)
- ❑ **Searching content with keywords (Text Search)** (☞page 76)
- ❑ **Performing repeat playback (Repeat)** (☞page 77)
- ❑ **Performing random playback (Random)** (☞page 77)
- ❑ **Playing back music and a favorite picture at the same time (Slideshow)** (☞page 79)
- ❑ **Playing back still images in sequential order (Slideshow Interval)** (☞page 79)
- ❑ **All Zone Stereo function** (☞page 80)

❑ USB memory device operation buttons

Operation buttons	Function
CH/PAGE ▲▼	Page search
INFO	Display of information such as the source name, volume, and sound mode name
OPTION	USB Select / Text Search / Repeat playback / Random playback / Slideshow / Slideshow Interval / All Zone Stereo
△▽◁ ▷	Cursor operation / Auto search (cue, △▽)
ENTER (Press and release)	Enter
ENTER (Press and hold)	Stop
BACK	Return
SETUP	Setup menu
I◄◄ ►►I	Auto search (cue)
►	Playback / Pause
II	Pause
■	Stop

Listening to HD Radio stations

For antenna connections, see “Connecting an HD Radio receiver” (☞page 27).

Important information

❑ Using the HD Radio™ receiver

HD Radio stations offer higher sound quality than conventional FM/ AM broadcasts. It is also possible to receive data services and select broadcasts from among up to eight multicast programs.
HD Radio Technology provides higher quality sound than conventional broadcasts and allows reception of data services.

Digital Sound

- Digital, CD-quality sound. HD Radio Technology enables local radio stations to broadcast a clean digital signal. AM sounds like today’s FM and FM sounds like a CD.

PSD

- Program Service Data: Contributes to the superior user experience of HD Radio Technology. Presents song name, artist, station IDs, and other relevant data streams.

HD2/HD3

- Adjacent to traditional main stations are extra local FM channels. These HD2/HD3 Channels provide new, original music as well as deep cuts into traditional genre.

HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio, and “Arc” logos are proprietary trademarks of iBiquity Digital Corp.

For detailed information on HD Radio Technology, please go to “www.hdradio.com/”.

How to tune in

The modes for receiving FM broadcasts consists of “Auto” mode that automatically searches available broadcast stations and “Manual” mode that lets you tune in using buttons to change the frequency. The default setting is “Auto”. You can also use “Direct Tune” to tune in by entering the frequency directly.
In “Auto” mode, you cannot tune in to radio stations if the reception is not good. If this is the case, then use the “Manual” mode or “Direct Tune” to tune in.

Listening to HD Radio stations

1 **Press TUNER to switch the input source to "HD Radio".**

【TV Screen】

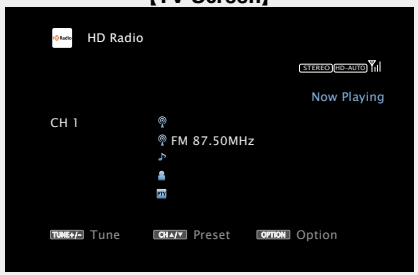

【Display of this unit】



2 **Press OPTION.**
The option menu screen is displayed.

3 **Use △▽ to select "FM/AM", then press ENTER.**
The Band screen is displayed.

【TV Screen】

【Display of this unit】



4 **Use ◁ ▷ to select "FM" or "AM", then press ENTER.**

【TV Screen】

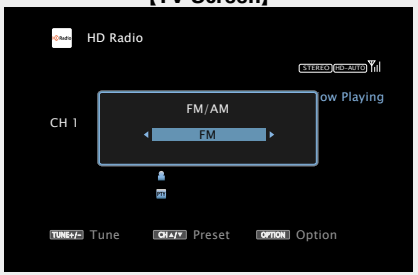

【Display of this unit】



FM	When listening to an FM broadcast.
AM	When listening to an AM broadcast.

5 **Press TUNE + or TUNE – to select the station you want to hear.**
Scanning is performed until it finds an available radio station. When it finds a radio station, it stops the scan automatically and tunes in.

- If the desired station cannot be tuned in with auto tuning, tune it in manually.
- When tuning in stations manually, press and hold **TUNE +** or **TUNE –** to change frequencies continuously.

❑ Changing the screen display duration

Make this setting at "Now Playing" (☞page 133) in the menu. The default setting is "Always On".
When "Auto Off" is set, the on-screen display is turned off 30 seconds after an operation.
Press △▽◁ ▷ while the display is off to return to the original screen.

❑ Adding to the FAVORITE STATION button

(☞page 78)

Operations available through the OPTION button

Press the **OPTION** button to display a menu of functions that can be used on the TV screen. Select the function you want to use from this menu. You can easily find and use the desired function.

- ❑ **Changing the tuning mode (Tune Mode)** (☞page 52)
- ❑ **Tuning in by entering the radio frequency (Direct Tune)** (☞page 53)
- ❑ **Tuning in to radio stations and presetting them automatically (Auto Preset Memory)** (☞page 54)
- ❑ **Presetting the current broadcast station (Preset Memory)** (☞page 55)
- ❑ **Specify a name for the preset broadcast station (Preset Name)** (☞page 56)
- ❑ **Skipping preset broadcast stations (Preset Skip)** (☞page 57)
- ❑ **All Zone Stereo function** (☞page 80)

☞ See overleaf

❑ Changing the tuning mode (Tune Mode)

You can change the mode for tuning into FM/AM broadcasts.

1 **Press TUNER to switch the input source to "HD Radio".**

2 **Press OPTION.**
The option menu screen is displayed.

3 **Use △▽ to select "Tune Mode", then press ENTER.**

[TV Screen]

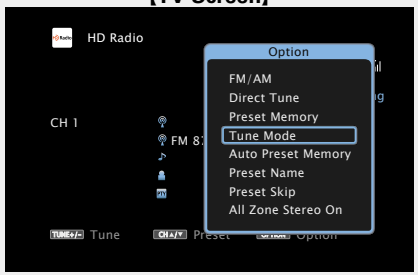

[Display of this unit]



4 **Use ◁ ▷ to select tuning mode, then press ENTER.**

[TV Screen]

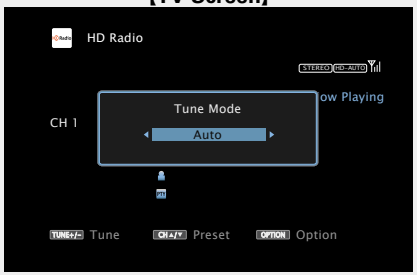

[Display of this unit]



Auto	Automatically tune to the station.
HD-Auto	Automatically tune to the HD Radio station.
Analog-Auto	Automatically tune to an analog station and analog HD Radio station.
Manual	Manually tune to the station.
Analog-Manual	Manually tune to an analog station and analog HD Radio station.

When tuning in stations manually, press and hold **TUNE +** or **TUNE –** to change frequencies continuously.

❑ Selecting audio programs

HD Radio Technology enables stations to broadcast multiple Audio Program and data services on HD2 / HD3 / HD4 channels.

1 **Select the tuning mode ("HD-Auto", "Auto" or "Manual").**

2 **Press TUNE + or TUNE – to tune in the desired Multicast channel.**

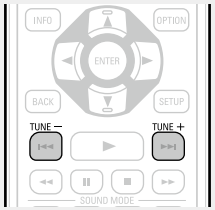

- If the station you are tuning in has multiple audio programs, "HD1" is indicated on the display.
  If it only has one audio program, "HD" is indicated.
- When the unit receives multicast channels, the multicast program number (HD2) is displayed to the right of the station name.

NOTE

- This function is not available for AM HD Radio stations because they cannot broadcast multicast channels.
- If digital audio data cannot be received after the station is selected, or if the station signal is weak, the unit may not be able to receive the multicast channels.
- If the station signal is weak, the digital audio of the multicast channel may cut out.

❑ Changing the screen display duration

Make this setting at "Now Playing" (☞page 133) in the menu. The default setting is "Always On".
When "Auto Off" is set, the on-screen display is turned off 30 seconds after an operation.
Press △▽◁ ▷ while the display is off to return to the original screen.

❑ Tuning in by entering the radio frequency (Direct Tune)

You can enter the receiving frequency directly to tune in.

1 **Press TUNER to switch the input source to "HD Radio".**

2 **Press OPTION.**
The option menu screen is displayed.

3 **Use △▽ to select "Direct Tune", then press ENTER.**
The direct tuner screen is displayed and "–" in the display flashes.

【TV Screen】

【Display of this unit】



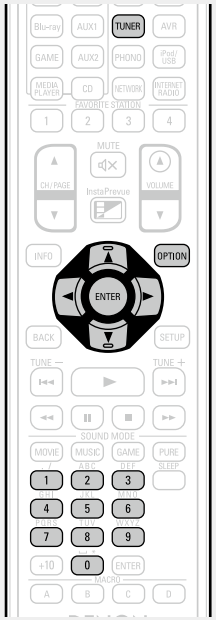

4 **Use △▽ or 0 – 9 to select a number and press ▷.**
The screen that lets you enter the frequency is displayed.

【TV Screen】

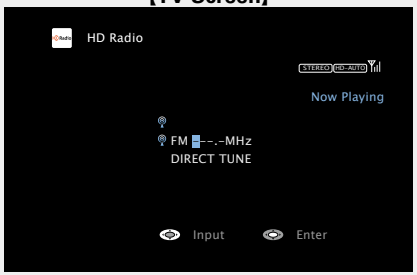

【Display of this unit】

• If ◁ is pressed, the immediately preceding input is cancelled.

5 **Repeat step 4 and enter the frequency of the radio station you want to hear.**

6 **When setting is completed, press ENTER.**
The preset frequency is tuned in.

Presetting broadcast stations

❑ Tuning in to radio stations and presetting them automatically (Auto Preset Memory)

Up to 56 stations can be preset.
If "Auto Preset Memory" is performed after performing "Preset Memory", the "Preset Memory" settings will be overwritten.

1 **Press TUNER to switch the input source to "HD Radio".**

2 **Press OPTION.**
The option menu screen is displayed.

3 **Use △▽ to select "Auto Preset Memory", then press ENTER.**

【TV Screen】

【Display of this unit】

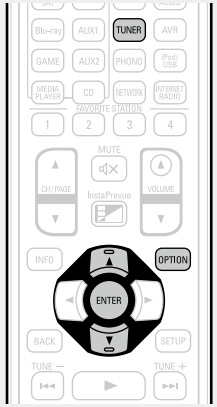

4 **Press ENTER.**
The unit starts to tune in to radio stations automatically and preset them.

【TV Screen】

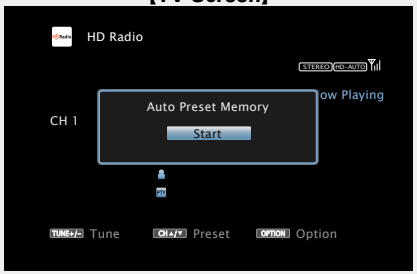

【Display of this unit】



- When presetting is completed, "Completed" is displayed for about 5 seconds and the option menu screen turns off.

See overleaf

❑ Presetting the current broadcast station (Preset Memory)

Your favorite broadcast stations can be preset so that you can tune them in easily. Up to 56 stations can be preset.

1 **Tune in the broadcast station you want to preset.**

2 **Press OPTION.**
The option menu screen is displayed.

3 **Use △▽ to select "Preset Memory", then press ENTER.**
The list of already preset channels is displayed.

【TV Screen】

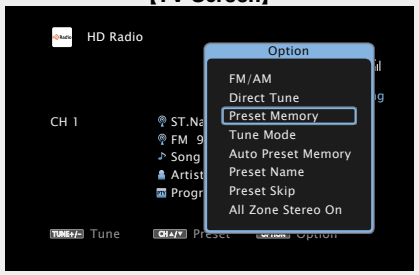

【Display of this unit】



4 **Use △▽ or 0 – 9 to select the channel you want to preset, then press ENTER.**
The current broadcast station that is preset.

• To preset other stations, repeat steps 1 to 4.

【TV Screen】

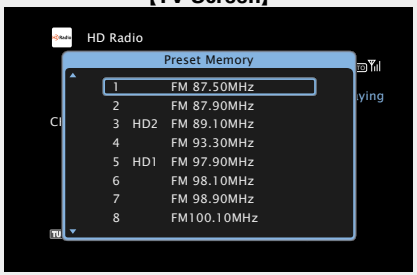

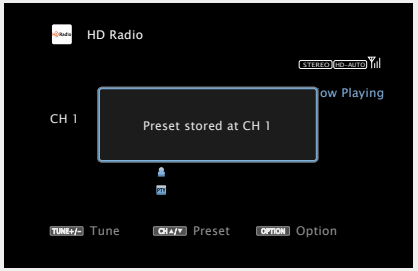

【Display of this unit】





The channel numbers of broadcast stations set as "Preset Skip" (☞page 57) are grayed out, but these stations can be preset.
When grayed out channel numbers are preset, these are highlighted and the "Preset Skip" setting changes to "On".

Channel	Default Settings
1 – 8	87.50 / 87.90 / 89.10 / 93.30 / 97.90 / 98.10 / 98.90 / 100.10 MHz
9 – 16	101.90 / 102.70 / 107.90 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 MHz
17 – 24	530 / 600 / 930 / 1000 / 1120/ 1210 / 1400 / 1710 kHz
25 – 32	90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 MHz
33 – 40	90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 MHz
41 – 48	90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 MHz
49 – 56	90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 / 90.10 MHz

Listening to preset stations

Use CH/PAGE ▲▼ or 0 – 9 to select the desired preset channel.

【Display of this unit】



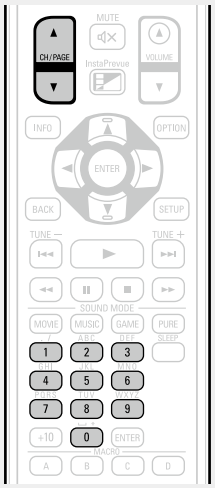

❑ Specify a name for the preset broadcast station (Preset Name)

You can set the name to the preset broadcast station or change it. Up to eight characters can be input.

1 **Press TUNER to switch the input source to "HD Radio".**

2 **Press OPTION.**
The option menu screen is displayed.

3 **Use △▽ to select "Preset Name", then press ENTER.**
The Preset Name screen is displayed.

【TV Screen】

【Display of this unit】



4 **Use ◁ ▷ to select the group of the broadcast station you want to name then press ENTER.**
The screen that lets you edit the preset name is displayed.

- Each time ◁ ▷ is pressed, the setting is changed as shown below.

1 – 8 ⟷ 9 – 16 ⟷ 17 – 24 ⟷ 25 – 32 ⟷ 33 – 40 ⟷ 41 – 48 ⟷ 49 – 56

【TV Screen】

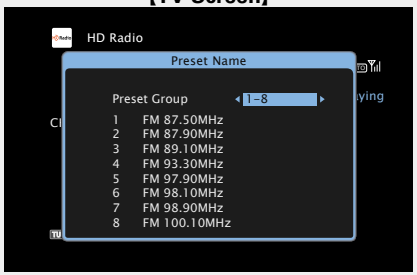

【Display of this unit】



5 **Use △▽ to select the broadcast station you want to name, then press ENTER.**

【TV Screen】

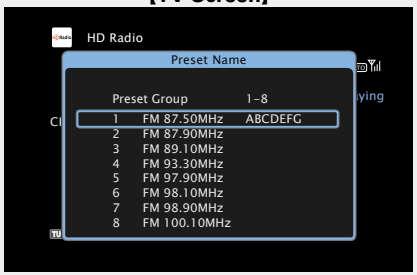

【Display of this unit】



6 **Use △▽ to select a name label, then press ENTER.**
The screen that lets you edit the preset name is displayed.

- If you select "Set Defaults", then the unit returns to displaying the frequency.

7 **Enter the characters, then press OK.**

- For character input, see page 118.

8 **Press BACK twice.**
The display returns to the playback screen.

❑ Skipping preset broadcast stations (Preset Skip)

You can set in advance, the stations you do not want to be displayed when tuning in, by groups or by stations.
The preset skip setting is useful when tuning in, because only your favorite stations are displayed.

1 **Press TUNER to switch the input source to "HD Radio".**

2 **Press OPTION.**
The option menu screen is displayed.

3 **Use △▽ to select "Preset Skip", then press ENTER.**
The Preset Skip screen is displayed.

【TV Screen】

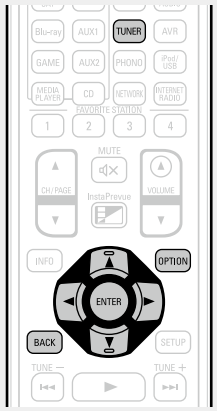

【Display of this unit】

4-1 【To set the stations you want to skip by groups】

① **Use ◁ ▷ to select the group of broadcast stations you want to skip.**
- Each time ◁ ▷ is pressed, the setting is changed as shown below.

1 – 8 ◁▷ 9 – 16 ◁▷ 17 – 24 ◁▷ 25 – 32
49 – 56 ◁▷ 41 – 48 ◁▷ 33 – 40

② **Press △ to select "Set ∗ – ∗ to Skip", then press ENTER.**
All broadcast stations in the group "∗ – ∗" you selected are not displayed.
(∗ are the selected group numbers)

③ **Press BACK.**

【TV Screen】

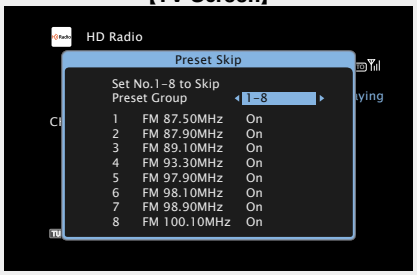

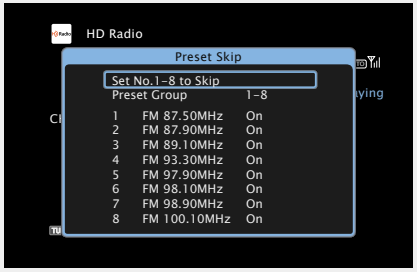

【Display of this unit】



4-2 【To set the stations you want to skip by stations】

① **Use ◁ ▷ to select the group of broadcast stations you want to skip.**
- Each time ◁ ▷ is pressed, the setting is changed as shown below.

1 – 8 ◁▷ 9 – 16 ◁▷ 17 – 24 ◁▷ 25 – 32
49 – 56 ◁▷ 41 – 48 ◁▷ 33 – 40

② **Use △▽ to select the broadcast station you want to skip.**

③ **Use ◁ ▷ to select "Skip".**
The station you selected is not displayed.

④ **Press BACK.**

【TV Screen】

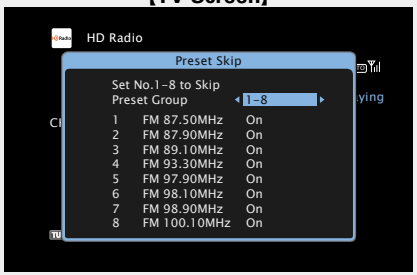

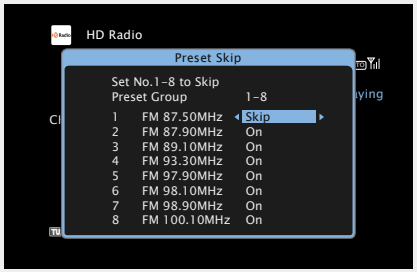

【Display of this unit】



Cancelling preset skip

1 While the Preset Skip screen is displayed, use ◁ ▷ to select a group containing a broadcast station to cancel the skip for.

2 Use △▽ to select a broadcast station to cancel the skip for.

【TV Screen】

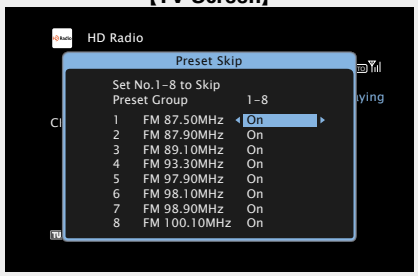

【Display of this unit】



3 Use ◁ ▷ to select "On".
The skip is cancelled.

NOTE

You cannot cancel the skip for each group.

❑ Check the HD Radio reception information

Press STATUS on the main unit while an HD Radio broadcast is being received.
The current reception information is shown on the display.

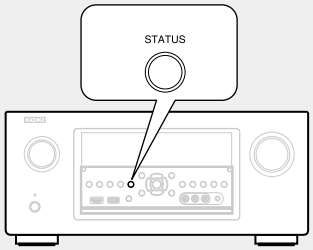

① Normal
↓
② Frequency / Signal strength
↓
③ Station name / Program and Program type
↓
④ Title name / Artist name
↓
⑤ Album name / Genre name

NOTE

If the station signal weakens while receiving a digital broadcast (while "HD" and text is displayed), the mode automatically switches to the analog reception mode (the reception frequency is displayed).
Because of this, the "HD" and text may flicker if the station signal level is weak and unstable.

❑ Tuner (HD Radio reception) operation buttons

Operation buttons	Function
TV ⏻	TV power on/standby
TV INPUT	Switch TV input
FAVORITE STATION 1 – 4	Call up favorites
FAVORITE STATION 1 – 4 (Press and hold)	Add to the favorites list
CH/PAGE ▲▼	Preset channel selection
INFO	Display of information such as the source name, volume, and sound mode name
OPTION	FM/AM switching Direct frequency tuning / Preset Memory / Switch tuning modes / Auto Preset Memory / Preset Name / Preset Skip / All Zone Stereo
△▽◁ ▷	Cursor operation
ENTER	Enter
BACK	Return
SETUP	Setup menu
TUNE +, –	Tuning (up/down) Multicast switching
0 – 9	Preset channel selection (1 – 8) / Direct frequency tuning (0 – 9)

Listening to Internet Radio

Internet Radio refers to radio broadcasts distributed over the Internet. Internet Radio stations from around the world can be received.

Important information

The broad cast station types and specifications supported by this unit for playback are as follows.

【Playable broadcast station types】

Supported file types	Internet Radio
WMA (Windows Media Audio)	✓
MP3 (MPEG-1 Audio Layer-3)	✓

【Playable broadcast station specifications】

	Sampling frequency	Bit rate	Extension
WMA (Windows Media Audio)	32/44.1/48 kHz	48 – 192 kbps	.wma
MP3 (MPEG-1 Audio Layer-3)	32/44.1/48 kHz	32 – 320 kbps	.mp3

Listening to Internet Radio

1 Prepare for playback.

① Check the network environment, then turn on this unit's power (☞page 31 "Connecting to a home network (LAN)").

② If settings are required, make the "Settings" (☞page 148).

2 Press NETWORK.

- You can also press **INTERNET RADIO** to select the input source "Internet Radio" directly.

3 Use △▽◁ ▷ to select "Internet Radio", then press ENTER.

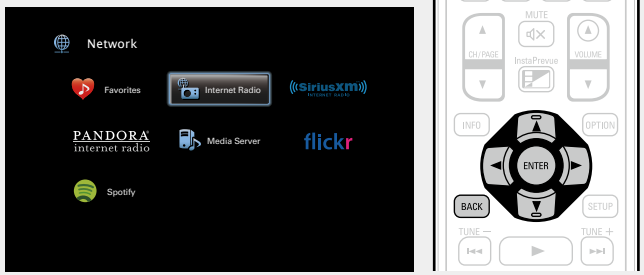

4 Use △▽ to select the item you want to play, then press ENTER or ▷.

***** (Country name)	Displays typical Internet Radio stations your country.
Search Stations	Displays all Internet Radio stations that this unit can tune in to.
Search Podcasts	Displays Internet Radio stations in the podcasts that this unit can tune in to.
Recommended Stations	Displays recommended Internet Radio stations.
radiodenon.com	Displays Internet Radio stations added to favorites in vTuner. For instructions on how to add to favorites in vTuner, see "Using vTuner to add Internet Radio stations to favorites" (☞page 61).
Recently Played	Displays recently played Internet Radio stations. Up to 20 stations stored in "Recently Played".
Search by Keyword	Displays Internet Radio stations searched by keyword. For character input, see page 118.

5 Repeat step 4 until the station list is displayed.

The station list is displayed.

6 Use △▽ to select the station, then press ENTER or ▷.

Playback starts once buffering reaches "100%".

☞ See overleaf

❑ Adjusting the sound quality (Restorer)

Make this setting at "Restorer" (☞page 124) in the menu.
You can use the "Restorer" function to restore to a state close to the audio before compression while correcting the bass feel to enjoy a richer playback experience. The default setting is "Mode 3 (Low)".

❑ Switching the screen display

Press **STATUS** on the main unit.
The display switches between track title and radio station name etc. each time the button is pressed.

❑ Going back to the previous screen

Press ◁ or **BACK**.

❑ Changing the screen display duration

Make this setting at "Now Playing" (☞page 133) in the menu. The default setting is "Always On".
When "Auto Off" is set, the on-screen display is turned off 30 seconds after an operation.
Press △▽◁ ▷ while the display is off to return to the original screen.

- There are many Internet Radio stations on the Internet, and the quality of the programs they broadcast as well as the bit rate of the tracks varies widely.
  Generally, the higher the bit rate, the higher the sound quality, but depending on the communication lines and server traffic, the music or audio signals being streamed may be interrupted. Inversely, lower bit rates mean a lower sound quality but less tendency for the sound to be interrupted.
- "Radio station server full" or "Connection down" is displayed if the station is busy or not broadcasting.
- On this unit, folder and file names can be displayed as titles. Any characters that cannot be displayed are replaced with "." (period).

NOTE

The radio station database service may be suspended without notice.

Operations available through the OPTION button

Press the **OPTION** button to display a menu of functions that can be used on the TV screen. Select the function you want to use from this menu. You can easily find and use the desired function.

- ❑ **Searching content with keywords (Text Search)** (☞page 76)
- ❑ **Add to favorites from the Option menu (Save to Favorites)** (☞page 78)
- ❑ **Playing back music and a favorite picture at the same time (Slideshow)** (☞page 79)
- ❑ **Adjusting the picture quality for your viewing environment (Picture Mode)** (☞page 80)
- ❑ **All Zone Stereo function** (☞page 80)

❑ Playing the last played Internet Radio station

This unit memorizes the last played Internet Radio station. If you press **INTERNET RADIO** to switch to the Internet Radio function from another input source, the last Internet Radio station you listened to is played.

Press INTERNET RADIO.
The source switches to "Internet Radio" and the last played radio station plays.

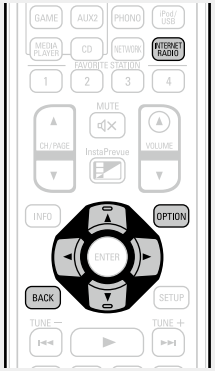

❑ Using vTuner to add Internet Radio stations to favorites

There are many Internet Radio stations in the world, and this unit can tune into these stations. But finding the radio station you want to hear may be difficult, because there are too many stations. If this is the case, then please use vTuner, an Internet Radio station search website specifically designed for this unit. You can use your PC to search Internet Radio stations and add them as your favorites. This unit can play radio stations added to vTuner.

1 Check the MAC address of this unit (☞page 147).
The screen that lets you edit the preset name is displayed.
MAC address:

- The MAC address is necessary when you create an account for vTuner.

2 Use your PC to access the vTuner website (http://www.radiodenon.com).
The vTuner login screen is displayed.

3 Enter the MAC address of this unit, then click "Go".
The account creation screen is displayed.

4 Enter your E-mail address and a password of your choice.
The account is registered and you can now log in.

5 Enter your account information (E-mail address and password) and log in.
The top menu of vTuner is displayed.

6 Select the search criteria (genre, region, language, etc.) of your choice.
The list of radio stations matching the criteria is displayed.

- You can also enter a keyword to search for a station you want to hear.

7 Select the radio station of your choice from the list, and then click the Add to Favorites icon.
The screen that lets you create a favorite group is displayed.

8 Enter the name of the favorite group, then click "Go".
A new favorite group that includes the selected radio station is created.

- Internet Radio stations added to favorites in vTuner can be played from "radiodenon.com" (☞page 59) with this unit.

❑ Internet Radio operation buttons

Operation buttons	Function
TV ⏻	TV power on/standby
TV INPUT	Switch TV input
INTERNET RADIO	Last played Internet Radio station
FAVORITE STATION 1 – 4	Call up favorites
FAVORITE STATION 1 – 4 (Press and hold)	Add to the favorites list
CH/PAGE ▲▼	Page search
INFO	Display of information such as the source name, volume, and sound mode name
OPTION	Text Search / Save to Favorites / Slideshow / Picture Mode / All Zone Stereo
△▽◁ ▷	Cursor operation
ENTER (Press and release)	Enter
ENTER (Press and hold)	Stop
BACK	Return
SETUP	Setup menu
■	Stop

Playing back files stored on a PC and NAS

This unit can play back music files and playlists (m3u, wpl) stored on a PC and on Network Attached Storage (NAS) that supports DLNA.

Important information

- The network audio playback function of this unit connects to the server using technologies shown below.
  - Windows Media Player Network Sharing Service
  - Windows Media DRM10
- File types that this unit can play back and specifications are shown below.

[Supported file types]

Supported file types	Media Server *1
WMA (Windows Media Audio)	✓
MP3 (MPEG-1 Audio Layer-3)	✓
WAV	✓
MPEG-4 AAC	✓*2
FLAC (Free Lossless Audio Codec)	✓
JPEG	✓
ALAC (Apple Lossless Audio Codec)	✓

A server or server software compatible with distribution in the corresponding formats is required to play music files via a network.

*1 Media Server
- This unit is compatible with MP3 ID3-Tag (Ver. 2) standard.
- This unit can show the artwork that was embedded by using MP3 ID3-Tag Ver. 2.3 or 2.4.
- This unit is compatible with WMA META tags.
- If the image size (pixels) of an album artwork exceeds 500 × 500 (WMA/MP3/WAV/FLAC) or 349 × 349 (MPEG-4 AAC), then music may not be played back properly.
- WAV format Quantization bit length: 16 or 24 bits.
- FLAC format Quantization bit length: 16 or 24 bits.

*2 Only files that are not protected by copyright can be played on this unit.
Content downloaded from pay sites on the Internet are copyright protected. Also, files encoded in WMA format when ripped from a CD, etc. on a computer may be copyright protected, depending on the computer's settings.

NOTE

File types that this unit does not support are not displayed.

[Specifications of supported files]

	Sampling frequency	Bit rate	Extension
WMA (Windows Media Audio)	32/44.1/48 kHz	48 – 192 kbps	.wma
MP3 (MPEG-1 Audio Layer-3)	32/44.1/48 kHz	32 – 320 kbps	.mp3
WAV	32/44.1/48/88.2/96/ 176.4/192 kHz	–	.wav
MPEG-4 AAC	32/44.1/48 kHz	16 – 320 kbps	.aac/ .m4a/ .mp4
FLAC (Free Lossless Audio Codec)	32/44.1/48/88.2/96/ 176.4/192 kHz	–	.flac
ALAC (Apple Lossless Audio Codec)*	32/44.1/48/88.2/96 kHz	–	.m4a

* Copyright [2012] [D&M Holdings. Inc.]
Licensed under the Apache License, Version 2.0 (the "License"); you may not use this file except in compliance with the License. You may obtain a copy of the License at http://www.apache.org/licenses/LICENSE-2.0

Applying media sharing settings

Here, we apply the settings to share music files stored on a PC and NAS on the network.

❑ Sharing media stored in PC

If you are using a Media Server, be sure to apply this setting first.

When using Windows Media Player 12 (Windows 7)

NOTE

Perform this procedure after changing the control panel display to "Category".

1. **In the PC's "Control Panel", select "Network and Internet" - "Choose homegroup and sharing options".**
2. **Select the "Stream my pictures, music, and videos to all devices on my home network" check box and select "Choose media streaming options".**
3. **Select "Allowed" in the drop-down list for "AVR-4520CI".**
4. **Select "Allowed" in the drop-down list for "Media programs on this PC and remote connections...".**
5. **Click "OK" to finish.**

When using Windows Media Player 11

1. **Start up Windows Media Player 11 on the PC.**
2. **Select "Media Sharing" in the "Library".**
3. **Click the "Share my media" check box, select "AVR-4520CI", and then click "Allow".**
4. **As you did in step 3, select the icon of the device (other PCs and mobile devices) you want to use as a media controller, and then click "Allow".**
5. **Click "OK" to finish.**

Sharing media stored in NAS

Change settings on the NAS to allow this unit and other devices (PCs and mobile devices) used as media controllers to access the NAS. For details, see the owner's manual that came with the NAS.

Playing back files stored on a PC and NAS

Use this procedure to play music files, image files or playlists.

1 **Prepare for playback.**

① Check the network environment, then turn on this unit's power (☞page 31 "Connecting to a home network (LAN)").

② If settings are required, make the "Settings" (☞page 148).

③ Prepare the computer (☞Computer's operating instructions).

2 **Press NETWORK.**

3 **Use △▽◁ ▷ to select "Media Server", then press ENTER.**

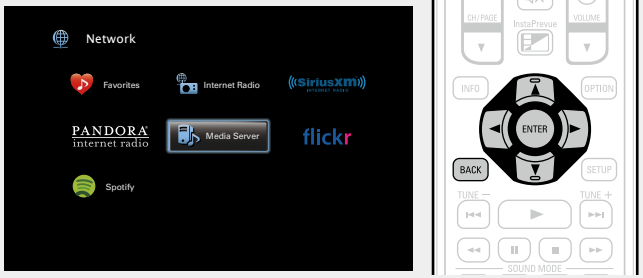

4 **Use △▽ to select the server including the file to be played, then press ENTER or ▷.**

5 **Use △▽ to select the search item or folder, then press ENTER or ▷.**

6 **Repeat step 4 until the file is displayed.**

7 **Use △▽ to select the file, then press ENTER or ▷.**

Playback starts once buffering reaches "100%".

❑ Adjusting the sound quality (Restorer)

Make this setting at "Restorer" (☞page 124) in the menu.

You can use the "Restorer" function to restore to a state close to the audio before compression while correcting the bass feel to enjoy a richer playback experience. The default setting is "Mode 3 (Low)".

❑ Switching the screen display

Press **STATUS** on the main unit.

The display switches between track title, artist name, and album title each time the button is pressed.

❑ Going back to the previous screen

Press ◁ or **BACK**.

❑ Changing the screen display duration

Make this setting at "Now Playing" (☞page 133) in the menu. The default setting is "Always On".

When "Auto Off" is set, the on-screen display is turned off 30 seconds after an operation.

Press △▽◁ ▷ while the display is off to return to the original screen.

- When a WMA (Windows Media Audio), MP3 or MPEG-4 AAC file includes album art data, the album art can be displayed while the music files are playing.
- If you use Ver.11 or later of Windows Media Player, the album art for WMA files can be displayed.
- WMA Lossless files can be played when using a server supporting transcoding, such as Windows Media Player Ver. 11 or later.

NOTE

- Depending on the size of the still picture (JPEG) file, some time may be required for the file to be displayed.
- The order in which the tracks/files are displayed depends on the server specifications. If the tracks/files are not displayed in alphabetical order due to the server specifications, searching by the first letter may not work properly.

Operations available through the OPTION button

Press the **OPTION** button to display a menu of functions that can be used on the TV screen. Select the function you want to use from this menu. You can easily find and use the desired function.

- ❑ **Searching content with keywords (Text Search)** (☞page 76)
- ❑ **Performing repeat playback (Repeat)** (☞page 77)
- ❑ **Performing random playback (Random)** (☞page 77)
- ❑ **Add to favorites from the Option menu (Save to Favorites)** (☞page 78)
- ❑ **Playing back music and a favorite picture at the same time (Slideshow)** (☞page 79)
- ❑ **Playing back still images in sequential order (Slideshow Interval)** (☞page 79)
- ❑ **Adjusting the picture quality for your viewing environment (Picture Mode)** (☞page 80)
- ❑ **All Zone Stereo function** (☞page 80)

❑ Media Server operation buttons

Operation buttons	Function
TV ⏻	TV power on/standby
TV INPUT	Switch TV input
FAVORITE STATION 1 – 4	Add/call up favorites
FAVORITE STATION 1 – 4 (Press and hold)	Add to the favorites list
CH/PAGE ▲▼	Page search
INFO	Display of information such as the source name, volume, and sound mode name
OPTION	Text Search / Repeat playback / Random playback / Save to Favorites / Slideshow / Slideshow Interval / Picture Mode / All Zone Stereo
△▽◁▷	Cursor operation / Auto search (cue, △▽)
ENTER (Press and release)	Enter
ENTER (Press and hold)	Stop
BACK	Return
SETUP	Setup menu
I◄◄ ►►I	Auto search (cue)
►	Playback / Pause
II	Pause
■	Stop

Using online services

This unit supports playback of the online services shown below.

❑ About Flickr (☞page 67)

Flickr is an online photograph sharing service that started in 2004. You can use the this unit to view photographs that have been made public by Flickr users. You do not need an account to use Flickr. To view photographs that you recorded yourself, you need an account in order to upload these photographs to the Flickr server. For details, see the Flickr homepage.
http://www.flickr.com/

❑ About Pandora® (☞page 69)

Pandora is an automated music recommendation and Internet Radio service created by the Music Genome Project.
To listen to Pandora you will need a free Pandora account. If you do not have a Pandora account, you can create one at www.pandora.com or from the Pandora smartphone application.
It is necessary to associate this machine with a Pandora account by visiting
http://www.pandora.com/denon from your PC.

❑ About SiriusXM (☞page 72)

Enjoy anywhere access to the unparalleled content of SiriusXM.
Whether on your computer, smartphone, tablet, Lynx Portable Enjoy anywhere access to the unparalleled content of SiriusXM.
Whether on your computer, smartphone, tablet, Lynx Portable Radio, or compatible Internet-connected device, you don't need to be in your vehicle to enjoy SiriusXM.
For details, see the SiriusXM homepage.
http://www.siriusxm.com

❑ About Spotify (☞page 74)

Introduce your DENON to a whole new world of music. With Spotify, you can enjoy instant access to millions of songs.
A Spotify Premium subscription is required.
For details, see the Spotify homepage.
http://www.spotify.com

Viewing photographs on the Flickr site

You can view photographs shared by particular users, or all of the photographs shared on Flickr.

❑ Viewing photographs shared by particular users

1 Prepare for playback.

① Check the network environment, then turn on this unit's power (☞page 31 "Connecting to a home network (LAN)").

② If settings are required, make the "Settings" (☞page 148).

2 Press NETWORK.

3 Use △▽◁ ▷ to select "Flickr", then press ENTER.

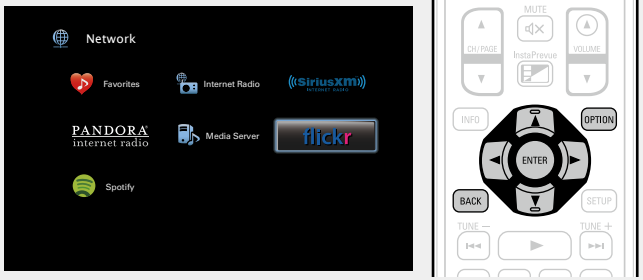

4 Use △▽ to select "Add Flickr Contact", then press ENTER or ▷.

5 In "Contact", add the screen name (user name you want to view) you want to add.

• For character input, see page 118.

6 After inputting the "Contact", press OK.

The screen name is added to "Contact", and the screen name you entered in Step 5 is displayed on the top screen of Flickr.

• If you enter a screen name that does not exist, "The Flickr Contact you entered could not be found" is displayed. Check and enter the correct screen name.

7 Use △▽ to select the folder, and then press ENTER or ▷.

Favorites	Displays the favorite photographs of the specified user.
Photostream	Displays a list of shared photographs.
PhotoSets	Displays the folder (photograph album) list.
Contacts	Displays the screen name used by the specified user in Contacts.
Remove this Contact	Deletes a user from Flickr Contact.
Add this Contact	Adds a user from Flickr Contact.

8 Use △▽ to select the file, and then press ENTER or ▷.

The selected file is displayed.

❑ Going back to the previous screen

Press ◁ or **BACK**.

Operations available through the OPTION button

Press the **OPTION** button to display a menu of functions that can be used on the TV screen. Select the function you want to use from this menu. You can easily find and use the desired function.

❑ Playing back still images in sequential order (Slideshow Interval) (☞page 79)

❑ Viewing all photographs on Flickr

1 Use △▽ to select “All Content”, then press **ENTER** or ▷.

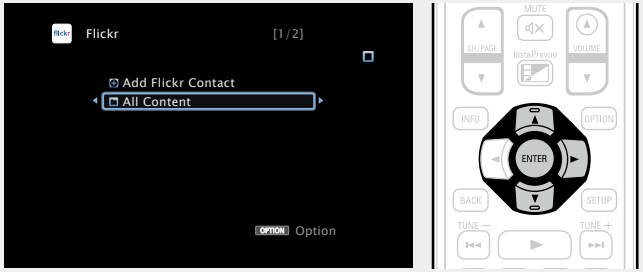

2 Use △▽ to select the folder, and then press **ENTER** or ▷.

Interestingness	Displays photographs that are popular from the number of user comments or number of times they are added as favorites.
Recent	Displays the most recently added photographs.
Search by text	Search for photographs by keyword.

3 Use △▽ to select the file, and then press **ENTER** or ▷.

The selected file is displayed.

NOTE

Depending on the file format, some photographs cannot be viewed.

❑ Flickr operation buttons

Operation buttons	Function
TV ⏻	TV power on/standby
TV INPUT	Switch TV input
CH/PAGE ▲▼	Page search
INFO	Display of information such as the source name, volume, and sound mode name
OPTION	Slideshow Interval
△▽◁ ▷	Cursor operation / Auto search (cue, △▽)
ENTER (Press and release)	Enter
ENTER (Press and hold)	Stop
BACK	Return
SETUP	Setup menu
■	Stop

Listening to Pandora®

1 Prepare for playback.

① Check the network environment, then turn on this unit's power (☞page 31 "Connecting to a home network (LAN)").

② If settings are required, make the "Settings" (☞page 148).

③ Complete step 4 and obtain a Pandora account.

- If you already have a Pandora account, you do not need to obtain a new account. Use your existing Pandora account.

2 Press NETWORK.

3 Use △▽◁▷ to select "Pandora", then press ENTER.

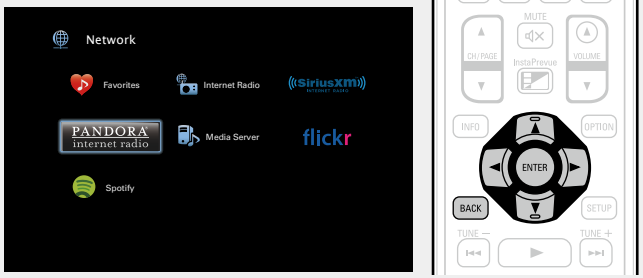

4 If you have a Pandora account, use △▽ to select "I have a Pandora account", then press ENTER or ▷.

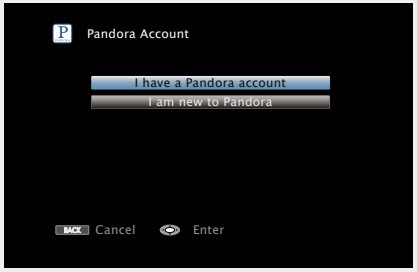

- If you do not have a Pandora account, press ▽ to select "I am new to Pandora". The URL of Pandora and activation code are displayed. Access the Pandora web page from your PC and register the displayed activation code and account information. Then press **ENTER**.

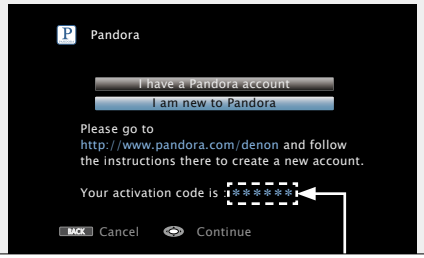

This is an identification code required to register your purchased product to the Pandora service.
This code is used to obtain your account.

5 Input "Email address" and "Password".

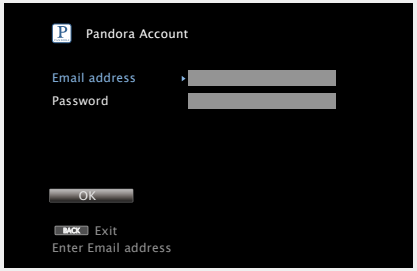

- For character input, see page 118.

6 After inputting the "Email address" and "Password", select "OK", then press ENTER.

If the "Email address" and "Password" match, the top menu for Pandora is displayed.

NOTE

Press **BACK** to cancel the input. When "Cancel input?" is displayed, select "Yes", then press **ENTER**.

❑ Creating a new station

You can create up to 100 radio stations.

1 **Use △▽ to select “New Station”, then press ENTER or ▷.**

2 **Input a track or artist name, then press OK.**

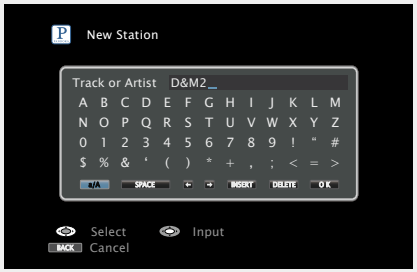

• For character input, see page 118.

3 **Use △▽ to select “Search by Artist” or “Search by Track”, then press ENTER.**

You can search and display a list by track or artist.

4 **Press △▽, select a file (e.g. D&M2) from the list, and press ENTER or ▷.**

“Radio” is added to the end of a filename, and your new station is created (e.g. D&M2 Radio).

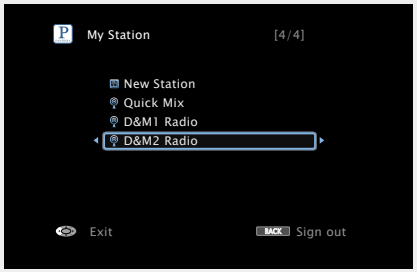

• Your new station will play music with similar qualities to the artist or track you entered.

❑ Listening to an existing station

Use △▽ and select the radio station (“D&M2 Radio”) that you want to listen to, and press ENTER or ▷.

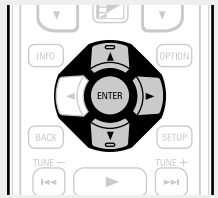

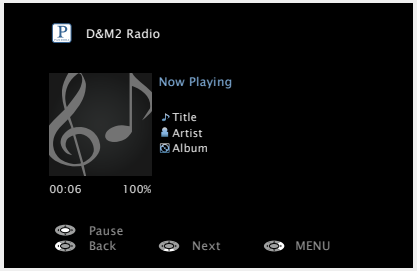

Listening to created radio stations at random

Use △▽ to select “Quick Mix”, then press ENTER or ▷.

Created radio stations are selected at random, and tracks are streamed.

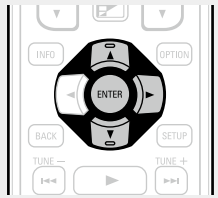

❑ Giving Feedback and Managing Stations

You can personalize your stations by providing feedback.

Press ▷ while a track is playing.

The Pandora menu screen is displayed.

I like this track	• Press when you like the track that is being played. • It will return to the Play Screen. And (Thumbs up) icon is displayed. (The icon is not displayed on the next track.)
I don't like this track	• Press when you don't like the track that is being played. • It will return to the Play Screen. And (Thumbs down) icon is displayed. (The icon is not displayed on the next track.)
Why is this track playing?	• Displays the reason why Pandora selected this track.
Create station	• Creates a Station for the Track or Artist being played.
Bookmark this artist	• Bookmarks the artist currently being played. • You can check on a computer or iPhone etc. • For details, see the Pandora web page.
Bookmark this track	• Bookmarks the track currently being played. • You can check on a computer or iPhone etc. • For details, see the Pandora web page.
I'm tired of this track	• Press when you don't like the track that is being played. • The track will not be played for 1 month.
Delete this station	• Press when you want to delete the station that is being played.

NOTE

- You can Skip up to 6 Tracks that are being played back within 1 hour.
- You can create up to 100 Stations (radio stations).

❑ Sign out

Disassociate this unit from your Pandora account.

1 While the Pandora top menu is displayed, press BACK.

2 When the popup menu appears, use ◁ ▷ to select "Yes", then press ENTER.

❑ Pandora operation buttons

Operation buttons	Function
CH/PAGE ▲▼	Page search
INFO	Display of information such as the source name, volume, and sound mode name
△▽◁▷	Cursor operation / Auto search (cue, ▽)
ENTER (Press and release)	Enter
ENTER (Press and hold)	Stop
BACK	Return
SETUP	Setup menu
▶	Playback
▶▶I	Skips the current track, subject to skip limit
II	Pause
■	Stop

Listening to SiriusXM Internet Radio

Over 120 channels of the SiriusXM programming you love, including commercial-free music plus sports, talk, news and entertainment. Listen anywhere on your computer or smartphone.

1 Prepare for playback.

① Check the network environment, then turn on this unit's power (☞page 31 "Connecting to a home network (LAN)").

② If settings are required, make the "Settings" (☞page 148).

③ Access the following website from your PC and obtain a SiriusXM account.
http://www.siriusxm.com

- If you already have a SiriusXM account, you do not need to obtain a new account. Select "Sign in" in step 4, and enter your existing SiriusXM account.

2 Press NETWORK.

3 Use △▽◁ ▷ to select "SiriusXM", then press ENTER.

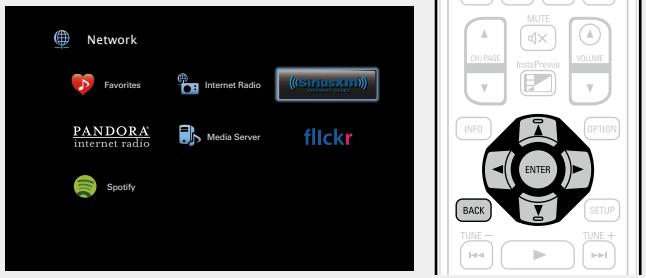

4 Select "Sign in", then press ENTER.

5 Input the "Username" and "Password".

- For character input, see page 118.

6 Select the "Sign in", and then press ENTER.

The top menu of SiriusXM is displayed.

7 Use △▽ to select the genre, then press ENTER or ▷.

8 Use △▽ to select the file, and then press ENTER or ▷.

The selected file is displayed.

❑ Going back to the previous screen

Press ◁ or **BACK**.

❑ Sign out

Disassociate this unit from your SiriusXM account.

1 While the SiriusXM top menu is displayed, press **BACK**.

2 When the popup menu appears, use ◁ ▷ to select "Yes", then press **ENTER**.

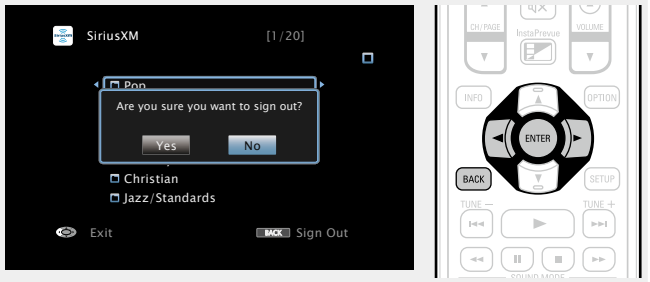

❑ SiriusXM operation buttons

Operation buttons	Function
CH/PAGE ▲▼	Page search
INFO	Display of information such as the source name, volume, and sound mode name
△▽◁▷	Cursor operation
ENTER (Press and release)	Enter
ENTER (Press and hold)	Stop
BACK	Return
SETUP	Setup menu
■	Stop

Listening to Spotify

Introduce your DENON to a whole new world of music. With Spotify, you can enjoy instant access to millions of songs.
A Spotify Premium subscription is required.
For details, see the Spotify homepage.
http://www.spotify.com

1 Prepare for playback.

① Check the network environment, then turn on this unit's power (☞page 31 "Connecting to a home network (LAN)").
② If settings are required, make the "Settings" (☞page 148).
③ Complete step 5 and obtain a Spotify account.
- If you already have a Spotify account, you do not need to obtain a new account. Use your existing Spotify account.

2 Press NETWORK.

3 Use △▽◁ ▷ to select "Spotify", then press ENTER.

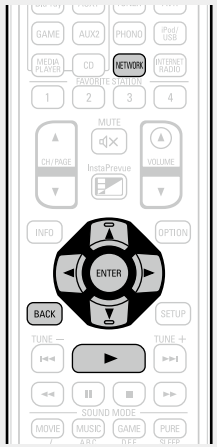

4 If you have a Spotify account, then press ENTER.

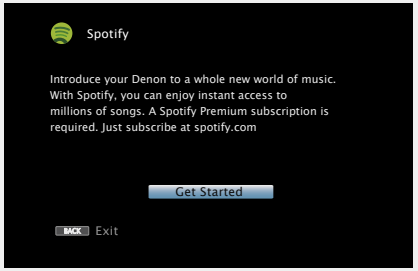

5 Use △▽ ▷ to enter your username and password.

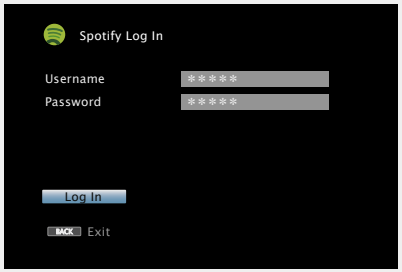

- The password should be no longer than 99 characters. For character input, see page 118.
- The types of characters that can be input are as shown below.

[Upper case characters/Numbers/Symbols]
ABCDEFGHIJKLMNOPQRSTUVWXYZ
ÄÀÁÂÃÅÆÇÐÈÉÊËÌÍÎÏÑÖÒÓÔÕØÜÙÚÛÝÞ
0123456789
! " # $ % & ' ( ) * + , ; < = >
[Lower case characters/Numbers/Symbols]
abcdefghijklmnopqrstuvwxyz
äàáâãåæçðèéêëìíîïñöòóôõøüùúûýþÿß
0123456789
. @ - _ / : ~ ? [\ ] ^ ' { | }

- When you use △▽ while you type in, you can change uppercase characters to lowercase and vice versa.
- Press **BACK** to cancel the input. When "Cancel input?" is displayed, select "Yes", then press **ENTER**.

6 After inputting the username and password, select "Log In", then press ENTER.

If the username and password match, the top menu for Spotify is displayed.

7 Use △▽ to select menu and then press ENTER.

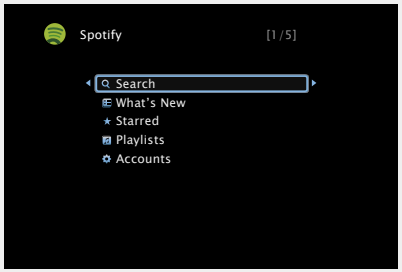

Search	Searches for tracks, artists and albums by entering keywords.
What's New	Displays the list of the latest albums.
Starred	Displays the list of the starred tracks.
Playlists	Displays the playlists for Spotify.
Accounts	Manages accounts (Log out, Add new user, Switch to user).

8 Use △▽ to select a station, and press ENTER or ▶ to start playback.

Playback starts and the following screen appears.

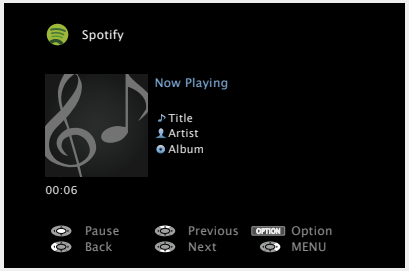

☞ See overleaf

9 Menu items on playback screen.

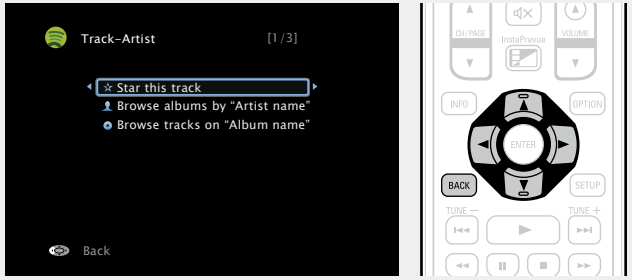

Star this track	Adds a star to the selected track.
Browse albums by "Artist name"	Displays the list of albums by the artist of the track that is being played back.
Browse tracks on "Album name"	Displays the list of tracks on the album that is being played back.

❑ Adjusting the sound quality (Restorer)

Make this setting at "Restorer" (☞page 124) in the menu.
You can use the "Restorer" function to restore to a state close to the audio before compression while correcting the bass feel to enjoy a richer playback experience. The default setting is "Mode 3 (Low)".

❑ Switching the screen display

Press **STATUS** on the main unit.
The display switches between track title, artist name, and album title each time the button is pressed.

❑ Going back to the previous screen

Press ◁ or **BACK**.

❑ Changing the screen display duration

Make this setting at "Now Playing" (☞page 133) in the menu.
The default setting is "Always On".
When "Auto Off" is set, the on-screen display is turned off 30 seconds after an operation.
Press △▽◁ ▷ while the display is off to return to the original screen.

Operations available through the OPTION button

Press the **OPTION** button to display a menu of functions that can be used on the TV screen. Select the function you want to use from this menu. You can easily find and use the desired function.

❑ **Performing repeat playback (Repeat)** (☞page 77)

❑ **Performing random playback (Random)** (☞page 77)

❑ **All Zone Stereo function** (☞page 80)

❑ Spotify operation buttons

Operation buttons	Function
CH/PAGE ▲▼	Page search
INFO	Display of information such as the source name, volume, and sound mode name
OPTION	Repeat playback / Random playback / All Zone Stereo
△▽◁ ▷	Cursor operation / Auto search (cue, △▽)
ENTER (Press and release)	Enter
ENTER (Press and hold)	Stop
BACK	Return
SETUP	Setup menu
I◀◀ ▶▶I	Auto search (cue)
▶	Playback
II	Pause
■	Stop

Convenient functions

Here, we explain how to use convenient functions for NETWORK sources and USB sources. The source names under the titles of each function's description are sources that allow use of these functions.

- ❑ **Setting the USB port to use (USB Select)** (☞page 76)
- ❑ **Searching content with keywords (Text Search)** (☞page 76)
- ❑ **Performing repeat playback (Repeat)** (☞page 77)
- ❑ **Performing random playback (Random)** (☞page 77)
- ❑ **Favorites function** (☞page 78)
- ❑ **Playing back music and a favorite picture at the same time (Slideshow)** (☞page 79)
- ❑ **Playing back still images in sequential order (Slideshow Interval)** (☞page 79)
- ❑ **Adjusting the picture quality for your viewing environment (Picture Mode)** (☞page 80)
- ❑ **All Zone Stereo function** (☞page 80)

Setting the USB port to use (USB Select)

iPod | USB

1 **Press OPTION.**
The option menu screen is displayed.

2 **Use △▽ to select "USB Select", then press ENTER.**

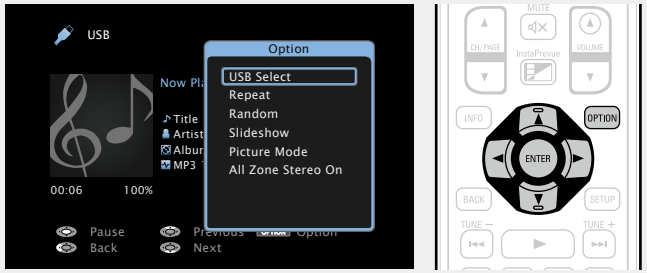

3 **Use ◁ ▷ to select the USB port to use.**

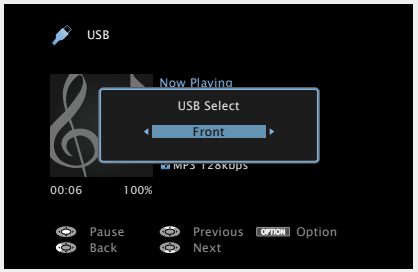

• Each time ◁ ▷ is pressed, the setting is changed as shown below.

Front ⟷ Rear

Front	Uses the USB port on the front panel.
Rear	Uses the USB port on the rear panel.

4 **Press ENTER.**
The display returns to the playback screen.

Searching content with keywords (Text Search)

USB | Internet Radio | Media Server

1 **While content is playing, press OPTION.**
The option menu screen is displayed.

2 **Use △▽ to select "Text Search", then press ENTER.**
The keyboard input screen is displayed.

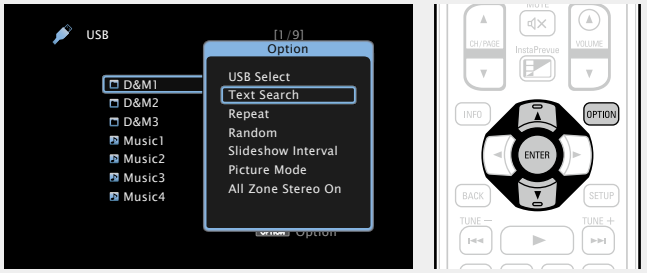

3 **Enter the first character of the Internet Radio station or file you want to search for, and then press OK.**

• For character input, see page 118.

"Text Search" searches for Internet Radio stations or files that start with the entered first character from the displayed list.

NOTE

"Text Search" may not work for some lists.

❑ Playing back a search result content

Use △▽ to select the content you want to play, and then press ENTER or ▷.
Playback starts.

Performing repeat playback (Repeat)

USB | Media Server

1 **While content is playing, press OPTION.**
The option menu screen is displayed.

2 **Use △▽ to select "Repeat", then press ENTER.**

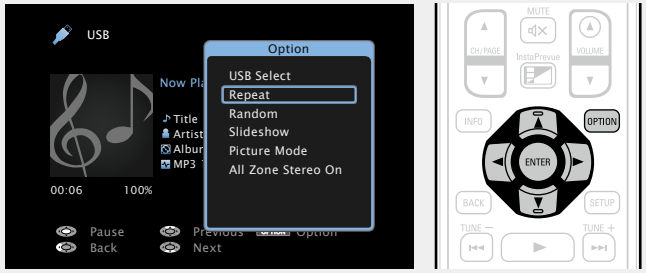

3 **Use ◁ ▷ to select repeat playback mode.**

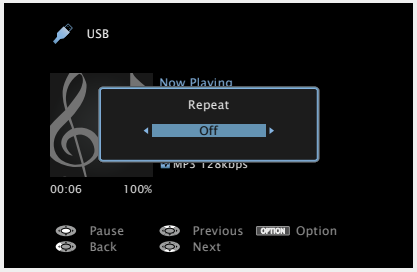

• Each time ◁ ▷ is pressed, the setting is changed as shown below.

Off ⟷ One ⟷ All

Off	Repeat playback mode is canceled.
One	A file being played is played repeatedly.
All	All files in the folder currently being played are played repeatedly.

4 **Press ENTER.**
The display returns to the playback screen.

Performing random playback (Random)

USB | Media Server

1 **While content is playing, press OPTION.**
The option menu screen is displayed.

2 **Use △▽ to select "Random", then press ENTER.**

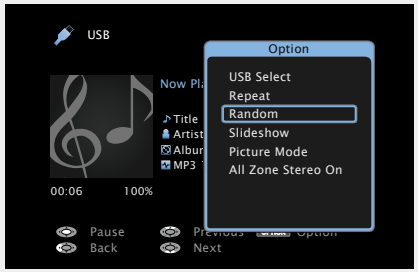

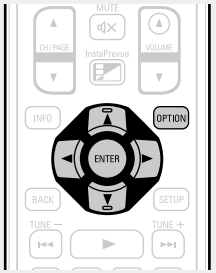

3 **Use ◁ ▷ to select random playback mode.**

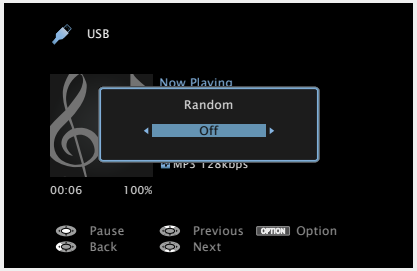

• Each time ◁ ▷ is pressed, the setting is changed as shown below.

Off ⟷ On

Off	Disable random playback.
On	Enable random playback.

4 **Press ENTER.**
The display returns to the playback screen.

The random playback randomly selects a track to play back from all tracks every time a track ends. Therefore, the same track may be played back consecutively.

Favorites function

There are two ways to add content to favorites:
① Add to favorites from the Option menu
② Add to the **FAVORITE STATION** button

❑ Add to favorites from the Option menu (Save to Favorites)

Internet Radio **Media Server**

You can add up to 100 items as favorites for all sources (Internet Radio and Media Server).

1 **While content is playing, press OPTION.**
The option menu screen is displayed.

2 **Use △▽ to select "Save to Favorites", then press ENTER.**
"Favorite added" is displayed, and the current content is added to favorites.

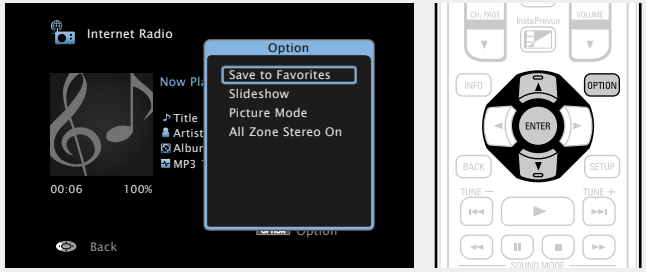

- The display returns to the playback screen when the procedure is completed.

Playing back content added in "Save to Favorites"

1 **Press NETWORK.**

2 **Use △▽◁▷ to select "Favorites", then press ENTER.**

3 **Use △▽ to select the content you want to play, and then press ENTER or ▷.**
Playback starts.

❑ Adding to the FAVORITE STATION button

You can add up to four types of content.

NOTE

- Please note that if you add new content to a number that already contains content, the older content is deleted.
- The following operations update the database on the Media Server, which may make the added music files unplayable.
  - When you quit the Media Server and then restart it.
  - When music files are deleted or added on the Media Server.
- When using an ESCIENT server, place "ESCIENT" before the server name.

While content is playing, press and hold one of the FAVORITE STATION 1 – 4 buttons for more than 3 seconds.
The content is added to the button you pressed.

Contents that can be added to the **FAVORITE STATION** button differ depending on the input source.

Input source	Contents that can be added
FM	Radio station
Internet Radio	Top list of content / Internet Radio station
Media Server	Top list of content / Track
Flickr	Top list of content
Pandora	Top list of content
SiriusXM	Top list of content
Spotify	Top list of content
Favorites	Top list of content

Playing back content added to the FAVORITE STATION button

You can easily call up content by pressing the **FAVORITE STATION** button.

Press one of the FAVORITE STATION 1 – 4 buttons that you added content to.
Playback starts.

- When the **FAVORITE STATION 1 – 4** buttons is pressed, the AVR-operation mode starts automatically.
- Internet Radio stations are already registered to the **FAVORITE STATION 1 – 4** buttons. However, you may not be able to play the stations due to restrictions imposed by the radio stations.

See overleaf

❑ Deleting content added to favorites (Remove from Favorites)

1 **Press NETWORK.**

2 **Use △▽◁▷ to select "Favorites", then press ENTER.**

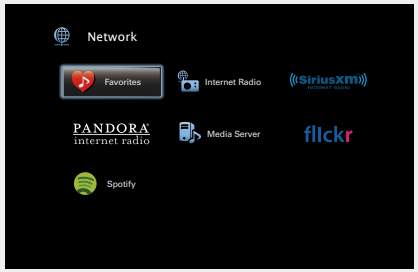

3 **Use △▽ to select the content you want to delete from favorites, then press OPTION.**
The option menu screen is displayed.

4 **Use △▽ to select "Remove from Favorites", then press ENTER.**
"Favorite removed" is displayed, and the selected content is deleted from favorites.

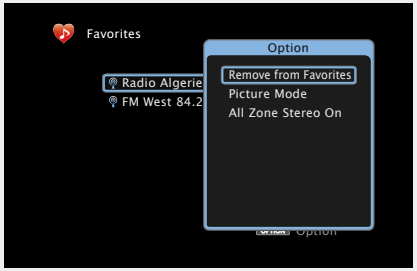

- The display returns to the original screen when the procedure is completed.

Playing back music and a favorite picture at the same time (Slideshow)

USB | Internet Radio | Media Server

1 **Play back a still picture.**
- Playing back still pictures stored on USB memory devices (☞page 48).
- Playing back still pictures stored on Flickr (☞page 67).

2 **Play back a music file or Internet Radio station (☞page 59, 64).**

3 **Press OPTION.**
The option menu screen is displayed.

4 **Use △▽ to select "Slideshow", then press ENTER.**
The option menu disappears, and the picture you were viewing is shown on the screen.

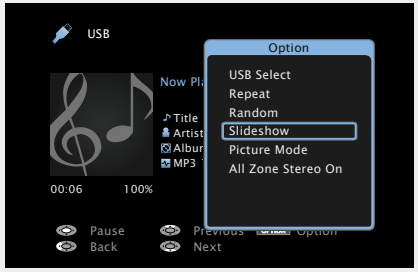

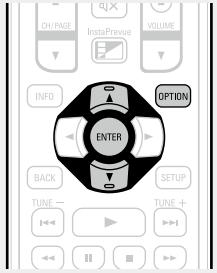

Playing back still images in sequential order (Slideshow Interval)

You can play back still image (JPEG) files stored on a USB memory device or Media Server and pictures on Flickr website as a slide show. The display time can also be set.

USB | Media Server | Flickr

1 **Play back an image and press OPTION.**
The option menu screen is displayed.

2 **Use △▽ to select "Slideshow Interval", then press ENTER.**

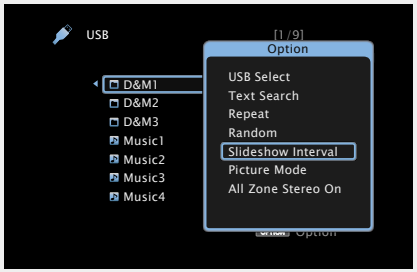

3 **Use ◁ ▷ to set the display time.**

- Each time ◁ ▷ is pressed, the setting is changed as shown below.

Off ⟷ 5s ⟷ 10s ⟷ 15s
60s ⟷ 30s ⟷ 20s

Off	The slide show is not played back.
5s – 60s	Set the time for displaying a single image when playing back images in the slide show.

4 **Press ENTER.**
The slide show is displayed on the screen.

This unit plays back image (JPEG) files in the orientation in which they are stored in the folder.

Adjusting the picture quality for your viewing environment (Picture Mode)

CBL/SAT | DVD | Blu-ray | GAME | AUX1 | AUX2 | MEDIA PLAYER | USB | Internet Radio | Media Server | CD * | TV AUDIO *

* You can set the picture mode when an HDMI, component video or video connector is assigned.

1 **While content is playing, press OPTION.**
The option menu screen is displayed.

2 **Use △▽ to select "Picture Mode", then press ENTER.**

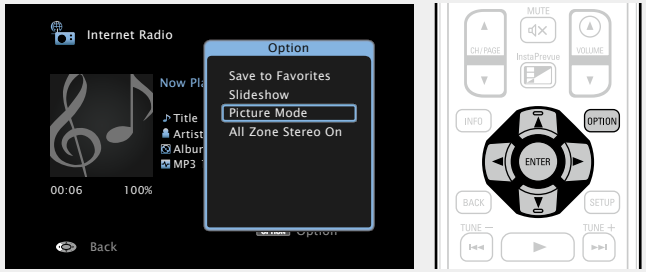

3 **Use ◁▷ to select picture mode.**

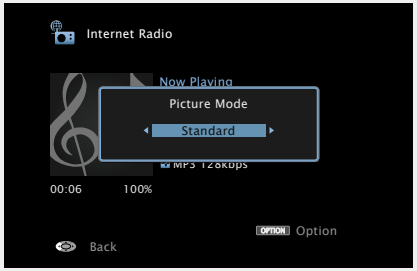

• Each time ◁▷ is pressed, the setting is changed as shown below.

Off ⟷ Standard ⟷ Movie
Custom ⟷ Streaming ⟷ Vivid

Off	No picture quality adjustment is done with this unit.
Standard	The standard mode suited for most living room viewing environments.
Movie	A mode suited for watching movies in a dark room such as a theater room.
Vivid	A mode that makes graphic images for games, etc. brighter and more vivid.
Streaming	A mode suited for low bit rate video sources.
Custom	Adjusts the picture quality manually.

4 **Press ENTER.**
The display returns to the playback screen.

All Zone Stereo function

You can play back music in multi-zones (ZONE2/ZONE3) simultaneously that is played back in MAIN ZONE.
It is useful when you want to enjoy the same music at the same time in multiple rooms during home party or when you want to play back the same BGM in the entire house.

❑ Using the All Zone Stereo function (All Zone Stereo On)

The All Zone Stereo function can be set for any source.

Before setting this function, you need to turn on the multi-zones (ZONE2/ZONE3) for which you want to use the All Zone Stereo function.

1 **Press ZONE SELECT to switch the zone mode.**
The [M] indicator lights.

2 **Press OPTION.**
The option menu screen is displayed.

3 **Use △▽ to select "All Zone Stereo On", then press ENTER.**
The input source for the multi-zones (ZONE2/ZONE3) is switched to the same as the one for MAIN ZONE, and playback in the All Zone Stereo mode starts.

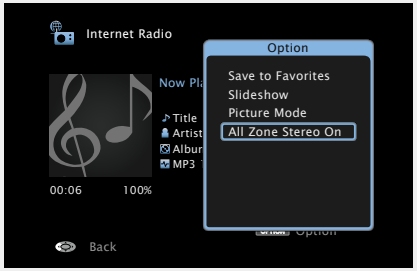

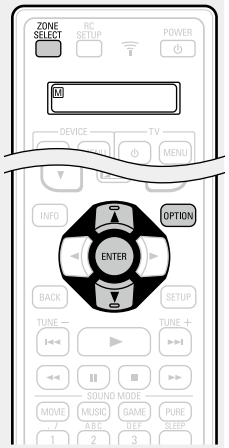

See overleaf

❑ Stopping the All Zone Stereo function (All Zone Stereo Off)

1 **During playback in All Zone Stereo, press OPTION.**
The option menu screen is displayed.

2 **Use △▽ to select “All Zone Stereo Off”, then press ENTER.**

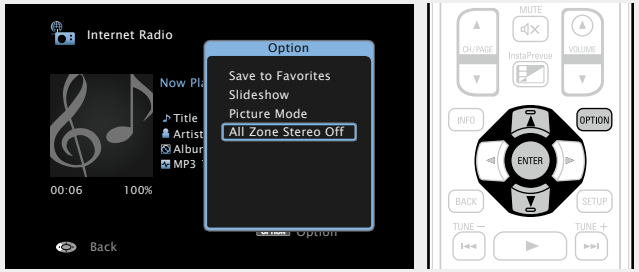

The All Zone Stereo function is also stopped when you:
- Turn MAIN ZONE off.
- Change the input source for MAIN ZONE.
- Change the sound mode.

NOTE

When “HDMI Audio Out” (☞page 129) is set to “TV”, the All Zone Stereo function is not available.

AirPlay function

Enjoy music from your iTunes library with high quality sound anywhere in your home.
Use the Apple Remote App* for iPhone, iPod touch and iPad to control iTunes from any room in your home.

* Available as a free download from the App Store.

❑ Streaming music stored in iPhone, iPod touch, or iPad directly to the unit

If you update your "iPhone/iPod touch/iPad" to iOS 4.2.1 or later, you can stream music stored in your "iPhone/iPod touch/iPad" directly to this unit.

1 Make the Wi-Fi settings for iPhone, iPod touch, or iPad.

• For details, see your device's manual.

2 Startup iPhone, iPod touch, or iPad music or iPod app.

is displayed on the iPhone, iPod touch or iPad screen.

3 Tap the AirPlay icon .

4 Select the speaker you want to use.

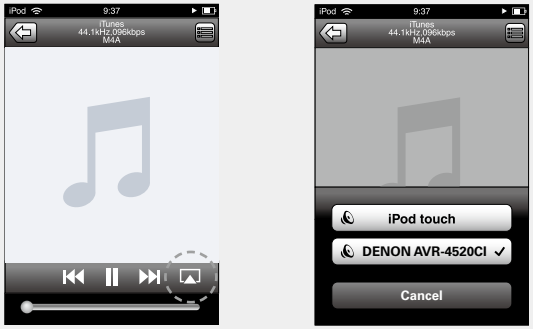

NOTE

In playback using the AirPlay function, the sound is output at the iPhone, iPod touch, iPad or iTunes volume setting level.
You should turn down the iPhone, iPod touch, iPad or iTunes volume prior to playback and then adjust it to a suitable level.

❑ Playing iTunes music with this unit

1 Install iTunes 10, or later, on a Mac or Windows PC that is connected to the same network as this unit.

2 Turn this unit ON.

Set "Network" (☞page 147) to "Always On" for this unit.

NOTE

When "Network" is set to "Always On", the unit consumes more standby power.

3 Launch iTunes and click the AirPlay icon displayed in the lower right of the window and select this unit from the list.

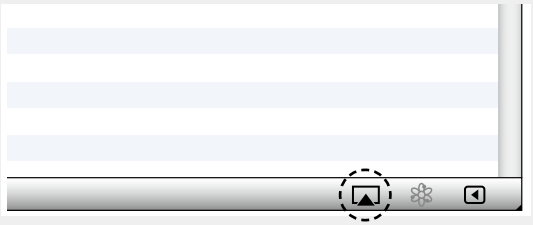

4 Choose a song and click play in iTunes.

The music will stream to this unit.

Selecting multiple speakers (devices)

It is possible to play iTunes songs on your home's AirPlay compatible speakers (devices) other than those of this unit.

1 Click the AirPlay icon and select "Multiple Speakers" from the list.

2 Check the speakers you want to use.

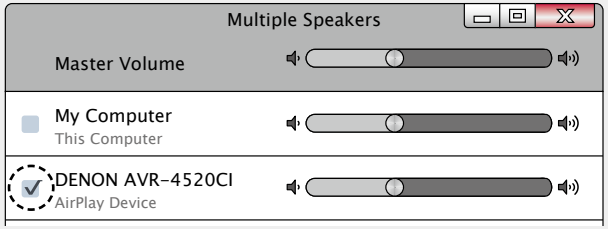

☞ See overleaf

❑ Perform iTunes playback operations with the remote control unit of this unit

With this unit's remote control unit, you can perform iTunes song play, pause, and auto search (cue) operations.

1 **Select "Edit" – "Preferences..." on the menu.**

2 **Select "Devices" in the iTunes setting window.**

3 **Check "Allow iTunes control from remote speakers", and then click "OK".**

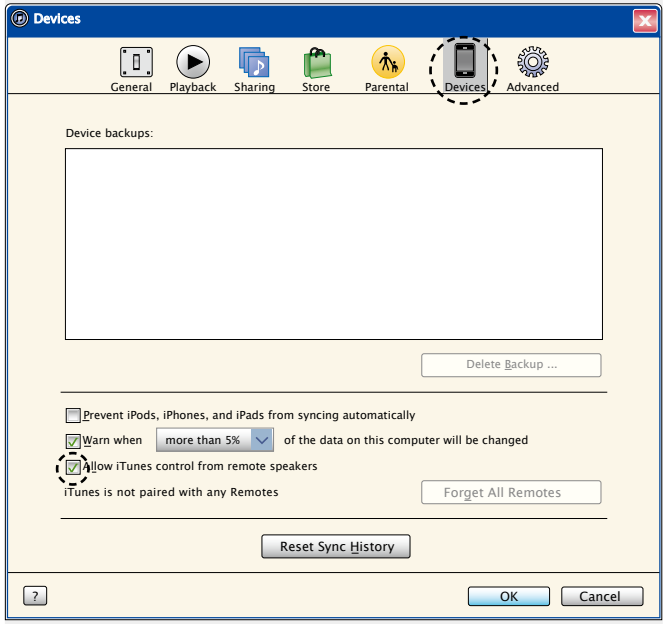

- is displayed on the menu screen while AirPlay is being operated.
- Source input will be switched to "NETWORK" when AirPlay playback is started.

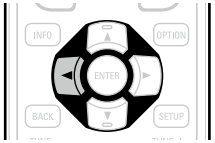

- You can stop AirPlay playback by pressing the ◁ or choosing other input source.
- To see song and artist names together, press **STATUS** on the main unit.
- For information about how to use iTunes, also see the Help for iTunes.
- The screen may differ depending on the OS and software versions.

Selecting a listening mode (Sound Mode)

This unit allows you to enjoy various kinds of surround and stereo playbacks.

Multi-channel audio formats are adopted by many of the contents including Blu-ray disc and DVD as well as digital broadcasting and Internet-delivered movies and music.
This unit supports playback of almost all of these multi-channel audio formats. It also supports surround playback of audio formats other than multi-channel audio such as 2-channel stereo audio.

This unit automatically generates a list of all the playable sound modes based on the input audio format and the current speaker setup configuration and displays the list on the screen. Therefore, you can select a correct surround playback mode even if you are not familiar with sound mode selection. Try out various surround playback modes and enjoy surround playback in your favorite mode.

【Example】 When **MOVIE** is pressed and held

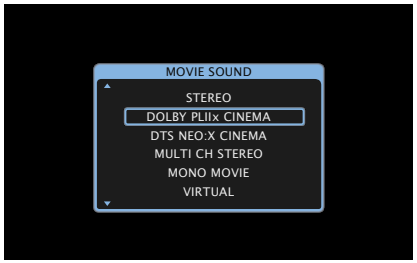

This unit provides not only sound modes that conform to the formats recorded in discs such as Dolby and DTS but also extended types of modes that match your speaker configuration including front height speakers and surround back speakers and "original listening modes" that create atmosphere of ROCK ARENA and JAZZ CLUB, etc.
The displayed sound modes include the 2-channel stereo playback mode.

For audio formats recorded in a disc, see the disc jacket.

Selecting a listening mode

1 **Play the selected device (☞page 42 – 74).**

2 **Press and hold MOVIE, MUSIC or GAME to select a listening mode.**
This unit automatically generates and displays a list of selectable sound modes.

- Each time **MOVIE**, **MUSIC** or **GAME** is pressed, the listening mode is switched.

MOVIE Switches to the listening mode suitable for enjoying movies and TV programs.

MUSIC Switches to the listening mode suitable for enjoying music.

GAME Switches to the listening mode suitable for enjoying games.

- Pressing **MOVIE**, **MUSIC** or **GAME** displays a list of the listening modes that can be selected. Each time you press **MOVIE**, **MUSIC** or **GAME**, the listening mode changes.
- While the list is displayed, you can also use △▽ to select a listening mode.

- The **MOVIE**, **MUSIC**, or **GAME** button memorizes the last sound mode selected for its button. Pressing **MOVIE**, **MUSIC**, or **GAME** recalls the same sound mode as the one selected at the previous playback.
- If the content played back does not support the previously selected sound mode, the most standard sound mode for the content is automatically selected.

Direct/DSD Direct playback

Sound recorded in source is played as is.

1 **Play the selected device (☞page 42 – 74).**

2 **Press PURE to select "DIRECT" or "DSD DIRECT".**
Direct playback begins.

"DSD DIRECT" is shown on the display when playing DSD signals in the DIRECT mode.

Pure direct playback

This mode is for playback in higher sound quality than in "DIRECT" mode. Turn the display of the amplifier off to stop the analogue video circuit. This suppresses the source of noise that affects sound quality.

1 **Play the selected device (☞page 42 – 74).**



2 **Press PURE to select "PURE DIRECT".**
The display goes dark, and pure direct playback begins.

In DIRECT/DSD DIRECT and PURE DIRECT listening mode, the following items cannot be adjusted.

- Tone (☞page 123)
- Restorer (☞page 124)
- MultEQ® XT 32 (☞page 125)
- Dynamic EQ (☞page 125)
- Dynamic Volume (☞page 126)

NOTE

- Video signals are only output when HDMI signals are played in the PURE DIRECT mode.
- When in the PURE DIRECT mode, the menu screen is not displayed.
- When in the PURE DIRECT mode, the display turns off and appears as if there is no electricity.

❑ Listening mode

- The following listening modes can be selected using the **MOVIE**, **MUSIC**, **GAME**, and **PURE** buttons.
- Adjust the sound field effect with the menu "Surround Parameter" (☞page 121) to enjoy your favorite sound mode.

Operation button	Input signal		Listening mode
MOVIE	2-channel *1		STEREO
			DOLBY PLIIx Cinema *2 / DOLBY PLIIx Cinema A-DSX *4
			DOLBY PLII Cinema *2 / DOLBY PLII Cinema A-DSX *4
			DOLBY PLIIz Height *2
			DTS NEO:X Cinema *2 *5
			MULTI CH STEREO
			WIDE SCREEN
			MONO MOVIE
			VIRTUAL
	Multi-channel *3		STEREO
		Dolby Digital	DOLBY DIGITAL / DOLBY DIGITAL A-DSX *4
			DOLBY DIGITAL EX
			DOLBY DIGITAL + PLIIx Cinema
			DOLBY DIGITAL + PLIIz
			DOLBY DIGITAL + NEO:X Cinema
		Dolby TrueHD	DOLBY TrueHD / DOLBY TrueHD A-DSX *4
			DOLBY TrueHD + EX
			DOLBY TrueHD + PLIIx Cinema
			DOLBY TrueHD + PLIIz
			DOLBY TrueHD + NEO:X Cinema
		Dolby Digital Plus	DOLBY DIGITAL Plus / DOLBY DIGITAL Plus A-DSX *4
			DOLBY DIGITAL Plus + EX
			DOLBY DIGITAL Plus + PLIIx Cinema
			DOLBY DIGITAL Plus + PLIIz
			DOLBY DIGITAL Plus + NEO:X Cinema
		DTS	DTS SURROUND / DTS SURROUND A-DSX *4
			DTS ES DSCRT 6.1
			DTS ES MTRX 6.1
			DTS 96/24
			DTS + PLIIx Cinema
			DTS + PLIIz
			DTS + NEO:X Cinema

Operation button	Input signal		Listening mode
MOVIE	DTS-HD / DTS Express		DTS-HD HI RES / DTS-HD HI RES A-DSX *4
			DTS-HD MSTR / DTS-HD MSTR A-DSX *4
			DTS Express / DTS Express A-DSX *4
			DTS-HD + PLIIx Cinema
			DTS-HD + PLIIz
			DTS-HD + NEO:X Cinema
	PCM/DSD multi-channel		MULTI CH IN / MULTI CH IN A-DSX *4
			MULTI CH IN 7.1
			MULTI IN + Dolby EX
			MULTI IN + PLIIx Cinema
			MULTI IN + PLIIz
			MULTI IN + NEO:X Cinema*5
	Multi-channel *3		MULTI CH STEREO
			WIDE SCREEN
			MONO MOVIE
			VIRTUAL

*1 2-channel also includes analog input.

*2 This mode plays back 2-channel source in 5.1, 7.1, 9.1 or 11.1-channel playback. It cannot be selected when headphones are used, or when only front speakers are used.

*3 Some listening modes cannot be selected, depending on the audio format or number of channels of the input signal. For details, see "Types of input signals, and corresponding sound modes" (☞page 187).

*4 These modes add a new channel to the 5.1 channel surround using Audyssey DSX® processing (☞page 126).
When "Heights" is selected in "Audyssey DSX®" (☞page 126), a front height channel is added in playback. When "Wides" is selected, a front wide channel is added in playback. When "Wides/Heights" is selected, a front wide channel and a front height channel are added in playback.

*5 This mode cannot be selected when DSD signals are input.

☞ See overleaf

Operation button	Input signal		Listening mode
MUSIC	2-channel *1		STEREO
			DOLBY PLIIx Music *2 / DOLBY PLIIx Music A-DSX *4
			DOLBY PLII Music *2 / DOLBY PLII Music A-DSX *4
			DOLBY PLIIz Height *2
			DTS NEO:X Music *2 *5
			MULTI CH STEREO
			SUPER STADIUM
			ROCK ARENA
			JAZZ CLUB
			CLASSIC CONCERT
			MATRIX
			VIRTUAL
	Multi-channel *3		STEREO
		Dolby Digital	DOLBY DIGITAL / DOLBY DIGITAL A-DSX *4
			DOLBY DIGITAL EX
			DOLBY DIGITAL + PLIIx Music
			DOLBY DIGITAL + PLIIz
			DOLBY DIGITAL + NEO:X Music
		Dolby TrueHD	DOLBY TrueHD / DOLBY TrueHD A-DSX *4
			DOLBY TrueHD + EX
			DOLBY TrueHD + PLIIx Music
			DOLBY TrueHD + PLIIz
			DOLBY TrueHD + NEO:X Music
		Dolby Digital Plus	DOLBY DIGITAL Plus / DOLBY DIGITAL Plus A-DSX *4
			DOLBY DIGITAL Plus + EX
			DOLBY DIGITAL Plus + PLIIx Music
			DOLBY DIGITAL Plus + PLIIz
			DOLBY DIGITAL Plus + NEO:X Music
		DTS	DTS SURROUND / DTS SURROUND A-DSX *4
			DTS ES DSCRT 6.1
			DTS ES MTRX 6.1
			DTS 96/24
			DTS + PLIIx Music
			DTS + PLIIz
			DTS + NEO:X Music

Operation button	Input signal		Listening mode
MUSIC	DTS-HD / DTS Express		DTS-HD HI RES / DTS-HD HI RES A-DSX *4
			DTS-HD MSTR / DTS-HD MSTR A-DSX *4
			DTS Express / DTS Express A-DSX *4
			DTS-HD + PLIIx Music
			DTS-HD + PLIIz
			DTS-HD + NEO:X Music
	PCM/DSD multi-channel		MULTI CH IN / MULTI CH IN A-DSX *4
			MULTI CH IN 7.1
			MULTI IN + Dolby EX
			MULTI IN + PLIIx Music
			MULTI IN + PLIIz
			MULTI IN + NEO:X Music *5
	Multi-channel *3		MULTI CH STEREO
			SUPER STADIUM
			ROCK ARENA
			JAZZ CLUB
			CLASSIC CONCERT
			MATRIX
			VIRTUAL

*1 2-channel also includes analog input.

*2 This mode plays back 2-channel source in 5.1, 7.1, 9.1 or 11.1-channel playback. It cannot be selected when headphones are used, or when only front speakers are used.

*3 Some listening modes cannot be selected, depending on the audio format or number of channels of the input signal. For details, see "Types of input signals, and corresponding sound modes" (☞page 187).

*4 These modes add a new channel to the 5.1 channel surround using Audyssey DSX® processing (☞page 126).
When "Heights" is selected in "Audyssey DSX®" (☞page 126), a front height channel is added in playback. When "Wides" is selected, a front wide channel is added in playback. When "Wides/Heights" is selected, a front wide channel and a front height channel are added in playback.

*5 This mode cannot be selected when DSD signals are input.

☞ See overleaf

Operation button	Input signal		Listening mode
GAME	2-channel *1		STEREO
			DOLBY PLIIx Game *2 / DOLBY PLIIx Game A-DSX *4
			DOLBY PLII Game *2 / DOLBY PLII Game A-DSX *4
			DOLBY PLIIz Height *2
			DTS NEO:X Game *2 *5
			MULTI CH STEREO
			VIDEO GAME
			VIRTUAL
	Multi-channel *3		STEREO
		Dolby Digital	DOLBY DIGITAL / DOLBY DIGITAL A-DSX *4
			DOLBY DIGITAL EX
			DOLBY DIGITAL + PLIIz
			DOLBY DIGITAL + NEO:X
		Dolby TrueHD	DOLBY TrueHD / DOLBY TrueHD A-DSX *4
			DOLBY TrueHD + EX
			DOLBY TrueHD + PLIIz
			DOLBY TrueHD + NEO:X Game
		Dolby Digital Plus	DOLBY DIGITAL Plus / DOLBY DIGITAL Plus A-DSX *4
			DOLBY DIGITAL Plus + EX
			DOLBY DIGITAL Plus + PLIIz
			DOLBY DIGITAL Plus + NEO:X Game
		DTS	DTS SURROUND / DTS SURROUND A-DSX *4
			DTS ES DSCRT 6.1
			DTS ES MTRX 6.1
			DTS 96/24
			DTS + PLIIz
			DTS + NEO:X Game
		DTS-HD / DTS Express	DTS-HD HI RES / DTS-HD HI RES A-DSX *4
			DTS-HD MSTR / DTS-HD MSTR A-DSX *4
			DTS Express / DTS Express A-DSX *4
			DTS-HD + PLIIz
			DTS-HD + NEO:X Game

Operation button	Input signal		Listening mode
GAME	PCM/DSD multi-channel		MULTI CH IN / MULTI CH IN A-DSX *4
			MULTI CH IN 7.1
			MULTI IN + Dolby EX
			MULTI IN + PLIIz
			MULTI IN + NEO:X Game *5
	Multi-channel *3		MULTI CH STEREO
			VIDEO GAME
			VIRTUAL
PURE	All		PURE DIRECT
	Except DSD		DIRECT
	DSD		DSD DIRECT

*1 2-channel also includes analog input.

*2 This mode plays back 2-channel source in 5.1, 7.1, 9.1 or 11.1-channel playback. It cannot be selected when headphones are used, or when only front speakers are used.

*3 Some listening modes cannot be selected, depending on the audio format or number of channels of the input signal. For details, see "Types of input signals, and corresponding sound modes" (☞page 187).

*4 These modes add a new channel to the 5.1 channel surround using Audyssey DSX® processing (☞page 126).
When "Heights" is selected in "Audyssey DSX®" (☞page 126), a front height channel is added in playback. When "Wides" is selected, a front wide channel is added in playback. When "Wides/Heights" is selected, a front wide channel and a front height channel are added in playback.

*5 This mode cannot be selected when DSD signals are input.

Views on the TV screen or display

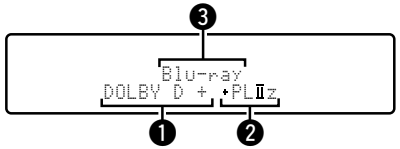

❶ Shows a decoder to be used.
- A DOLBY DIGITAL Plus decoder is displayed as "DOLBY D +".

❷ Shows a decoder that creates sound output from the surround back speakers.
- "+ PLIIz" indicates the front height sound from front height speakers.

❸ Shows the name of the input source being played back.

☞ See overleaf

❑ Description of listening mode types

Dolby listening mode

Listening mode type	Description
DOLBY PLIIx*1	This mode can be selected when a Dolby Pro Logic IIx decoder is used to play back 2-channel source in 6.1/7.1-channel surround sound including the surround back channel. By adding the surround back channel, a stronger surround feeling is obtained compared to Dolby Pro Logic II. There are three playback modes: "Cinema" mode that is optimized for movie playback, "Music" mode that is optimized for music playback, and "Game" mode that is optimized for game play.
DOLBY PLII	This mode can be selected when a Dolby Pro Logic II decoder is used to play back 2-channel source in 5.1-channel surround sound with a natural, realistic feel.
DOLBY PLIIz*2	This mode can be selected when a Dolby Pro Logic IIz decoder is used to play back 2-channel source in 7.1-channel surround sound with added front height channel. By adding a front height channel, the vertical expression is emphasized, improving the three-dimensionality of the sound.
DOLBY DIGITAL	This mode can be selected when playing sources recorded with Dolby Digital.
DOLBY DIGITAL EX*1	Using a Dolby Digital EX decoder, this mode plays Dolby Digital source in 6.1/7.1 channel surround sound with added surround back channel. By adding a surround back channel, spacial expressiveness and sound localization are enhanced.
DOLBY TrueHD	This mode can be selected when playing sources recorded in Dolby TrueHD.
DOLBY DIGITAL Plus	This mode can be selected when playing sources recorded with Dolby Digital Plus.

*1 This can be selected when "Speaker Config." – "Surr. Back" (☞page 142) is not set to "None".
*2 This can be selected when "Speaker Config." – "Front Height" (☞page 142) is not set to "None".

DTS listening mode

Listening mode type	Description
DTS NEO:X*1	This matrix decoding technology uses the DTS NEO:X decoder to playback 2-channel source or 5.1/6.1/7.1 channel surround sources as a maximum of 11.1 channel surround sound. There are 3 modes: "Music" suited for playing music, "Cinema" suited for playing movies, and "Game" which is optimized for playing games.
DTS SURROUND	This mode can be selected when playing sources recorded in DTS.
DTS ES DSCRT6.1*2	This mode is suitable for playing discs recorded in DTS-ES. The surround back channel added using the discrete method is played as an independent channel. Since all channels are independent, the 360-degree spacial expressiveness and sound localization are enhanced.
DTS ES MTRX6.1*3	This mode is suitable for playing discs recorded in DTS-ES. The surround back channel added to the surround-left and surround-right channels by a matrix encoder at software recording time is decoded by this unit's matrix decoder and played from each channel (surround left, surround right, surround back).
DTS 96/24	This mode can be selected when playing sources recorded in DTS 96/24.
DTS-HD	This mode can be selected when playing sources recorded in DTS-HD.
DTS Express	This mode can be selected when playing sources recorded in DTS Express.

*1 This mode cannot be selected when DSD signals are input.
*2 This mode can be selected when only one surround back speaker is used and no front height speaker or front wide speaker is used.
*3 This can be selected when "Speaker Config." – "Surr. Back" (☞page 142) is not set to "None".

PCM/DSD multi-channel listening mode

Listening mode type	Description
MULTI CH IN	This mode can be selected when playing multi-channel PCM/DSD sources .

☞ See overleaf

Audyssey DSX® listening mode

Listening mode type	Description
Audyssey DSX® (A-DSX)*	This mode creates playback for the new channels (front wide or front height) in 5.1-channel systems. By adding front wide or front high channels, the surround sound effects sound more three dimensional and realistic.

* This mode is displayed when "Audyssey DSX®" (☞page 126) is set to "Wides/Heights", "Heights" or "Wides".

Original listening mode

Listening mode type	Description
MULTI CH STEREO	This mode is for enjoying stereo sound from all speakers. The same sound as that from the front speakers (L/R) is played back at the same level from the surround speakers (L/R) and surround back speakers (L/R).
WIDE SCREEN	This mode is for enjoying the atmosphere of viewing a movie on a large screen.
SUPER STADIUM	This mode is suited for viewing sports programs.
ROCK ARENA	This mode is for enjoying the atmosphere of a live concert in an arena.
JAZZ CLUB	This mode is for enjoying the atmosphere of a live concert in a jazz club.
CLASSIC CONCERT	This mode is for appreciating classical concert programs.
MONO MOVIE	This mode is for playing monaural movie sources with surround sound. When playing sources recorded in monaural in the "MONO MOVIE" mode, the sound will be off balance with a single channel (left or right), so input to both channels.
VIDEO GAME	This mode is suited for achieving surround sound with video games.
MATRIX	This mode lets you add a spacious feel to stereo music sources.
VIRTUAL	This mode is for enjoying surround effects using only the front speakers or headphones.

STEREO listening mode

Listening mode type	Description
STEREO	This is the mode for playing in stereo. The tone can be adjusted. • Sound is output from the front left and right speakers and subwoofer. • If multichannel signals are input, they are mixed down to 2-channel audio and are played.

Direct listening mode

Listening mode type	Description
DIRECT/DSD DIRECT	Sound recorded in source is played as is.
PURE DIRECT	This mode is for playback in higher sound quality than in DIRECT mode. This suppresses the source of noise that affects sound quality. The following circuits that affect sound quality are set to off. • Main unit's display circuit (The display is turned off.) • Analog video input/output circuit

Advanced version

Here, we explain functions and operations that let you make better use of this unit.

- Installation/connection/setup of speakers (Advanced) ☞page 91
- Playback (Advanced operation) ☞page 102
- Playback in ZONE2/ZONE3/ZONE4 (Separate room) ☞page 111
- How to make detailed settings ☞page 114
- Operating external devices with the remote control ☞page 157

Installation/connection/setup of speakers (Advanced)

Procedure for speaker settings

Speaker installation

↓

Speaker connection (☞page 93)

↓

Set up speakers (☞page 99)

Speaker installation

- Determine the speaker system depending on the number of speakers you are using and install each speaker and subwoofer in the room. Here, we explain how to install the speakers using a typical example.
- The speaker impedance should be from 6 to 16 Ω.

This unit is compatible with Audyssey DSX® (☞page 193), Dolby Pro Logic IIz (☞page 194) and DTS Neo:X (☞page 194) which offers an even wider and deeper surround sensation.
When using Audyssey DSX®, install front wide speakers or front height speakers.
When using Dolby Pro Logic IIz, install front height speakers.

Use the illustration below as a guide for how high each speaker should be installed. The height does not need to be exactly the same.

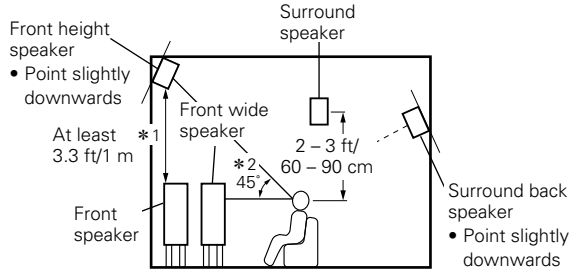

【Viewed from the side】

*1 Recommended for Dolby Pro Logic IIz
*2 Recommended for Audyssey DSX®

NOTE

Depending on the "Amp Assign" (☞page 141) setting, audio cannot be output simultaneously from the surround back, front height, and front wide speakers.

☞ See overleaf

Typical speaker layout

When using Audyssey DSX®, install front wide speakers or front height speakers.
When using Dolby Pro Logic IIz, install front height speakers.

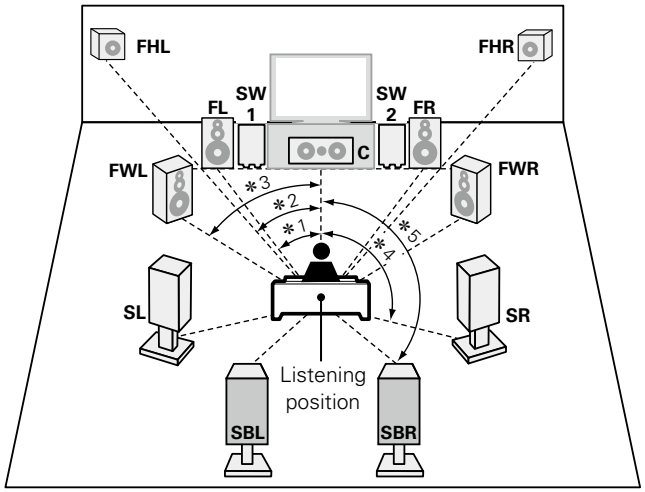

∗1 22˚ – 30˚ ∗2 22˚ – 45˚ ∗3 55˚ – 60˚
∗4 90˚ – 110˚ ∗5 135˚ – 150˚

【Speaker abbreviations】

FL	Front speaker (L)	**SBL**	Surround back speaker (L)
FR	Front speaker (R)	**SBR**	Surround back speaker (R)
C	Center speaker	**FHL**	Front height speaker (L)
SW	Subwoofer	**FHR**	Front height speaker (R)
SL	Surround speaker (L)	**FWL**	Front wide speaker (L)
SR	Surround speaker (R)	**FWR**	Front wide speaker (R)
SB	Surround back speaker		

When 6.1ch speakers are installed

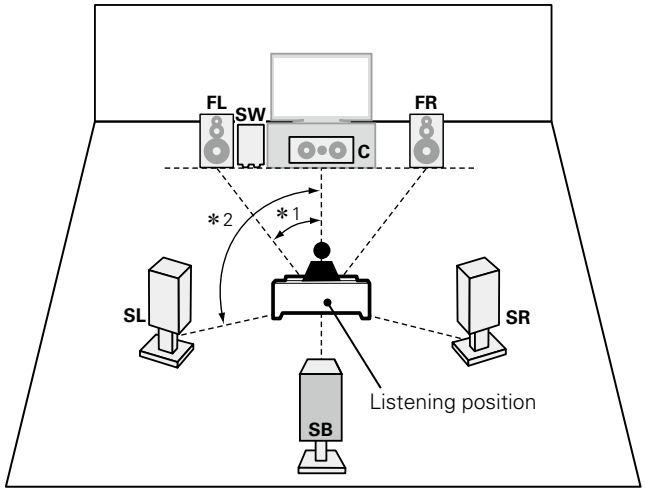

∗1 22˚ – 30˚ ∗2 90˚ – 110˚

When 5.1ch speakers are installed

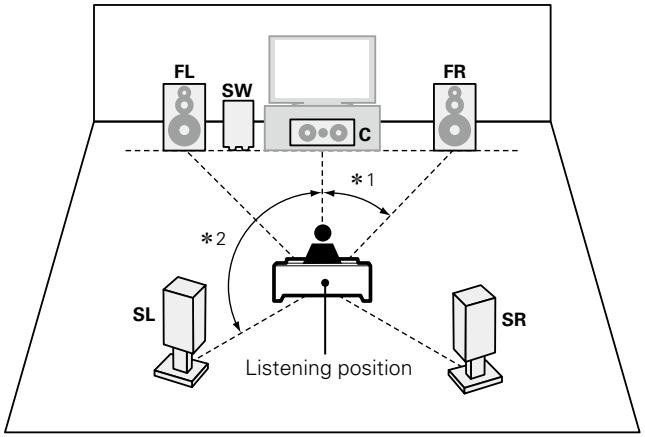

∗1 22˚ – 30˚ ∗2 120˚

Speaker connection

Here, we connect the speakers in the room to this unit.
This section explains how to connect them using a typical example.

- ❏ **Normal connection** (☞page 94)
- ❏ **Bi-amp connection** (☞page 95)
- ❏ **Multi-channel + 2-channel connection** (☞page 96)
- ❏ **11.1-channel connection** (☞page 97)
- ❏ **External power amplifier connection** (☞page 98)

NOTE

- **Disconnect this unit's power plug from the power outlet before connecting the speakers. Also, turn off the subwoofer.**
- **Connect so that the speaker cable core wires do not protrude from the speaker terminal. The protection circuit may be activated if the core wires touch the rear panel or if the + and – sides touch each other (☞page 195 "Protection Circuit").**
- **Never touch the speaker terminals while the power supply is connected. Doing so could result in electric shock. When the "Setup Assistant" is running, follow the instructions in the "Setup Assistant" screen for making connections. (Power is not supplied to the speaker terminals while the "Setup Assistant" is running.)**
- **Use speakers with the speaker impedances shown below.**

Speaker terminals	Speaker impedance
FRONT	4 – 16 Ω
CENTER	
SURROUND	
SURROUND BACK	
FRONT HEIGHT	
FRONT WIDE	

- Use speakers where one speaker has an impedance of 4 to 16 Ω. When using a speaker with impedance of 4 Ω or 6 Ω, make sure to set the "Impedance" in the menu (☞page 145) to "6 Ω/ohms" or "4 Ω/ohms".
- On this unit, you can change how the power amplifiers within this unit are used according to your environment. For details see "Relationship between the Amp Assign mode settings and audio output" (☞page 177).

Connecting the speaker cables

Carefully check the left (L) and right (R) channels and + (red) and – (black) polarities on the speakers being connected to this unit, and be sure to interconnect the channels and polarities correctly.

1 **Peel off about 0.03 ft/10 mm of sheathing from the tip of the speaker cable, then either twist the core wire tightly or terminate it.**

2 **Turn the speaker terminal counterclockwise to loosen it.**



3 **Insert the speaker cable's core wire to the hilt into the speaker terminal.**

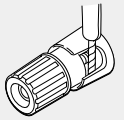

4 **Turn the speaker terminal clockwise to tighten it.**



Cables used for connections

Audio cable (sold separately)

Speaker cable

Subwoofer cable

Connecting the subwoofer

Use a subwoofer cable to connect the subwoofer.

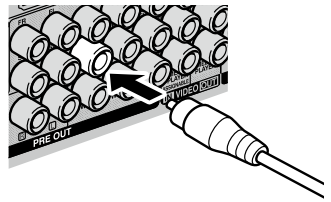

Normal connection

The diagram on the right shows a typical connection method.
Connect your speakers so that they correspond to the speaker names indicated on the rear panel.

- If you connect the surround back, front height, and front wide speakers before you start playback, the audio is played back by automatically switching the speakers in accordance with the surround mode or input signals.
- If using only one surround back speaker, connect to the "L" side of the SURROUND BACK terminal. Also use the "Speaker Config." setting (☞page 142) to set "Surr. Back" to "1spkr".
  For speaker settings in this case, see "When 6.1ch speakers are installed" (☞page 92).

NOTE

- **For speaker cable connections, see page 93.**
- **For speaker impedance , see page 93.**

❑ For connecting two subwoofers

Two subwoofers can be connected to this unit.
To use two subwoofers, set "Subwoofer" to "2 spkrs" using the "Speaker Config." setting (☞page 142).
The level and distance can be set separately for Subwoofer 1 and Subwoofer 2.

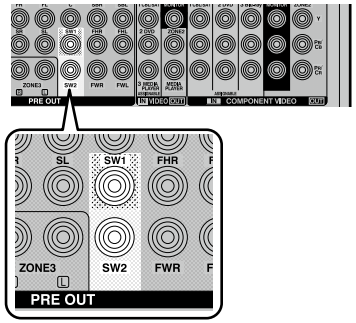

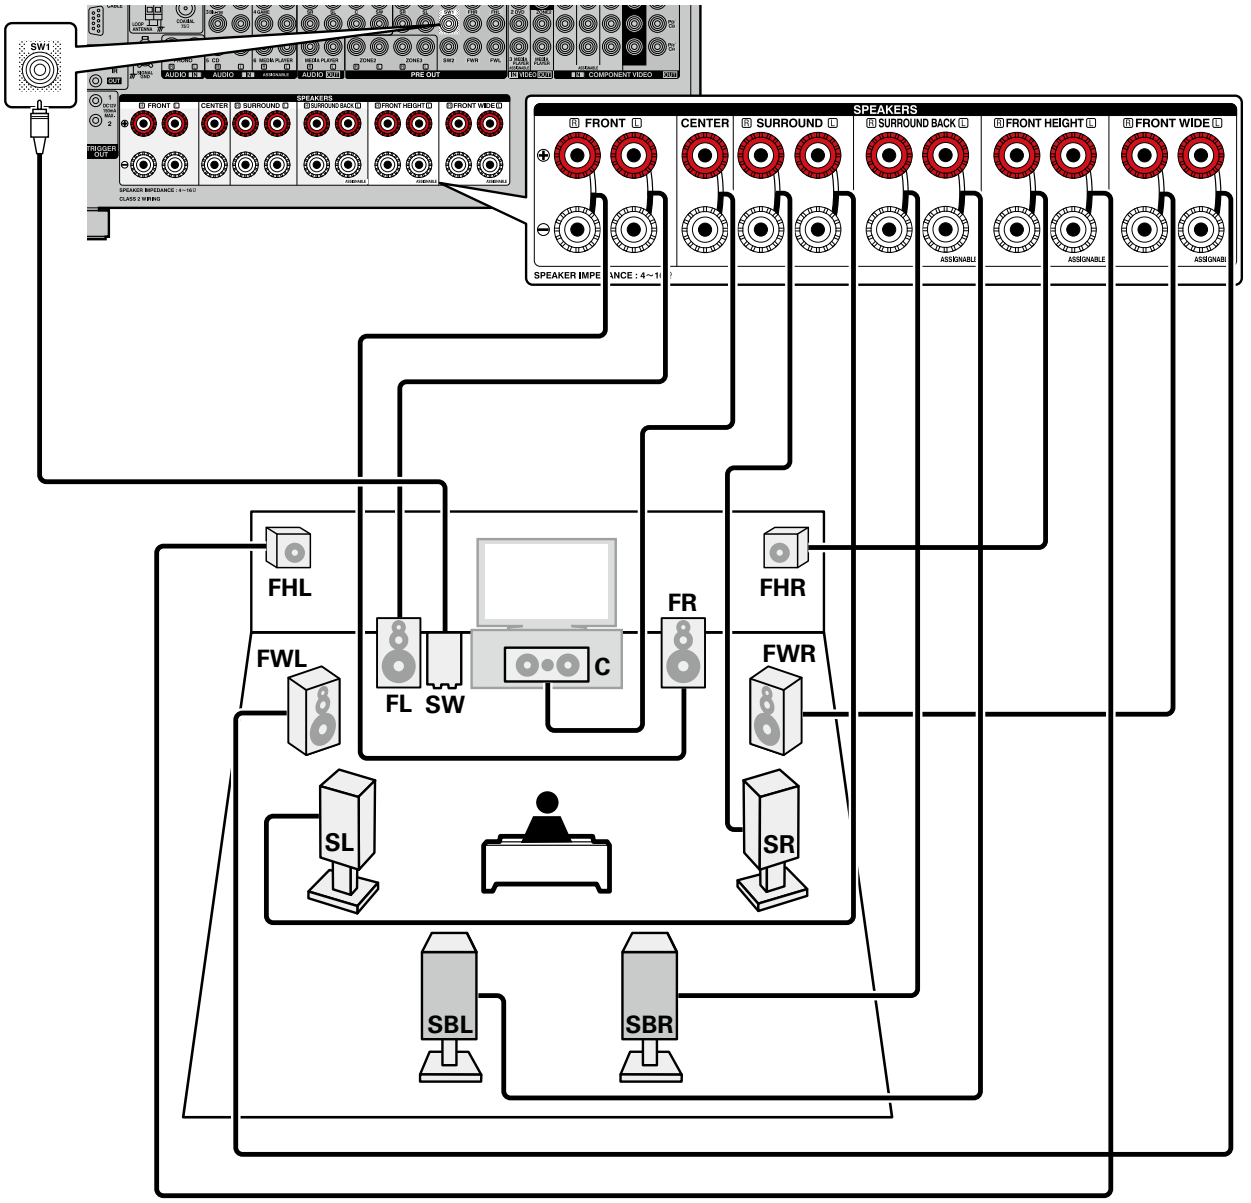

Bi-amp connection

A bi-amp connection is to connect separate amplifiers to the tweeter terminals and woofer terminals of speakers compatible with the bi-amp function. This prevents the back electromotive force (returned force without output) of the woofer sent to the tweeter, which affects the sound quality of the tweeter, and you can enjoy playback with higher-quality sound.
In this case, set "Assign Mode" to "7.1ch(Bi-Amp)" or "5.1ch(Bi-Amp) + ZONE2" in steps 3 to 5 for "Set up "Amp Assign"" (☞page 99).

NOTE

- **For speaker cable connections, see page 93.**
- **For speaker impedance , see page 93.**
- When making bi-amp connections, be sure to remove the short-circuiting plate or wire between the speaker's woofer and tweeter terminals.

When using a front wide speaker, you can use the connectors on the part in the connection diagram to make a bi-amplifier connection. To make connections for these connectors, set "Main Speakers" (☞page 100).

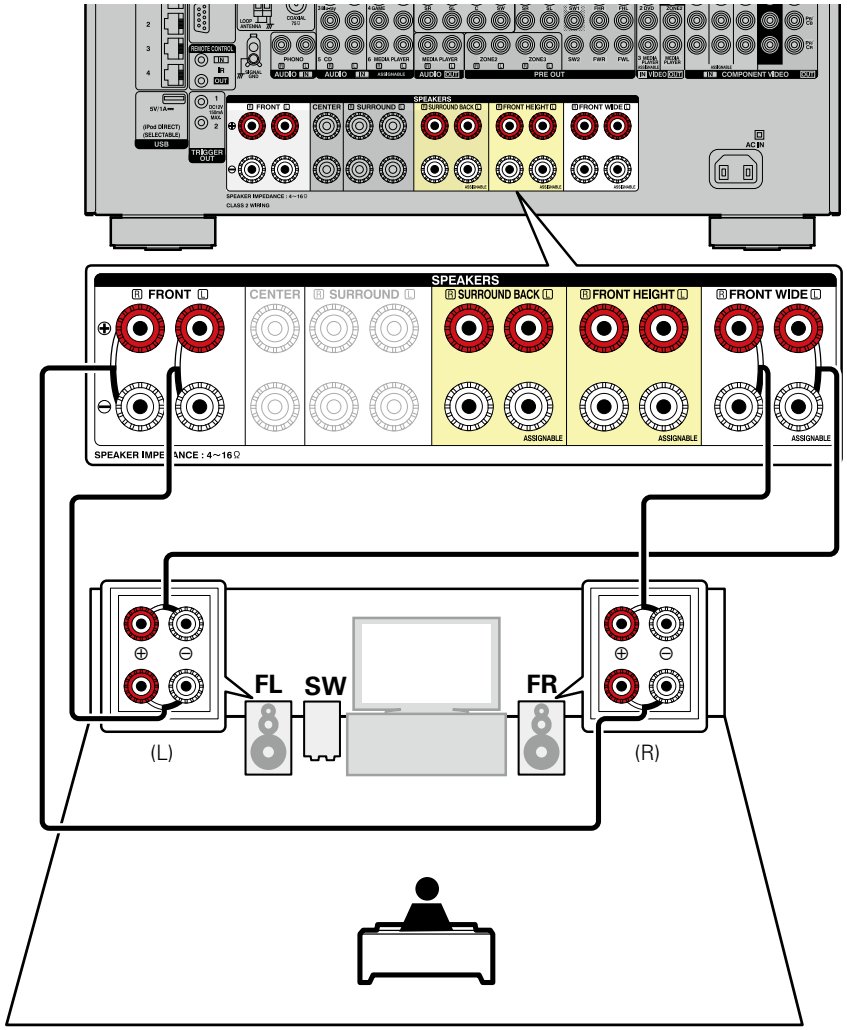

Multi-channel + 2-channel connection

You can connect the other front speakers for 2-channel playback using the DIRECT mode or STEREO mode.
The speakers used exclusively for multichannel playback and the speakers used exclusively for 2-channel playback are automatically switched for playback in accordance with the surround mode.
In this case, set "Assign Mode" to "9.1ch/2ch Front" in steps 3 to 5 for "Set up "Amp Assign"" (☞page 99).

Front speakers can be used separately, depending on the speaker's specifications or playback source such as front speakers (FL/FR) for multichannel playback and front speakers (FL'/FR') for 2-channel playback (☞page 145 "Front Speaker").

NOTE

- **For speaker cable connections, see page 93.**
- **For speaker impedance , see page 93.**

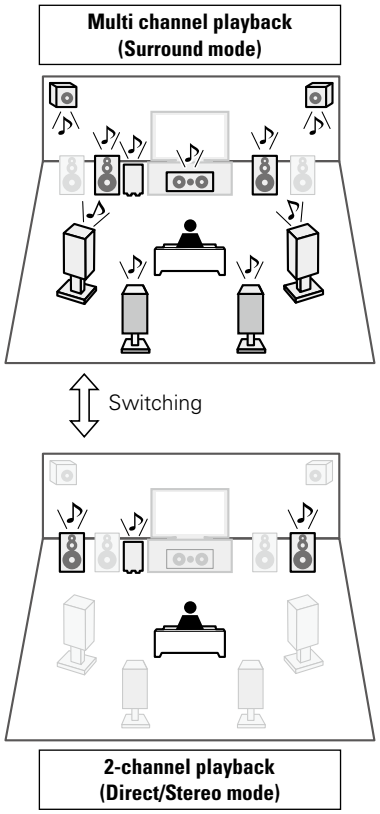

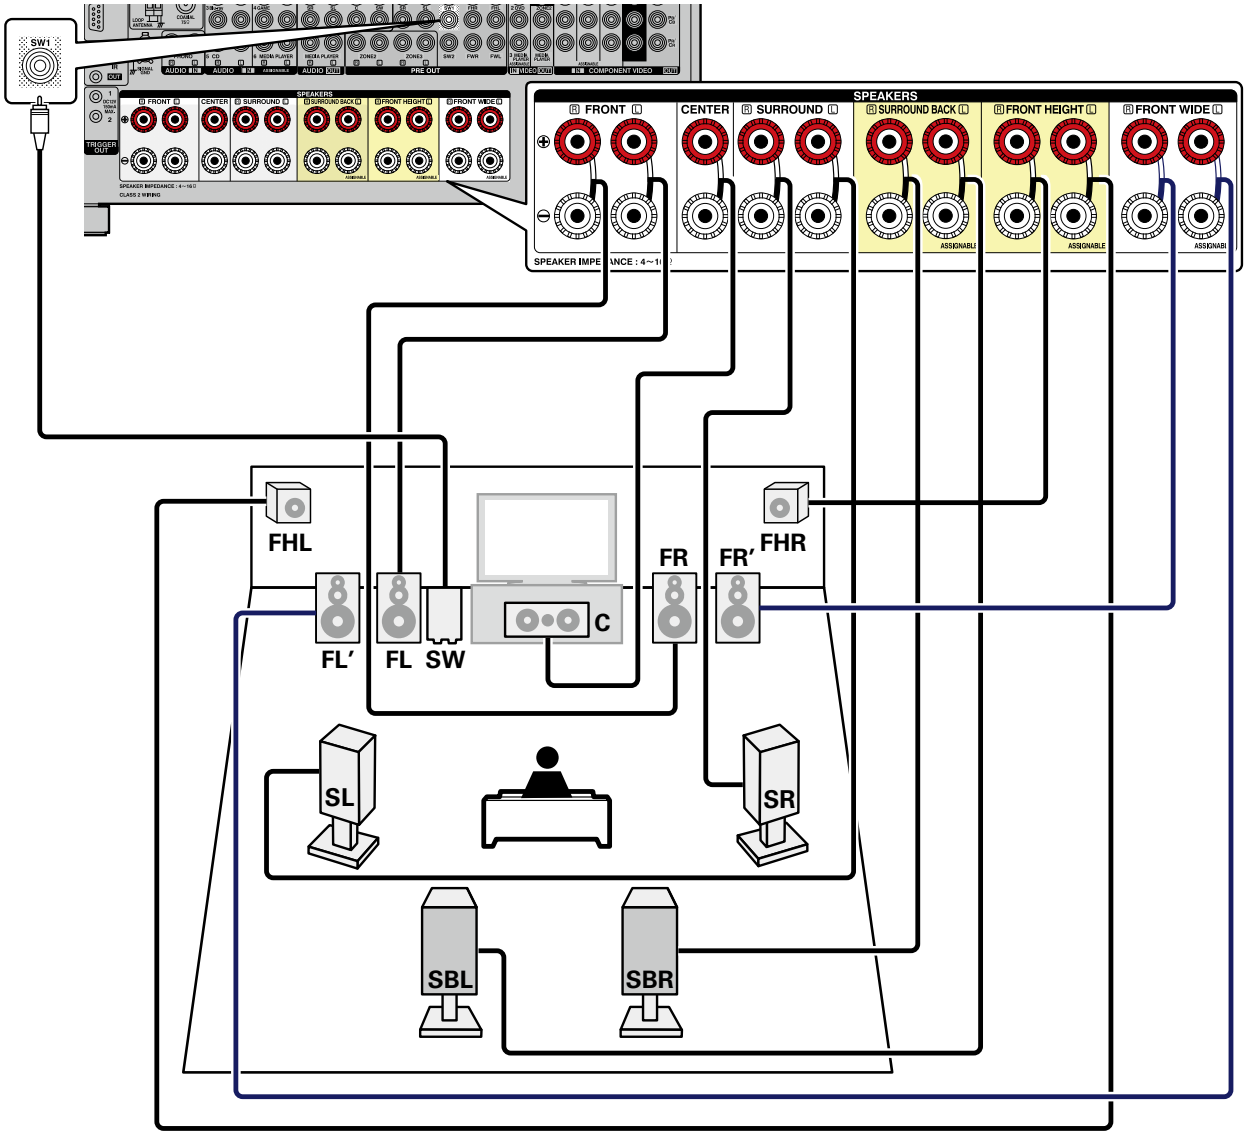

When using a front wide speaker, you can connect a second front speaker to the connectors on the part in the connection diagram. To make connections for these connectors, set "Main Speakers" (☞page 100).

11.1-channel connection

You can perform playback using up to 11.1 channels using a combination of the built-in power amplifier for 9-channel and an external power amplifier for 2-channel. Connect the external amplifier to the PRE OUT connector.

- To perform 11.1-channel playback, select "Amp Assign" and set "Assign Mode" to "Discrete 11.1ch" using steps 3 and 5 of "Set up "Amp Assign"" (☞page 99).
- You can also follow step 7 in "Set up "Amp Assign"" (☞page 99) to change the PRE OUT connector connected to the power amplifier to the front channel.

NOTE

- **For speaker cable connections, see page 93.**
- **For speaker impedance , see page 93.**

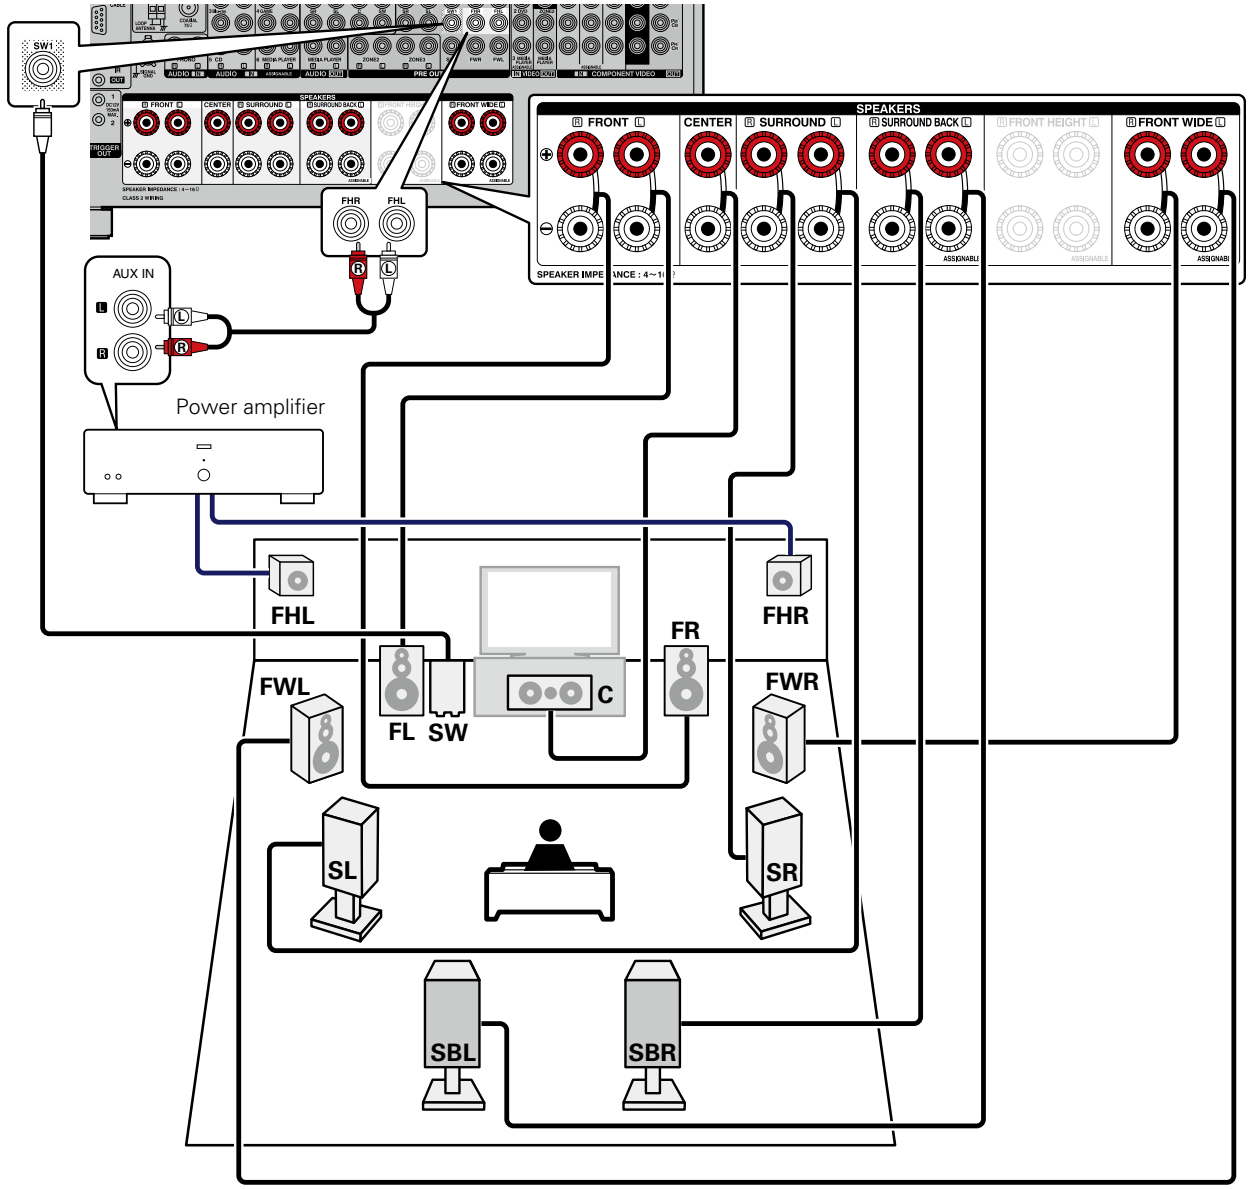

External power amplifier connection

You can connect all speakers to an external power amplifier and use this unit as a preamplifier.
Using this unit as a preamplifier, you can perform up to 11.1-channel playback.
When the preamplifier mode is used, the built-in power amplifier operation of this unit is stopped, and interference to the preamplifier from the power amplifier can be reduced.
To use this unit as a preamplifier, select “Amp Assign” and set “Assign Mode” to “Pre Amplifier” using steps 3 and 5 of “Set up “Amp Assign”” (☞page 99).

For connecting power amplifier and speaker systems, refer to the instruction manual supplied with the power amplifier to be used.

NOTE

- **For speaker cable connections, see page 93.**
- **For speaker impedance , see page 93.**

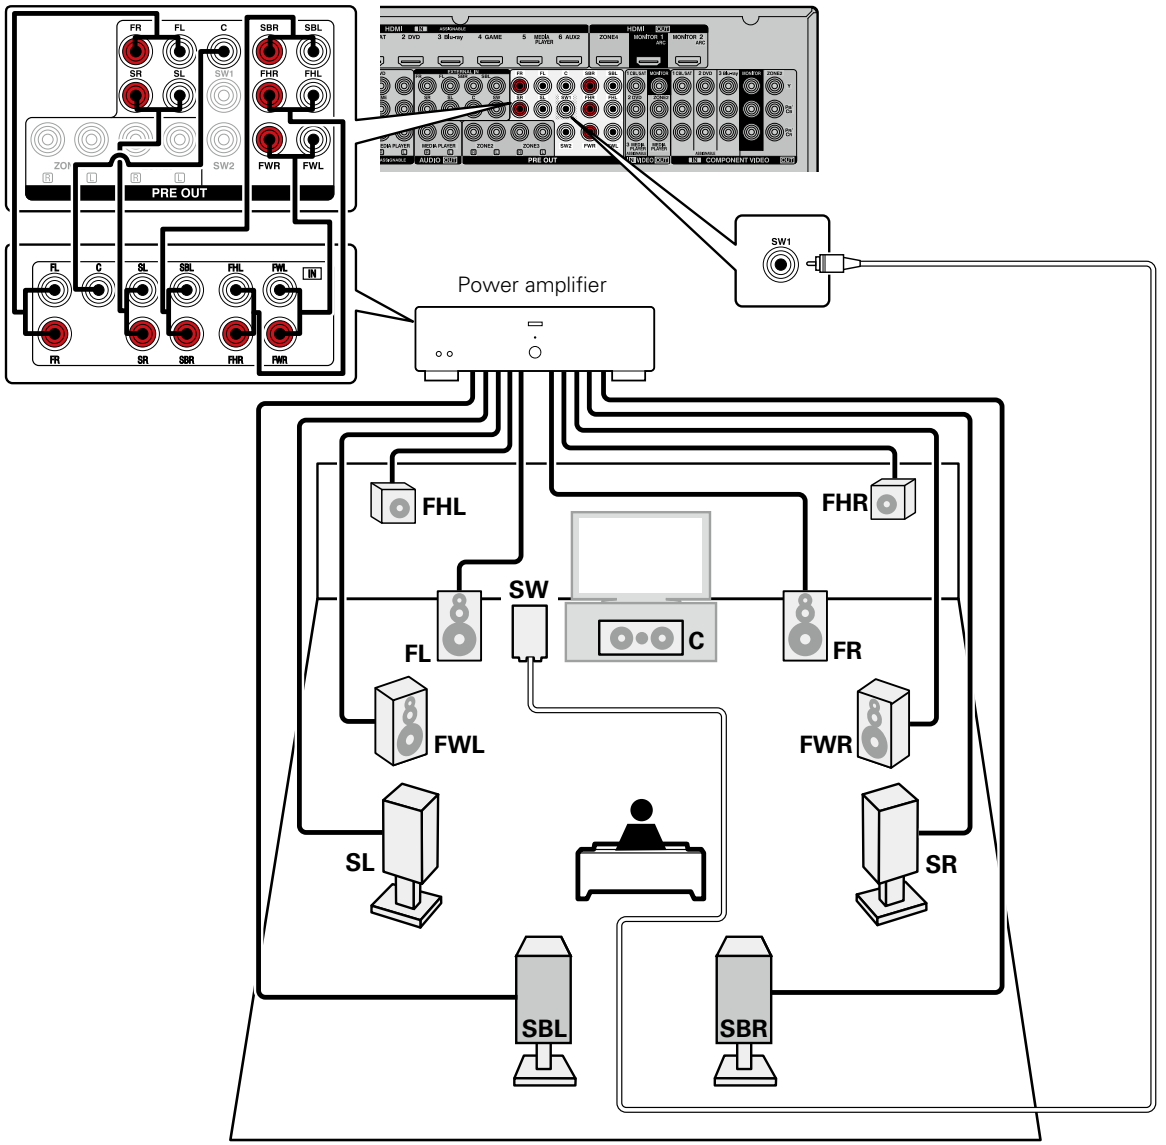

Set up speakers

□ around items indicate the settings.

This section describes detailed settings for Audyssey® Setup.

First install and connect the speakers to this unit.

Before Audyssey® Setup measurement, the settings shown below can be made.

- Changing the amplifier assignment (Amp Assign)
  The signal output from the SURROUND BACK, FRONT HEIGHT and FRONT WIDE speaker terminal of this unit can be switched to match your speaker environment (☞page 99 "Set up "Amp Assign"").
- Setting the channels to be used (Channel Select)
  If channels that are not to be used are set in advance, measurement for the set channels is skipped, and measuring time can be reduced. You can also change the number of surround back speakers (☞page 101 "Set up "Channel Select"").

1 Set up the zone mode

Press ZONE SELECT to switch the zone mode.
The [M] indicator lights.

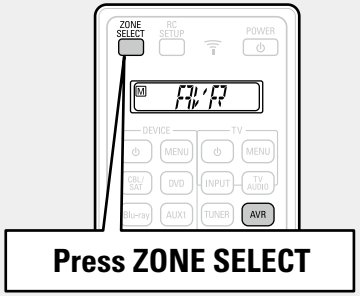

NOTE

When using a remote control with preset codes registered (☞page 160), press **AVR** to set the remote control to the AVR-operation mode before operation.

2 Connect the setup microphone.

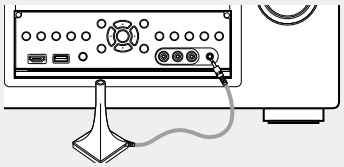

When the setup microphone is connected, the following screen is displayed.

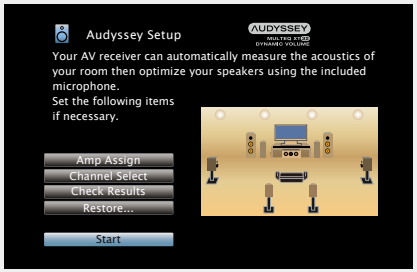

3 Set up "Amp Assign"

Use △▽ to select "Amp Assign", and then press ENTER.

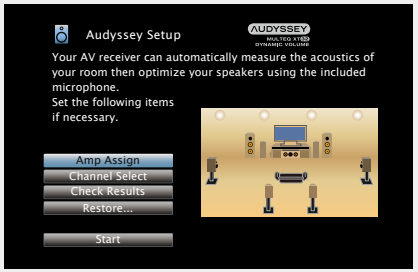

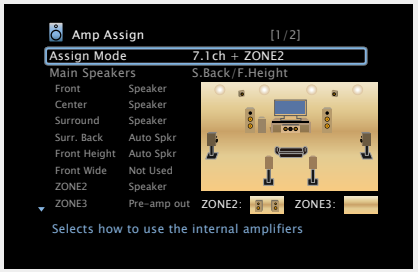

4 Select "Assign Mode", and then press ENTER.

☞ See overleaf

5 Use ◁ ▷ to select the configuration of the connected speakers, and then press ENTER.

9.1ch (SB/FH/FW)	Assigns all power amplifiers within this unit for MAIN ZONE. Up to 9.1ch playback is available. In this case, go to step 6.
7.1ch + ZONE2	Assigns power amplifiers within this unit as follows: 7.1ch for MAIN ZONE and 2ch for ZONE2. In this case, go to step 6.
5.1ch + ZONE2/3	Assigns power amplifiers within this unit as follows: 5.1ch for MAIN ZONE and 2ch for ZONE2 and ZONE3 each. In this case, go to step 11.
7.1ch + ZONE2/3-MONO	Assigns power amplifiers within this unit as follows: 7.1ch for MAIN ZONE and 1ch for ZONE2 and ZONE3 each. In this case, go to step 6.
7.1ch(Bi-Amp)	Assigns power amplifiers within this unit as follows: 7.1ch for MAIN ZONE and 2ch for the front speaker bi-amplifier connection. In this case, go to step 6.
5.1ch(Bi-Amp) + ZONE2	Assigns power amplifiers within this unit as follows: 5.1ch for MAIN ZONE, 2ch for the front speaker bi-amplifier connection, and 2ch for ZONE2. In this case, go to step 11.
9.1ch/ 2ch Front	Assigns all power amplifiers within this unit for MAIN ZONE. Up to 9.1ch playback is available. You can also use a front speaker that is different from the one used during multi-channel playback for playback by switching the internal power amplifier during 2ch playback. In this case, go to step 6.
7.1ch/2ch Front(Bi-Amp)	Assigns power amplifiers within this unit as follows: 7.1ch for the MAIN ZONE multi-channel playback. You can also use a front speaker that is different from the one used during multi-channel playback for playback under the bi-amplifier connection by switching the internal power amplifier during 2ch playback. In this case, go to step 11.
7.1ch + Front B	Assigns power amplifiers within this unit as follows: 7.1ch for MAIN ZONE and 2ch for the second front speaker connection. In this case, go to step 6.
Discrete 11.1ch	Assigns 9.1ch for power amplifiers within this unit and 2ch (front/front height) for the external power amplifier connection. Up to 11.1ch playback is available. In this case, go to step 7.
Pre Amplifier	Connects all speakers by using an external power amplifier and uses this unit as a preamplifier. In this case, go to step 8.
Custom	Assigns power amplifiers within this unit as you prefer. In this case, go to step 10.

6 Use △▽ to select "Main Speakers" and use ◁ ▷ to select the speakers that output audio in MAIN ZONE.

S.Back/F.Height	Outputs audio from the surround back and front height speakers.
S.Back/F.Wide	Outputs audio from the surround back and front wide speakers.
F.Height/F.Wide	Outputs audio from the front height and front wide speakers. When the setting is completed, go to step 11.

7 Use △▽ to select "Main Pre-amps" and use ◁ ▷ to select the PRE OUT connectors that connect the external power amplifier.

Front	Connects the front channel PRE OUT connectors to the external power amplifier.
Front Height	Connects the front height channel PRE OUT connectors to the external power amplifier. When the setting is completed, go to step 11.

8 Use △▽ to select "Pre-amp Assign" and use ◁ ▷ to select how to use the PRE OUT connectors.

All	Select this to use the PRE OUT connectors without using power amplifiers within this unit and use this unit as a preamplifier.
Custom	Sets whether to use each channel as a preamplifier or use speakers. When the setting is completed, go to step 9.

9 Use △▽ to select a channel to set and use ◁ ▷ to make the setting.

Speaker	Select this to use speakers.
Pre-amp out	Select this to output audio only from the PRE OUT connectors. When the setting is completed, go to step 11.

10 Use △▽ to select a speaker and use ◁ ▷ to set audio output from each speaker connector as you prefer.

• For details, see "Assign Mode" (☞page 141).

11 Press ENTER.

12 Press ◁ or BACK to exit the "Amp Assign" setting.

☞ See overleaf

13 Set up "Channel Select"

Use △▽ to select "Channel Select", and then press **ENTER**.

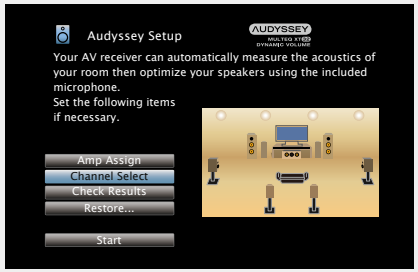

14 Use △▽ to select a channel, and then press ENTER.

Front / **Subwoofer** / **Surround Back** / **Front Height** / **Front Wide**

15 Use ◁ ▷ to select a front speaker, and then press ENTER.

A	Select this to use front speaker A.
B	Select this to use front speaker B.
A+B	Select this to use front speakers A and B simultaneously.

16 Use ◁ ▷ to set whether or not a subwoofer channel is measured, and then press ENTER.

Measure (2 spkrs)	Set for measuring two subwoofers (Audyssey Sub EQ HT™).
Measure (1 spkr)	Set for measuring a subwoofer.
Skip	Set for no measuring of a subwoofer.

17 Use ◁ ▷ to set whether or not a surround back channel is measured, and then press ENTER.

Measure (2 spkrs)	Set for measuring two surround back speakers.
Measure (1 spkr)	Set for measuring a surround back speaker.
Skip	Set for no measuring of a surround back speaker.

18 Use ◁ ▷ to set whether or not a front height channel is measured, and then press ENTER.

Measure	Set to measure the front height speakers.
Skip	Set when you do not want to measure the front height speakers.

19 Use ◁ ▷ to set whether or not a front wide channel is measured, and then press ENTER.

Measure	Set to measure the front wide speakers.
Skip	Set when you do not want to measure the front wide speakers.

20 Press ◁ or BACK.

Proceed to page 35 **Preparation** step 5.

NOTE

After performing Audyssey® Setup, do not change the speaker connections or subwoofer volume. In event of a change, perform Audyssey® Setup again.

Setup (☞page 33)

Playback (Basic operation) (☞page 41)

Selecting a listening mode (Sound Mode) (☞page 84)

❑ **HDMI control function** (☞page 102)
❑ **InstaPrevue function** (☞page 104)
❑ **Sleep timer function** (☞page 105)
❑ **Quick select function** (☞page 106)
❑ **REC OUT mode** (☞page 107)
❑ **Web control function** (☞page 108)
❑ **Various memory functions** (☞page 110)

HDMI control function

If you connect the unit and an HDMI control function compatible TV or player with an HDMI cable and then enable the HDMI control function setting on each device, the devices will be able to control each other.

❑ Operations possible by HDMI control

- **This unit power off can be linked to the TV power off step.**
- **You can switch audio output devices with a TV operation.**
  When you set "Output audio from amp" in the TV audio output setup operation, you can switch the amp power on.
- **You can adjust this unit volume in the TV volume adjustment operation.**
- **You can switch this unit input sources through linkage to TV input switching.**
- **When playing the player, this unit input source switches to the source for that player.**
- **If you switch the input source of the unit to "TV AUDIO", you can play TV audio with this unit (☞page 10 "About ARC (Audio Return Channel) function").**
- **When "HDMI Control" (☞page 130) in the menu is set to "On", signals input to the HDMI input connector are output to the television or other device connected to the HDMI output connector, even if the power of this unit is in standby (pass-through function).**

To use this unit to play the audio of a TV that does not support the ARC function, connect the TV with an optical-digital or analog connection (☞page 10).

❑ Setting procedure

1 **Set the HDMI output connector corresponding with the HDMI control function.**
Set "HDMI Control" (☞page 130) to "On".

2 **Turn the power on for all the devices connected by HDMI cable.**

3 **Set the HDMI control function for all devices connected by HDMI cable.**
- Please consult the operating instructions for the connected devices to check the settings.
- Carry out steps 2 and 3 should any of the devices be unplugged.

4 **Switch the television input to the HDMI input connected to this unit.**

5 **Switch this unit input to the HDMI input source and check if the picture from the player is ok.**

6 **When you turn the TV's power to standby, check that the power of this unit also goes to standby.**

☞ See overleaf

If the HDMI control function does not operate properly, check the following points.

- Is the TV or player compatible with the HDMI control function?
- Is "HDMI Control" (☞page 130) set to "On"?
- Is "Power Off Control" (☞page 131) set to "All" or "Video"?
- Is "Control Monitor" (☞page 130) set for the monitor output connected to television?
- Is "Control Monitor" (☞page 130) set to the TV that uses the HDMI control function when this unit is connected to two TVs that support HDMI connectors?
- Are the HDMI control function settings of all devices correct?

NOTE

- **When "HDMI Control" is set to "On", it consumes more standby power.**
- The HDMI control function controls operations of a TV that is compatible with the HDMI control function. Make sure that the TV and HDMI are connected when you perform HDMI control.
- Some functions may not operate depending on the connected TV or player. Check the owner's manual of each device for details beforehand.
- When "Power Off Control" on the menu is set to "Off" (☞page 131), this unit is not set to standby even if the connected device is in the standby mode.
- When connection changes are implemented, such as adding connections to HDMI devices, linked operations may be initialized. In this case, you will need to reconfigure the settings.
- When "HDMI Control" is set to "On", it is not possible to assign an HDMI connector to "TV AUDIO" at "Input Assign" (☞page 135).
- Should any of the operations below be performed, the interlocking function may be reset, in which case, repeat steps 2 and 3.
  - "Input Assign" – "HDMI" (☞page 135) setting has changed.
  - "Video Output" (☞page 130) setting is changed.
  - There is a change to the connection between the devices and the HDMI, or an increase in devices.
- The HDMI ZONE4 function is compatible with the HDMI control function.
- The ARC function, Power Off Control function, and Volume Control function is not compatible with the HDMI ZONE4 control function.
- When the HDMI ZONE4 function is used with "HDMI Control" in the menu set to "On", the HDMI ZONE4 control function may not fully work.
- When the power in ZONE4 is on with "HDMI Control" (☞page 130) set to "On" and "Control Monitor" set to "Monitor 1" or "Monitor 2" (☞page 130), the following operations occur (Some example behaviors are listed below.).
  - When the power of the TV used for MAIN ZONE is off and the player selected for ZONE4 starts playback, the TV used for MAIN ZONE is turned on. In this case, the input source selected for MAIN ZONE changes to the input source selected for ZONE4.
  - When playing back a TV used for MAIN ZONE and ZONE4 with an HDMI connection, turning off the TV used for MAIN ZONE also turns off this unit and the player.
  - When a same input source is selected for MAIN ZONE and ZONE4, stopping playback of the player on the TV stops the playback on the player and the video being played back in ZONE4 as well.
- When the power in ZONE4 is on with "HDMI Control" (☞page 130) set to "On" and "Control Monitor" set to "ZONE4" (☞page 130), the following operations occur.
  - When the power of the TV used for ZONE4 is off and the player selected for MAIN ZONE starts playback, the TV used for ZONE4 is turned on. In this case, the input source selected for ZONE4 changes to the input source selected for MAIN ZONE.
  - When playing back a TV used for ZONE4 and MAIN ZONE with an HDMI connection, turning off the TV used for ZONE4 also turns off the player.
  - When a same input source is selected for ZONE4 and MAIN ZONE, stopping playback of the player on the TV stops the playback on the player and the video being played back in MAIN ZONE as well.

InstaPrevue function

You can display sub screens on the main screen to preview playback video of the HDMI input connected to this unit. You can also display various video inputs in a single screen to switch input sources such as Blu-ray, DVD, and GAME while viewing them on sub screens.

The InstaPrevue function is compatible with the HDMI1 – 6 connectors. It is not supported for the HDMI7 / MHL connectors.

Switching input sources

Switch to the desired input source on this unit while viewing sub screens.

1 **Press ZONE SELECT to switch the zone mode.**
The [M] indicator lights.

2 **Press InstaPrevue.**
The main screen (current input video) and sub screens (other input video) are displayed.

3 **Use △▽◁ ▷ to select the desired input source from the sub screen, and press ENTER.**

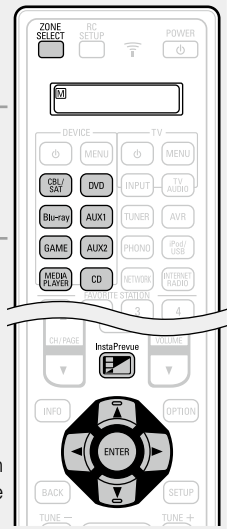

❑ **To operate devices with the remote control unit of this unit after selecting the input source:**
While sub screens are displayed, press an input source select button to select the desired input source.

Before you can perform this operation, you must register preset codes for the remote control unit (☞page 157).

Setting how to display sub screens

You can select to display five sub screens or only one sub screen.

1 **While sub screens are displayed, press OPTION.**
The InstaPrevue setting screen is displayed.

2 **Press ◁ ▷ in "HDMI Input" to select how to display sub screens.**

All	Displays five sub screens.
One at time	Displays only one sub screen.

3 **Press OPTION to enter the setting.**

Changing the display location of sub screens

You can change the display location of sub screens to a desired location.

1 **While sub screens are displayed, press OPTION.**
The InstaPrevue setting screen is displayed.

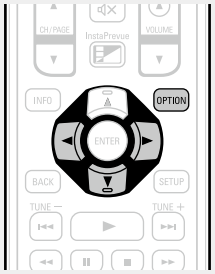

2 **Press ▽ to select "Location" and use ◁ ▷ to select the location where you want to display sub screens.**

- The locations where sub screens can be displayed differ according to the "HDMI Input" setting.

❑ **When "HDMI Input" is set to "All"**



- The default setting is "Bottom".

❑ **When "HDMI Input" is set to "One at time"**

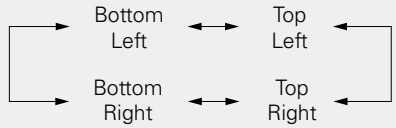

- The default setting is "Bottom Left".

3 **Press OPTION to enter the setting.**

NOTE

- The InstaPrevue function is available when HDMI signals are input to the main screen. However, it is not available while computer's resolution (e.g. VGA) or 3D video contents is being played back.
- The InstaPrevue function is not available for the ZONE4 HDMI monitor output. It is also not available when the power in ZONE4 is on.

Sleep timer function

- You can have the power automatically switched to standby once a set time has elapsed. This is convenient for viewing and listening while going to sleep.
- The sleep timer function can be set for each zone (☞page 113 "Sleep timer function"). (The MAIN ZONE setting method is explained here.)

1 **Press ZONE SELECT to switch the zone mode.**
The [M] indicator lights.

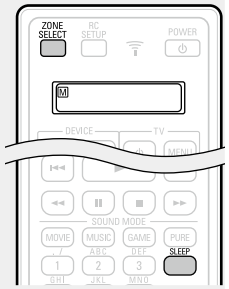

2 **Press SLEEP and display the time you want to set.**
The [S] indicator on the display lights.

- The time switches as shown below each time **SLEEP** is pressed.

Off → 10 min → 20 → 30 → 40 → 50 → 60 → 70 → 80 → 90 → 100 → 110 → 120

To confirm the countdown time before putting the unit to sleep

Press **SLEEP**.
"Sleep : ✻min" appears on the display.
✻ Countdown time

To cancel the sleep timer

Press **SLEEP** to set "Off".
The [S] indicator on the display turns off.

- The sleep timer setting is canceled if this unit's power is set to standby.
- The sleep timer function can be set separately for the different zones (☞page 113 "Sleep timer function").

NOTE

The sleep timer function cannot turn off the power of devices connected to this unit. To turn off the power of those connected devices, set up sleep timers on the connected devices themselves.

Quick select function

You can save settings such as the input source selection, volume level, and sound mode at the **QUICK SELECT 1 – 4** buttons.
You can simply press one of the set **QUICK SELECT** buttons for subsequent playback to switch to various saved settings all at once.

- By saving frequently used settings at the **QUICK SELECT 1 – 4** buttons, you will always be able to easily call up the same playback environment.

Press QUICK SELECT.

The Quick Select settings for the button you pressed are called up.

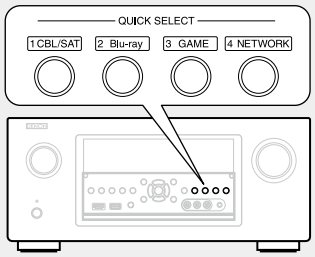

- The default settings of each Quick Select function are as shown below.

Button	Input source	Volume	Sound Mode
QUICK SELECT 1	CBL/SAT	40	STEREO
QUICK SELECT 2	Blu-ray	40	STEREO
QUICK SELECT 3	GAME	40	STEREO
QUICK SELECT 4	NETWORK	40	STEREO

Changing the Quick Select Name

On this unit, you can change the Quick Select Name displayed on the menu to the name that you prefer.
For the name change method, see "Quick Select Names" (☞page 152).

❑ Changing the settings

1 Set the items below to the settings you want to save.

① Input source* (☞page 41)
② Volume (☞page 42)
③ Sound Mode (☞page 84)
④ Audyssey
(Audyssey MultEQ® XT 32, Audyssey Dynamic EQ®, Audyssey Dynamic Volume®) (☞page 125)

2 Press and hold the desired QUICK SELECT until "Quick* Memory" appears on the display.

The current settings will be memorized.

* The number for the **QUICK SELECT** button you pressed is displayed.

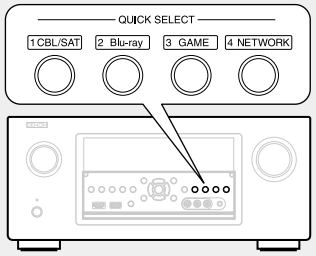

REC OUT mode

- When using the audio/video recording connectors (MEDIA PLAYER outputs), you can record the audio or video from a different program source while listening to the currently played track.
- For the connection method, see "Connecting a media player" (☞page 22).

1 Press ZONE/REC SELECT until "RECOUT Source" is displayed.

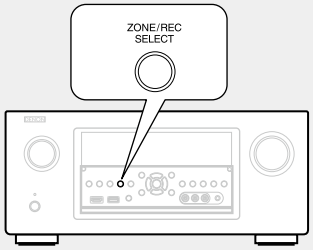

2 Press ZONE/REC SELECT to choose the input source to be recorded.

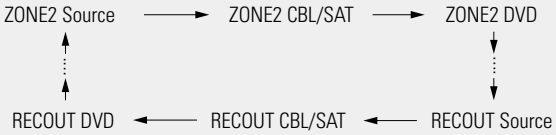

3 Start recording.

- For operating instructions, refer to the respective device's operating instructions.

- To cancel, press **ZONE/REC SELECT** until "ZONE2 Source" is displayed.
- Make a test recording before starting the actual recording.
- Sources selected with the REC OUT mode are output from ZONE2 as well.
- The operable buttons on the remote control unit in REC OUT mode while it is in the operating mode for ZONE2 are as follows:
  - **ZONE SELECT** button
  - **MUTE** button (🔇)
  - **VOLUME** button (▲▼)

NOTE

- Recordings you make are for your personal enjoyment and should not be used for other purposes without permission of the copyright holder.
- Input sources for which "Hide" is selected at "Hide Sources" (☞page 137) cannot be selected.
- To record video signals through this unit, use the video cable for connection between this unit and the player.
- Make an analog connection for audio signals.

Web control function

You can control this unit from a web control screen on a web browser.

- This unit and the PC need to be connected to the network properly (☞page 31 "Connecting to a home network (LAN)") in order to use the web control function.
- Depending on the settings of your security-related software, you may not be able to access this unit from your PC. If this is the case, then change the settings of the security-related software.

1 Switch the "Network" setting to "Always On" (☞page 147).

2 Check the IP address of this unit with "Information" (☞page 147).

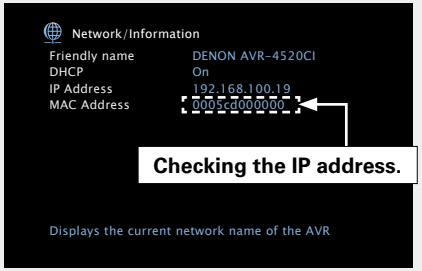

3 Start up the web browser.

4 Enter the IP address of this unit in browser's address box.

For example, if the IP address of this unit is "192.168.100.19", enter "http://192.168.100.19/".

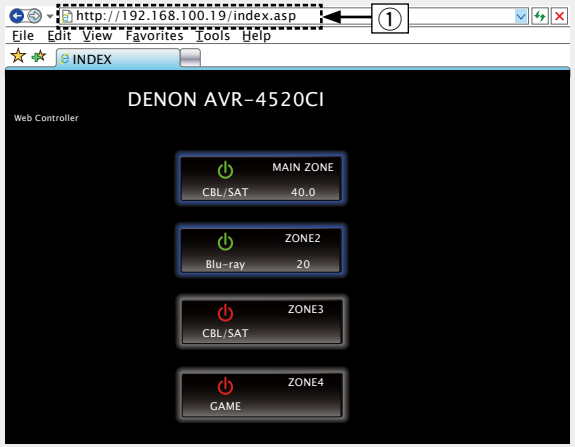

① Entering the IP address.

- By adding this unit's IP address to the browser's bookmark, you can display the web control screen using the bookmark function the next time you use the browser. If you are using a DHCP server and "Network" (☞page 147) is set to "Off In Standby", turning the power on/off changes the IP address.

5 When the top menu is displayed, click on the menu item you want to operate.

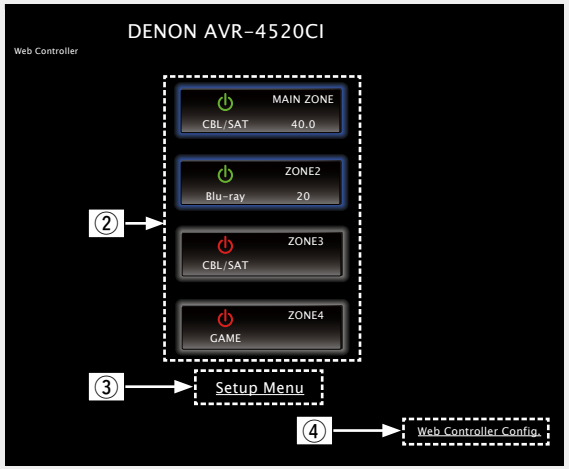

② Click when you select the zone to operate. (☞**[Example 1]**)
③ Click when you operate the setup menu. (☞**[Example 2]**)
④ Click to change the Web control screen setting. (☞**[Example 3]**)

☞ See overleaf

6 Operate.

【Example 1】 MAIN ZONE control screen

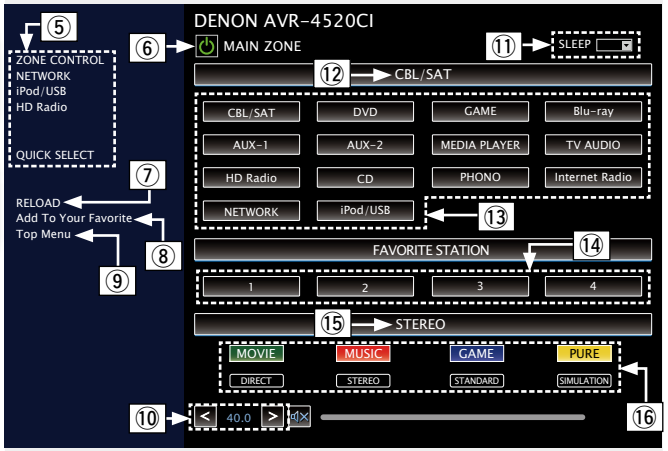

⑤ Click the menu item from which you want to make settings.
The display on the right becomes the individual setting screens. (☞**【Example 4】**)

⑥ Click when you perform a power operation of the unit.

⑦ Click when you update to the latest information.
Normally, there is a change to the latest information each time you operate. When operating from the main unit, click this or else the screen will not be updated.

⑧ Click to add a setting to "Favorites" in your browser.
We recommend registering the setting screens for the different zones in the browser's favorites so as not to accidentally perform menu operations for zones you do not intend to operate.

⑨ Click to return to the top menu.
Displayed when setting "Top Menu Link Setup" to "ON" in **【Example 3】**

⑩ To adjust the main volume, click "<", ">", or the volume display.

⑪ Click "v" to set the sleep timer function.

⑫ Displays the name of the selected input source.

⑬ Click a button to change the input source.

⑭ Register your favorite content.

⑮ Displays the sound mode.

⑯ The sound mode switches you click the button.

【Example 2】 Setup menu screen

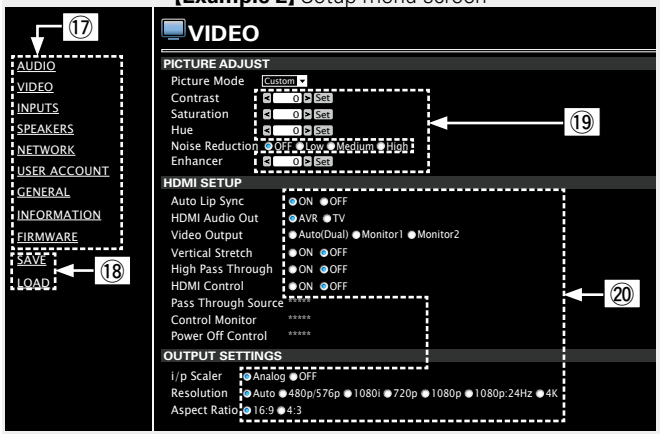

⑰ Click the menu item from which you want to make settings.
The display on the right becomes the individual setting screens.

⑱ Click "SAVE" when you want to save settings, and click "LOAD" when you want to call settings.

⑲ Enter figures or click "<" or ">" to make the setting, and then click "Set".

⑳ Click an item to make a setting.

【Example 3】 Web configuration screen

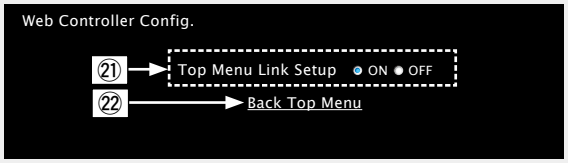

㉑ Click "ON" when performing Top Menu Link Setup.
When set up, return to the top menu from each operation screen.
(Default setting : "OFF")

㉒ Click this item to return to the top menu.

【Example 4】 Network audio operating screen

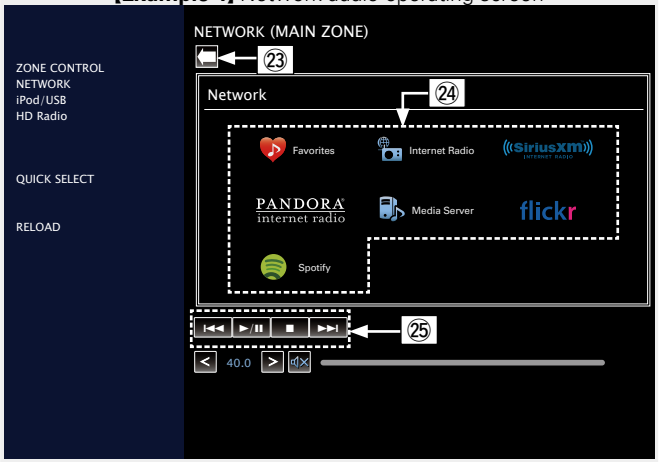

㉓ Click to return to the previous screen.

㉔ Click the content you want to operate.

㉕ Use to operate content.

Various memory functions

Personal memory plus function

This function sets the settings (input mode, sound mode, HDMI output mode, MultEQ® XT 32, Dynamic EQ, audio delay etc.) last selected for the individual input sources.

The surround parameters, tone settings and the volumes of the different speakers are stored for the individual sound modes.

Last function memory

This function stores the settings which were made before going into the standby mode.
When the power is turned back on, the settings are restored.

Playback in ZONE2/ZONE3/ZONE4 (Separate room)

- You can operate this unit so as to enjoy audio in a room (ZONE2, ZONE3 and ZONE4) other than the MAIN ZONE (room where the unit is located).
- You can simultaneously play back the same source in both the MAIN ZONE, ZONE2, ZONE3 and ZONE4. You can also play back separate sources in the MAIN ZONE, ZONE2, ZONE3 and ZONE4.
- When a TV is connected to the HDMI ZONE4 OUT connector, you can play back a video or audio from the device connected to the HDMI 1 – 6 IN connector in ZONE4 (**HDMI ZONE4 function**).

The source selected for ZONE2 is also output from the recording output connectors (MEDIA PLAYER).

NOTE

The following restrictions apply to the HDMI ZONE4 function.

- If you select a same input source for MAIN ZONE and ZONE4, audio playback may be restricted or video may be interrupted.
- Video may not be output depending on the resolution of the TV used for MAIN ZONE and ZONE4. In this case, use your player to set the resolution of the TV.
- When HDMI ZONE4 function is used, you cannot set the following.
  - Picture Adjust
  - Auto Lip Sync
  - Video Mode
  - Video Conversion
  - i/p Scaler
  - Progressive Mode
  - Aspect Ratio
  - Setup menu display

Audio output

It is possible to play 2-channel audio in rooms other than the MAIN ZONE where multi-channel playback is done. Choose one of the methods.

① Zone playback by speaker output

② Zone playback by audio output (PRE OUT)
Use an external amplifier.

① Zone playback by speaker output

- When "Assign Mode" (☞page 141) in the menu is set to any of the following, audio is output from speakers in ZONE2 or ZONE3.
  - 7.1ch + ZONE2
  - 7.1ch + ZONE2/3-MONO
  - 5.1ch + ZONE2/3
  - 5.1ch(Bi-Amp) + ZONE2

Also, connectors that ZONE2 or ZONE3 speakers are connected to differ according to the "Main Speakers" (☞page 141) setting.

❑ Connecting and setting the speakers

"Assign Mode" setting (☞page 141) and audio signals output		Connecting the speakers
7.1ch + ZONE2 **5.1ch(Bi-Amp) + ZONE2**	Output signal : Stereo (L / R)	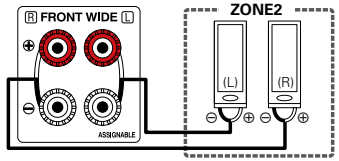
5.1ch + ZONE2/3	Output signal : Stereo (L / R)	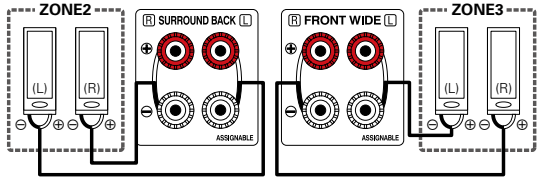
7.1ch + ZONE2/3-MONO	Output signal : Monaural	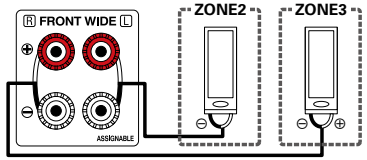

☞ See overleaf

② Zone playback by audio output (PRE OUT)

❑ Audio connections (ZONE2, ZONE3)

The audio signals of this unit's ZONE2 and ZONE3 audio output terminals are output to the ZONE2 and ZONE3 amplifiers and played on these amplifiers.

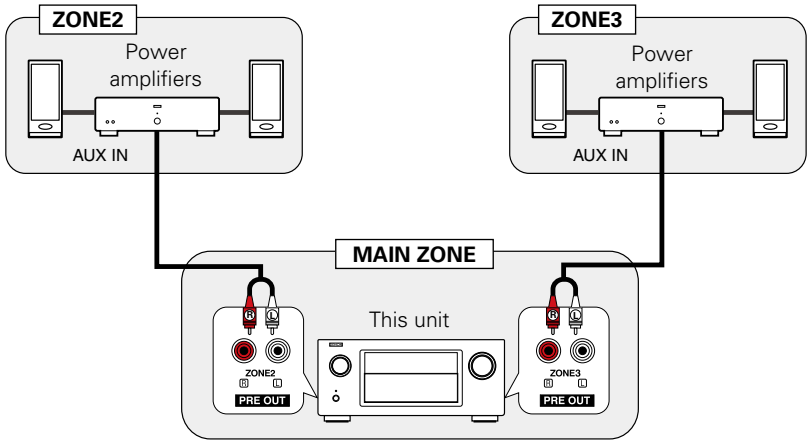

We recommend using high quality pin-plug cables for audio connections in order to prevent noise.

NOTE

In ZONE2 or ZONE3, the digital audio signals input from the HDMI, COAXIAL or OPTICAL connector cannot be played back. When playing back in ZONE2 or ZONE3, make an analog connection, network or iPod/USB.

Video output

Video Connection

The video signals of this unit's ZONE4 video output connector are played by the ZONE4 TV.

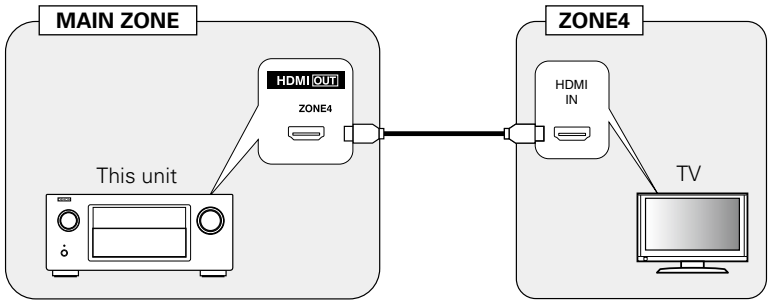

The video signals of this unit's ZONE2 video output connector are played by the ZONE2 TV.

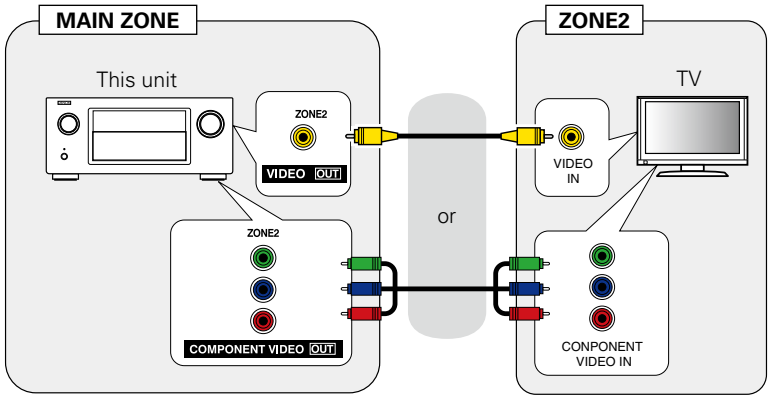

- When "Analog Video Out" (☞page 132) in the menu is set to "ZONE3", you can use the COMPONENT VIDEO OUT and the VIDEO MONITOR OUT connectors in MAIN ZONE for ZONE3.
- To enable the HDMI control for the ZONE4 HDMI monitor, set "Control Monitor" (☞page 130) to "ZONE4".

Playback

1 **Press ZONE SELECT to switch the zone mode.**
The Z2, Z3 or Z4 indicator lights.

2 **Press POWER ⏻ to turn on the ZONE2, ZONE3 or ZONE4 power.**

- Also press input source select button when in standby mode, the power turns on.
- When **POWER** ⏻ is pressed, ZONE2, ZONE3 or ZONE4 turns off.
- Power in ZONE2, ZONE3 or ZONE4 can be turned on or off by pressing **ZONE2 ON/OFF**, **ZONE3 ON/OFF** or **ZONE4 ON/OFF** on the main unit.

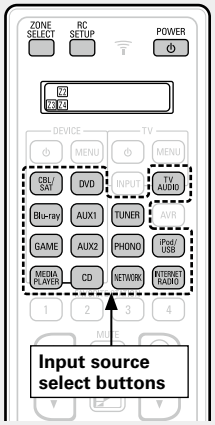

3 **Press the input source select button to select the input source to be played.**
The audio and video signal of the selected source is output to ZONE2, ZONE3 or ZONE4.

- Turn **SOURCE SELECT** after pressing **ZONE/REC SELECT** on the main unit to select an input source.

When power for both MAIN ZONE and ZONE2 (ZONE3 or ZONE4) is set to ON, power of the MAIN ZONE only can be turned off. Select MAIN ZONE in step 1 then press **POWER** ⏻.

Adjusting the volume

Use **VOLUME ▲▼** to adjust the volume.

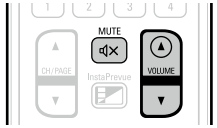

[Adjustable range] **0 – 40 – 98**
(When the "Scale" (☞page 124) setting is "0 – 98")

[Adjustable range] **– – –** **–79dB – –40dB – 18dB**
(When the "Scale" (☞page 124) setting is "–79.5dB – 18.0dB")

- At time of purchase, "Volume Limit" (☞page 151) is set to "70 (–10dB)".

Turn **MASTER VOLUME** after pressing **ZONE/REC SELECT** on the main unit to adjust the sound volume.

NOTE

For ZONE4, you cannot use **VOLUME ▲▼** to adjust the volume level.

Turning off the sound temporarily

Press **MUTE** 🔇.
The sound is reduced to the level set at "Mute Level" (☞page 151) in the menu.

- To cancel, either adjust the volume or press **MUTE** 🔇 again.
- The setting can also be cancelled by adjusting the volume or turning off the ZONE2 or ZONE3 power.

- You can adjust the tone and volume for ZONE2 or ZONE3 in "ZONE2 Setup" or "ZONE3 Setup" (☞page 151) in the menu.
- The All Zone Stereo function allows you to simultaneously enjoy in multi-zones (ZONE2/ZONE3) the music that is played back in MAIN ZONE during home party, etc. (☞page 80 "All Zone Stereo function").

Sleep timer function

- This is convenient for viewing and listening while going to sleep in ZONE2, ZONE3 or ZONE4.
- The sleep timer function can be set by zone.

1 **Press ZONE SELECT to switch the zone mode.**
The Z2, Z3 or Z4 indicator lights.

2 **Press SLEEP and display the time you want to set.**

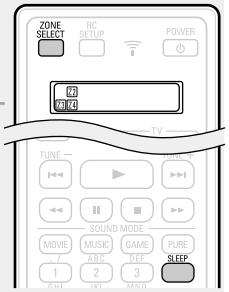

- The time switches as shown below each time **SLEEP** is pressed.

Off → 10 min → 20 → 30 → 40 → 50 → 60 → 70 → 80 → 90 → 100 → 110 → 120

To confirm the countdown time before putting the unit to sleep

Press **SLEEP**.
"Z2 Sleep : ∗min", "Z3 Sleep : ∗min" or "Z4 Sleep : ∗min" appears on the display.
∗ Countdown time

To cancel the sleep timer

Press **SLEEP** to set "Off".

The sleep timer is also cancelled when this unit is set to the standby mode or the ZONE2, ZONE3 or ZONE4 power is turned off.

NOTE

The sleep timer function cannot turn off the power of devices connected to this unit. To turn off the power of those connected devices, set up sleep timers on the connected devices themselves.

How to make detailed settings

Menu map

For menu operation, connect a TV to this unit and display the menu on the TV screen. For menu operations, see the following page.
By default, this unit has recommended settings defined. You can customize this unit based on your existing system and your preferences.

Setting items	Detailed items	Description	Page
Audio	**Dialog Enhancer**	Adjusts and enhances the frequency band corresponding to the human voice at the center channel to make the voice clearer.	121
	Subwoofer Level	This setting adjusts the volume level for the subwoofer.	121
	Surround Parameter	Adjusts surround sound parameters.	121
	Tone	Adjusts the tonal quality of the sound.	123
	Restorer	Expands the low and high frequency components of compressed audio to enable richer audio playback.	124
	Audio Delay	Compensates for incorrect timing between video and audio.	124
	Volume	Set the MAIN ZONE (room where the unit is located) volume setting.	124
	Audyssey	Makes Audyssey MultEQ® XT 32, Audyssey Dynamic EQ®, Audyssey Dynamic Volume®, Audyssey LFC™ and Audyssey DSX® settings.	125
	Graphic EQ	Uses the graphic equalizer to adjust the tone of each speaker.	127
Video	**Picture Adjust**	Adjusts the video quality.	129
	HDMI Setup	Makes settings for HDMI video/audio output.	129
	Output Settings	Makes screen-related settings.	131
	Analog Video Out	Assigns the zone that uses the VIDEO MONITOR OUT connectors.	132
	On Screen Display	Select the on-screen display user interface preferences.	133
	TV Format	Set the video signal format to be output for the TV you are using.	133

Setting items	Detailed items	Description	Page
Inputs	**Input Assign**	Changes input connector assignment.	135
	Source Rename	Changes the display name for this source.	137
	Hide Sources	Remove from the display input sources that are not used.	137
	Source Level	Adjusts the playback level of the audio input.	137
	Input Select	Sets the audio input mode and decode mode.	138
	Video Source	Video of another input source is played back combined with the playing audio.	138
Speakers	**Audyssey® Setup**	The acoustic characteristics of the connected speakers and listening room are measured and the optimum settings are made automatically.	33, 99
	Manual Setup	Perform when setting the speakers manually or when changing settings made in Audyssey® Setup.	141
Network	**Information**	Display network information.	147
	Network	Enables network communication in standby power mode.	147
	Friendly Name	The Friendly Name is the name of this unit displayed on the network. You can change the Friendly Name according to your preferences.	147
	Settings	Make settings for wired LAN.	148
	Diagnostics	Used to check the network connection.	149
	Maintenance Mode	Use when receiving maintenance from a DENON service engineer or custom installer.	149

See overleaf

Setting items	Detailed items	Description	Page
General	**Language**	Sets the language for display the menu on the TV screen.	151
	ZONE2 Setup	Makes settings for audio playback in a ZONE2 system.	151
	ZONE3 Setup	Makes settings for audio playback in a ZONE3 system.	151
	Zone Rename	Change the display title of each zone to one you prefer.	152
	Quick Select Names	Change the "Quick Select" display title to one you prefer.	152
	Remote ID	Specifies with remote control code set this AVR will respond to.	152
	Trigger Out 1	Selects when to activate trigger out 1.	152
	Trigger Out 2	Selects when to activate trigger out 2.	152
	Auto Standby	When you do not perform any operation on this unit with no audio or video input for a specified time, this unit automatically enters the standby mode. Before it enters the standby mode, "Auto Standby" is displayed on the display of this unit and the menu screen.	153
	Front Display	Makes settings related to the display on this unit.	153
	Information	Show information about receiver settings, input signals, etc.	153
	Firmware	Set whether or not to check for firmware update, update the firmware, and display update and upgrade notifications.	154
	Setup Lock	Protect settings from inadvertent change.	156
Setup Assistant	Perform the installation, connection, and setup procedures to prepare the unit for operation following guidance.		7

Examples of menu screen displays

Typical examples are described below.

[Example 1]
Menu selection screen (Top menu)

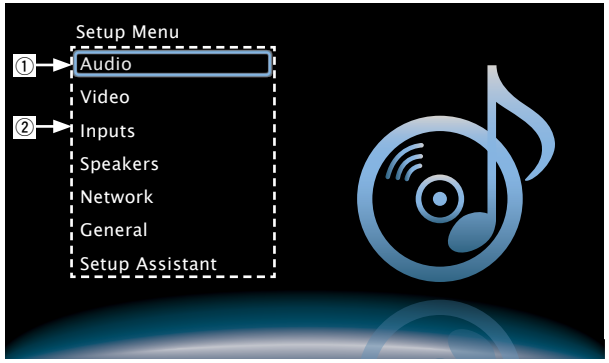

① Currently selected setup item
② List of GUI menu setup items

Use △▽ to select "Audio" and then press ▷. (Or press ENTER.)

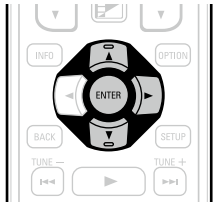

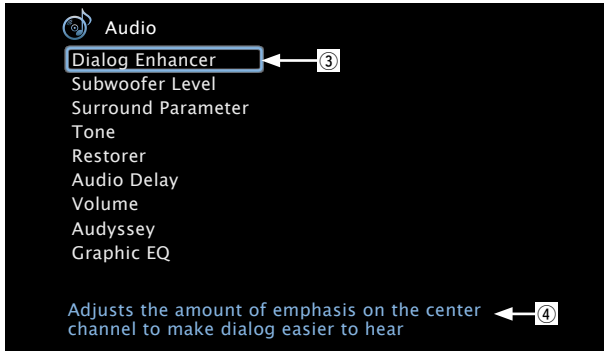

③ Selected setup item
④ Guide text for the currently selected setup item

[Example 2]
Audyssey® Setup screen (with illustration)

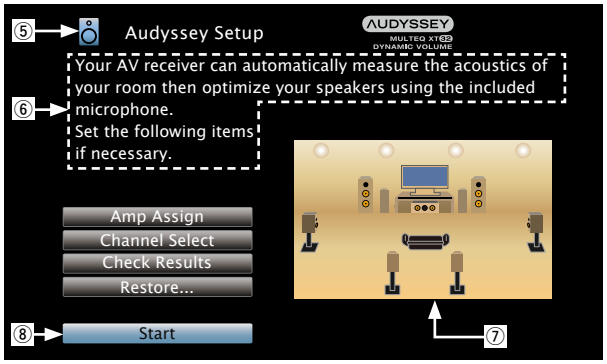

⑤ Currently selected setup icon
⑥ Operation guidance text
⑦ Illustration
⑧ Selected setup item

NOTE

When the menu is operated on a computer's resolution (e.g. VGA) or during playback of certain 3D video content, the playback image switches to the menu screen image.

Examples of menu and front display

Below we describe typical examples of displays on the TV screen and on the set's display window.

	Menu display	Front display	Description
Top menu display	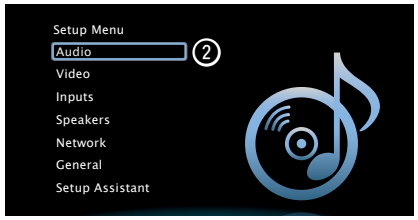		❶ Press **SETUP** to display the menu screen. ❷ TV screen: Displays the selected line. Display: Displays the selected item. • Use △▽ to move to the item you want to set. 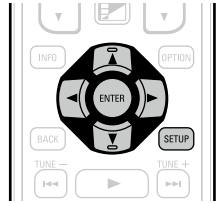
Display when changing settings	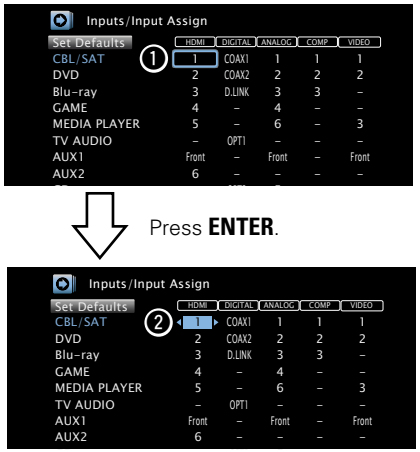	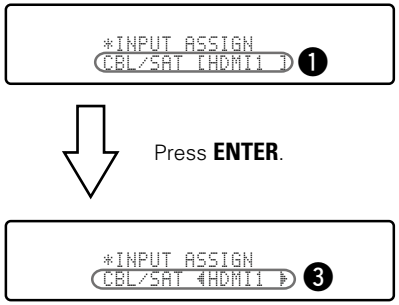	❶ TV screen: Displays the selected line. Display: Displays the selected item. • Use △▽ to move to the item you want to set. ❷ Press **ENTER** to set to the mode in which the setting can be made. ❸ ◄ ► is displayed at the sides of items whose setting can be changed. Use ◁ ▷ to change to the desired setting.
Display when returning to the settings in effect at time of purchase	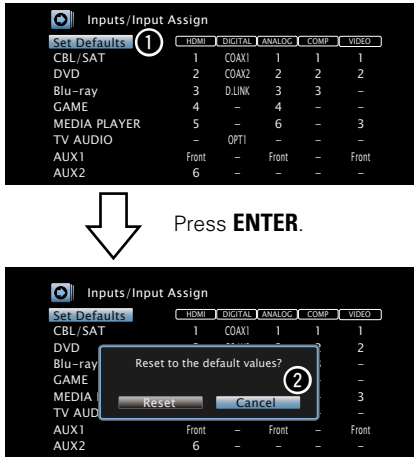	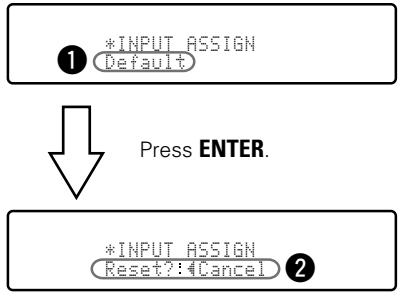	❶ Press △ to select "Set Defaults" or "Default", then press **ENTER**. ❷ Press ◁ to select "Reset", then press **ENTER**.

Inputting characters

On this unit, you can change the name displayed on the following screens to the names that you prefer.

- Text Search (☞page 76)
- Preset Name (☞page 56)
- Source Rename (☞page 137)
- Friendly Name (☞page 147)
- Zone Rename (☞page 152)
- Quick Select Names (☞page 152)
- Character input for the network functions (☞page 59, 67, 69, 72, 74, 148)

Method for inputting characters

Method	Operations
Using the keyboard screen	• Select a character on the TV screen to input characters.
Using the number buttons (10 Key input screen)	• Multiple characters are assigned to a button, and each time the button is pressed, a character is switched.
Using the cursor buttons (10 Key input screen)	• Use △▽◁ ▷ and **ENTER** to input characters.

Keyboard screen

Select a character on the TV screen to input characters.

❑ Input method

1 **Display the screen for inputting characters (☞page 114 "Menu map").**

2 **Select a character to be changed.**

① Use △▽◁ ▷ to select ← or →.

② Press ENTER to place the cursor at the character to be changed.

Each time **ENTER** is pressed, the cursor moves by one character.

3 **Select a character to be input with △▽◁ ▷ then press ENTER.**

- The types of characters that can be input are as shown below.

[Upper case characters/Numbers/Symbols]
ABCDEFGHIJKLMNOPQRSTUVWXYZ
0123456789
! " # $ % & ' ( ) * + , ; < = >
[Lower case characters/Numbers/Symbols]
abcdefghijklmnopqrstuvwxyz
0123456789
. @ - _ / : ~ ? [\ ] ^ ' { | }

4 **Repeat steps 2 and 3 to change the name.**

5 **Use △▽◁ ▷ to select OK, then press ENTER.**

☞ See overleaf

10 Key input screen

❑ Display of a 10 Key input screen

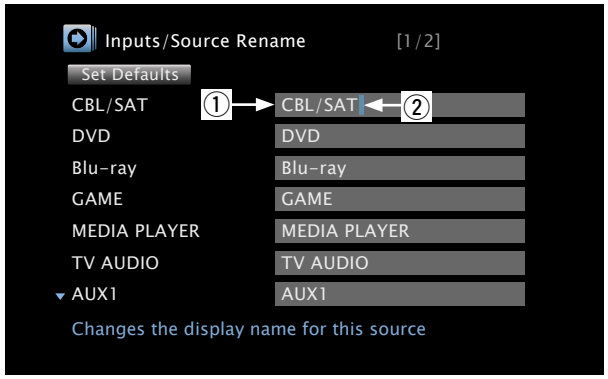

① Character input section
② Cursor

❑ Input method

Using the number buttons

1 **When the keyboard screen is displayed, press 0 – 9.**
The 10 key input screen is displayed.

2 **Place the cursor at the character to be changed with ◁ ▷ and press the number button (0 – 9) until the desired character is displayed.**

• The types of characters that can be input are as shown below.

. / 1	1 . @ - _ / : ~	MNO 6	M N O m n o 6
ABC 2	A B C a b c 2	PQRS 7	P Q R S p q r s 7
DEF 3	D E F d e f 3	TUV 8	T U V t u v 8
GHI 4	G H I g h i 4	WXYZ 9	W X Y Z w x y z 9
JKL 5	J K L j k l 5	␣ * 0	0 (Space) ! " # $ % & ' ( ) * + , ; < = > ? [\ ] ^ ` { | }

• For entering the characters assigned to one number button continuously, press ▷ to move the cursor to the right after entering a character then enter the next character.
• For entering characters assigned to separate buttons, press the number button continuously. The cursor automatically moves to the next position, and the entered character is registered.

3 **Repeat step 2 to change the name then press ENTER to register it.**

Example: For changing the input source from "DVD" to "D&M"

① Place the cursor at "V".	D**V**D
② Press 0 eight times. "V" changes to "&".	D**&**D
③ Press MNO 6. "&" is automatically registered, and "D" changes to "M".	D&**M**
④ Press **ENTER** to register the input source name.	

Using the cursor buttons

1 **When the keyboard screen is displayed, press 0 – 9.**

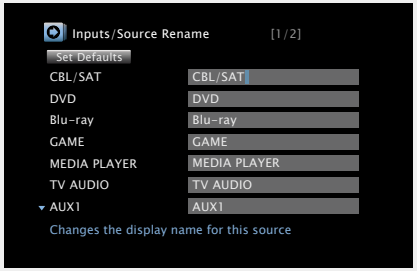

2 **Use ◁ ▷ to set the cursor to the character.**

3 **Use △▽ to change the character.**

• The types of characters that can be input are as shown below.

【Upper case characters】
ABCDEFGHIJKLMNOPQRSTUVWXYZ
【Lower case characters】
abcdefghijklmnopqrstuvwxyz
【Symbols】 **! " # $ % & ' ( ) * + , - . / : ; < = > ? @ [\ ] ^ _ ` { | } ~**
【Numbers】 **0123456789** (Space)

4 **Repeat steps 2 and 3 to change the name then press ENTER to register it.**

Audio

GUI

Make audio-related settings.

Menu operation

1 **Press ZONE SELECT to switch the zone mode.**
The [M] indicator lights.

2 **Press SETUP.**
The menu is displayed on the TV screen.

3 **Use △▽ to select the menu to be set or operated.**

4 **Press ENTER or ▷ to enter the setting.**

- To return to the previous item, press ◁ or **BACK**.
- Exiting the Menu, press **SETUP** while the menu is displayed. The menu display disappears.

Items that can be set with the "Audio" procedure

- **Dialog Enhancer** (☞page 121)
- **Subwoofer Level** (☞page 121)
- **Surround Parameter** (☞page 121)
- **Tone** (☞page 123)
- **Restorer** (☞page 124)
- **Audio Delay** (☞page 124)
- **Volume** (☞page 124)
- **Audyssey** (☞page 125)
- **Graphic EQ** (☞page 127)

Dialog Enhancer

Default settings are underlined.

Adjusts and enhances the frequency band corresponding to the human voice at the center channel to make the voice clearer.

Setting items	Setting details
Enhancer	**Low** / **Medium** / **High** : Enhances the human voice. **Off** : Does not enhance the human voice.

Subwoofer Level

Default settings are underlined.

This setting adjusts the volume level for the subwoofer.

Setting items	Setting details
Subwoofer 1 Level This setting adjusts the volume level for the subwoofer 1.	**–12dB – +12dB (0dB)**
Subwoofer 2 Level This setting adjusts the volume level for the subwoofer 2.	**–12dB – +12dB (0dB)**
Subwoofer Turn subwoofer output on and off.	**On** : The subwoofer is used. **Off** : The subwoofer is not used. NOTE This can be set when the sound mode is "DIRECT" and "PURE DIRECT" (☞page 84) and the "Subwoofer Mode" (☞page 144) is "LFE+Main".

Surround Parameter

Default settings are underlined.

You can adjust the surround audio sound field effects to match your preferences.
The items (parameters) that can be adjusted depend on the signal being input and the currently set sound mode. For details on the adjustable parameters, see "Sound modes and surround parameters" (☞page 184).

NOTE

- Some setting items cannot be set while playback is stopped. Make the settings during playback.
- When the sound mode is "PURE DIRECT", you cannot set the surround parameters.

Setting items	Setting details
Cinema EQ Softens the treble range of movie soundtracks for better understanding.	**On** : "Cinema EQ" is used. **Off** : "Cinema EQ" is not used.
Loudness Management This can be set in the Dolby TrueHD mode. This sets whether to output as specified in "Dynamic Compression" or output directly without compressing the dynamic range of audio recorded in the disc.	**On** : Outputs using the settings made in "Dynamic Compression" and "Dialogue normalization" (☞page 153) are enabled. **Off** : "Dynamic Compression" settings and "Dialogue normalization" are disabled, and the signals on the disk are output as is.
Dynamic Compression Compress dynamic range (difference between loud and soft sounds).	**Auto** : Automatic dynamic range compression on/off control according to source. **Low** / **Medium** / **High** : These set the compression level. **Off** : Dynamic range compression always off. You can set "Auto" only for the Dolby TrueHD source.
Bass Sync For contents recorded in multi-channel such as Blu-ray discs, the recorded low frequency effects (LFE) may be out of synch and delayed. This function corrects such a delay of low frequency effects (LFE).	**0ms – 16ms** How low frequency effects (LFE) are delayed differ according to the disc. Set this to the desired value.

☞ See overleaf

Setting items	Setting details
Low Frequency Effects Adjust the low-frequency effects level (LFE).	❑ **When "Input Mode" (☞page 138) is set other than to "EXTERNAL IN"** **–10dB – 0dB** ❑ **When "Input Mode" (☞page 138) is set to "EXTERNAL IN"** **0dB / 5dB / 10dB / 15dB** For proper playback of the different sources, we recommend setting to the values below. • Dolby Digital sources : 0dB • DTS movie sources : 0dB • DTS music sources : –10dB
Center Gain Distributes the dialogue output from the center channel to the front left and right channels and widens the sound image in the front. You can set this when the sound mode is set to DTS NEO:X.	**0.0 – 1.0**
Panorama Assign front L/R signal also to surround channels for wider sound. You can set this when the sound mode is Dolby PLII in the "Music" mode.	**On** : Set. **Off** : Do not set.
Dimension Shift sound image center to front or rear to adjust playback balance. You can set this when the sound mode is Dolby PLII in the "Music" mode.	**0 – 6 (3)** As you set a smaller number, the surround sound field shifts backward; as you set a larger number, the surround sound field shifts forward.

Setting items	Setting details
Center Width Distributes the dialogue output from the center channel to left and right channels and widens the sound image in the front. You can set this when the sound mode is Dolby PLIIx in the "Music" mode.	**0 – 7 (3)** The smaller the value, the more dialogue is concentrated on the center channel. The larger the value, the more dialogue is distributed to front left and right channels, and the more the sound image widens in the front.
Delay Time Adjust the audio delay time against video to extend the sound field image. You can set this when the sound mode is "MATRIX".	**0ms – 300ms (30ms)**
Effect Level Adjust the sound effect level. You can set this when the sound mode is original listening mode.	**1 – 15 (10)** Set to a lower level if the positioning and sense of phase of the surround signals seems unnatural.
Room Size Determine size of acoustic environment. You can set this when the sound mode is original listening mode.	**Small** : Simulate acoustics of a small room. **Medium small** : Simulate acoustics of a medium-small room. **Medium** : Simulate acoustics of a medium room. **Medium large** : Simulate acoustics of a medium-large room. **Large** : Simulate acoustics of a large room. **NOTE** "Room Size" does not indicate the size of the room in which sources are played.

☞ See overleaf

Setting items	Setting details
Height Gain Control the front height channel volume.	**Low** : Reduce the front height channel volume. **Normal** : Front height channel sound is output with standard sound volume. **High** : Increase the front height channel volume. NOTE "Height Gain" is displayed for the following settings. • When the "Speaker Config." – "Front Height" setting (☞page 142) is set other than to "None". • When sound mode is "PLⅡz" or the PLⅡz decoder is used.
Speaker Select Makes settings for the speakers outputting sound.	❑ **When "Assign Mode" (☞page 141) is set to "7.1ch + ZONE2", "7.1ch + ZONE2/3-MONO" and "7.1ch(Bi-Amp)"** **Surround Back** : Sound is output from the surround back speakers. **Height** : Sound is output from the front height speakers. **Wide** : Sound is output from the front wide speakers. ❑ **When "Assign Mode" (☞page 141) is set to "9.1ch(SB/FH/FW)"** **Back/Height** : Sound is output from the surround back and front height speakers. **Back/Wide** : Sound is output from the surround back and front wide speakers. **Height/Wide** : Sound is output from the front height and front wide speakers. NOTE Only speakers that are set to something other than "None" in "Speaker Config." (☞page 142) can be selected.
Set Defaults The "Surround Parameter" settings are returned to the default settings.	**Reset** : Reset to the defaults. **Cancel** : Do not reset to the defaults. When you select "Set Defaults" and press **ENTER**, the "Reset all surround parameters to the factory defaults?" prompt is displayed. Select either "Reset" or "Cancel", and press **ENTER**. 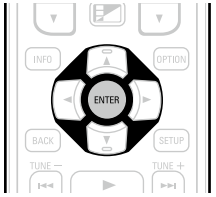

Tone

Default settings are underlined.

Adjust the tonal quality of the sound.

Setting items	Setting details
Tone Control Set the tone control function to "On" and "Off".	**On** : Allow tone adjustment (bass, treble). **Off** : Playback without tone adjustment. "Tone Control" can be set when "Dynamic EQ" (☞page 125) is set to "Off". NOTE • "Tone Control" settings are not reflected to ZONE2 and ZONE3. • The tone cannot be adjusted in the "DIRECT" and "PURE DIRECT" mode.
Bass Adjust bass.	**–6dB – +6dB (0dB)** "Bass" can be set when the menu "Tone Control" setting is "On".
Treble Adjust treble.	**–6dB – +6dB (0dB)** "Treble" can be set when the menu "Tone Control" setting is "On".

Restorer

Compressed audio formats such as MP3, WMA (Windows Media Audio) and MPEG-4 AAC reduce the amount of data by eliminating signal components that are hard for the human ear to hear. The "Restorer" function generates the signals eliminated upon compression, restoring the sound to conditions near those of the original sound before compression. It also corrects the sense of volume of the bass to obtain richer sound with compressed audio signals.

Setting items	Setting details
Mode Set the mode for "Restorer".	**Mode 1 (High)** : Optimized mode for compressed sources with very weak highs (64 kbps and under). **Mode 2 (Middle)** : Apply suitable bass and treble boost for all compressed sources (96 kbps and under). **Mode 3 (Low)** : Optimized mode for compressed sources with normal highs (96 kbps and over). **Off** : Do not use "Restorer". • This item can be set with analog signals or PCM signal (Sample Rate = 44.1/48 kHz) is input. • "Restorer" settings are stored for each input source. • This item default setting for "NETWORK" and "iPod/USB" is "Mode 3 (Low)". All others are set to "Off". • This cannot be set when the sound mode is set to "DIRECT" or "PURE DIRECT".

Audio Delay

Default settings are underlined.

While viewing video, manually adjust the time to delay audio output.

Setting details
0ms – 200ms
• This item can be set within the range of 0 to 100 ms when "Auto Lip Sync" (☞page 129) is set to "On" and when a TV compatible with Auto Lip Sync is connected. • Store "Audio Delay" for each input source. • Audio Delay for game mode can be set when "Video Mode" (☞page 131) is set to "Auto" or "Game".

Volume

Default settings are underlined.

Set the MAIN ZONE (room where the unit is located) volume setting.

Setting items	Setting details
Scale Set how volume is displayed.	**0 – 98** : Display in the range 0 (Min) to 98. **–79.5dB – 18.0dB** : Display —dB (Min), in the range –79.5 dB to 18.0 dB. • The "Scale" setting is applied also to the "Limit" and "Power On Level" display method. • The "Scale" setting applies to all zones.
Limit Make a setting for maximum volume.	**60 (–20dB) / 70 (–10dB) / 80 (0dB)** **Off** : Do not set a maximum volume.
Power On Level Define the volume setting that is active when the power is turned on.	**Last** : Use the memorized setting from the last session. **Mute** : Always use the muting on condition when power is turned on. **1 – 98 (–79dB – 18dB)** : The volume is adjusted to the set level.
Mute Level Set the amount of attenuation when muting is on.	**Full** : The sound is muted entirely. **–40dB** : The sound is attenuated by 40 dB down. **–20dB** : The sound is attenuated by 20 dB down.

Audyssey

Default settings are underlined.

Set Audyssey MultEQ® XT 32, Audyssey Dynamic EQ®, Audyssey Dynamic Volume®, Audyssey LFC™ and Audyssey DSX®. These can be selected after Audyssey® Setup has been performed. For additional information on Audyssey technology, please see page 193.

NOTE

- If you have not performed Audyssey® Setup, or if you change the speaker settings after performing Audyssey® Setup, you may not be able to select Dynamic EQ/Dynamic Volume.
  In this case, either perform Audyssey® Setup over again or perform "Restore..." (☞page 40) to return to the settings after Audyssey® Setup was run.
- When HD Audio for which the sampling frequency exceeds 96 kHz is played back, the "Audyssey" cannot be set.

Setting items	Setting details
MultEQ®XT 32 MultEQ® XT 32 compensates for both time and frequency characteristics of the listening area based on Audyssey® Setup measurement results. Selection is done from three types of compensation curves. We recommend the "Audyssey" setting. MultEQ® XT 32 is the prerequisite function for Dynamic EQ, Dynamic Volume and Audyssey LFC™.	**Audyssey** : Optimize the frequency response of all speakers. **Audyssey Byp. L/R** : Optimize frequency response of speakers except front L and R speakers. **Audyssey Flat** : Optimize frequency response of all speakers to flat response. **Graphic EQ** : Apply frequency response set with "Graphic EQ" (☞page 127). **Off** : Turn "MultEQ® XT 32" equalizer off. • "Audyssey", "Audyssey Byp. L/R" and "Audyssey Flat" can be selected after Audyssey® Setup has been performed. "Audyssey" is automatically selected after performing Audyssey® Setup. When "Audyssey", "Audyssey Byp. L/R" or "Audyssey Flat" is selected, AUDYSSEY illuminates. • After running Audyssey® Setup, if the Speaker Configuration, Distance, Channel Level, and Crossover Frequency have changed without increasing the number of speakers measured, only AUDYSSEY illuminates. **NOTE** When using headphones, "MultEQ® XT 32" is automatically set to "Off".

"MultEQ® XT 32", "Dynamic EQ" and "Dynamic Volume" settings are stored for each input source.

Setting items	Setting details
Dynamic EQ Solve the problem of deteriorating sound quality as volume is decreased by taking into account human perception and room acoustics. Works with MultEQ® XT 32.	**On** : Use Dynamic EQ. **Off** : Do not use Dynamic EQ. AUDYSSEY is displayed when set to "On". **NOTE** When the menu "Dynamic EQ" setting is "On", it is not possible to do "Tone Control" (☞page 123) adjustment.
Reference Level Offset Audyssey Dynamic EQ® is referenced to the standard film mix level. It makes adjustments to maintain the reference response and surround envelopment when the volume is turned down from 0 dB. However, film reference level is not always used in music or other non-film content. Dynamic EQ Reference Level Offset provides three offsets from the film level reference (5 dB, 10 dB, and 15 dB) that can be selected when the mix level of the content is not within the standard. Recommended setting levels are shown at right.	**0dB** (Film Ref) : This is the default setting and should be used when listening to movies. **5dB** : Select this setting for content that has a very wide dynamic range, such as classical music. **10dB** : Select this setting for jazz or other music that has a wider dynamic range. This setting should also be selected for TV content as that is usually mixed at 10 dB below film reference. **15dB** : Select this setting for pop/rock music or other program material that is mixed at very high listening levels and has a compressed dynamic range. Setting is enabled when "Dynamic EQ" is "On" (☞page 125).

☞ See overleaf

Setting items	Setting details
Dynamic Volume Solve the problem of large variations in volume level between TV, movies and other content (between quiet passages and loud passages, etc.) by automatically adjusting to the user's preferred volume setting.	**Heavy** : Most adjustment to softest and loudest sounds. **Medium** : Medium adjustment to loudest and softest sound. **Light** : Least adjustment to loudest and softest sounds. **Off** : Do not use "Dynamic Volume". • AUDYSSEY is displayed when set to "Heavy", "Medium" or "Light". • If "Dynamic Volume" is set to "Yes" in "Audyssey® Setup" (page 37), the setting is automatically changed to "Medium".
Audyssey LFC™ Adjusts the low frequency band to prevent bass and vibration from being conveyed to neighboring rooms.	**On** : Use "Audyssey LFC™". **Off** : Do not use "Audyssey LFC™". "Audyssey LFC™" cannot be set up if "Audyssey® Setup" is not completed. **About Audyssey LFC™ (Low Frequency Containment)** Audyssey LFC™ solves the problem of low frequency sounds disturbing people in neighboring rooms or apartments. Audyssey LFC™ dynamically monitors the audio content and removes the low frequencies that pass through walls, floors and ceilings. It then applies psychoacoustic processing to restore the perception of low bass for listeners in the room. The result is great sound that no longer disturbs the neighbors.
Containment Amount Adjusts the amount of low frequency containment. Use higher settings if you have close neighbors.	**1 – 7 (4)**
Audyssey DSX® Provides more immersive surround sound by adding the new channels.	**Wides/Heights** : Turns on Audyssey DSX® processing for wide and height expansion. **Wides** : Turn on Audyssey DSX® processing for wide expansion. **Heights** : Turn on Audyssey DSX® processing for height expansion. **Off** : Do not set Audyssey DSX®. **NOTE** "Audyssey DSX®" cannot be configured if the HD Audio source being played includes Front height and Front wide channels. In this case, the respective channels are played back using the input signals.

Setting items	Setting details
Stage Width Adjust sound stage width when using front wide speakers.	**–10 – +10 (0)**
Stage Height Adjust sound stage height when using front height speakers.	**–10 – +10 (0)** • "Audyssey DSX®" can be set when you are using front height speakers or front wide speakers. • "Audyssey DSX®" is only valid when using a center speaker. • "Audyssey DSX®" is valid when surround mode is DOLBY listening mode or DTS listening mode other than PLIIz Height. **About Audyssey Dynamic Surround Expansion (A-DSX)** Audyssey DSX® is a scalable system that adds new speakers to improve surround impression. Starting with a 5.1 system Audyssey DSX® first adds Wide channels for the biggest impact on envelopment. Research in human hearing has proven that information from the Wide channels is much more critical in the presentation of a realistic soundstage than the Back Surround channels found in traditional 7.1 systems. Audyssey DSX® then creates a pair of Height channels to reproduce the next most important acoustical and perceptual cues. In addition to these new Wide and Height channels, Audyssey DSX® applies Surround Envelopment Processing to enhance the blend between the front and surround channels.

Graphic EQ

Default settings are underlined.

Use the graphic equalizer to adjust the tone of each speaker.
"Graphic EQ" can be set when "MultEQ® XT 32" setting (☞page 125) is "Graphic EQ".

Setting items	Setting details
Speaker Selection Select whether to adjust tones for individual speakers or for all speakers.	**All** : Adjust the tone of all speakers together. **Left/Right** : Adjust the tone of left and right speakers together. **Each** : Adjust the tone of each speaker.
Adjust EQ Adjust tones for each frequency band. Adjust the speaker selected in "Speaker Selection".	① Select the speaker. ② Select the adjustment frequency band. **63Hz / 125Hz / 250Hz / 500Hz / 1kHz / 2kHz / 4kHz / 8kHz / 16kHz** • Select the speakers you want to adjust when "Left/Right" or "Each" is selected. ③ Adjust the level. **–20.0dB – +6.0dB** (**0.0dB**)
Curve Copy Copy "Audyssey Flat" (☞page 125) curve from MultEQ® XT 32.	**Yes** : Copy. **No** : Do not copy. • "Curve Copy" is displayed after Audyssey® Setup has been performed. • When you select "Curve Copy" and press **ENTER**, the "Copy "Audyssey Flat"?" prompt is displayed. Select either "Yes" or "No", and press **ENTER**.
Set Defaults The "Graphic EQ" settings are returned to the default settings.	**Reset** : Reset to the defaults. **Cancel** : Do not reset to the defaults. When you select "Set Defaults" and press **ENTER**, the "Reset to the default values?" prompt is displayed. Select either "Reset" or "Cancel", and press **ENTER**. 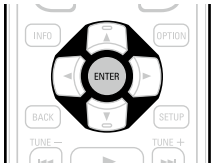

Video

GUI

Make video-related settings.

NOTE

When HDMI ZONE4 function is used, these settings are not available (except for "HDMI Control" and "Control Monitor").

Menu operation

1 **Press ZONE SELECT to switch the zone mode.**
The [M] indicator lights.

2 **Press SETUP.**
The menu is displayed on the TV screen.

3 **Use △▽ to select the menu to be set or operated.**

4 **Press ENTER or ▷ to enter the setting.**

- To return to the previous item, press ◁ or **BACK**.
- Exiting the Menu, press **SETUP** while the menu is displayed. The menu display disappears.

Items that can be set with the "Video" procedure

Picture Adjust (☞page 129)

HDMI Setup (☞page 129)

Output Settings (☞page 131)

Analog Video Out (☞page 132)

On Screen Display (☞page 133)

TV Format (☞page 133)

Picture Adjust

Default settings are underlined.

Picture quality can be adjusted.
We recommend leaving the settings unchanged from the default settings. First adjust the display image quality on your TV, and use this menu only when you want to make fine adjustments.

- This item can be set when the input source is **CBL/SAT** **DVD** **Blu-ray** **GAME** **AUX1** **AUX2** **MEDIA PLAYER** **iPod/USB** **NETWORK**.
- With input sources other than the ones above, this item can be set when "Video Select" is selected. In this case, the original input source settings are called out.
- Can be set when the "Video Conversion" setting (☞page 131) is "On".
- "TV AUDIO" or "CD" can be set when "HDMI", "COMP" or "VIDEO" (☞page 135, 136) has been assigned.

Setting items	Setting details

Picture Mode
Select the desired picture mode according to the video signals and your viewing environment.
	Standard : The standard mode suited for most living room viewing environments.
	Movie : A mode suited for watching movies in a dark room such as a theater room.
	Vivid : A mode that makes graphic images for games, etc. brighter and more vivid.
	Streaming : A mode suited for low bit rate video sources.
	Custom : Adjusts the picture quality manually.
	Off : No picture quality adjustment is done with this unit.
	• You can also press **OPTION** to make these settings from "Picture Mode" (☞page 80) in the option menu.
	• The default settings are as follows.
	  • For "Network" and "iPod/USB" input sources : Streaming
	  • For input sources other than "Network" and "iPod/USB" : Off

Contrast Adjust picture contrast.	**–6 – +6 (0)** "Contrast" can be set when "Picture mode" is set to "Custom".
Brightness Adjust picture brightness.	**0 – +12** "Brightness" can be set when "Picture mode" is set to "Custom".
Saturation Adjust picture chroma level (saturation).	**–6 – +6 (0)** "Saturation" can be set when "Picture mode" is set to "Custom".
Hue Adjust green and red balance.	**–6 – +6 (0)** "Hue" can be set when "Picture mode" is set to "Custom".
Noise Reduction Reduce overall video noise.	**Low / Medium / High / Off** "Noise Reduction" can be set when "Picture mode" is set to "Custom".
Enhancer Emphasize picture contours.	**0 – +12** "Enhancer" can be set when "Picture mode" is set to "Custom".

- "Picture Adjust" can not be set when 4K signals are input.
- When TVs are simultaneously connected to HDMI MONITOR OUT 1, HDMI MONITOR OUT 2, COMPONENT VIDEO OUT and VIDEO MONITOR OUT connector for inputting video or component video signals, the "Picture Mode" – "Streaming", "Noise Reduction" and "Enhancer" settings are only valid for the TV that is connected via HDMI.

HDMI Setup

Default settings are underlined.

Make settings for HDMI video/audio output.

Setting items	Setting details
Auto Lip Sync Make automatic compensation for timing shift in audio and video output.	**On** : Compensated. **Off** : Not compensated.
HDMI Audio Out Select HDMI audio output device.	**AVR** : Play back through speakers connected to the unit. **TV** : Play back through TV connected to the unit. • The audio signal input from the HDMI input connector can be output as an output signal from the HDMI output connector by setting the HDMI audio output destination to TV. Audio signals input via the Analog/Coaxial/Optical/EXTERNAL.IN input connectors cannot be output from the HDMI output connector. • When the HDMI control function is activated, priority is given to the TV audio setting (☞page 102 "HDMI control function").

☞ See overleaf

Setting items	Setting details
Video Output Make settings for HDMI monitor output.	**Auto(Dual)** : The presence of a TV connected to the HDMI MONITOR 1 or HDMI MONITOR 2 connector is detected automatically, and that TV connection is used. **Monitor 1** : A TV connected to the HDMI MONITOR 1 connector is always used. Video is not output from the TV connected to the HDMI MONITOR 2 connector. **Monitor 2** : A TV connected to the HDMI MONITOR 2 connector is always used. Video is not output from the TV connected to the HDMI MONITOR 1 connector. • If both the HDMI MONITOR 1 and HDMI MONITOR 2 connectors are connected and "Resolution" (☞page 132) is set to "Auto", the signals are output with a resolution compatible with both TV. • With "Resolution" (☞page 132) not set to "Auto", check whether the TV you are using is compatible with the resolution under "Video" – "HDMI Monitor 1" or "HDMI Monitor 2" (☞page 153). **NOTE** Depending on the monitor you have connected, the display may not be correct when you set to "Auto(Dual)". In such a case, set to either "Monitor 1" or "Monitor 2".
Vertical Stretch Sets whether video signals are vertically stretched or not.	**On** : Stretches video signals vertically. **Off** : Does not stretch video signals vertically. "Vertical Stretch" can be set when "i/p Scaler" is set to anything other than "Off".
HDMI Pass Through Selects how the AVR will pass HDMI signals to the HDMI output in standby power mode.	**On** : Passes the selected HDMI input through the AV receiver's HDMI output when the AV receiver is in standby power mode. **Off** : No HDMI signals are passed through the AV receiver's HDMI output in standby power mode. **NOTE** **When "HDMI Pass Through" is set to "On", it consumes more standby power.** If you are not using this unit for an extended period, it is recommended that you unplug the power cord from the power outlet.

Setting items	Setting details
HDMI Control You can link operations with devices connected to HDMI and compatible with HDMI Control.	**On** : Use HDMI control function. **Off** : Do not use HDMI control function. • When a device that is not compatible with the HDMI control function is connected, set "HDMI Control" to "Off". • Please consult the operating instructions for each connected device to check the settings. • Refer to "HDMI control function" (☞page 102) for more information about the HDMI control function. **NOTE** • **When "HDMI Control" is set to "On", it consumes more standby power.** If you are not using this unit for an extended period, it is recommended that you unplug the power cord from the power outlet. • The HDMI control function controls operations of a TV that is compatible with the HDMI control function. Make sure that the TV and HDMI are connected when you perform HDMI control. • If the "HDMI Control" settings have been changed, always reset the power to connected devices after the change.
Pass Through Source The AVR will "pass through" the sources HDMI video signal when in standby.	**Last** : Choose this option to "pass through" the last used HDMI input video source. **CBL/SAT** / **DVD** / **Blu-ray** / **GAME** / **AUX1** / **AUX2** / **MEDIA PLAYER** / **CD** / **TV AUDIO** : Choose one of these HDMI sources to be passed through when the AVR is in standby. "Pass Through Source" can be set when "HDMI Control" is set to "On" or "HDMI Pass Through" is set to "On".
Control Monitor Selects the HDMI monitor for which you want to enable the HDMI control function.	**Monitor 1** : Uses the HDMI Monitor 1 for HDMI control. **Monitor 2** : Uses the HDMI Monitor 2 for HDMI control. **ZONE4** : Uses the HDMI monitor in ZONE4 for HDMI control. • "Control Monitor" can be set when "HDMI Control" is set to "On". • The ARC function only works for either the HDMI Monitor 1 or HDMI Monitor 2 connector that is specified in "Control Monitor".

☞ See overleaf

Setting items	Setting details
Power Off Control Links the power standby of this unit to external devices.	**All** : If power to a connected TV is turned off independently of the input source, power to this unit is automatically set to standby. **Video** : When the TV is turned off with one of "HDMI", "COMP" or "VIDEO" (☞page 135, 136) assigned for the CBL/SAT / DVD / Blu-ray / GAME / AUX1 / AUX2 / MEDIA PLAYER / CD / TV AUDIO input source on this unit, power to this unit is automatically set to standby. **Off** : This unit does not link with power to a TV. "Power Off Control" can be set when "HDMI Control" is set to "On". **NOTE** "Power Off Control" cannot be set when "Control Monitor" is set to "ZONE4".

Output Settings

Default settings are underlined.

Makes screen-related settings.

* "CBL/SAT", "DVD", "Blu-ray", "GAME", "AUX1", "AUX2", "MEDIA PLAYER", "CD" or "TV AUDIO" can be set when "HDMI", "COMP" or "VIDEO" (☞page 135, 136) has been assigned.

"Output Settings" can not be set when 4K signals are input.

Setting items	Setting details
Video Mode Make settings for video processing. CBL/SAT* DVD* Blu-ray* GAME* AUX1* AUX2* MEDIA PLAYER* CD* TV AUDIO*	**Auto** : Process video automatically based on the HDMI content information. **Game** : Always process video for game content. **Movie** : Always process video for movie content. • If "Video Mode" is set to "Auto", the mode is switched according to the input contents. • If a source is played in both MAIN ZONE (audio and video) and ZONE2 (audio only) modes in the same room, audio in MAIN ZONE and ZONE2 modes may sound out of synchronization, but this is not malfunction. In this case, setting to "Game" mode may improve audio synchronization.
Video Conversion The input video signal is converted automatically in conjunction with the connected TV (☞page 7 "Converting input video signals for output (Video conversion function)"). CBL/SAT* DVD* Blu-ray* GAME* AUX1* AUX2* MEDIA PLAYER* CD* TV AUDIO*	**On** : The input video signal is converted. **Off** : The input video signal is not converted. • When a non-standard video signal from a game machine or some other source is input, the video conversion function might not operate. In this case set "Video Conversion" to "Off". • When "Video Conversion" is set to "Off", the video conversion function does not work. In this case, connect this unit and TV with the same type of cable.
i/p Scaler Convert the input source resolution to the resolution set. CBL/SAT* DVD* Blu-ray* GAME* AUX1* AUX2* MEDIA PLAYER* iPod/USB CD* NETWORK TV AUDIO*	**Analog** : Use i/p scaler function for analog video signal. **Analog & HDMI** : Use i/p scaler function for analog and HDMI video signal. **HDMI** : Use i/p scaler function for HDMI video signal. **Off** : Do not use i/p scaler function. • "Analog & HDMI" can be set for input sources for which an HDMI input connector is assigned. • Which items can be set depend on the input source assigned to each input connector. • This function is not effective when the input signal is "x.v.Color", 3D, sYCC 601 color, Adobe RGB color, Adobe YCC 601 color or computer resolution.

☞ See overleaf

Setting items	Setting details
Resolution Set the output resolution. You can set "Resolution" separately for HDMI output of the analog video input and HDMI input. CBL/SAT* DVD* Blu-ray* GAME* AUX1* AUX2* MEDIA PLAYER* iPod/USB CD* NETWORK TV AUDIO*	**Auto** : The number of pixels the TV connected to the HDMI MONITOR OUT connector supports is detected automatically and the appropriate output resolution is set. **480p/576p** / **1080i** / **720p** / **1080p** / **1080p:24Hz** / **4K** : Set the output resolution. • This item can be set when "i/p Scaler" is set to anything other than "Off". • When "i/p Scaler" is set to "Analog & HDMI", the resolution of both the analog video input signal and HDMI input signal can be set. • To watch 1080p/24Hz pictures, use a TV that supports 1080p/24Hz video signals. • When set to "1080p:24Hz", you can enjoy film-like pictures for film sources (in 24 Hz). For video sources and mixed sources, we recommend setting the resolution to "1080p". • It is not possible to convert a 50 Hz signal into 1080p/24Hz. It is output at a resolution of 1080p/50Hz.
Progressive Mode Set an appropriate progressive conversion mode for the source video signal. CBL/SAT* DVD* Blu-ray* GAME* AUX1* AUX2* MEDIA PLAYER* CD* TV AUDIO*	**Auto** : The video signal is automatically detected and the appropriate mode is set. **Video** : Select mode suitable for video playback. **Video and Film** : Select mode suitable for video and 30-frame film material playback. This item can be set when "i/p Scaler" is set to anything other than "Off".

Setting items	Setting details
Aspect Ratio Set the aspect ratio for the video signals output to the HDMI. CBL/SAT* DVD* Blu-ray* GAME* AUX1* AUX2* MEDIA PLAYER* iPod/USB CD* NETWORK TV AUDIO*	**16:9** : Output at 16:9 aspect ratio. **4:3** : Output at 4:3 aspect ratio with black bars on the sides of a 16:9 TV screen (except for 480p/576p output). "Aspect Ratio" can be set when "i/p Scaler" is set to anything other than "Off".

* "CBL/SAT", "DVD", "Blu-ray", "GAME", "AUX1", "AUX2", "MEDIA PLAYER", "CD" or "TV AUDIO" can be set when "HDMI", "COMP" or "VIDEO" (☞page 135, 136) has been assigned.

Analog Video Out

Default settings are underlined.

Assigns the zone that uses the COMPONENT VIDEO MONITOR OUT and the VIDEO MONITOR OUT connectors.

Setting items	Setting details
ZONE	**MAIN ZONE** : Uses the COMPONENT VIDEO MONITOR OUT and the VIDEO MONITOR OUT connectors for MAIN ZONE. **ZONE3** : Uses the COMPONENT VIDEO MONITOR OUT and the VIDEO MONITOR OUT connectors for ZONE3.

On Screen Display

Default settings are underlined.

Select the on-screen display user interface preferences.

Setting items	Setting details
Volume Sets where to display the master volume level.	**Bottom** : Display at the bottom. **Top** : Display at the top. **Off** : Turn display off. When the master volume display is hard to see when superimposed on movie subtitles, set to "Top".
Info Displays status of operation temporarily when the sound mode is changed, or input source is switched. You can set whether or not to show each of these status displays.	**On** : Turn display on. **Off** : Turn display off.
Now Playing Sets how long each menu is displayed when the input source is "NETWORK", "iPod/USB", or "HD Radio".	**Always On** : Show display continuously. **Auto Off** : Show display for 30 seconds after operation.

TV Format

Default settings are underlined.

Set the video signal format to be output for the TV you are using.

Setting items	Setting details
Format	**NTSC** : Select NTSC output. **PAL** : Select PAL output. "Format" can also be set by the following procedure. However, the menu screen is not displayed. **1.** Press and hold the main unit's ◁ ▷ for at least 3 seconds. "∗Video Format < NTSC >" appears on the display. **2.** Use the main unit's ◁ ▷ and set the video signal format. **3.** Press the main unit's **ENTER** to complete the setting. **NOTE** When a format other than the video format of the connected TV is set, the picture will not be displayed properly.

Inputs

GUI

Perform settings related to input source playback.
• You do not have to change the settings to use the unit. Make settings when needed.

Menu operation

1 **Press ZONE SELECT to switch the zone mode.**
The [M] indicator lights.

2 **Press SETUP.**
The menu is displayed on the TV screen.

3 **Use △▽ to select the menu to be set or operated.**

4 **Press ENTER or ▷ to enter the setting.**

• To return to the previous item, press ◁ or **BACK**.
• Exiting the Menu, press **SETUP** while the menu is displayed.
The menu display disappears.

Items that can be set with the "Inputs" procedure

Input Assign (☞page 135)

Source Rename (☞page 137)

Hide Sources (☞page 137)

Source Level (☞page 137)

Input Select (☞page 138)

Video Source (☞page 138)

Important information

❑ About the display of input sources

In this section, the configurable input sources for each item are shown as follows.

CBL/SAT | **DVD** | **Blu-ray** | **GAME** | **AUX1** | **AUX2** | **MEDIA PLAYER** | **iPod/USB** | **CD** | **HD Radio** | **NETWORK** | **TV AUDIO** | **PHONO**

NOTE

Input sources that have been set to "Hide" at "Hide Sources" (☞page 137) cannot be selected.

Input Assign

This unit has certain input sources such as "CBL/SAT" assigned to audio and video connectors by default. By making the default connections, you can simply press an input source select button to play back audio or video from the connected device with ease.
When making connections other than the default settings, you must change settings in this section.

Examples of "Input Assign" menu screen displays

This screen appears when the "Inputs" – "each input source" – "Input Assign" menu is selected. Use the "Input Assign" menu to change the ② HDMI input connectors, ③ Digital input connectors, ④ Analog input connectors, ⑤ Component input connectors, and ⑥ Video input connectors that are assigned to the ① input sources in default settings.

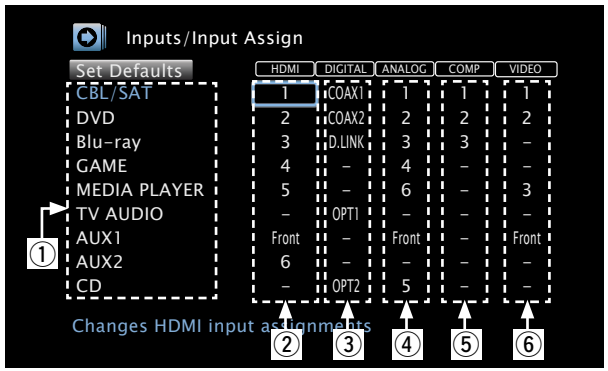

Input assignments menu operations

1 Use △▽◁▷ to move the cursor to the item you want to set, and then press **ENTER**.

2 Use ◁ ▷ to select the input connector to be assigned.

3 Press **ENTER** to register the setting.

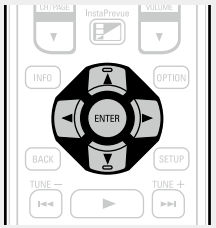

Setting items	Setting details
HDMI Set this to change the HDMI input connectors assigned to the input sources. **CBL/SAT** **DVD** **Blu-ray** **GAME** **AUX1** **AUX2** **MEDIA PLAYER** **CD** **TV AUDIO**	**1** / **2** / **3** / **4** / **5** / **6** / **Front** : Assign an HDMI input connector to the selected input source. **–** : Do not assign an HDMI input connector to the selected input source. • At time of purchase, the settings of the different input sources are as shown below.

Input source	CBL/SAT	DVD	Blu-ray	GAME	AUX1
Default setting	1	2	3	4	Front

Input source	AUX2	MEDIA PLAYER	CD	TV AUDIO
Default setting	6	5	–	–

• To play the video signal assigned at "HDMI" combined with the audio signal assigned at "Input Assign" – "DIGITAL", select "Digital" at "Input Mode" (☞page 138).
• Audio signals input from analog and digital connectors cannot be output to a TV that is connected via HDMI.
• When "HDMI Control" (☞page 130) is set to "On", HDMI input connector cannot be assigned to "TV AUDIO".

☞ See overleaf

Setting items	Setting details
DIGITAL Set this to change the digital input connectors assigned to the input sources. CBL/SAT / DVD Blu-ray / GAME AUX1 / AUX2 MEDIA PLAYER / CD TV AUDIO	**COAX 1** / **COAX 2** / **OPT 1** / **OPT 2** : Assign a digital input connector to the selected input source. **D.LINK** : Assign the Denon Link HD connector when the Denon Link HD connection is established to a player compatible with the Denon Link HD function (☞page 13). – : Do not assign a digital input connector to the selected input source. • At time of purchase, the settings of the different input sources are as shown below.

Input source	CBL/SAT	DVD	Blu-ray	GAME	AUX1
Default setting	COAX 1	COAX 2	D.LINK	–	–

Input source	AUX2	MEDIA PLAYER	CD	TV AUDIO
Default setting	–	–	OPT 2	OPT 1

Setting items	Setting details
ANALOG Set this to change the analog audio input connectors assigned to the input sources. CBL/SAT / DVD Blu-ray / GAME AUX1 / AUX2 MEDIA PLAYER / CD TV AUDIO	**1** / **2** / **3** / **4** / **5** / **6** / **Front** : Assign a analog input connector to the selected input source. – : Do not assign a analog input connector to the selected input source. • At time of purchase, the settings of the different input sources are as shown below.

Input source	CBL/SAT	DVD	Blu-ray	GAME	AUX1
Default setting	1	2	3	4	Front

Input source	AUX2	MEDIA PLAYER	CD	TV AUDIO
Default setting	–	6	5	–

Setting items	Setting details
COMP (Component video) Set this to change the component video input connectors assigned to the input sources. CBL/SAT / DVD Blu-ray / GAME AUX1 / AUX2 MEDIA PLAYER / CD TV AUDIO	**1** / **2** / **3** : Assign the component video input connector to the selected input source. – : Do not assign a component video input connector to the selected input source. • At time of purchase, the settings of the different input sources are as shown below.

Input source	CBL/SAT	DVD	Blu-ray	GAME	AUX1
Default setting	1	2	3	–	–

Input source	AUX2	MEDIA PLAYER	CD	TV AUDIO
Default setting	–	–	–	–

Setting items	Setting details
VIDEO Set this to change the composite video input connectors assigned to the input sources. CBL/SAT / DVD Blu-ray / GAME AUX1 / AUX2 MEDIA PLAYER / CD TV AUDIO	**1** / **2** / **3** / **Front** : Assign the video input connector to the selected input source. – : Do not assign a video input connector to the selected input source. • At time of purchase, the settings of the different input sources are as shown below.

Input source	CBL/SAT	DVD	Blu-ray	GAME	AUX1
Default setting	1	2	–	–	Front

Input source	AUX2	MEDIA PLAYER	CD	TV AUDIO
Default setting	–	3	–	–

Setting items	Setting details
Set Defaults The "Input Assign" settings are returned to the default settings.	**Reset** : Reset to the defaults. **Cancel** : Do not reset to the defaults. If you select "Set Defaults" and press **ENTER**, the message "Reset to the default values?" is displayed. Select "Reset" or "Cancel", and then press **ENTER**.

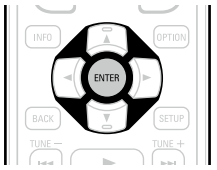

Source Rename

Change the display name of the selected input source.
This is convenient when the input source name of your device and the input source name of this unit are different. You can change the name to suit your needs. When the renaming is completed, the name is displayed on this unit's display and on the menu screen.

Setting details

CBL/SAT / **DVD** / **Blu-ray** / **GAME** / **AUX1** / **AUX2** / **MEDIA PLAYER** / **CD** / **TV AUDIO** / **PHONO** : Change the display name of the selected input source.
- Up to 12 characters can be input.
- For character input, see page 118.

Set Defaults : The "Source Rename" settings are returned to the default settings.
- **Reset** : Reset to the defaults.
- **Cancel** : Do not reset to the defaults.

If you select "Set Defaults" and press **ENTER**, the message "Reset all source names to the factory defaults?" is displayed. Select "Reset" or "Cancel", and then press **ENTER**.

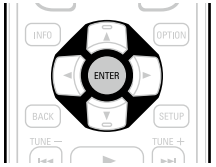

Hide Sources

Default settings are underlined.

Remove from the display input sources that are not used.

Setting details

CBL/SAT / **DVD** / **Blu-ray** / **GAME** / **AUX1** / **AUX2** / **MEDIA PLAYER** / **iPod/USB** / **CD** / **HD Radio** / **Favorites** / **Internet Radio** / **Pandora** / **SiriusXM** / **Spotify** / **Flickr** / **TV AUDIO** / **PHONO** : Select input source that is not used.
- **Show** : Use this source.
- **Hide** : Do not use this source.

NOTE

- Input sources being used in the various zones cannot be deleted.
- Input sources set to "Hide" cannot be selected using the input source select button.

Source Level

Default settings are underlined.

- This function corrects the playback level of the selected input source's audio input.
- Make this setting if there are differences in the input volume levels between the different sources.

Setting items	Setting details
Source Level iPod/USB / HD Radio / NETWORK	**–12dB – +12dB (0dB)**
Analog Inputs CBL/SAT / DVD / Blu-ray / GAME / AUX1 / AUX2 / MEDIA PLAYER / CD / TV AUDIO / PHONO	**–12dB – +12dB (0dB)** The analog input level can be adjusted independently for input sources for which "ANALOG" is assigned at "Input Assign" (page 136).
Digital Inputs CBL/SAT / DVD / Blu-ray / GAME / AUX1 / AUX2 / MEDIA PLAYER / CD / TV AUDIO	**–12dB – +12dB (0dB)** The digital input level can be adjusted independently for input sources for which "DIGITAL" is assigned at "Input Assign" (page 136).

Input Select

Default settings are underlined.

Set the audio input mode and decode mode of each input source.
The input modes available for selection may vary depending on the input source.

Setting items	Setting details
Input Mode Set the audio input modes for the different input sources. It is normally recommended to set the audio input mode to "Auto".	**Auto** : Automatically detect input signal and perform playback. **HDMI** : Play only signals from HDMI input. **Digital** : Play only signals from digital input. **Analog** : Play only signals from analog input. **EXTERNAL IN** : Play only signals from EXTERNAL IN input. • "Digital" can be set for input sources for which "DIGITAL" is assigned at "Input Assign" (☞page 136). • "AUX2" or "TV AUDIO" can be selected only when "Analog" is assigned to the input source. • When digital signals are properly input, the DIG. indicator lights on the display. If the DIG. indicator does not light, check "Input Assign" (☞page 136) and the connections. • If "HDMI Control" is set to "On" and a TV compatible with the ARC is connected via the HDMI MONITOR connectors, the input mode whose input source is "TV AUDIO" is fixed to ARC.
Decode Mode Set the audio decode mode for input source. CBL/SAT / DVD / Blu-ray / GAME / AUX1 / AUX2 / MEDIA PLAYER / CD / TV AUDIO	**Auto** : Detect type of digital input signal and decode and play automatically. **PCM** : Decode and play only PCM input signals. **DTS** : Decode and play only DTS input signals. • This item can be set for input sources for which "DIGITAL" is assigned at "Input Assign" (☞page 136). • Normally set this mode to "Auto". Set "PCM" and "DTS" when inputting the corresponding input signal.

Video Source

Default settings are underlined.

Video of another input source is played back combined with the playing audio.

Setting items	Setting details
Video Select	**Default** : Play the picture and sound of the input source. **CBL/SAT** / **DVD** / **Blu-ray** / **GAME** / **AUX1** / **AUX2** / **MEDIA PLAYER** / **CD** / **TV AUDIO** : Select video input source to view. The video of the selected input source is played along with the audio currently being played. This can be set for individual input sources. "CBL/SAT", "DVD", "Blu-ray", "GAME", "AUX1", "AUX2", "MEDIA PLAYER", "CD" or "TV AUDIO" can be selected only when "COMP" or "VIDEO" is assigned to the input source. NOTE • It is not possible to select HDMI input signals. • Input sources for which "Hide" is selected at "Hide Sources" (☞page 137) cannot be selected.

Speakers

GUI

Set when changing Audyssey® Setup settings.

- **If you change the speaker settings after performing Audyssey® Setup, it will not be possible to set Audyssey MultEQ® XT 32, Audyssey Dynamic EQ® and Audyssey Dynamic Volume® (☞page 125, 126).**
- **Can be used without changing the settings. Please set if necessary.**

Menu operation

1 Press ZONE SELECT to switch the zone mode.
The [M] indicator lights.

2 Press SETUP.
The menu is displayed on the TV screen.

3 Use △▽ to select the menu to be set or operated.

4 Press ENTER or ▷ to enter the setting.

- To return to the previous item, press ◁ or **BACK**.
- Exiting the Menu, press **SETUP** while the menu is displayed. The menu display disappears.

Items that can be set with the "Speakers" procedure

Audyssey® Setup (☞page 33, 99)

Manual Setup (☞page 141)

Steps for setting “Amp Assign”

This unit is provided with 12 types of Assign Mode settings.
You can switch the channels assigned to a power amplifier in accordance with your speaker system or perform playback using up to 11.1 channels using a combination of the built-in power amplifier and an external power amplifier. You can also use this unit as a preamplifier.
Use the following flowchart to set the speaker system of this unit.

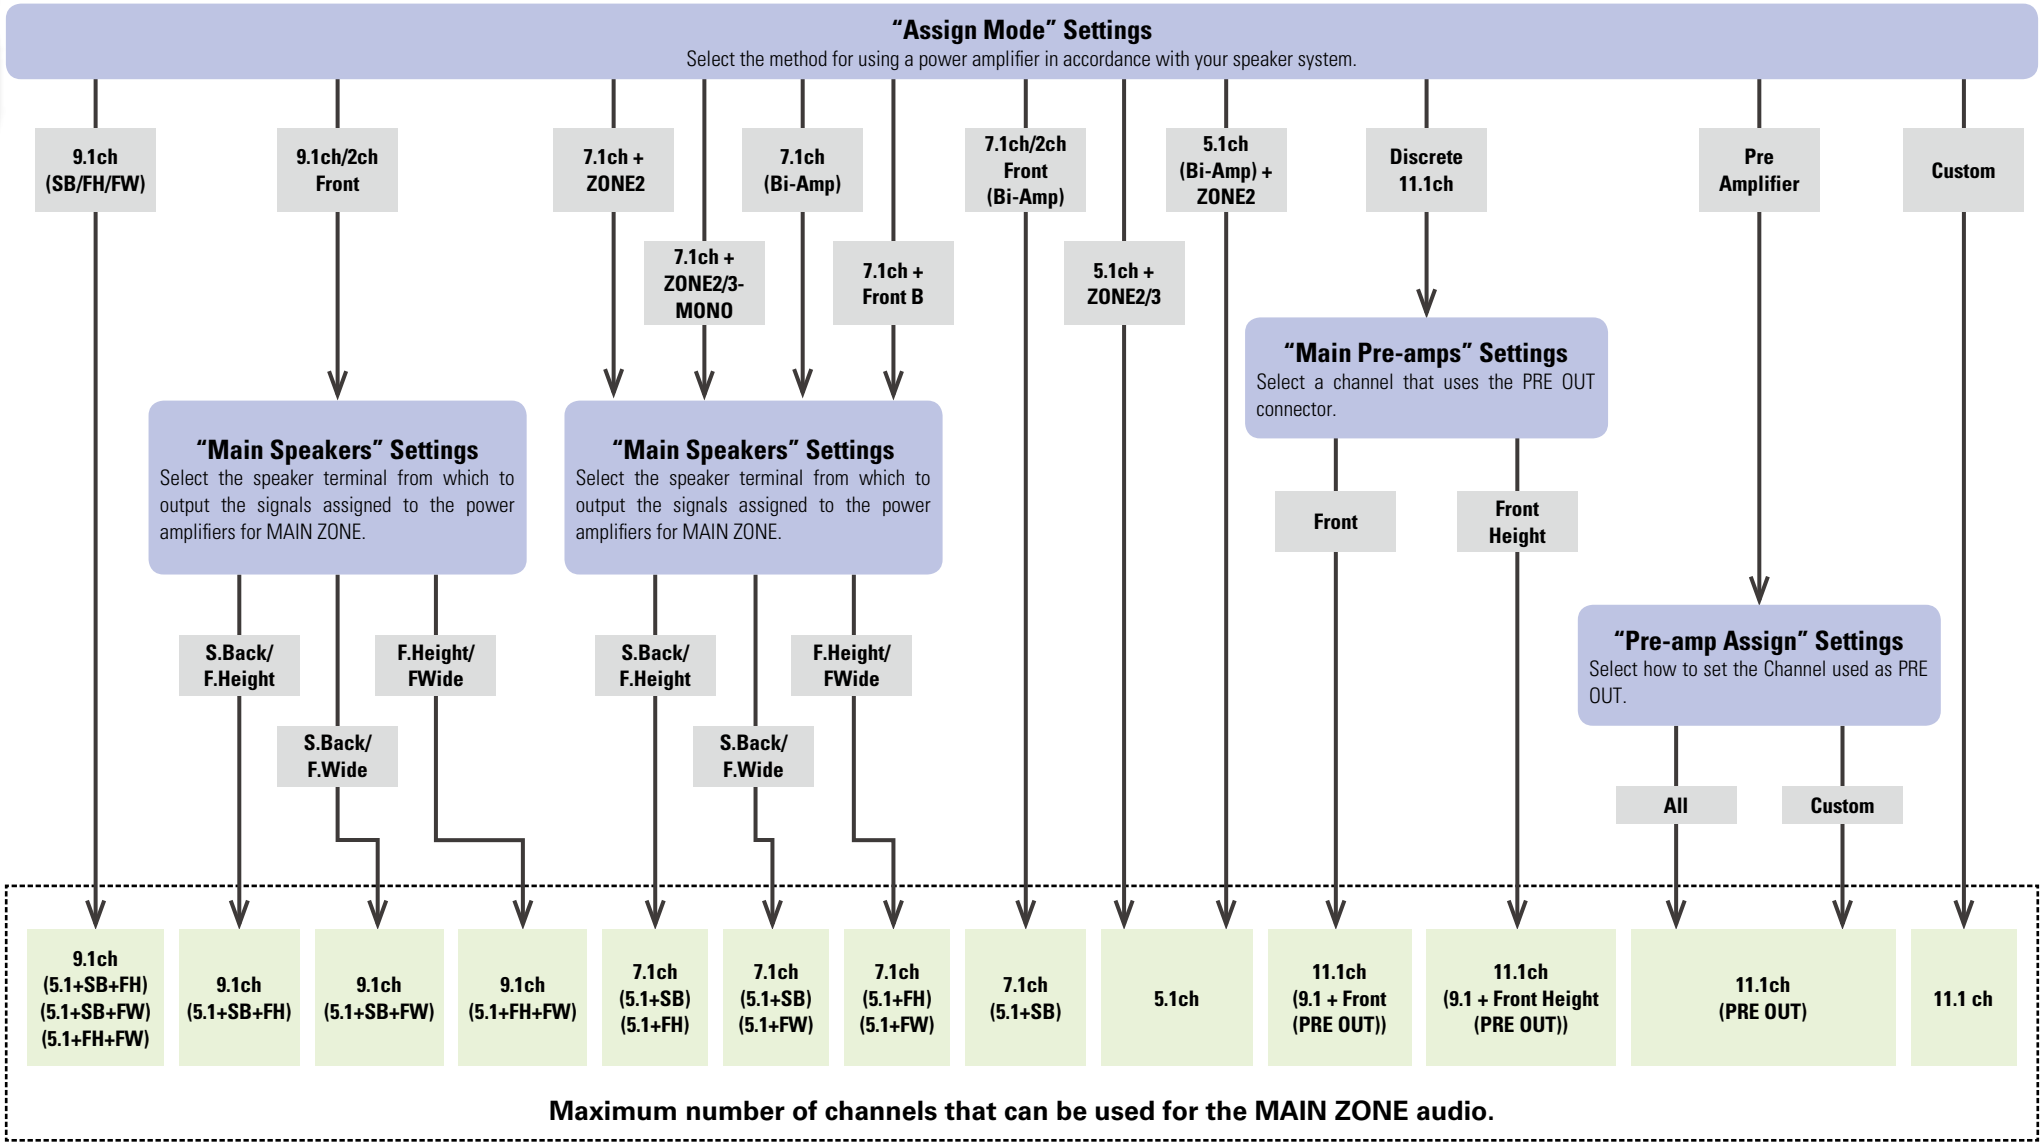

Manual Setup

Default settings are underlined.

Perform when setting the speakers manually or when changing settings made in Audyssey® Setup.

- If you change the speaker settings after performing Audyssey® Setup, it will not be possible to select Audyssey MultEQ® XT 32, Audyssey Dynamic EQ® and Audyssey Dynamic Volume® (☞page 125, 126).
- "Manual Setup" can be used without changing the settings. Please set if necessary.

Setting items	Setting details
Amp Assign Select power amplifier usage method to match your speaker system. For the flow to set "Amp Assign", see page 140.	**Assign Mode** : Set the assignment mode. • **9.1ch(SB/FH/FW)** : Assigns all power amplifiers within this unit for MAIN ZONE. • **7.1ch + ZONE2** : Assigns power amplifiers within this unit as follows: 7.1ch for MAIN ZONE and 2ch for ZONE2. • **5.1ch + ZONE2/3** : Assigns power amplifiers within this unit as follows: 5.1ch for MAIN ZONE and 2ch for ZONE2 and ZONE3 each. • **7.1ch + ZONE2/3-MONO** : Assigns power amplifiers within this unit as follows: 7.1ch for MAIN ZONE and 1ch for ZONE2 and ZONE3 each. • **7.1ch(Bi-Amp)** : Assigns power amplifiers within this unit as follows: 7.1ch for MAIN ZONE and 2ch for the front speaker bi-amplifier connection. • **5.1ch(Bi-Amp) + ZONE2** : Assigns power amplifiers within this unit as follows: 5.1ch for MAIN ZONE, 2ch for the front speaker bi-amplifier connection, and 2ch for ZONE2. • **9.1ch/2ch Front** : Assigns all power amplifiers within this unit for MAIN ZONE. Up to 9.1ch playback is available. You can also use a front speaker that is different from the one used during multi-channel playback for playback by switching the internal power amplifier during 2ch playback. • **7.1ch/2ch Front(Bi-Amp)** : Assigns power amplifiers within this unit as follows: 7.1ch for the MAIN ZONE multi-channel playback. You can also use a front speaker that is different from the one used during multi-channel playback for playback under the bi-amplifier connection by switching the internal power amplifier during 2ch playback. • **7.1ch + Front B** : Assigns power amplifiers within this unit as follows: 7.1ch for MAIN ZONE and 2ch for the second front speaker connection. • **Discrete 11.1ch** : Assigns 9.1ch for power amplifiers within this unit and 2ch (front/front height) for the external power amplifier connection. Up to 11.1ch playback is available. • **Pre Amplifier** : Connects all speakers by using an external power amplifier and uses this unit as a preamplifier. Up to 9.1ch playback is available. • **Custom** : Assigns power amplifiers within this unit as you prefer.

Setting items	Setting details
Amp Assign (Continued)	The following setting items are displayed according to the setting specified for"Assign Mode" (☞page 141). ❑ **When "Assign Mode" (☞page 141) is set to "9.1ch(SB/FH/FW)", "7.1ch + ZONE2", "7.1ch + ZONE2/3-MONO", "7.1ch(Bi-Amp)", "9.1ch/2ch Front", "7.1ch/2ch Front(Bi-Amp)" or "7.1ch + Front B"** **Main Speakers** : Selects speakers used in MAIN ZONE. • **S.Back/F.Height** : Uses surround back and front height speakers. • **S.Back/F.Wide** : Uses surround back and front wide speakers. • **F.Height/F.Wide** : Uses front height and front wide speakers. ❑ **When "Assign Mode" (☞page 141) is set to "Discrete 11.1ch"** **Main Pre-amps** : Selects the PRE OUT connector that is connected to the external power amplifier used in MAIN ZONE. • **Front** : Connects the PRE OUT connector for the front speaker. • **Front Height** : Connects the PRE OUT connector for the front height speaker. ❑ **When "Assign Mode" (☞page 141) is set to "Pre Amplifier"** **Pre-Amp Assign** : Selects how to use the PRE OUT connector. • **All** : Uses this unit as a preamplifier by using only the PRE OUT connector without using the power amplifiers within this unit. • **Custom** : Sets whether to use each channel as a preamplifier or use speakers. **Center / Surround / Surr. Back / Front Height / Front Wide** • **Speaker** : Select to use speakers. • **Pre-amp out** : Select to output audio only from the PRE OUT connectors. ❑ **When "Assign Mode" (☞page 141) is set to "Custom"** **Output Channel** : Selects signals output from the selected speaker connector. • **Front / Center / Surround / Surround Back / Front Height / Front Wide / ZONE2 / ZONE3 / ZONE2/3** • **None** : Does not output audio from the selected speaker.

☞See overleaf

Setting items	Setting details
Speaker Config. Indicate speaker presence and select speaker size categories based on bass reproduction capability. **NOTE** Do not use the outward shape of the speaker to determine selection of a "Large" or "Small" speaker. Instead, use the frequencies set in "Crossovers" (☞page 144) as the standard for determining bass reproduction capability.	**Front** : Set the front speaker size. • **Large** : Use a large speaker that can adequately play back low frequencies. • **Small** : Use a small speaker that has inadequate playback capacity for low frequencies. • When "Subwoofer" is set to "None", "Front" is automatically set to "Large". • When "Front" is set to "Small", "Center", "Surround", "Surr. Back", "Front Height" and "Front Wide" can not be set to "Large".
	Center : Set the presence and size of the center speaker. • **Large** : Use a large speaker that can adequately play back low frequencies. • **Small** : Use a small speaker that has inadequate playback capacity for low frequencies. • **None** : Select when a center speaker is not connected. "Large" is not displayed when "Front" is set to "Small".
	Subwoofer : Set the presence of a subwoofer. • **2spkrs** : Use two subwoofer. • **1spkr** : Use only one subwoofer. • **None** : Select when a subwoofer is not connected. When "Front" is set to "Small", "Subwoofer" is automatically set to "1spkr".
	Surround : Set the presence and size of the surround speakers. • **Large** : Use a large speaker that can adequately play back low frequencies. • **Small** : Use a small speaker that has inadequate playback capacity for low frequencies. • **None** : Select when the surround speakers are not connected. • When "Surround" is set to "Large", "Surr. Back", "Front Height" and "Front Wide" can be set to "Large". • When "Surround" is set to "None", "Surr. Back", "Front Height" and "Front Wide" are automatically set to "None".

Setting items	Setting details
Speaker Config. (Continued)	**Surr. Back** : Set the presence, size and number of surround back speakers. • **Large** : Use a large speaker that can adequately play back low frequencies. • **Small** : Use a small speaker that has inadequate playback capacity for low frequencies. • **None** : Select when the surround back speakers are not connected. • **2spkrs** : Use two surround back speakers. • **1spkr** : Use only one surround back speaker. When you select this setting, connect the surround back speaker to the left (L) channel.
	Front Height : Set the presence and size of the front height speakers. • **Large** : Use a large speaker that can adequately play back low frequencies. • **Small** : Use a small speaker that has inadequate playback capacity for low frequencies. • **None** : Select when the front height speakers are not connected.
	Front Wide : Set the presence and size of the front wide speakers. • **Large** : Use a large speaker that can adequately play back low frequencies. • **Small** : Use a small speaker that has inadequate playback capacity for low frequencies. • **None** : Select when the front height speakers are not connected.

☞ See overleaf

Setting items	Setting details
Distances Set distance from listening position to speakers. Measure beforehand the distance from the listening position to each speaker.	**Unit** : Set the unit of distance. • **Feet** / **Meters** **Step** : Set the minimum variable width of the distance. • **1ft** / **0.1ft** • **0.1m** / **0.01m** **Set Defaults** : The "Distances" settings are returned to the default settings. • **Reset** : Reset to the defaults. • **Cancel** : Do not reset to the defaults. When you select "Set Defaults" and press **ENTER**, the "Resets all of the distance settings to the factory defaults?" prompt is displayed. Select either "Reset" or "Cancel", and press **ENTER**. 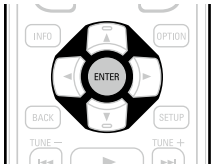 **Front L** / **Front R** / **F. Height L** / **F. Height R** / **F. Wide L** / **F. Wide R** / **Center** / **Subwoofer 1***1 / **Subwoofer 2***1 / **Surround L** / **Surround R** / **Surr. Back L***2 / **Surr. Back R***2 : Select speaker for distance setting. *1 When the "Speaker Config." – "Subwoofer" setting (☞page 142) is set to "1spkr", "Subwoofer" is displayed. *2 When the "Speaker Config." – "Surr. Back" setting (☞page 142) is set to "1spkr", "Surr. Back" is displayed. • **0.0ft** – **60.0ft** / **0.00m** – **18.00m** : Set the distance. • The speakers that can be selected differ depending on the "Amp Assign" (☞page 141) and "Speaker Config." (☞page 142) settings. • Default settings : Front L / Front R / F. Height L / F. Height R / Front Wide L / Front Wide R / Center / Subwoofer 1 / Subwoofer 2 : 12.0 ft (3.60 m) Surround L / Surround R / Surr. Back L / Surr. Back R : 10.0 ft (3.00 m) • Set the difference in the distance between the speakers to less than 20.0 ft (6.00 m). **NOTE** Speakers set to "None" in "Speaker Config." (☞page 142) are not displayed.

Setting items	Setting details
Levels Set the volume of the test tone to be the same when it is output from each speaker.	**Test Tone Start** : Output test tone. • **Front L** / **F. Height L** / **Center** / **F. Height R** / **Front R** / **F. Wide R** / **Surround R** / **Surr. Back R***1 / **Surr. Back L***1 / **Surround L** / **F. Wide L** / **Subwoofer 1***2 / **Subwoofer 2***2 / **Subwoofer 1+2***3 : A test tone is output from the selected speaker. While listening to the test tone, adjust the volume output from the selected speaker. *1 When the "Speaker Config." – "Surr. Back" setting (☞page 142) is set to "1spkr", "Surr. Back" is displayed. *2 When the "Speaker Config." – "Subwoofer" setting (☞page 142) is set to "1spkr", "Subwoofer" is displayed. *3 When "Subwoofer 1+2" is selected, you can adjust the volume of Subwoofer 1 and Subwoofer 2 at the same time. • **–12.0dB – +12.0dB (0.0dB)** : Adjust the volume. When "Levels" is adjusted, the adjusted values are set for all the sound modes. **NOTE** • Speakers set to "None" in the "Speaker Config." (☞page 142) settings are not displayed. • When a headphones jack is inserted in the PHONES jack of this unit, the "Levels" is not displayed. **Set Defaults** : The "Levels" settings are returned to the default settings. • **Reset** : Reset to the defaults. • **Cancel** : Do not reset to the defaults. When you select "Set Defaults" and press **ENTER**, the "Reset all of the channel level settings to the factory defaults?" prompt is displayed. Select either "Reset" or "Cancel", and press **ENTER**. 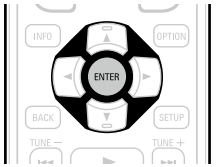

☞ See overleaf

Setting items	Setting details

Crossovers
Set the maximum frequency of the bass signal output from each channel to the subwoofer. Set the Crossover Frequency to suit the bass reproduction capability of the speaker being used.
	Speaker Selection : Selects how to set the crossover frequency. See the speaker manual for information concerning speaker crossover frequency.
	• **All** : Selects the crossover point of all speakers at the same time.
	• **Individual** : Selects the crossover points for each speaker individually.
	
	The following settings can be set when the "Speaker Selection" setting is set to"Individual".
	• **All** / **Front** / **Center** / **Subwoofer** / **Surround** / **Surr. Back** / **Front Height** / **Front Wide** : Select speaker for setting of crossover frequency.
	• **40Hz** / **60Hz** / **80Hz** / **90Hz** / **100Hz** / **110Hz** / **120Hz** / **150Hz** / **200Hz** / **250Hz** : Set the crossover frequency.
	
	• "Crossovers" can be set when the "Bass" – "Subwoofer Mode" (☞page 144) setting is "LFE+Main", or when you have a speaker that is set to "Small".
	• Always set the crossover frequency to "80Hz". When using small speakers, however, we recommend setting the crossover frequency to a higher frequency.
	• For speakers set to "Small", sound below the crossover frequency is cut from the sound output. The cut bass sound is output from the subwoofer or front speakers.
	• The speakers that can be set when "Individual" is selected differ depending on to the "Subwoofer Mode" setting (☞page 144).
	  • When "LFE" is selected, speakers set to "Small" at "Speaker Config." can be set. If the speakers are set to "Large", "Full Band" is displayed and the setting cannot be made.
	  • If set to "LFE+Main", this setting can be made regardless of the speaker size.

Setting items	Setting details
Bass Set subwoofer and LFE signal range playback.	**Subwoofer Mode** : Select low range signals to be reproduced by subwoofer. • **LFE** : The low range signal of the channel set to "Small" speaker size is added to the LFE signal output from the subwoofer. • **LFE+Main** : The low range signal of all channels is added to the LFE signal output from the subwoofer. • "Subwoofer Mode" can be set when "Speaker Config." – "Subwoofer" (☞page 142) is set to other than "None". • Play music or a movie source and select the mode offering the strongest bass. • Select "LFE+Main" if you want the bass signals to always be produced from the subwoofer. **NOTE** If "Front" and "Center" for "Speaker Config." are set to "Large", and "Subwoofer Mode" is set to "LFE", no sound may be output from the subwoofers, depending on the input signal or selected sound mode.
	LPF for LFE : Set LFE signal playback range. Set this when you want to change the playback frequency of the subwoofer. • **80Hz** / **90Hz** / **100Hz** / **110Hz** / **120Hz** / **150Hz** / **200Hz** / **250Hz**

☞ See overleaf

Setting items	Setting details
Impedance Set the impedance of connected speakers.	**8Ω/ohms** : Select when the impedance per speaker for all the connected speakers is 8Ω or larger. **6Ω/ohms** : Select when the impedance for any of the connected speakers is between 6Ω and 8Ω. **4Ω/ohms** : Select when the impedance for any of the connected speakers is between 4Ω and 8Ω. Check the speaker impedance (Ω) shown on the back of your speakers or in the instruction manual beforehand.
Front Speaker Set the front speakers to use for every sound mode.	**2ch Playback** : The front speakers used in direct play (2 channel), stereo play and pure direct play (2 channel) are set in advance. • **A** : Front speaker A is used. • **B** : Front speaker B is used. • **A+B** : Both front speakers A and B are used. **Multi ch Playback** : The front speakers used in play modes other than direct play (2 channel), stereo play and pure direct play (2 channel) are set in advance. • **A** : Front speaker A is used. • **B** : Front speaker B is used. • **A+B** : Both front speakers A and B are used. This can be set when "Assign Mode" (☞page 141) is set to "7.1ch + Front B".
2ch Playback Select the method for setting the speakers used in the 2-channel direct and stereo playback modes.	**Setting** : Select the method for setting the speakers used in the 2-channel direct and stereo playback modes. • **Auto** : The settings at "Speakers" (☞page 139) are applied. • **Manual** : Make separate settings for 2-channel. Make the following settings: **Front** : Set the front speaker size. • **Large** : Use a large speaker that can adequately play back low frequencies. • **Small** : Use a small speaker that has inadequate playback capacity for low frequencies. If "Speaker Config." – "Subwoofer" (☞page 142) is set to "None", the setting is automatically set to "Large".

Setting items	Setting details
2ch Playback (Continued)	**Subwoofer** : Set the presence of a subwoofer. • **Yes** : Use a subwoofer. • **No** : Select when a subwoofer is not connected. If "Speaker Config." – "Subwoofer" (☞page 142) is set to "None", the setting is automatically set to "No". If the "Front" setting is "Small", the setting is automatically "Yes". **SW Mode** : Select low range signals to be reproduced by subwoofer. • **LFE** : When the "2ch Playback – "Front" setting is set to "Large", the LFE signal alone is output from the subwoofer. Also, when the "2ch Playback" – "Front" setting is set to "Small", the front channel low range signal is added to the LFE signal output from the subwoofer. • **LFE+Main** : The front channel low range signal is added to the LFE signal output from the subwoofer. This setting can be set made "2ch Playback" – "Subwoofer" is set to "Yes". **Crossover** : Set the maximum frequency of the bass signal output from each channel to the subwoofer. • **40Hz / 60Hz / 80Hz / 90Hz / 100Hz / 110Hz / 120Hz / 150Hz / 200Hz / 250Hz** • This setting can be set made "2ch Playback" – "Subwoofer" is set to "Yes". • If the "2ch Playback" – "Front" setting is "Large" and the "SW Mode" setting is "LFE", "Full Band" is displayed and the setting cannot be made. **Distance FL** / **Distance FR** : Select speaker for distance setting. • **0.0ft – 60.0ft (12.0ft)** / **0.00m – 18.00m (3.60m)** : Set distance from main listening point to speaker. Set the difference in the distance between the speakers to less than 20.0 ft (6.00 m). **Level FL / Level FR** : Select speaker for level adjustment. • **–12dB – +12dB (0dB)** : Adjust the level of each channel.

Network

GUI

To use this unit by connecting it to a home network (LAN), you must configure network settings.
If you set up your home network (LAN) via DHCP, set "DHCP" to "On" (use the default setting). This allows this unit to use your home network (LAN).
If you assign an IP address for each device, you must use the "IP Address" setting to assign an IP address to this unit and enter the information about your home network (LAN) such as the gateway address and subnet mask.

Menu operation

1 Press ZONE SELECT to switch the zone mode.
The [M] indicator lights.

2 Press SETUP.
The menu is displayed on the TV screen.

3 Use △▽ to select the menu to be set or operated.

4 Press ENTER or ▷ to enter the setting.

- To return to the previous item, press ◁ or **BACK**.
- Exiting the Menu, press **SETUP** while the menu is displayed. The menu display disappears.

Items that can be set with the "Network" procedure

Information (☞page 147)
Network (☞page 147)
Friendly Name (☞page 147)
Settings (☞page 148)
Diagnostics (☞page 149)
Maintenance Mode (☞page 149)

Information

Display network information.

Setting details
Friendly Name / **DHCP On** or **Off** / **IP Address** / **MAC Address**
MAC Address is required to make a vTuner account.

Network

Default settings are underlined.

Enables network communication in standby power mode.

Setting details
Off In Standby : Suspend network function during standby. **Always On** : Network is on during standby. Main unit operable with a network compatible controller.

- Set to "Always On" when using the web control function.
- With the "Always On" setting, you can use each NETWORK connector as the hub even while power to this unit is set to standby.

NOTE

When "Network" is set to "Always On", it consumes more standby power.

Friendly Name

The Friendly Name is the name of this unit displayed on the network. You can change the Friendly Name according to your preferences.

Setting items	Setting details
Edit Name Edits Friendly Name.	• The default Friendly Name on first use is "DENON AVR-4520CI". • Up to 63 characters can be input. • For character input, see page 118.
Set Defaults Restores Friendly Name, which you had changed, to the default setting.	**Reset** : Reset to the defaults. **Cancel** : Do not reset to the defaults. When you select "Set Defaults" and press **ENTER**, the "Reset the friendly name back to the factory default?" prompt is displayed. Select either "Reset" or "Cancel", and press **ENTER**. 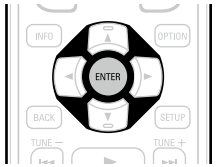

Settings

Default settings are underlined.

Make settings for wired LAN.
Only set "Settings" when connecting to a network without a DHCP function.

Setting details

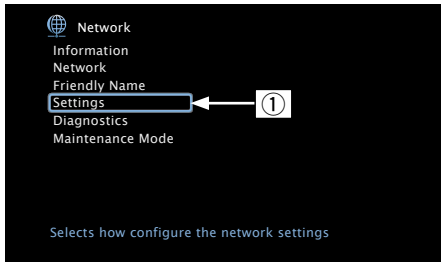

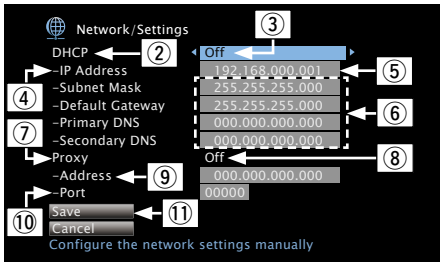

① On the menu, select "Network" – "Settings" and press **ENTER**.
② Use △▽ to select "DHCP", then press **ENTER**.
③ Use ◁ ▷ to select "Off", then press **ENTER**.
④ Use △▽ to select "IP Address", then press **ENTER**.
- **IP Address** : Set the IP address within the ranges shown below.
  The Network Audio function cannot be used if other IP addresses are set.
  CLASS A: 10.0.0.1 – 10.255.255.254
  CLASS B: 172.16.0.1 – 172.31.255.254
  CLASS C: 192.168.0.1 – 192.168.255.254

⑤ Use △▽◁ ▷ or **0 – 9** to input the address and press **ENTER**.
⑥ Use △▽ to select setting item, then press **ENTER**.
- **Subnet Mask** : When connecting an xDSL modem or terminal adapter directly to this unit, input the subnet mask indicated in the documentation supplied by your provider. Normally input 255.255.255.0.
- **Default Gateway** : When connected to a gateway (router), input its IP address.
- **Primary DNS, Secondary DNS** : If there is only one DNS address indicated in the documentation supplied by your provider, input it at "Primary DNS". If two or more DNS are provided by your provider, enter both "Primary DNS" and "Secondary DNS".

Setting details

⑦ Use △▽ to select "Proxy" and press **ENTER**.
- **Proxy** : Make this setting when connecting to the Internet via a proxy server.
  Make the proxy settings only when you connect to the Internet via a proxy server that is on your internal network or provided by your provider, etc.

⑧ Use ◁ ▷ to select "On(Address)" or "On(Name)", and then press **ENTER**.
On(Address) : Select when inputting by address.
On(Name) : Select when inputting by domain name. Up to 38 characters can be input.
⑨ Press ▽ to select "Address" or "Name", then press **ENTER**.
When "Address" is selected in step ⑧ : Use △▽◁ ▷ or **0 – 9** to enter the proxy server address, and press **ENTER**.
When"Name" is selected in step ⑧ : Use the software keyboard (☞page 118) to enter the domain name, and select OK.
- For character input, see page 118.

⑩ Press ▽ to select "Port", then press **ENTER**. Use △▽◁ ▷ or **0 – 9** to input the proxy server port number and press **ENTER**.
Setup is complete.
⑪ Press ▽ to select "Save", then press **ENTER**.
The display returns to the original screen.

- If you are using a broadband router (DHCP function), there is no need to make the settings at "IP Address" and "Proxy", since the DHCP function is set to "On" in this unit's default settings.
- If this unit is being used connected to a network without the DHCP function, the network settings must be made. In this case, some knowledge of networks is required. For details, consult a network administrator.
- If you cannot connect to the Internet, recheck the connections and settings (☞page 31).
- If you do not understand about Internet connection, contact your ISP (Internet Service Provider) or the store from which you purchased your computer.
- When you want to cancel the setting during IP address input, select "Cancel", then press **ENTER**.

Diagnostics

Used to check the network connection.

Setting items	Setting details
Physical Connection Checks the physical LAN port connection.	**OK** : Connected. **Error** : The LAN cable is not connected. Check the connection.
Router Access Checks the connection from this unit to the router.	**OK** : Accessed. **Error** : Failed to communicate with the router. Check the router settings.
Internet Access Checks whether this unit has access to the Internet (WAN).	**OK** : Connected. **Error** : Failed to connect to the Internet. Check the Internet connection environment or router settings.

Maintenance Mode

Use when receiving maintenance from a DENON service engineer or custom installer.

Setting details
NOTE Only use this function if so instructed by a DENON serviceperson or installer.

General

GUI

Make various other settings.

Menu operation

1 **Press ZONE SELECT to switch the zone mode.**
The [M] indicator lights.

2 **Press SETUP.**
The menu is displayed on the TV screen.

3 **Use △▽ to select the menu to be set or operated.**

4 **Press ENTER or ▷ to enter the setting.**

- To return to the previous item, press ◁ or **BACK**.
- Exiting the Menu, press **SETUP** while the menu is displayed. The menu display disappears.

Items that can be set with the "General" procedure

Language (☞page 151)
ZONE2 Setup / ZONE3 Setup (☞page 151)
Zone Rename (☞page 152)
Quick Select Names (☞page 152)
Remote ID (☞page 152)
Trigger Out 1 / Trigger Out 2 (☞page 152)
Auto Standby (☞page 153)
Front Display (☞page 153)
Information (☞page 153)
Firmware (☞page 154)
Setup Lock (☞page 156)

Language

Default settings are underlined.

Set the language for display on the menu screen.

Setting details
English / **Français** / **Español**

"Language" can also be set by the following procedure. However, the menu screen is not displayed. Following the display content to make the setting.

1. Press and hold the main unit's ◁ ▷ for at least 3 seconds.
   "∗Video Format < NTSC >" appears on the display.
2. Press the main unit's ▽ and set "∗GUI Language < ENGLISH >".
3. Use the main unit's ◁ ▷ and set the language.
4. Press the main unit's **ENTER** to complete the setting.

ZONE2 Setup / ZONE3 Setup

Default settings are underlined.

Set the audio to play back with multi-zone (ZONE2, ZONE3).

Setting items	Setting details
Bass Adjust bass tones.	**–10dB – +10dB (0dB)**
Treble Adjust treble tones.	**–10dB – +10dB (0dB)**
High Pass Filter Make settings for cutting the low range to reduce distortion in the bass.	**On** : The low range is attenuated. **Off** : The low range is not attenuated.
Lch Level Adjust the left channel output level.	**–12dB – +12dB (0dB)**
Rch Level Adjust the right channel output level.	**–12dB – +12dB (0dB)**
Channel Set the signal output from multi-zone.	**Stereo** : Select stereo output. **Mono** : Select monaural output. When "Assign Mode" (☞page 141) is set to "7.1ch + ZONE2/3-MONO", the "Channel" setting is automatically set to "Mono".
Volume Level Set the volume output level.	**Variable** : Volume adjustment is enabled by main unit and remote control unit. **40 (–40dB)** : Fix volume at 40 (–40 dB). Set when adjusting volume by external amplifier. **80 (0dB)** : Fix volume at 80 (0 dB). Set when adjusting volume by external amplifier. When "Assign Mode" (☞page 141) is set to "7.1ch + ZONE2", "5.1ch + ZONE2/3", "7.1ch + ZONE2/3-MONO" or "5.1ch(Bi-Amp) + ZONE2", the "Volume Level" setting is automatically set to "Variable".
Volume Limit Make a setting for maximum volume.	**60 (–20dB)** / **70 (–10dB)** / **80 (0dB)** **Off** : Do not set a maximum volume. This is displayed from –79 dB to 18 dB when "Scale" (☞page 124) is set to "–79.5dB – 18.0dB".
Power On Volume Define the volume setting that is active when the power is turned on.	**Last** : Use the memorized setting from the last session. **Mute** : Always mute when power is turned on. **1 – 98 (–79dB – 18dB)** : The volume is adjusted to the set level. This is displayed from –79 dB to 18 dB when "Scale" (☞page 124) is set to "–79.5dB – 18.0dB".
Mute Level Set the amount of attenuation when muting is on.	**Full** : The sound is muted entirely. **–40dB** : The sound is attenuated by 40 dB down. **–20dB** : The sound is attenuated by 20 dB down.

Zone Rename

Change the display title of each zone to one you prefer.

Setting details

MAIN ZONE / ZONE2 / ZONE3 / ZONE4
- Up to 10 characters can be input.
- For character input, see page 118.

Set Defaults : The input source name is returned to the default setting.
- **Reset** : Reset to the defaults.
- **Cancel** : Do not reset to the defaults.

If you select "Set Defaults" and press **ENTER**, the message "Reset to the default values?" is displayed. Select "Reset" or "Cancel", and then press **ENTER**.

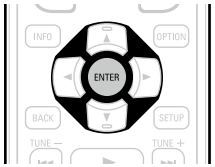

Quick Select Names

Change the "Quick Select" display title to one you prefer.

Setting details

Quick Select 1 / Quick Select 2 / Quick Select 3 / Quick Select 4
- Up to 16 characters can be input.
- For character input, see page 118.

Set Defaults : The input source name is returned to the default setting.
- **Reset** : Reset to the defaults.
- **Cancel** : Do not reset to the defaults.

If you select "Set Defaults" and press **ENTER**, the message "Reset to the default values?" is displayed. Select "Reset" or "Cancel", and then press **ENTER**.

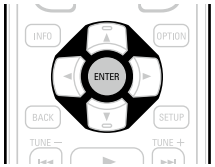

Remote ID

Set when you operate another DENON AV amplifier with the remote control unit of this unit.
Match the remote control unit you are using with the remote ID of this unit.

Setting details

❑ How to set the remote ID

1. Press **ZONE SELECT** to switch the zone mode.
   The [M] indicator lights.
2. Press **SETUP**.
   The menu is displayed on the TV screen.
3. Use △▽ to select "General" then press **ENTER**.
4. Use △▽ to select "Remote ID" then press **ENTER**.
5. Change the ID for the remote control unit(☞page 167).
6. Press **ENTER**.
   The Remote ID for this unit is set to the same ID as the one for the remote control unit.

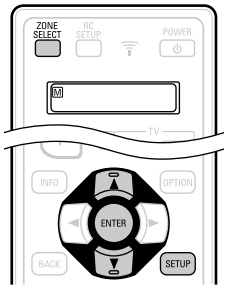

Trigger Out 1 / Trigger Out 2

Selects when to activate trigger out.
For details about how to connect the TRIGGER OUT jacks, see "TRIGGER OUT jacks" (☞page 30).

Setting details

❑ When setting for zone (MAIN ZONE / ZONE2 / ZONE3 / ZONE4)

Trigger out is activated through linkage to the power of the zone set to "On".

❑ When setting for input source

Activate trigger out when the input source set to "On" is selected.

Active for the zone set to "On" with "When setting for zone".

❑ When setting for HDMI monitor

Activate trigger out when the HDMI monitor set to "On" is selected.

Activate trigger out when the HDMI monitor set to "On" is selected. Active when the "MAIN ZONE" set to "On" with "When setting for zone" is selected, and when the input source set to "On" with "When setting for input source" is selected.

- **On** : Activate trigger on this mode.
- **– – –** : Do not activate trigger on this mode.

Auto Standby

Default settings are underlined.

When you do not perform any operation on this unit with no audio or video input for a specified time, this unit automatically enters the standby mode. Before it enters the standby mode, "Auto Standby" is displayed on the display of this unit and the menu screen.

Setting details
60min : The unit goes into standby after 60 minutes.
30min : The unit goes into standby after 30 minutes.
Off : The unit does not go into standby automatically.

Front Display

Default settings are underlined.

Makes settings related to the display on this unit.

Setting items	Setting details
Dimmer Adjust the display brightness of this unit.	**Bright** : Normal display brightness. **Dim** : Reduced display brightness. **Dark** : Very low display brightness. **Off** : Turns the display off. Buttons on the main unit can be used for operations. Each time **DIMMER** is pressed, the setting is changed as shown below. Bright → Dim → Off ← Dark **NOTE** When "Dimmer" is set to "Off", the display turns off and appears as if there is no electricity.
Channel Indicators Sets whether to use the input signal display or output signal display for the channel indication on the display.	**Input** : Uses the input signal display for the channel indication on the display. **Output** : Uses the output signal display for the channel indication on the display.

Information

Show information about receiver settings, input signals, etc.

NOTE

This item is not compatible with the HDMI ZONE4 function.

Items	Setting details
Audio Show information about audio input signals.	**Sound Mode** : The currently set surround mode. **Input Signal** : The input signal type. **Format** : The number of input signal channels (presence of front, surround, LFE). **Sample Rate** : The input signal's sampling frequency. **Offset** : The dialogue normalization correction value. **Flag** : This is displayed when inputting signals including a surround back channel. "MATRIX" is displayed with Dolby Digital EX and DTS-ES Matrix signals, "DISCRETE" with DTS-ES Discrete signals. **Dialogue normalization function** This function is automatically activated when playing Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS and DTS-HD sources. It automatically corrects the standard signal level for individual program sources. The correction value can be checked using the **STATUS** on the main unit. Dial.Norm Offset - 4dB The figure is the corrected value. This cannot be changed.
Video Show information about HDMI input/output signals and HDMI monitors.	**HDMI Signal Info.** • **Resolution** / **Color Space** / **Pixel Depth** **HDMI Monitor 1** / **HDMI Monitor 2** • **Interface** / **Resolutions**

Items	Setting details
ZONE Show information about current settings.	**MAIN ZONE** : This item shows information about settings for MAIN ZONE. The information displayed differs according to the input source. • **ZONE Name** / **Select Source** / **Name** / **Sound Mode** / **Input Mode** / **Decode Mode** / **HDMI** / **Digital** / **Analog** / **Component** / **Video** / **Rec Select** / **Video Select** / **Video Mode** / **Content Type** / **Video Conversion** / **i/p Scaler** / **Resolution** / **Progressive Mode** / **Aspect Ratio** etc.
	ZONE2/3/4 : This item shows information about settings for ZONE2, ZONE3 or ZONE4. • **ZONE Name** / **Power** / **Select Source** / **Volume Level** **NOTE** For ZONE4, "Volume Level" is not displayed.
Firmware	**Version** : Displays information for the current firmware.

Press **INFO** to display current source name, volume, sound mode name, and other information at the bottom of the screen.

Examples of screen display

• Status display screen

When the input source is switched.

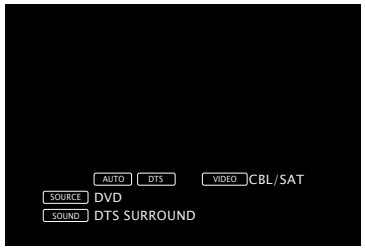

When the volume is adjusted.

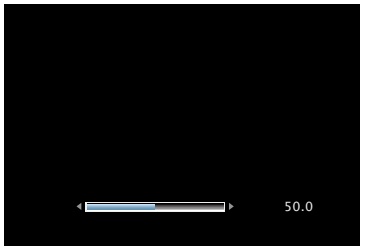

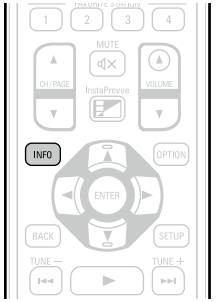

Status display: The operating status appears briefly on the screen when the input source is switched or the volume is changed.

NOTE

The status display screen cannot be displayed at a computer's resolution (e.g. VGA) or while certain 3D video contents is being played.

Firmware

Default settings are underlined.

Set whether or not to check for firmware update, update the firmware, and display update and upgrade notifications.

Setting items	Setting details
Update Update the firmware of the receiver. **NOTE** In cases where it is not possible to connect to the network after doing a firmware update, connect to the network again using "Network" (☞page 146).	**Check for Update** : Check for firmware updates. You can also check approximately how long it will take to complete an update. **Update Start** : Execute the update process. When updating starts, the power indicator becomes red and the menu screen is shut down. The amount of update time which has elapsed is displayed. When updating is complete, the power indicator becomes green and normal status is resumed. • If updating fails, the set automatically retries, but if updating is still not possible, one of the messages shown below is displayed. If the display reads as shown below, check the settings and network environment, then update again.

Display	Description
Updating fail	Updating failed.
Login failed	Failure to log into server.
Server is busy	Server is busy. Wait a while then try again.
Connection fail	Failure in connecting to server.
Download fail	Downloading of the firmware has failed.

☞ See overleaf

Setting items	Setting details
Notifications Displays a notification message on this unit's menu screen when the latest firmware is released with "Update". Display a notification message on this unit's menu screen when downloadable firmware is released with "Add New Feature".	**Update** : The notification message is displayed for about 20 seconds when the power is turned on. Connect to broadband Internet (☞page 31) when using this function. • **On** : Display update message. • **Off** : Do not display update message. • When you press **ENTER** during display of the notification message, the "Check for Update" screen is displayed (Refer to page 154 for more information on "Update"). • Press ◁ or **BACK** to erase the notification message. 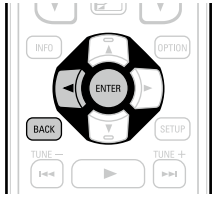 **Upgrade** : The notification message is displayed for about 20 seconds when the power is turned on. Connect to broadband Internet (☞page 31) when using this function. • **On** : Display upgrade message. • **Off** : Do not display upgrade message. • When you press **ENTER** during display of the notification message, the "Add New Feature" screen is displayed (Refer to page 155 for more information on "Add New Feature"). • Press ◁ or **BACK** to erase the notification message.

Setting items	Setting details
Add New Feature Display new features that can be downloaded to this unit and perform an upgrade. **NOTE** In cases where it is not possible to connect to the network after adding a new function, connect to the network again using "Network" (☞page 146).	**Upgrade Package** : Display the items to be upgraded. **Upgrade Status** : Display a list of the additional functions provided by the upgrade. **Upgrade Start** : Execute the upgrade process. When the upgrade starts, the power indicator becomes red and the menu screen is shut down. During the upgrade, the amount of upgrade time which has elapsed is displayed. When upgrading is complete, the power indicator becomes green and normal status is resumed. • If the upgrade is not successful, an error message identical to those in "Update" will appear on the display. Check the settings and network environment and then perform the upgrade again. See the DENON website for details about upgrades. When the procedure is complete, "Registered" is displayed in this menu and upgrades can be carried out. If the procedure has not been carried out, "Not Registered" is displayed. The ID number shown on this screen is needed when carrying out the procedure. The ID number can also be displayed by pressing and holding the main unit's △ and **INFO** for at least 3 seconds.

Notes concerning use of "Update" and "Add New Feature"

- In order to use these functions, you must have the correct system requirements and settings for a broadband Internet connection (☞page 31).
- Do not turn off the power until updating or upgrading is completed.
- Even with a broadband connection to the Internet, approximately 1 hour is required for the updating/upgrading procedure to be completed.
- Once updating/upgrade starts, normal operations on this unit cannot be performed until updating/upgrading is completed. Furthermore, there may be cases where backup data is reset for the parameters, etc., set on this unit.
- If the update or upgrade fails, press and hold the ⏻ on the main unit for more than 5 seconds, or remove and re-insert the power cord. "Update retry" appears on the display and update restarts from the point at which update failed. If the error continues despite this, check the network environment.

- Information regarding the "Update" function and "Add New Feature" will be announced on the DENON web site each time related plans are defined.
- When usable new firmware is released with "Update" or "Add New Feature", a notification message is displayed on the menu screen. When you do not want to be notified, set "Notifications" – "Update" (☞page 155) and "Notifications" – "Upgrade" (☞page 155) to "Off".

Setup Lock

Default settings are underlined.

Protect settings from inadvertent change.

Setting items	Setting details
Lock	**On** : Turn protection on. **Off** : Turn protection off. When canceling the setting, set “Lock” to “Off”. **NOTE** When “Lock” is set to “On”, the settings listed below can no longer be changed. Also, “Setup Locked!” is displayed if you attempt to operate related settings. • Setup menu operations

Operating external devices with the remote control

By registering preset codes for external devices to the provided remote control, you can operate your TV and playback devices (such as Blu-ray Disc player and DVD player) with the remote control.

Registering preset codes

When preset codes are registered in the included remote control unit, it can then be used to operate any devices you have, such as DVD players or TVs made by different manufacturers.

❑ Buttons used for operating the devices

① **DEVICE** ⏻
For switching power of each device on or off.
② △▽◁ ▷, **ENTER**, **BACK**
For menu operation of each device.
③ **MENU**, **INFO**, **OPTION**, **SETUP**
For displaying the menu of each device.
④ **I◀◀**, **▶▶I**, **▶**, **◀◀**, **▶▶**, **II**, **■**
⑤ Number button (**0** – **9**, **+10**)
⑥ **CH/PAGE ▲▼**
⑦ **TV** ⏻, **TV INPUT**
For operating a TV
This button is enabled in any mode.

For details on operation with the remote control unit, see pages 46, 49, 58, 61, 65, 68, 71, 73, 75, 161, 162.

NOTE

The preset code cannot be registered to **TUNER**, **PHONO**, **iPod/USB**, **NETWORK** and **INTERNET RADIO**.

Registering preset codes

1 **Press and hold RC SETUP for at least 3 seconds.**
"SETUP" and ᯤ indicator flashes twice on the remote control unit.

2 **When "PRSET" appears on the remote control unit, press ENTER.**

3 **When "DEVIC" appears on the remote control unit, press the input source select button of the AV equipment (CBL/SAT, Blu-ray, GAME, MEDIA PLAYER, DVD, AUX1, AUX2 or CD) that you want to program for the preset setting.**

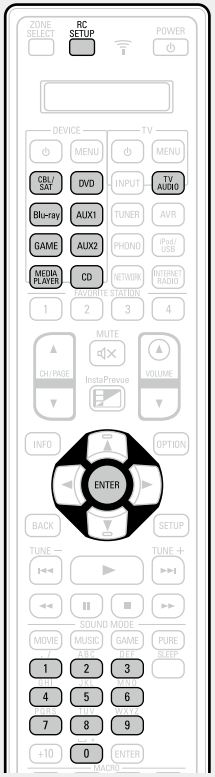

NOTE

Note that the group numbers that can be registered are predefined for each input source select button (☞page 158).

4 **When "– – – – –" appears on the remote control unit, press the number buttons 0 – 9 to enter a 5-digit code (☞page 205 "List of preset codes").**
Press the buttons with an interval less than 30 seconds.

- When the code is registered
  → "OK" flashes four times on the remote control unit.
- When the code is not registered correctly
  → "FAIL" or "CANCL" flashes four times on the remote control unit.
  Perform from step 1 again.

Some manufacturers use more than one type of remote control code. Preset codes to change the number and verify correct operation.

NOTE

Depending on the model and year of manufacture of your device, some buttons may not operate.

❑ Remote control operation modes

By default, the input source select buttons on the remote control perform only the input source select operation. To operate an external device with this remote control, set the preset code in "List of preset codes" (☞page 205) for the device you want to register to each input source select button.
For how to set preset codes to buttons, see "Registering preset codes" (☞page 157).

If you register preset codes on this remote control, the input source select buttons on the remote control can perform the following two functions.

① The function to switch input sources on this unit (AVR operation mode)
② The function to make this remote control switch to the mode in which you can operate the device registered to the button (External device operation mode)

❑ How to switch operation modes

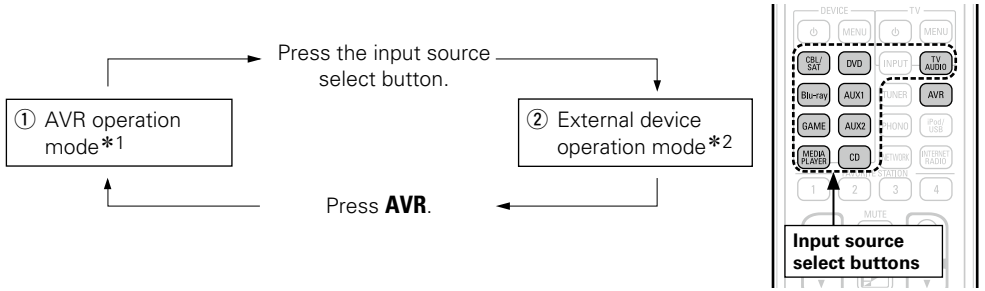

*1 The mode in which you can operate this unit.
*2 If you press one of these buttons , the input source on this unit changes and the remote control switches to the mode in which you can operate the external device registered to that button.

❑ Devices that can be registered to input source select buttons on the remote control

The types of devices that can be registered to each input source select button on this remote control are assigned as shown in the following table. Register the preset code under the desired device name in "List of preset codes" (☞page 205).

Preset codes that can be registered to CBL/SAT, Blu-ray, GAME, MEDIA PLAYER, DVD, AUX1, AUX2, and CD buttons

Button	Default preset mode	Available change to preset
CBL/SAT	AVR	CBL/SAT group
Blu-ray		VCR/PVR group BD/DVD group
GAME		CBL/SAT group VCR/PVR group BD/DVD group Audio group
MEDIA PLAYER		CBL/SAT group
DVD		VCR/PVR group BD/DVD group
AUX1		CBL/SAT group VCR/PVR group BD/DVD group Audio group
AUX2		CBL/SAT group VCR/PVR group BD/DVD group Audio group
CD		Audio group

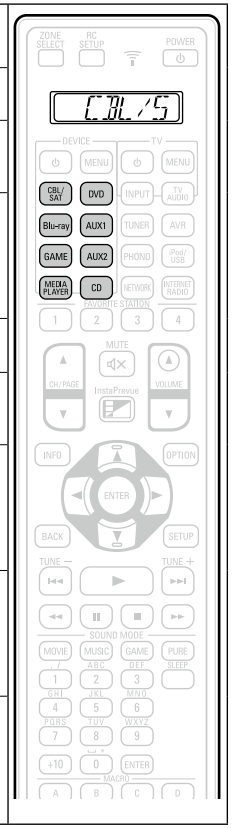

- When you press an input source select button for which a preset code has been registered, its button name appears on the display of the remote control unit.
- To unregister the device from a button and reset to the default setting, set the AVR code "73347" to the button.

Preset codes that can be registered to TV buttons

Button	Default preset mode	Available change to preset	
TV AUDIO	AVR	TV group	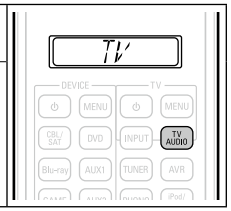

- When you press TV AUDIO that has a preset code registered to it, the "TV" indication on the remote control lights.

To perform menu operations of this unit, press **AVR** to have the remote control enter the AVR operation mode.

Operating external devices

Press the input source select button (☞page 41).

• The operation mode of the remote control unit is switched as shown in the table.

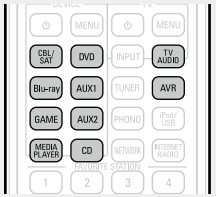

Input source select button	Input source of this unit	Operation mode
		Devices controllable with the remote control unit
AVR	–	This unit (AVR-operation) *2
CBL/SAT *1	CBL/SAT	Device registered on the **CBL/SAT** button
Blu-ray *1	Blu-ray	Device registered on the **Blu-ray** button
GAME *1	GAME	Device registered on the **GAME** button
MEDIA PLAYER *1	MEDIA PLAYER	Device registered on the **MEDIA PLAYER** button
DVD *1	DVD	Device registered on the **DVD** button
AUX1 *1	AUX1	Device registered on the **AUX1** button
AUX2 *1	AUX2	Device registered on the **AUX2** button
CD *1	CD	Device registered on the **CD** button
TV AUDIO *1	TV AUDIO	Device registered on the **TV AUDIO** button

*1 If a preset code is registered for this button, the remote control unit of this unit can control another devices.

*2 With this mode, you can operate: HD Radio, iPod, USB memory device, record player and network function.

When the **FAVORITE STATION** and **InstaPrevue** are pressed, the AVR-operation mode starts automatically.

NOTE

If the mode of the remote control unit is set to other than AVR-operation mode, press **AVR** to switch the remote control unit to the AVR-operation mode to perform the following operations:

• For menu operation by pressing **SETUP**.

Operating devices

The supplied remote control unit can control a device other than this unit.

1 **Press the input source select button to which the preset code for the device you want to operate has been registered (☞page 160).**

2 **Operate the device.**

- For details, refer to the device's operating instructions.

❑ CBL/SAT group (0∗∗∗∗) (Set top box for satellite (SAT) / cable (CBL) / Media player / IP TV) operation

Operation buttons	Function
DEVICE ⏻	Power on/standby∗
DEVICE MENU	Menu
TV ⏻	TV power on/standby
TV INPUT	Switch TV input
CH/PAGE ▲▼	Switch channels (up/down)
INFO	Information
OPTION	Sub menu, Option
△▽◁▷	Cursor operation
ENTER (Cursor)	Enter
BACK	Return
SETUP	Home menu
I◀◀ ▶▶I	Auto search (cue)
▶	Playback
◀◀ ▶▶	Manual search (fast-reverse/fast-forward)
II	Pause
■	Stop
0 – 9, +10	Channel selection
ENTER (Number)	3 digit entry

∗ This may turn some devices on.

❑ TV group (1∗∗∗∗) (TV) operation

Operation buttons	Function
TV ⏻	TV power on/standby∗
TV MENU	TV menu
TV INPUT	Switch TV input
CH/PAGE ▲▼	Switch channels (up/down)
INFO	Information
OPTION	Sub menu
△▽◁▷	Cursor operation
ENTER (Cursor)	Enter
BACK	Return
SETUP	Setup
I◀◀ ▶▶I	Auto search (cue)
▶	Playback
◀◀ ▶▶	Manual search (fast-reverse/fast-forward)
II	Pause
■	Stop
0 – 9, +10	Channel selection
ENTER (Number)	3 digit entry

∗ This may turn some devices on.

☞ See overleaf

❑ VCR/DVR group (2＊＊＊＊) (DVD recorder (DVR) / Personal video recorder (PVR) / video cassette recorder (VCR)) operation

Operation buttons	Function
DEVICE ⏻	Power on/standby＊
DEVICE MENU	Menu
TV ⏻	TV power on/standby
TV INPUT	Switch TV input
CH/PAGE ▲▼	Switch channels (up/down)
INFO	Information
OPTION	Sub menu, Option
△▽◁ ▷	Cursor operation
ENTER	Enter
BACK	Return
SETUP	Setup
⏮ ⏭	Auto search (cue)
▶	Playback
◀◀ ▶▶	Manual search (fast-reverse/fast-forward)
⏸	Pause
■	Stop
0 – 9, +10	Select title, chapter or channel selection

＊ This may turn some devices on.

❑ BD/DVD group (3＊＊＊＊) (Blu-ray Disc player / HD-DVD player / DVD player) operation

Operation buttons	Function
DEVICE ⏻	Power on/standby＊
DEVICE MENU	(Popup) Menu
TV ⏻	TV power on/standby
TV INPUT	Switch TV input
CH/PAGE ▲▼	Switch channels (up/down)
INFO	Information
OPTION	Top menu
△▽◁ ▷	Cursor operation
ENTER	Enter
BACK	Return
SETUP	Setup
⏮ ⏭	Auto search (cue)
▶	Playback
◀◀ ▶▶	Manual search (fast-reverse/fast-forward)
⏸	Pause
■	Stop
0 – 9, +10	Select title, chapter or channel selection

＊ This may turn some devices on.
(Only the power-on operation is available for some DENON model devices as well.)

❑ Audio group (4＊＊＊＊) (CD player / CD recorder) operation

Operation buttons	Function
DEVICE ⏻	Power on/standby＊
TV ⏻	TV power on/standby
TV INPUT	Switch TV input
△▽◁ ▷	Cursor operation
ENTER	Enter
⏮ ⏭	Auto search (cue)
▶	Playback
◀◀ ▶▶	Manual search (fast-reverse/fast-forward)
⏸	Pause
■	Stop
0 – 9, +10	Track selection

＊ This may turn some devices on.
(Only the power-on operation is available for some DENON model devices as well.)

Operating learning function

If the AV device is not a DENON device, or if the device does not operate even when the preset code is registered, use the learning function. Remote codes for different devices can be remembered for use by the DENON remote control included with this device.

Remembering remote control codes from other devices

1 Press and hold RC SETUP for at least 3 seconds.
"SETUP" and ((•)) indicator flashes twice on the remote control unit.

2 Use △▽ to display "LEARN" on the remote control unit and press ENTER.

3 When "DEVIC" appears on the remote control unit, press the input source select button of the AV equipment that you want to store.

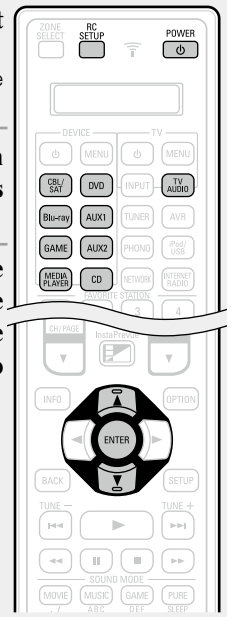

- You cannot store the remote control code in the **AVR** button.
- Before using the learning function, register a preset code (☞page 157 "Registering preset codes") for a mode other than AVR preset (☞page 158) to each input source switch button.

4 When "KEY" appears on the remote control unit, press the button that you want to store.

- You cannot store the remote control code in the **ZONE SELECT**, **RC SETUP**, **POWER ⏻**, **FAVORITE STATION 1 – 4**, **InstaPrevue**, **SOUND MODE**, **SLEEP**, **MACRO A – D** and input source select button.

5 When "READY" appears on the remote control unit, place the remote control unit of the AV equipment face to face with main remote control unit (of this unit). Next, press and hold down the desired button (that you want to store) of the remote control unit of the AV equipment.

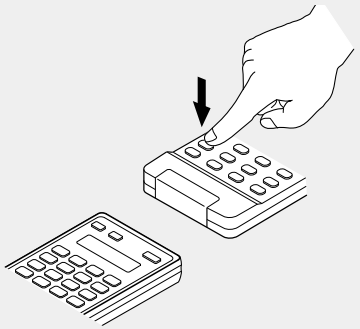

- When the button is correctly stored, "OK" flashes four times on the remote control unit.
- If the button is not correctly stored, "FAIL" flashes four times on the remote control unit. If this happens, perform step 4 again.

6 To store another button, repeat steps 4 and 5.

7 When you have finished storing the remote control codes, press RC SETUP.
"OK" flashes four times on the remote control unit and the normal operation mode is restored.

- There are some remote control units that cannot be programmed, or even if they can be programmed, they may not operate correctly. If this happens, use the remote control unit supplied with the AV equipment to operate it.
- The operations of the programmed buttons override the preset memory. If you do not require the programmed buttons, erase the stored remote control codes to return to the initial settings (☞page 164 "Erasing stored remote control codes").
- The number of buttons that can be stored varies depending on the remote control unit used. If you have stored the maximum number of buttons allowed for the remote control unit, "FAIL" appears on its display.

Erasing stored remote control codes

❑ Erasing the code by each button

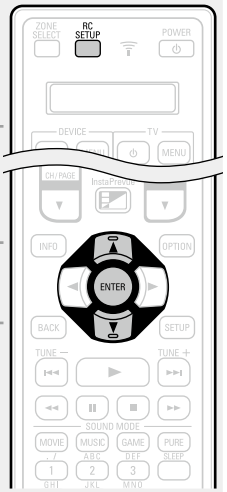

1 **Press and hold RC SETUP for at least 3 seconds.**
"SETUP" and indicator flashes twice on the remote control unit.

2 **Use △▽ to display "RESET" on the remote control unit and press ENTER.**

3 **When "LEARN" appears on the remote control unit, press ENTER.**

4 **When "DEVIC" appears on the remote control unit, press the input source select button of the AV equipment that you want to erase.**

5 **Use △▽ to display "ONE" on the remote control unit and press ENTER.**

6 **When "KEY" appears on the remote control unit, press the button that you want to erase.**
"RESET" flashes four times on the remote control unit and the normal operation mode is restored.

❑ Erasing the code by each equipment input source

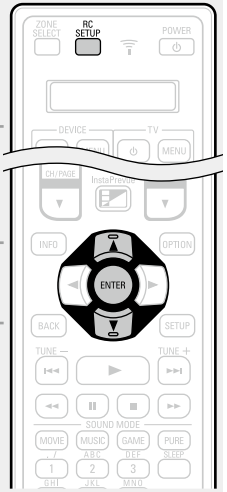

1 **Press and hold RC SETUP for at least 3 seconds.**
"SETUP" and indicator flashes twice on the remote control unit.

2 **Use △▽ to display "RESET" on the remote control unit and press ENTER.**

3 **When "LEARN" appears on the remote control unit, press ENTER.**

4 **When "DEVIC" appears on the remote control unit, press the input source select button of the AV equipment that you want to erase.**

5 **When "ALL" appears, press ENTER.**
"RESET" flashes four times on the remote control unit and the normal operation mode is restored.

Operating macro function

- When the macro function is used, operations that usually require a complicated series of multiple button operations can be performed easily just by pressing the **MACRO** button.
- This device can remember up to 4 macro functions.
- Each macro can record a maximum of 18 steps.

[Example]

When the following set of operations has been registered to the **MACRO** button, you can simply press the **MACRO** button to turn on the TV and this unit and start playing back Blu-ray.

① Turn the TV's power on
↓
② Turn this unit's power on
↓
③ Switch this unit's input source to "Blu-ray"
↓
④ Turn the Blu-ray Disc player's power on
↓
⑤ Play the Blu-ray Disc player

Recording automatic macro operations

You can automatically set the macro for your scene:
(1) Watch movies (MOVIE)
(2) Listen to music (MUSIC)
(3) Watch TV (CBL/SAT) (WATCH)
(4) Turn on all devices (ON)
(5) Turn off all devices (OFF)

NOTE

- Register preset codes for the remote control unit before setting Auto macro (☞page 157).
- Depending on the type or model of your device, macro may not work properly even if it is set.

1 **Press and hold RC SETUP for at least 3 seconds.**
"SETUP" and ((•)) indicator flashes twice on the remote control unit.

2 **Use △▽ to display "MACRO" on the remote control unit and press ENTER.**

3 **Use △▽ to display "AUTO" on the remote control unit and press ENTER.**

4 **When "MCNo" appears on the remote control unit, press the MACRO A – D button that you want to set.**

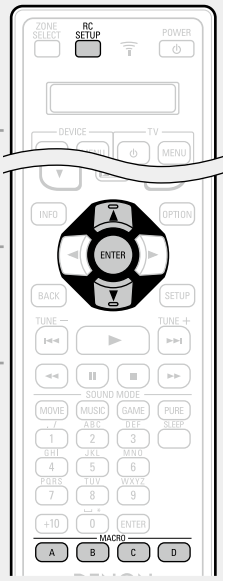

5 **Use △▽ to set the auto macro operation and press ENTER.**
"OK" flashes four times on the remote control unit and the normal operation mode is restored.

Remote control unit display	Auto MACRO
MOVIE	Automatically turns on the devices and starts playback when you watch movies. TV power ON Blu-ray power ON AVR Power ON Source Change Blu-ray Playback Blu-ray
MUSIC	Automatically turns on the devices and starts playback when you listen to music. CD power ON AVR Power ON Source Change CD Playback CD
WATCH	Automatically turns on the devices and starts playback when you watch TV (CBL/SAT). TV power ON CBL/SAT Power ON AVR Power ON Source change CBL/SAT
ON	Turns on all the devices set for PRESET. All DEVICE POWER ON
OFF	Turns off all the devices set for PRESET. All DEVICE POWER OFF

Recording custom macro operations

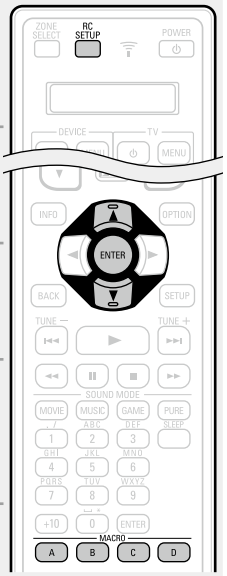

1 **Press and hold RC SETUP for at least 3 seconds.**
"SETUP" and ((•)) indicator flashes twice on the remote control unit.

2 **Use △▽ to display "MACRO" on the remote control unit and press ENTER.**

3 **Use △▽ to display "MAN" on the remote control unit and press ENTER.**

4 **When "MCNo" appears on the remote control unit, press the MACRO A – D button that you want to store.**

5 **Press the buttons to be stored one by one.**

• The step number for the storing procedure and mode are alternately displayed on the remote control unit.

NOTE

You cannot store the macros for the **ZONE SELECT** button.

6 **Press MACRO to exit the macro function.**
"OK" flashes four times on the remote control unit and the normal operation mode is restored.

Adjusting the interval time of macro operations transmitting

The macro operation transmission interval can be adjusted.
• The factory setting is "0.5 sec".

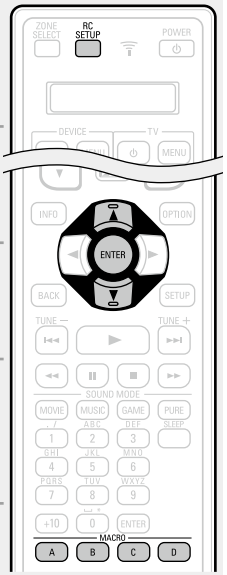

1 **Press and hold RC SETUP for at least 3 seconds.**
"SETUP" and ((•)) indicator flashes twice on the remote control unit.

2 **Use △▽ to display "MACRO" on the remote control unit and press ENTER.**

3 **Use △▽ to display "MAN" on the remote control unit and press ENTER.**

4 **When "MCNo" appears on the remote control unit, press the MACRO A – D button that you want to set.**

5 **Press RC SETUP.**

6 **Use △▽ to set the macro operation transmission interval and press ENTER.**
"OK" flashes four times on the remote control unit and the normal operation mode is restored.

Remote control unit display	Time values that you can set
0.25	0.25 sec
0.50	0.5 sec
0.75	0.75 sec
1.00	1 sec
1.25	1.25 sec

Using the macro function

Press the MACRO A – D button you used to store the macro function.

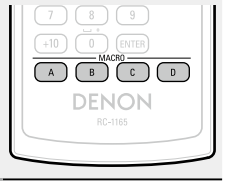

Resetting the macro function

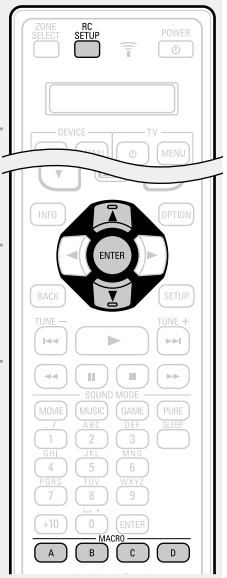

1 **Press and hold RC SETUP for at least 3 seconds.**
"SETUP" and ((•)) indicator flashes twice on the remote control unit.

2 **Use △▽ to display "RESET" on the remote control unit and press ENTER.**

3 **Use △▽ to display "MACRO" on the remote control unit and press ENTER.**

4 **When "MCNo" appears on the remote control unit, press the MACRO A – D button that you want to reset.**
"RESET" flashes four times on the remote control unit and the normal operation mode is restored.

Specifying the zone used with the remote control unit

When the **ZONE SELECT** button is pressed, only the set zone can be operated with the remote control unit.
• The factory setting is "M234".

1 **Press and hold RC SETUP for at least 3 seconds.**
"SETUP" and indicator flashes twice on the remote control unit.

2 **Use △▽ to display "ZLOCK" on the remote control unit and press ENTER.**

3 **Use △▽ to set the zone to be used and press ENTER.**
"OK" flashes four times on the remote control unit and the normal operation mode is restored.

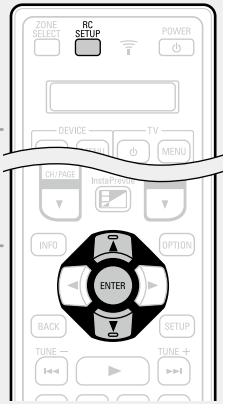

Remote control unit display	Zone to be used
M	MAIN ZONE only
M2	MAIN ZONE / ZONE2
M23	MAIN ZONE / ZONE2 / ZONE3
M234	MAIN ZONE / ZONE2 / ZONE3 / ZONE4

Setting the Remote ID

When using multiple DENON AV receivers in the same room, make this setting so that only the desired AV receiver operates.
• The factory setting is "ID-1".

1 **Press and hold RC SETUP for at least 3 seconds.**
"SETUP" and indicator flashes twice on the remote control unit.

2 **Use △▽ to display "RC-ID" on the remote control unit and press ENTER.**

3 **Use △▽ to set the remote ID and press ENTER.**
"OK" flashes four times on the remote control unit and the normal operation mode is restored.

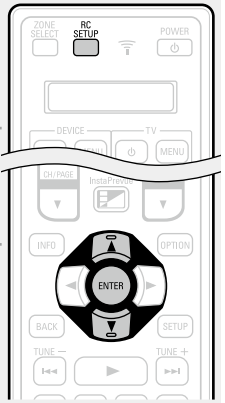

Remote control unit display	Remote ID
ID-1	1
ID-2	2
ID-3	3
ID-4	4

NOTE

When you change the remote ID, make sure that the remote control unit and the remote ID of the main unit are exactly the same (☞page 152 "Remote ID").

Setting the display time length of the remote control unit display

Use the following procedure to set the length of time for which to display data such as zone and mode on the display panel of the remote control unit.

1 **Press and hold RC SETUP for at least 3 seconds.**
"SETUP" and indicator flashes twice on the remote control unit.

2 **Use △▽ to display "DISPL" on the remote control unit and press ENTER.**

3 **Use △▽ to set the display time length and press ENTER.**
"OK" flashes four times on the remote control unit and the normal operation mode is restored.

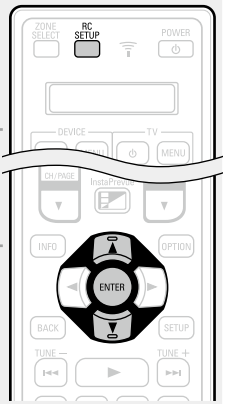

Remote control unit display	Display time
05SEC	5 sec
10SEC	10 sec
15SEC	15 sec

Setting the back light

You can set the back light on the remote control unit to off to prolong the life of the dry cell batteries.

1 **Press and hold RC SETUP for at least 3 seconds.**
"SETUP" and ((•)) indicator flashes twice on the remote control unit.

2 **Use △▽ to display "LIGHT" on the remote control unit and press ENTER.**

3 **Use △▽ to set the back light and press ENTER.**

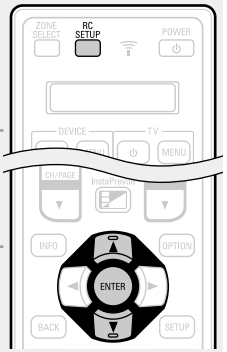

Remote control unit display	Back light
ON	Back light on
OFF	Back light off

Restoring all settings of the remote control unit to default

Use the following procedure to restore all default settings of the remote control unit at the time of purchase.

1 **Press and hold RC SETUP for at least 3 seconds.**
"SETUP" and ((•)) indicator flashes twice on the remote control unit.

2 **Use △▽ to display "RESET" on the remote control unit and press ENTER.**

3 **Use △▽ to display "ALL" on the remote control unit and press ENTER.**

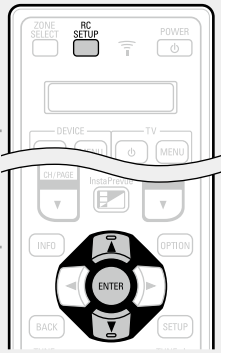

4 **Use △▽ to display "YES" on the remote control unit and press ENTER.**
"RESET" flashes four times on the remote control unit and the normal operation mode is restored.

Informations

Here, we list various information related to this unit.
Please refer to this information as needed.

- Part names and functions ☞page 170
- Other information ☞page 176
- Troubleshooting ☞page 196
- Specifications ☞page 202
- Index ☞page 203

Part names and functions

Front panel

For buttons not explained here, see the page indicated in parentheses ( ).

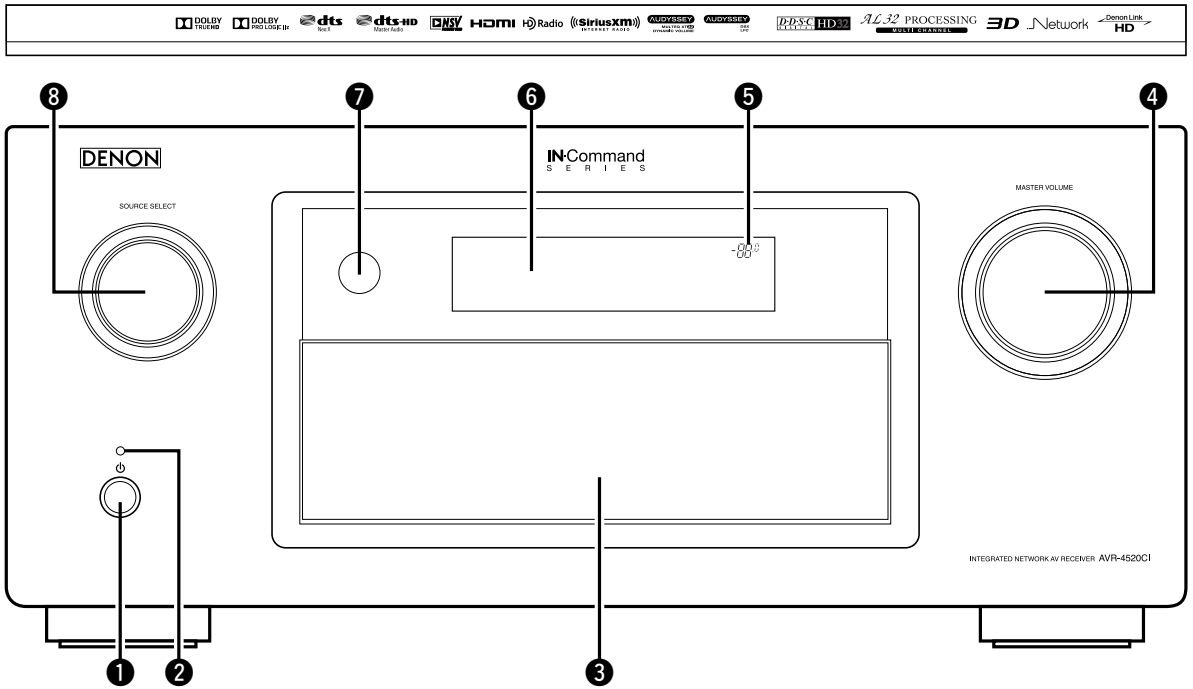

❶ **Power operation button (⏻)** ····· (41)
Turns power to this unit on and off (standby).

❷ **Power indicator** ····· (41)
[Power indicator status]
- Power on : Green
- Normal standby : Off
- When "HDMI Pass Through" or "HDMI Control" (☞page 130) is set to "On" : Red
- When "Network" (☞page 147) is set to "Always On" : Red
- When a mobile device that supports MHL is being charged : Red

❸ **Door**
When you are using buttons and/or connectors behind the door, press the bottom of the door to open it. When not using buttons and/or connectors behind the door, close it. Be careful not to catch your fingers when closing the door.

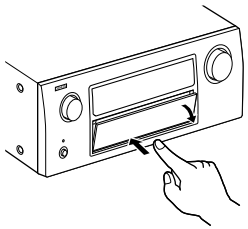

❹ **MASTER VOLUME knob** ····· (42, 113)

❺ **Master volume indicator**

❻ **Display** ····· (172)

❼ **Remote control sensor** ····· (175)

❽ **SOURCE SELECT knob** ····· (41, 113)

With the door open

For buttons not explained here, see the page indicated in parentheses ( ).

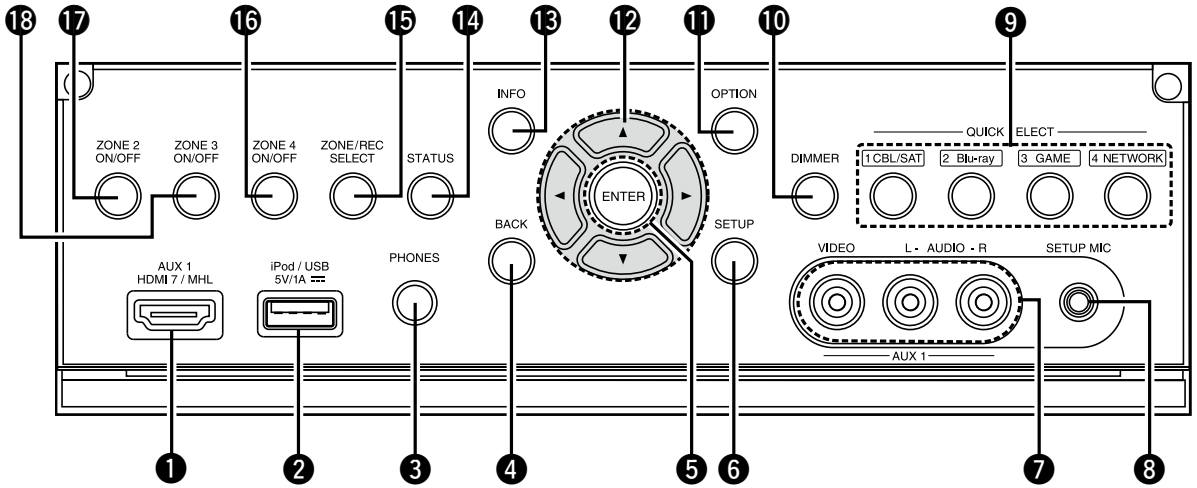

❶ AUX1 HDMI 7 / MHL connector ..... (12)

❷ iPod/USB port ..... (23)

❸ Headphones jack (PHONES)

When the headphones are plugged into this jack, audio will no longer be output from the connected speakers or from the PRE OUT connectors.

NOTE

To prevent hearing loss, do not raise the volume level excessively when using headphones.

❹ BACK button ..... (48, 60, 64, 67, 72, 75, 201)

❺ ENTER button ..... (117, 120, 128, 134, 139, 146, 150)

❻ SETUP button ..... (117, 120, 128, 134, 139, 146, 150)

❼ AUX1 INPUT connectors ..... (21)

❽ SETUP MIC jack ..... (34, 99)

❾ QUICK SELECT buttons ..... (106)

❿ DIMMER button ..... (153)

⓫ OPTION button

..... (44, 48, 51, 60, 65, 67, 75, 104)

⓬ Cursor buttons

(△▽◁ ▷) ..... (117, 120, 128, 134, 139, 146, 150)

⓭ Information button (INFO) ..... (154)

⓮ STATUS button ..... (45, 58, 60, 64, 75, 153)

⓯ ZONE/REC SELECT button ..... (107, 113)

⓰ ZONE4 ON/OFF button ..... (113)

⓱ ZONE2 ON/OFF button ..... (113)

⓲ ZONE3 ON/OFF button ..... (113)

Display

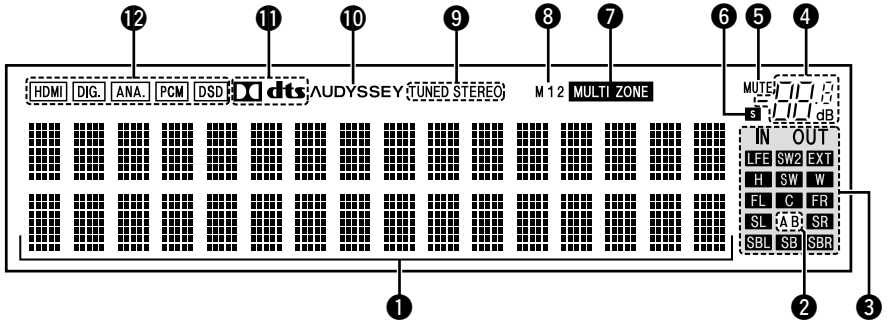

❶ Information display
The input source name, sound mode, setting values and other information are displayed here.

❷ Front speaker indicator
This lights according to the setting of the front A and B speakers.

❸ Output signal channel indicators
Lights when audio signals are being output from the speakers.

❹ Master volume indicator

❺ MUTE indicator
This lights when the mute mode is selected (☞page 42).

❻ Sleep timer indicator
This lights when the sleep mode is selected (☞page 105).

❼ MULTI ZONE indicators
This lights up when ZONE2, ZONE3 or ZONE4 (separate room) power is turned on (☞page 113).

❽ Monitor output indicator
These light according to the HDMI monitor output setting.
When set to "Auto(Dual)", the indicators light according to connection status.

❾ Tuner reception mode indicators
These light according to the reception conditions when the input source is set to "HD Radio".
STEREO : In FM mode, this lights up when receiving stereo broadcasts.
TUNED : Lights up when the broadcast is properly tuned in.

❿ Audyssey® indicator
This indicator lights when the "MultEQ® XT 32" (☞page 125), "Dynamic EQ" (☞page 125), "Dynamic Volume" (☞page 126), "Audyssey DSX®" (☞page 126) or "Audyssey LFC™" (☞page 126) setting is set to other than "Off".

⓫ Decoder indicator
These light when Dolby or DTS signals are input or when the Dolby or DTS decoder is running.

⓬ Input mode indicators
Set the audio input modes for the different input sources (☞page 138).

Rear panel

See the page indicated in parentheses ( ).

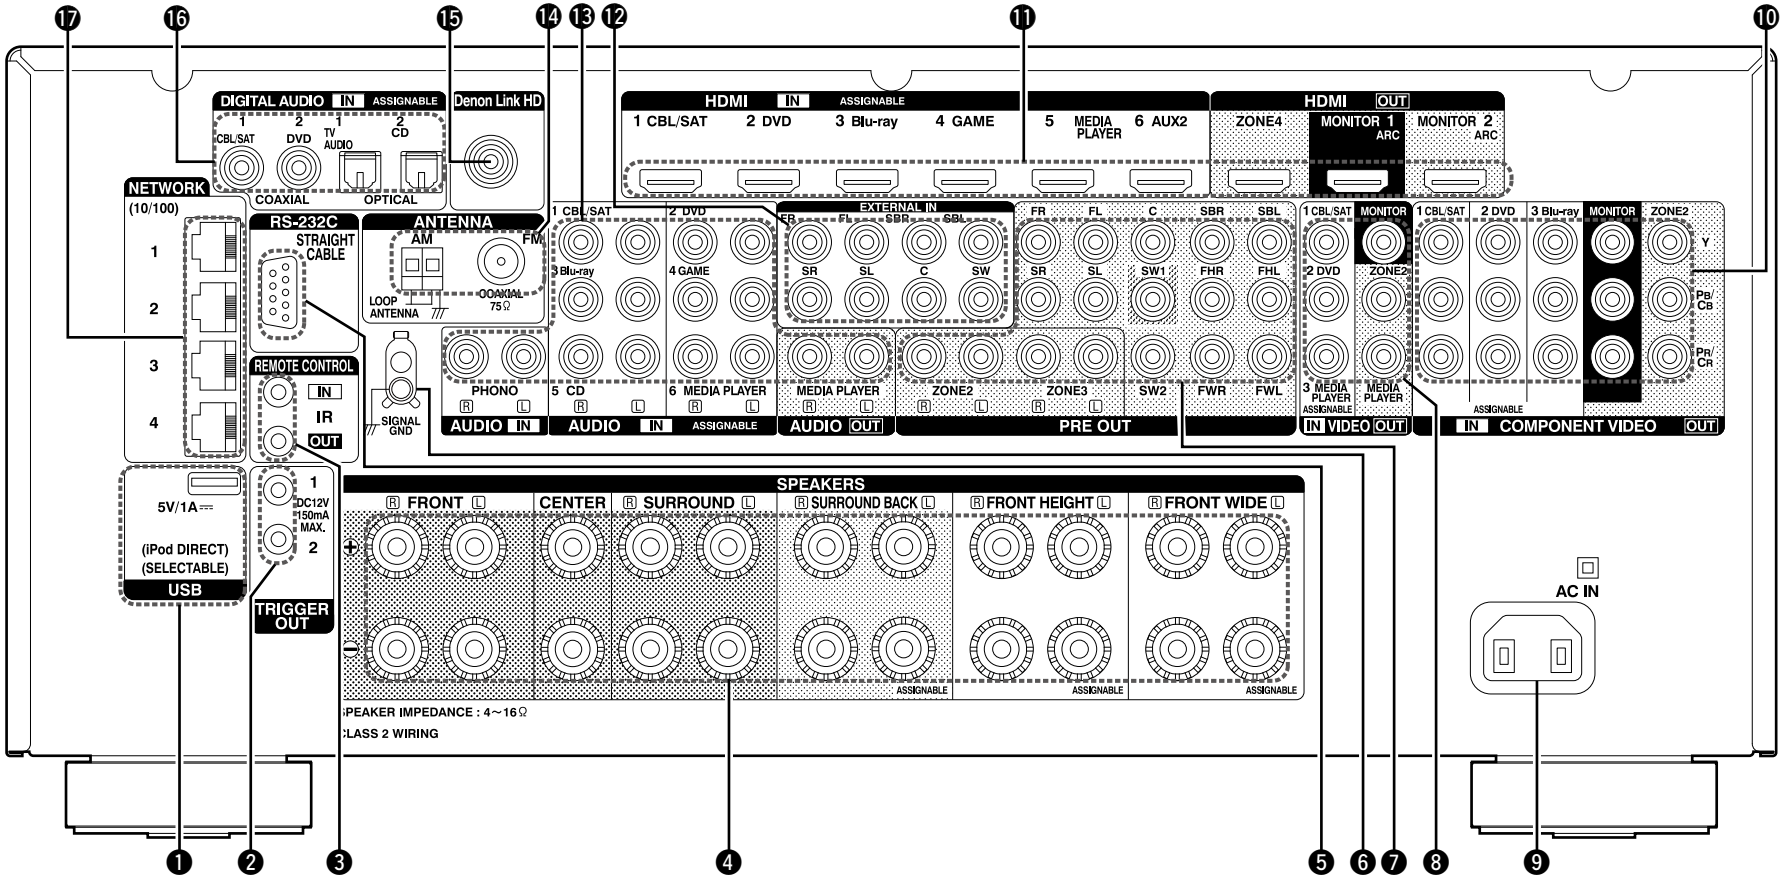

❶ **USB port** ..... (23)
❷ **TRIGGER OUT jacks** ..... (30)
❸ **REMOTE CONTROL jacks** ..... (30)
❹ **Speaker terminals (SPEAKERS)** ..... (94, 95, 96, 97, 111)
❺ **RS-232C connector** ..... (30)
❻ **SIGNAL GND terminal** ..... (26)
❼ **PRE OUT connectors** ..... (29, 94, 95, 96, 97, 98, 112)
❽ **Video connectors (VIDEO)** ..... (16, 17, 18, 22, 112)
❾ **AC inlet (AC IN)** ..... (32)
❿ **Component video connectors (COMPONENT VIDEO)** ..... (16, 17, 18, 19, 112)
⓬ **EXTERNAL IN connectors** ..... (28)
⓫ **HDMI connectors** ..... (11, 12, 112)
⓭ **Analog audio connectors (AUDIO)** ..... (17, 18, 19, 20, 22, 25, 26)
⓮ **FM/AM antenna terminals (ANTENNA)** ..... (27)
⓯ **Denon Link HD connector** ..... (13)
⓰ **Digital audio connectors (DIGITAL AUDIO)** ..... (16, 17, 18, 25)
⓱ **Network connectors (NETWORK)** ..... (31)

NOTE

Do not touch the inner pins of the connectors on the rear panel. Electrostatic discharge may cause permanent damage to the unit.

Remote control unit

For buttons not explained here, see the page indicated in parentheses ( ).

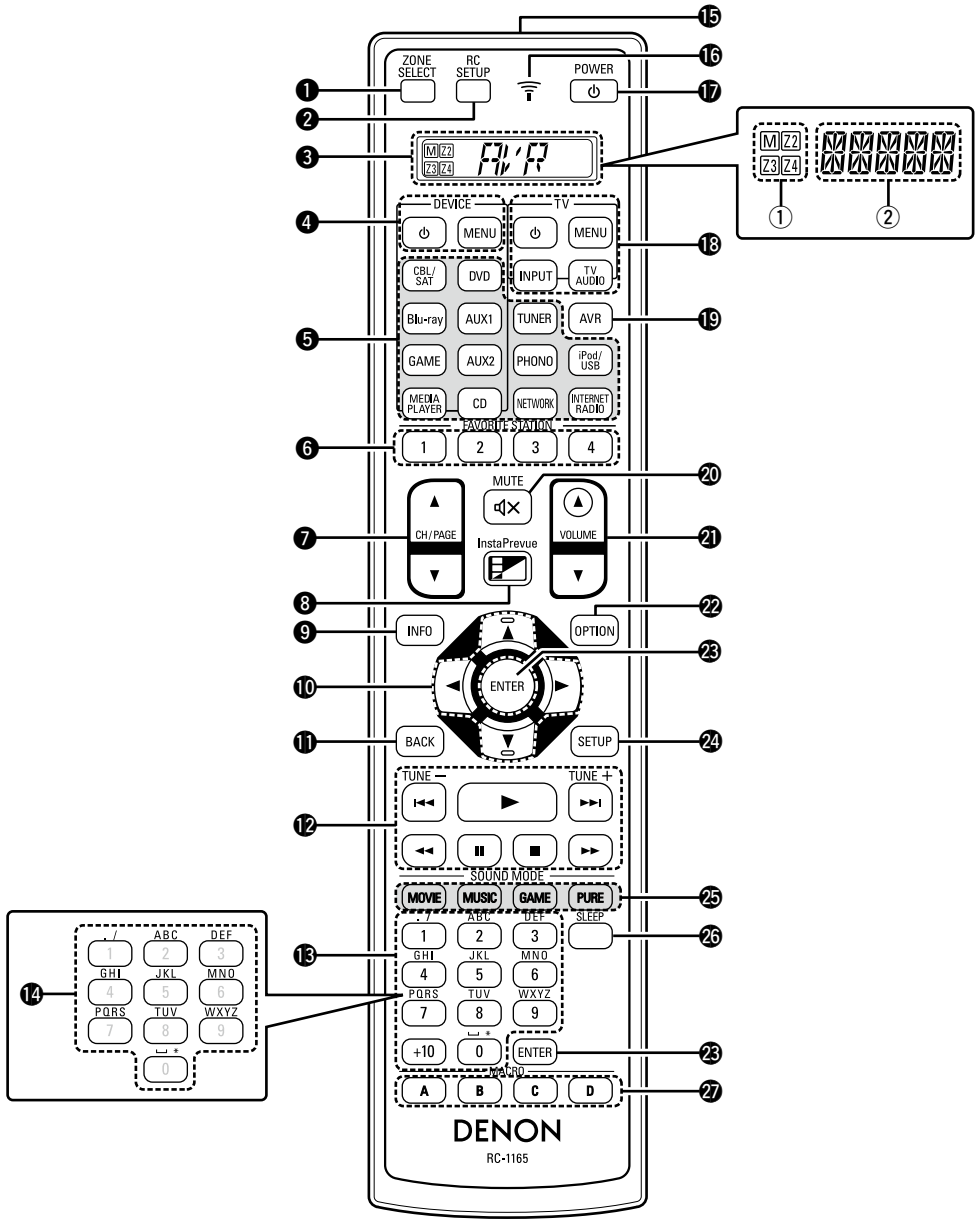

❶ **ZONE SELECT button** (34, 80, 99, 113, 167)

❷ **RC SETUP button** (157, 163, 165, 167, 168)

❸ **Display**
① Zone select indicators (34, 99, 113, 167)
② Operation mode indicator

❹ **Device operation buttons (DEVICE ⏻ / DEVICE MENU)** (161, 162)

❺ **Input source select buttons** (41, 113)

❻ **FAVORITE STATION buttons (1 – 4)** (78)

❼ **Channel/page search buttons (CH/PAGE ▲▼)** (46, 49, 55, 58, 61, 65, 68, 71, 73, 75, 161, 162)

❽ **InstaPrevue button** (104)

❾ **Information button (INFO)** (154)

❿ **Cursor buttons (△▽◁ ▷)** (117, 120, 128, 134, 139, 146, 150)

⓫ **BACK button** (48, 60, 64, 67, 72, 75)

⓬ **System buttons** (46, 49, 61, 65, 68, 71, 73, 75, 161, 162)
- Skip buttons (I◀◀, ▶▶I)
- Play button (▶)
- Search buttons (◀◀, ▶▶)
- Pause button (❚❚)
- Stop button (■)

Tuning up / Tuning down buttons (TUNE +, –) (51, 52)

⓭ **Number buttons** (53, 55, 119, 157)

⓮ **Character buttons** (119)

⓯ **Remote control signal transmitter** (175)

⓰ **POWER button (⏻)** (41, 113)

⓱ **indicator** (157, 163, 165, 167, 168)

⓲ **TV operation buttons (TV ⏻ / TV MENU / TV INPUT)** (58, 61, 65, 68, 161, 162)

⓳ **AVR-operation mode button** (158, 160)

⓴ **MUTE button (🔇×)** (42, 113)

㉑ **VOLUME buttons (▲▼)** (42, 113)

㉒ **OPTION button** (44, 48, 51, 60, 65, 67, 75, 104)

㉓ **ENTER button** (117, 120, 128, 134, 139, 146, 150)

㉔ **SETUP button** (117, 120, 128, 134, 139, 146, 150)

㉕ **SOUND MODE buttons** (84)
- MOVIE button
- MUSIC button
- GAME button
- PURE button

㉖ **SLEEP button** (105, 113)

㉗ **MACRO buttons (A – D)** (165, 166)

The remote control unit for this unit is automatically lit when you touch it.
This is useful for operating the remote control unit in a dark room such as when watching movies in a theater room.
The time for which the backlight stays on can be changed (☞page 168 "Setting the back light").

☞ See overleaf

Inserting the batteries

① Slide the rear cover off the remote control unit in the arrow direction.

② Load the two batteries properly as indicated by the marks in the battery compartment.

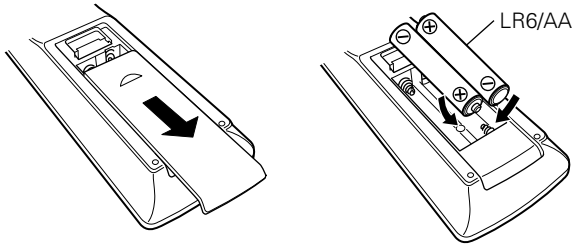

③ Put the rear cover back on.

NOTE

- Insert the specified batteries in the remote control unit.
- Replace the batteries with new ones if the set does not operate even when the remote control unit is operated close to the unit. (The supplied batteries are only for verifying operation. Replace them with new batteries at an early date.)
- When inserting the batteries, be sure to do so in the proper direction, following the ⊕ and ⊖ marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
  - Do not use a new battery together with an old one.
  - Do not use two different types of batteries.
  - Do not attempt to charge dry batteries.
  - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
  - Do not keep the battery in a place exposed to direct sunlight or in places with extremely high temperatures, such as near a heater.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- Remove the batteries from the remote control unit if it will not be in use for long periods.
- Used batteries should be disposed of in accordance with the local regulations regarding battery disposal.
- The remote control unit may function improperly if rechargeable batteries are used.

Operating range of the remote control unit

Point the remote control unit at the remote sensor when operating it.

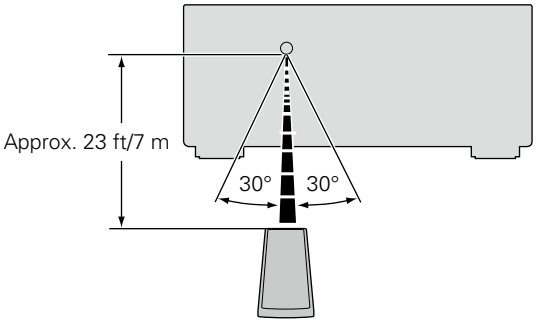

NOTE

- The set may function improperly or the remote control unit may not operate if the remote control sensor is exposed to direct sunlight, strong artificial light from an inverter type fluorescent lamp or infrared light.
- When using 3D video devices that transmit radio communication signals (such as infrared signals etc) between the various units (such as the monitor, 3D glasses, 3D transmitter unit etc), the remote control unit may not operate due to interference from those radio communication signals. If this occurs, adjust the direction and distance of the 3D communication for each unit, and check that the remote control unit operation is not affected by these signals.

Other information

- ❏ **Trademark information** (☞page 176)
- ❏ **Relationship between the Amp Assign mode settings and audio output** (☞page 177)
- ❏ **Surround** (☞page 184)
- ❏ **Relationship between video signals and monitor output** (☞page 190)
- ❏ **Explanation of terms** (☞page 193)

Trademark information

This product uses the following technologies (Random order):

AUDYSSEY MULTEQ XT32 DYNAMIC VOLUME
AUDYSSEY DSX LFC

Manufactured under license from Audyssey Laboratories™. U.S. and foreign patents pending. Audyssey MultEQ® XT 32, Audyssey Dynamic EQ®, Audyssey Dynamic Volume® and Audyssey DSX® are registered trademarks of Audyssey Laboratories. Audyssey LFC™ is a trademark of Audyssey Laboratories.

DOLBY TRUEHD
DOLBY PRO LOGIC IIz

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.

dts Neo:X
dts-HD Master Audio

Manufactured under license under U.S. Patent No's:5,956,674;5,974,380;5,978,762;6,487,535;6,226,616;7,212,872;7,003,467;7,272,567;7,668,723;7,392,195;7,930,184;7,333,929;7,548,853;7,283,634 & other U.S. and worldwide patents issued and pending.
DTS-HD, the Symbol, & DTS-HD and the Symbol together are registered trademarks & DTS -HD Master Audio is a trademark of DTS, Inc. Product includes software. ©DTS, Inc. All Rights Reserved.

HDMI

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

InstaPrevue

InstaPrevue and the InstaPrevue logo are trademarks or registered trademarks of Silicon Image, Inc. in the United States and other countries.

Made for iPod iPhone
AirPlay

"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.
Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, or iPhone, may affect wireless performance.
AirPlay, the AirPlay logo, iPad, iPhone, iPod, iPod classic, iPod nano, iPod shuffle and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

- Individual users are permitted to use iPhone, iPod, iPod classic, iPod nano, iPod shuffle, and iPod touch for private copy and playback of non-copyrighted contents and contents whose copy and playback is permitted by law. Copyright infringement is prohibited by law.

MHL Mobile High-Definition Link

MHL, the MHL Logo, and Mobile High-Definition Link are trademark or registered trademarks of MHL LLC in the United States and other countries.

Plays Windows Media™

Windows Media and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Relationship between the Amp Assign mode settings and audio output

On this unit, you can change how the power amplifiers within this unit are used according to your environment.
This allows you to output audio to rooms other than the room where the surround is played back (MAIN ZONE) and to enjoy high-quality playback from the front speaker in MAIN ZONE.

- Set the Amp Assign mode by referring to "Assign Mode" (☞page 141).
- For speaker connection, see "Speaker connection" (☞page 93).

NOTE

When making a bi-amplifier connection, use speakers that support the bi-amplifier connection. In this case, remove the short-circuit plate or short-circuit wire from the speaker connector.

❑ When "9.1ch(SB/FH/FW)" is selected for "Assign Mode"

Assigns all power amplifiers within this unit for MAIN ZONE. Up to 9.1ch playback is available.

	Speaker terminal										
	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR
Output signal	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR

	Pre out terminal															
	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R
Output signal	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R

Audio is output from the optimum speakers based on the selected sound mode.

☞ See overleaf

❑ When "7.1ch + ZONE2" is selected for "Assign Mode"

Assigns power amplifiers within this unit as follows: 7.1ch for MAIN ZONE and 2ch for ZONE2.
Select the desired speakers used for MAIN ZONE from the "Main Speakers" settings.

			Speaker terminal									
			FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR
Output signal													
	Main Speakers	S.Back/F.Height	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	Z2L	Z2R
		S.Back/F.Wide	FL	FR	C	SL	SR	SBL	SBR	Z2L	Z2R	FWL	FWR
		F.Height/F.Wide	FL	FR	C	SL	SR	Z2L	Z2R	FHL	FHR	FWL	FWR

			Pre out terminal															
			FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R
Output signal																			
	Main Speakers	S.Back/F.Height	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	–	–	SW1	SW2	Z2L	Z2R	Z3L	Z3R
		S.Back/F.Wide	FL	FR	C	SL	SR	SBL	SBR	–	–	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R
		F.Height/F.Wide	FL	FR	C	SL	SR	–	–	FHL	FHR	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R

Audio is output from the optimum speakers based on the selected sound mode.

❑ When "5.1ch + ZONE2/3" is selected for "Assign Mode"

Assigns power amplifiers within this unit as follows: 5.1ch for MAIN ZONE and 2ch for ZONE2 and ZONE3 each.

	Speaker terminal										
	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR
Output signal	FL	FR	C	SL	SR	Z2L	Z2R	–	–	Z3L	Z3R

	Pre out terminal																	
	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R
Output signal	FL	FR	C	SL	SR	–	–	–	–	–	–	SW1	SW2	Z2L	Z2R	Z3L	Z3R

See overleaf

❑ When "7.1ch + ZONE2/3-MONO" is selected for "Assign Mode"

Assigns power amplifiers within this unit as follows: 7.1ch for MAIN ZONE and 1ch for ZONE2 and ZONE3 each.
Select the desired speakers used for MAIN ZONE from the "Main Speakers" settings.

			Speaker terminal										
			FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR
Output signal													
	Main Speakers	S.Back/F.Height	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	Z2 MONO	Z3 MONO
		S.Back/F.Wide	FL	FR	C	SL	SR	SBL	SBR	Z2 MONO	Z3 MONO	FWL	FWR
		F.Height/F.Wide	FL	FR	C	SL	SR	Z2 MONO	Z3 MONO	FHL	FHR	FWL	FWR

			Pre out terminal															
			FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R
Output signal																			
	Main Speakers	S.Back/F.Height	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	–	–	SW1	SW2	Z2 MONO	Z2 MONO	Z3 MONO	Z3 MONO
		S.Back/F.Wide	FL	FR	C	SL	SR	SBL	SBR	–	–	FWL	FWR	SW1	SW2	Z2 MONO	Z2 MONO	Z3 MONO	Z3 MONO
		F.Height/F.Wide	FL	FR	C	SL	SR	–	–	FHL	FHR	FWL	FWR	SW1	SW2	Z2 MONO	Z2 MONO	Z3 MONO	Z3 MONO

Audio is output from the optimum speakers based on the selected sound mode.

❑ When "7.1ch(Bi-Amp)" is selected for "Assign Mode"

Assigns power amplifiers within this unit as follows: 7.1ch for MAIN ZONE and 2ch for the front speaker bi-amplifier connection.
Select the desired speakers used for MAIN ZONE from the "Main Speakers" settings.

			Speaker terminal										
			FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR
Output signal													
	Main Speakers	S.Back/F.Height	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FL (Bi-amp)	FR (Bi-amp)
		S.Back/F.Wide	FL	FR	C	SL	SR	SBL	SBR	FL (Bi-amp)	FR (Bi-amp)	FWL	FWR
		F.Height/F.Wide	FL	FR	C	SL	SR	FL (Bi-amp)	FR (Bi-amp)	FHL	FHR	FWL	FWR

			Pre out terminal															
			FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R
Output signal																			
	Main Speakers	S.Back/F.Height	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	–	–	SW1	SW2	Z2L	Z2R	Z3L	Z3R
		S.Back/F.Wide	FL	FR	C	SL	SR	SBL	SBR	–	–	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R
		F.Height/F.Wide	FL	FR	C	SL	SR	–	–	FHL	FHR	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R

See overleaf

❑ When "5.1ch(Bi-Amp) + ZONE2" is selected for "Assign Mode"

Assigns power amplifiers within this unit as follows: 5.1ch for MAIN ZONE, 2ch for the front speaker bi-amplifier connection, and 2ch for ZONE2.

	Speaker terminal										
	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR
Output signal	FL	FR	C	SL	SR	FL (Bi-amp)	FR (Bi-amp)	Z2L	Z2R	–	–

	Pre out terminal																
	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R
Output signal	FL	FR	C	SL	SR	–	–	–	–	–	–	SW1	SW2	Z2L	Z2R	Z3L	Z3R

❑ When "9.1ch/2ch Front" is selected for "Assign Mode"

Assigns all power amplifiers within this unit for MAIN ZONE. Up to 9.1ch playback is available. You can also use a front speaker that is different from the one used during multi-channel playback for playback by switching the internal power amplifier during 2ch playback.

Select the desired speakers used for MAIN ZONE from the "Main Speakers" settings.

			Speaker terminal										
			FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR
Output signal													
	Main Speakers	S.Back/F.Height	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FL for 2ch	FR for 2ch
		S.Back/F.Wide	FL	FR	C	SL	SR	SBL	SBR	FL for 2ch	FR for 2ch	FWL	FWR
		F.Height/F.Wide	FL	FR	C	SL	SR	FL for 2ch	FR for 2ch	FHL	FHR	FWL	FWR

			Pre out terminal															
			FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R
Output signal																			
	Main Speakers	S.Back/F.Height	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	–	–	SW1	SW2	Z2L	Z2R	Z3L	Z3R
		S.Back/F.Wide	FL	FR	C	SL	SR	SBL	SBR	–	–	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R
		F.Height/F.Wide	FL	FR	C	SL	SR	–	–	FHL	FHR	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R

See overleaf

❑ When "7.1ch/2ch Front(Bi-Amp)" is selected for "Assign Mode"

Assigns power amplifiers within this unit as follows: 7.1ch for the MAIN ZONE multi-channel playback. You can also use a front speaker that is different from the one used during multi-channel playback for playback under the bi-amplifier connection by switching the internal power amplifier during 2ch playback.

	Speaker terminal										
	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR
Output signal	FL	FR	C	SL	SR	SBL	SBR	FL (Bi-amp) for 2ch	FR (Bi-amp) for 2ch	FL (Bi-amp) for 2ch	FR (Bi-amp) for 2ch

	Pre out terminal																
	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R
Output signal	FL	FR	C	SL	SR	SBL	SBR	–	–	–	–	SW1	SW2	Z2L	Z2R	Z3L	Z3R

❑ When "7.1ch + Front B" is selected for "Assign Mode"

Assigns power amplifiers within this unit as follows: 7.1ch for MAIN ZONE and 2ch for the second front speaker connection.
Select the desired speakers used for MAIN ZONE from the "Main Speakers" settings.

		Speaker terminal										
		FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR
Output signal												
Main Speakers	S.Back/F.Height	FL A	FR A	C	SL	SR	SBL	SBR	FHL	FHR	FL B	FR B
	S.Back/F.Wide	FL A	FR A	C	SL	SR	SBL	SBR	FL B	FR B	FWL	FWR
	F.Height/F.Wide	FL A	FR A	C	SL	SR	FL B	FR B	FHL	FHR	FWL	FWR

		Pre out terminal																
		FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R
Output signal																		
Main Speakers	S.Back/F.Height	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	–	–	SW1	SW2	Z2L	Z2R	Z3L	Z3R
	S.Back/F.Wide	FL	FR	C	SL	SR	SBL	SBR	–	–	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R
	F.Height/F.Wide	FL	FR	C	SL	SR	–	–	FHL	FHR	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R

Audio is output from the optimum speakers based on the selected sound mode.

☞ See overleaf

❑ When "Discrete 11.1ch" is selected for "Assign Mode"

Assigns 9.1ch for power amplifiers within this unit and 2ch (front/front height) for the external power amplifier connection. Up to 11.1ch playback is available.

		Speaker terminal										
		FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR
Output signal												
Main Pre-amps	Front	–	–	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR
	Front Height	FL	FR	C	SL	SR	SBL	SBR	–	–	FWL	FWR

		Pre out terminal																
		FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R
Output signal																		
Main Pre-amps	Front	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R
	Front Height	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R

❑ When "Pre Amplifier" is selected for "Assign Mode"

Connects all speakers by using an external power amplifier and uses this unit as a preamplifier.
You can select "Custom" for the "Pre-amp Assign" setting to change settings for each channel.

		Speaker terminal										
		FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR
Output signal												
Pre-amp Assign	All	–	–	–	–	–	–	–	–	–	–	–
	Custom	–	–	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR

You can set whether or not to output audio from speakers for each channel.

		Pre out terminal																
		FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R
Output signal																		
Pre-amp Assign	All	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R
	Custom	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R

☞ See overleaf

❑ When “Custom” is selected for “Assign Mode”

Assigns power amplifiers within this unit as you prefer.

	Speaker terminal										
	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR
Output signal	FL	FR	C or –	SL or –	SR or –	FL	FR	FL	FR	–	–
	C	C				C	C	C	C		
	SL	SR				SL	SR	SL	SR		
	SBL	SBR				SBL	SBR	SBL	SBR		
	FHL	FHR				FHL	FHR	FHL	FHR		
	FWL	FWR				FWL	FWR	FWL	FWR		
	Z2L	Z2R				Z2L	Z2R	Z2L	Z2R		
	Z3L	Z3R				Z3L	Z3R	Z3L	Z3R		
	Z2 MONO	Z3 MONO				Z2 MONO	Z3 MONO	Z2 MONO	Z3 MONO		
	–	–				–	–	–	–		

	Pre out terminal																
	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R
Output signal	FL	FR	C	SL	SR	SBL	SBR	FHL	FHR	FWL	FWR	SW1	SW2	Z2L	Z2R	Z3L	Z3R

Surround

This unit is equipped with a digital signal processing circuit that lets you play program sources in the sound mode to achieve the same sense of presence as in a movie theater.

Sound modes and surround parameters

This table shows the speakers that can be used in each sound mode and the surround parameters adjustable in each sound mode.

Symbols in the table

○ This indicates the audio output channels or surround parameters that can be set.
◎ This indicates the audio output channels. The output channels depend on the settings of "Speaker Config." (☞page 142).

Sound Mode (☞page 84)	Channel output							Dialog Enhancer (☞page 121)	Subwoofer Level (☞page 121)
	Front L/R	Center	Surround L/R	Surround back L/R	Front height L/R	Front wide L/R	Subwoofer		
DIRECT/PURE DIRECT (2 channel)*1	○						◎*7		○*7
DIRECT/PURE DIRECT (Multi-channel)*1	○	◎	◎	◎*2	◎*2	◎*2	◎		○
DSD DIRECT (2 channel)*1	○						◎*7		○*7
DSD DIRECT (Multi-channel)*1	○	◎	◎				◎		○
EXTERNAL IN	○	◎	◎	◎			◎		○
STEREO	○						◎	○	○
MULTI CH IN	○	◎	◎	◎	◎*4		◎	○	○
DOLBY PRO LOGIC IIz	○	◎	◎	◎	◎		◎	○	○
DOLBY PRO LOGIC IIx	○	◎	◎	◎			◎	○	○
DOLBY PRO LOGIC II	○	◎	◎				◎	○	○
DOLBY PRO LOGIC IIx A-DSX	○	◎	◎	◎	◎*5	◎*6	◎	○	○
DOLBY PRO LOGIC II A-DSX	○	◎	◎		◎*5	◎*6	◎	○	○
DTS NEO:X	○	◎	◎	◎*3	◎*3	◎*3	◎	○	○
Audyssey DSX®	○	◎	◎	◎	◎*5	◎*6	◎	○	○
DOLBY DIGITAL	○	◎	◎	◎	◎*4		◎	○	○
DOLBY DIGITAL Plus	○	◎	◎	◎*2	◎*2	◎*2	◎	○	○
DOLBY TrueHD	○	◎	◎	◎*2	◎*2	◎*2	◎	○	○
DTS SURROUND	○	◎	◎	◎	◎*4		◎	○	○
DTS 96/24	○	◎	◎	◎	◎*4		◎	○	○
DTS-HD	○	◎	◎	◎*2	◎*2	◎*2	◎	○	○
DTS Express	○	◎	◎	◎	◎*4		◎	○	○
MULTI CH STEREO	○	◎	◎	◎*3	◎*3	◎*3	◎	○	○
WIDE SCREEN	○	◎	◎	◎*3	◎*3	◎*3	◎	○	○
SUPER STADIUM	○	◎	◎	◎*3	◎*3	◎*3	◎	○	○
ROCK ARENA	○	◎	◎	◎*3	◎*3	◎*3	◎	○	○
JAZZ CLUB	○	◎	◎	◎*3	◎*3	◎*3	◎	○	○
CLASSIC CONCERT	○	◎	◎	◎*3	◎*3	◎*3	◎	○	○
MONO MOVIE	○	◎	◎	◎*3	◎*3	◎*3	◎	○	○
VIDEO GAME	○	◎	◎	◎*3	◎*3	◎*3	◎	○	○
MATRIX	○	◎	◎	◎*3	◎*3	◎*3	◎	○	○
VIRTUAL	○						◎	○	○

*1 During playback in PURE DIRECT mode, the surround parameters are the same as in DIRECT mode.
*2 A signal for each channel contained in an input signal is output as audio.
*3 You can select speakers to output audio on the "Speaker Select" (☞page 123) setting in the menu.
*4 Audio is output from the front height speaker when the set sound mode name contains "+PLIIz". For information on how to check the sound mode, see page 84.
*5 Audio is output from the front height speaker when "Audyssey DSX®" (☞page 126) in the menu is set to "Wides/Heights" or "Heights".
*6 Audio is output from the front wide speaker when "Audyssey DSX®" (☞page 126) in the menu is set to "Wides/Heights" or "Wides".
*7 Only when "Subwoofer Mode" is set to "LFE+Main" (☞page 144), sound is output from the subwoofer.

☞ See overleaf

Sound Mode (☞page 84)	Surround Parameter (☞page 121)									
	Cinema EQ (☞page 121)	Loudness Management ∗10 (☞page 121)	Dynamic Compression ∗11 (☞page 121)	Bass Sync ∗12 (☞page 121)	Low Frequency Effects ∗12 (☞page 122)	Delay Time (☞page 122)	Effect Level (☞page122)	Room Size (☞page 122)	Height Gain ∗13 (☞page 123)	Speaker Select (☞page 123)
DIRECT/PURE DIRECT (2 channel)∗1		○	○							
DIRECT/PURE DIRECT (Multi-channel)∗1		○	○		○					
DSD DIRECT (2 channel)∗1										
DSD DIRECT (Multi-channel)∗1					○					
EXTERNAL IN					○					
STEREO		○	○	○	○					
MULTI CH IN	○∗8			○	○					
DOLBY PRO LOGIC IIz	○	○	○						○	
DOLBY PRO LOGIC IIx	○∗9	○	○							
DOLBY PRO LOGIC II	○∗9	○	○							
DOLBY PRO LOGIC IIx A-DSX	○∗9	○	○							
DOLBY PRO LOGIC II A-DSX	○∗9	○	○							
DTS NEO:X	○∗9	○	○							○
Audyssey DSX®	○	○	○	○	○					
DOLBY DIGITAL	○∗8		○	○	○				○	
DOLBY DIGITAL Plus	○∗8		○	○	○				○	
DOLBY TrueHD	○∗8	○	○	○	○				○	
DTS SURROUND	○∗8		○	○	○				○	
DTS 96/24	○∗8			○	○				○	
DTS-HD	○∗8			○	○				○	
DTS Express	○∗8			○	○				○	
MULTI CH STEREO		○	○	○	○					○
WIDE SCREEN		○	○	○	○		○			○
SUPER STADIUM		○	○	○	○		○	○		○
ROCK ARENA		○	○	○	○		○	○		○
JAZZ CLUB		○	○	○	○		○	○		○
CLASSIC CONCERT		○	○	○	○		○	○		○
MONO MOVIE		○	○	○	○		○	○		○
VIDEO GAME		○	○	○	○		○	○		○
MATRIX		○	○	○	○	○				○
VIRTUAL		○	○	○	○					

∗1 During playback in PURE DIRECT mode, the surround parameters are the same as in DIRECT mode.
∗8 This setting is unavailable when the set sound mode name contains "+PLII Music" or "+NEO:X Music". For information on how to check the sound mode, see page 84.
∗9 This setting is possible when the sound mode is "Cinema" mode.
∗10 This item can be selected when a Dolby TrueHD signal is played.
∗11 This item can be selected when a Dolby Digital or DTS signal is played.
∗12 This item can be selected when a Dolby Digital or DTS signal or DVD-Audio is played.
∗13 This setting is available when the set sound mode name contains "+PLIIz". For information on how to check the sound mode, see page 84.

☞ See overleaf

Sound Mode (☞page 84)	Surround Parameter (☞page 121)				Tone ∗14 (☞page 123)	Audyssey (☞page 125)					Restorer ∗18 (☞page 124)
	PRO LOGIC IIz/IIx Music mode only			NEO:X mode only							
	Panorama (☞page 122)	Dimension (☞page 122)	Center Width (☞page 122)	Center Gain (☞page 122)		MultEQ® XT 32 (☞page 125)	Dynamic EQ ∗17 (☞page 125)	Dynamic Volume ∗17 (☞page 126)	Audyssey LFC™ ∗17 (☞page 126)	Audyssey DSX® (☞page 126)	
DIRECT/PURE DIRECT (2 channel) ∗1											
DIRECT/PURE DIRECT (Multi-channel) ∗1											
DSD DIRECT (2 channel) ∗1											
DSD DIRECT (Multi-channel) ∗1											
EXTERNAL IN											
STEREO					○	○	○	○	○		○
MULTI CH IN					○	○	○	○	○	○	
DOLBY PRO LOGIC IIz					○	○	○	○	○	○	○
DOLBY PRO LOGIC IIx	○	○	○		○	○	○	○	○	○	○
DOLBY PRO LOGIC II	○	○	○		○	○	○	○	○	○	○
DOLBY PRO LOGIC IIx A-DSX	○	○	○		○	○	○	○	○	○	○
DOLBY PRO LOGIC II A-DSX	○	○	○		○	○	○	○	○	○	○
DTS NEO:X				○	○	○	○	○	○		○
Audyssey DSX®					○	○	○	○	○	○	○
DOLBY DIGITAL					○	○	○	○	○	○	
DOLBY DIGITAL Plus					○	○	○	○	○	○	
DOLBY TrueHD					○	○	○	○	○	○	
DTS SURROUND					○	○	○	○	○	○	
DTS 96/24					○	○	○	○	○	○	
DTS-HD					○	○	○	○	○	○	
DTS Express					○	○	○	○	○	○	
MULTI CH STEREO					○	○	○	○	○		○
WIDE SCREEN					○	○	○	○	○		○
SUPER STADIUM					○∗15	○	○	○	○		○
ROCK ARENA					○∗16	○	○	○	○		○
JAZZ CLUB					○	○	○	○	○		○
CLASSIC CONCERT					○	○	○	○	○		○
MONO MOVIE					○	○	○	○	○		○
VIDEO GAME					○	○	○	○	○		○
MATRIX					○	○	○	○	○		○
VIRTUAL					○	○	○	○	○		○

∗1 During playback in PURE DIRECT mode, the surround parameters are the same as in DIRECT mode.
∗14 This item cannot be set when "Dynamic EQ" (☞page 125) is set to "On".
∗15 In this sound mode, bass is +6 dB, and treble is 0 dB (Default).
∗16 In this sound mode, bass is +6 dB, and treble is +4 dB (Default).
∗17 This item cannot be set when "MultEQ® XT 32" (☞page 125) is set to "Off" or "Graphic EQ".
∗18 This item can be set when the input signal is analog, PCM 48 kHz or 44.1 kHz.

❑ Types of input signals, and corresponding sound modes

This table shows the input signal that can be played in each sound mode. Check the audio signal of the input source then select the sound mode.

Symbols in the table

● This indicates the default sound mode.
○ This indicates the selectable sound mode.

Sound Mode (☞page 84)	NOTE	Input signal types and formats																		
		ANALOG	PCM		DTS-HD		DTS					DOLBY		DOLBY DIGITAL				Super Audio CD	
			PCM (multi ch)	PCM (2ch)	DTS-HD Master Audio	DTS-HD High Resolution Audio	DTS EXPRESS	DTS ES DSCRT (With Flag)	DTS ES MTRX (With Flag)	DTS (5.1ch)	DTS 96/24	DOLBY TrueHD	DOLBY DIGITAL Plus	DOLBY DIGITAL EX (With Flag)	DOLBY DIGITAL EX (With no Flag)	DOLBY DIGITAL (5.1ch)	DOLBY DIGITAL (2ch)	DSD (multi ch)	DSD (2ch)
DTS SURROUND																				
DTS-HD MSTR	∗1				●															
DTS-HD HI RES	∗1					●														
DTS ES DSCRT6.1	∗2							●												
DTS ES MTRX6.1	∗2								●											
DTS SURROUND	∗1							○	○	●										
DTS 96/24	∗1										●									
DTS (–HD) + PLIIx Cinema	∗3				○	○	○			○	○									
DTS (–HD) + PLIIx Music	∗2				○	○	○			○	○									
DTS (–HD) + PLIIz	∗4				○	○	○	○	○	○	○									
DTS EXPRESS	∗1						●													
DTS (–HD) + NEO:X Cinema					○	○	○	○	○	○	○									
DTS (–HD) + NEO:X Music					○	○	○	○	○	○	○									
DTS (–HD) + NEO:X Game					○	○	○	○	○	○	○									
DTS NEO:X Cinema	∗1	○		○														○		
DTS NEO:X Music	∗1	○		○														○		
DTS NEO:X Game	∗1	○		○														○		
Audyssey DSX®					○	○	○	○	○	○	○									

∗1 If “Audyssey DSX®” (☞page 126) is set to “Wides/Heights”, “Heights” or “Wides”, the Audyssey DSX® effect is added to the sound mode marked with ∗1.
∗2 If “Speaker Config.” – “Surr. Back” (☞page 142) is set to “None”, this sound mode cannot be selected.
∗3 If “Speaker Config.” – “Surr. Back” (☞page 142) is set to “1spkr” or “None”, this sound mode cannot be selected.
∗4 If “Speaker Config.” – “Front Height” (☞page 142) is set to “None”, this sound mode cannot be selected.

☞ See overleaf

Sound Mode (☞page 84)	NOTE	Input signal types and formats																	
		ANALOG	PCM		DTS-HD		DTS					DOLBY		DOLBY DIGITAL				Super Audio CD	
			PCM (multi ch)	PCM (2ch)	DTS-HD Master Audio	DTS-HD High Resolution Audio	DTS EXPRESS	DTS ES DSCRT (With Flag)	DTS ES MTRX (With Flag)	DTS (5.1ch)	DTS 96/24	DOLBY TrueHD	DOLBY DIGITAL Plus	DOLBY DIGITAL EX (With Flag)	DOLBY DIGITAL EX (With no Flag)	DOLBY DIGITAL (5.1ch)	DOLBY DIGITAL (2ch)	DSD (multi ch)	DSD (2ch)
DOLBY SURROUND																			
DOLBY TrueHD	∗1											●							
DOLBY DIGITAL+	∗1												●						
DOLBY DIGITAL EX	∗2													○	○	○			
DOLBY (D+) (HD) +EX	∗2											○	○						
DOLBY DIGITAL	∗1													●	●	●			
DOLBY (D) (D+) (HD) + PLIIx Cinema	∗3											○	○	○	○	○			
DOLBY (D) (D+) (HD) + PLIIx Music	∗2											○	○	○	○	○			
DOLBY (D) (D+) (HD) + PLIIz	∗4											○	○	○	○	○			
DOLBY (D) (D+) (HD) + NEO:X Cinema												○	○	○	○	○			
DOLBY (D) (D+) (HD) + NEO:X Music												○	○	○	○	○			
DOLBY (D) (D+) (HD) + NEO:X Game												○	○	○	○	○			
DOLBY PRO LOGIC IIx Cinema	∗2	○		○													○		○
DOLBY PRO LOGIC IIx Music	∗2	○		○													○		○
DOLBY PRO LOGIC IIx Game	∗2	○		○													○		○
DOLBY PRO LOGIC IIx Cinema A-DSX		○		○													○		
DOLBY PRO LOGIC IIx Music A-DSX		○		○													○		
DOLBY PRO LOGIC IIx Game A-DSX		○		○													○		
DOLBY PRO LOGIC IIz	∗4	○		○													○		○
DOLBY PRO LOGIC II Cinema	∗1	○		○													○		○
DOLBY PRO LOGIC II Music	∗1	○		○													○		○
DOLBY PRO LOGIC II Game	∗1	○		○													○		○
DOLBY PRO LOGIC II CINEMA A-DSX		○		○													○		
DOLBY PRO LOGIC II MUSIC A-DSX		○		○													○		
DOLBY PRO LOGIC II GAME A-DSX		○		○													○		
Audyssey DSX®												○	○	○	○	○			

∗1 If “Audyssey DSX®” (☞page 126) is set to “Wides/Heights”, “Heights” or “Wides”, the Audyssey DSX® effect is added to the sound mode marked with ∗1.
∗2 If “Speaker Config.” – “Surr. Back” (☞page 142) is set to “None”, this sound mode cannot be selected.
∗3 If “Speaker Config.” – “Surr. Back” (☞page 142) is set to “1spkr” or “None”, this sound mode cannot be selected.
∗4 If “Speaker Config.” – “Front Height” (☞page 142) is set to “None”, this sound mode cannot be selected.

☞ See overleaf

Sound Mode (☞page 84)	NOTE	Input signal types and formats																	
		ANALOG	PCM		DTS-HD		DTS					DOLBY		DOLBY DIGITAL				Super Audio CD	
			PCM (multi ch)	PCM (2ch)	DTS-HD Master Audio	DTS-HD High Resolution Audio	DTS EXPRESS	DTS ES DSCRT (With Flag)	DTS ES MTRX (With Flag)	DTS (5.1ch)	DTS 96/24	DOLBY TrueHD	DOLBY DIGITAL Plus	DOLBY DIGITAL EX (With Flag)	DOLBY DIGITAL EX (With no Flag)	DOLBY DIGITAL (5.1ch)	DOLBY DIGITAL (2ch)	DSD (multi ch)	DSD (2ch)
MULTI CH IN																			
MULTI CH IN	∗1		●															○	
MULTI CH IN + PLIIx Cinema	∗3		○															○	
MULTI CH IN + PLIIx Music	∗2		○															○	
MULTI CH IN + PLIIz	∗4		○															○	
MULTI CH IN + NEO:X Cinema			○																
MULTI CH IN + NEO:X Music			○																
MULTI CH IN + NEO:X Game			○																
MULTI CH IN + Dolby EX	∗2		○															○	
MULTI CH IN 7.1	∗2		● (7.1)																
Audyssey DSX®			○															○	
DIRECT																			
DIRECT		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
PURE DIRECT																			
PURE DIRECT		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
DSP SIMULATION																			
MULTI CH STEREO		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
WIDE SCREEN		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
SUPER STADIUM		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
ROCK ARENA		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
JAZZ CLUB		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
CLASSIC CONCERT		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
MONO MOVIE		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
VIDEO GAME		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
MATRIX		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
VIRTUAL		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
STEREO																			
STEREO		●	○	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○

∗1 If “Audyssey DSX®” (☞page 126) is set to “Wides/Heights”, “Heights” or “Wides”, the Audyssey DSX® effect is added to the sound mode marked with ∗1.
∗2 If “Speaker Config.” – “Surr. Back” (☞page 142) is set to “None”, this sound mode cannot be selected.
∗3 If “Speaker Config.” – “Surr. Back” (☞page 142) is set to “1spkr” or “None”, this sound mode cannot be selected.
∗4 If “Speaker Config.” – “Front Height” (☞page 142) is set to “None”, this sound mode cannot be selected.

Relationship between video signals and monitor output

MAIN ZONE MONITOR OUT									
Video Conversion	Input connector			Output connector			Menu displayed		
	HDMI	COMPONENT	VIDEO	HDMI	COMPONENT	VIDEO	HDMI	COMPONENT	VIDEO
On	×	×	×	×	×	×	Only the menu is displayed		
On	×	×	○	○ <VIDEO>	○ <VIDEO>	○ <VIDEO>	○ (VIDEO)	○ (VIDEO)	○ (VIDEO)
On	×	○ (1080p)	×	○ <COMPONENT>	○ <COMPONENT>	×	○ (COMPONENT)	× (COMPONENT)*2	×*2
On	×	○ (480p – 720p)	×					○ (COMPONENT)	×
On	×	○ (480i/576i)	×			○ <COMPONENT>			○ (COMPONENT)
On	×	○ (1080p)	○			○ <VIDEO>		× (COMPONENT)	× (VIDEO)
On*1	×	○ (1080p)	○	×			×	○ (VIDEO)	○ (VIDEO)
On	×	○ (480p – 720p)	○	○ <COMPONENT>			○ (COMPONENT)	○ (COMPONENT)	× (VIDEO)
On	×	○ (480i/576i)	○			○ <COMPONENT>			○ (COMPONENT)
On	○	×	×	○ <HDMI>	×	×	○ (HDMI)	×*2	×*2
On	○	×	○			○ <VIDEO>			× (VIDEO)*2
On	○	○	×		○ <COMPONENT>	×		×(COMPONENT)*2	×*2
On	○	○	○			○ <VIDEO>			× (VIDEO)*2
On*3	×	×	○	○ <VIDEO>	×		○ (VIDEO)	×	× (VIDEO)
On*3	×	○ (1080p)	×	○ <COMPONENT>	○ <COMPONENT>	×	○ (COMPONENT)	× (COMPONENT)	×
On*3	×	○ (480p – 720p)	×						
On*3	×	○ (480i/576i)	×						
On*3	×	○ (1080p)	○			○ <VIDEO>			× (VIDEO)
On*3	×	○ (480p – 720p)	○						
On*3	×	○ (480i/576i)	○						
Off	×	×	×	×	×	×	Only the menu is displayed		
Off	×	×	○			○ <VIDEO>			
Off	×	○	×		○ <COMPONENT>	×			
Off	×	○	○			○ <VIDEO>			
Off	○	×	×	○ <HDMI>	×	×			
Off	○	×	○			○ <VIDEO>			
Off	○	○	×		○ <COMPONENT>	×			
Off	○	○	○			○ <VIDEO>			

○ : Video signal input present
× : No video signal input
*1 When no HDMI monitor is connected or the HDMI monitor's power is not on.
*2 Only the menu is displayed when no HDMI monitor is connected or the HDMI monitor's power is not on.
*3 When "Resolution" (☞page 131) is set to "4K" for outputting analog video input signals from the HDMI connector.

○ <>: The input signal between the < > marks is output.
× : No video signal output

○ ( ) : Superimposed on the picture indicated in ( ).
× ( ) : Only the picture in ( ) is output.
× : Neither the picture nor the menu is output.

ZONE MONITOR OUT					
Input connector			Output connector		
HDMI	COMPONENT	VIDEO	HDMI ZONE4	COMPONENT (ZONE2)	VIDEO (ZONE2)
×	×	×	×	×	×
×	×	○			○ <VIDEO>
×	○	×		○ <COMPONENT>	×
×	○	○			○ <VIDEO>
○	×	×	○ <HDMI>	×	×
○	×	○			○ <VIDEO>
○	○	×		○ <COMPONENT>	×
○	○	○			○ <VIDEO>

○ : Video signal input present
× : No video signal input

○ <>: The input signal between the < > marks is output.
× : No video signal output

The main zone video conversion function is compatible with the following formats: NTSC, PAL, SECAM, NTSC4.43, PAL-N, PAL-M and PAL-60.

NOTE

- The status display screen cannot be displayed at a computer's resolution (e.g. VGA) or while certain 3D video contents is being played.
- When the menu is operated on a computer's resolution (e.g. VGA) or during playback of certain 3D video content, the playback image switches to the menu screen image.

Video signal resolution conversion table

When "Video Conversion" (☞page 131) is set to "On", "i/p Scaler" (☞page 131) is set to "Analog", "Analog & HDMI" or "HDMI" are set, the resolution of the input video signal can be converted to a different resolution for output (☞page 7 "Converting input video signals for output (Video conversion function)").
The relationship between the resolution of the convertible video signal and HDMI output resolution is shown in the table below.

	Output resolution / Input resolution	HDMI Output						
		480i/576i∗1	480p/576p	1080i	720p	1080p	1080p 24Hz	4K∗2
Video input	480i/576i	○	○	○	○	○	○	○
Component video input	480i/576i	○	○	○	○	○	○	○∗5
	480p/576p	–	○	○	○	○	○	○∗5
	1080i	–	–	○	○	○	○	○∗5
	720p	–	–	○	○	○	○	○∗5
	1080p	–	–	–	–	○	○	○∗5
HDMI input	480i/576i	○	○	○	○	○	○	○
	480p/576p	–	○	○	○	○	○	○
	1080i	–	–	○	○	○	○	○
	720p	–	–	○	○	○	○	○
	1080p 24Hz	–	–	–	–	○∗3	○∗4	○
	1080p	–	–	–	–	○	○	○
	4K	–	–	–	–	–	–	○∗6

○ The resolution set in "Resolution" (☞page 132) in the menu is output.
– Output at the same resolution as the input video signal resolution.
∗1 Only output when "i/p Scaler" in the menu is set to "Off".
∗2 Output at a resolution of 3840 x 2160 (24/25/30Hz).
∗3 The resolution set in "Resolution" (☞page 132) in the menu is set to "Auto", and a television that does not support 1080p 24Hz video signals is connected.
∗4 The resolution set in "Resolution" (☞page 132) in the menu is set to "Auto", and a television that supports 1080p 24Hz video signals is connected.
∗5 While signals are being upscaled to 4K, the menu screen is only displayed on a TV that is connected to this unit via HDMI.
∗6 Output at the same resolution as the input video signal resolution.

NOTE

- Component video and video output are output at the same resolution as the input video signal resolution.
- The 4K, 3D, Computer resolution, "x.v.Color", sYCC601 color, Adobe RGB color or Adobe YCC601 color input to HDMI is output at the same resolution as the input video signal.
- When "Video Mode" in the menu is set to "Game" or "Auto" and game contents are played, the same resolution as the input video signal is output.
- When "Resolution" in the menu is set to "Auto", the number of pixels in the television panel connected to the HDMI output connector is automatically detected, and the optimum resolution is output according to the table above.
- If 1080p 24Hz signals input from the HDMI terminal are converted into 1080p 60Hz/1080p 50Hz for output, they are output according to the specified "Format" (☞page 133) setting in the menu:
  "NTSC" – Output as 1080p 60Hz.
  "PAL" – Output as 1080p 50Hz.
- You can not convert 60Hz into 50Hz or vice versa.
- You can not convert 50Hz into 24Hz.
- This item does not support the HDMI ZONE4 function.

Explanation of terms

A

Adobe RGB color, Adobe YCC601 color
The color space defined by Adobe Systems Inc. Because it is a wider color space than RGB, it can produce more vivid and natural images.

AirPlay
AirPlay sends (plays) contents recorded in iTunes or on an iPhone/iPod touch/iPad to a compatible device via the network.

AL32 Processing Multi Channel
AL32 Processing for All Channels
DENON has further developed its proprietary AL32 Processing, an analog waveform reproduction technology, to support the 192 kHz sampling frequency. AL32 Processing, thoroughly suppresses quantization noise associated with D/A conversion to reproduce the low-level signals with optimum clarity that will bring out all the delicate nuances of the music.

App Store
App Store is a site that sells application software for such devices as the iPhone or iPod Touch, and is operated by Apple Inc.

Audyssey Dynamic EQ®
Dynamic EQ solves the problem of deteriorating sound quality as volume is decreased by taking into account human perception and room acoustics. Audyssey Dynamic EQ® works in tandem with Audyssey MultEQ® XT 32 to provide well-balanced sound for every listener at any volume level.

Audyssey Dynamic Surround Expansion (A-DSX)
Audyssey DSX® is a scalable system that adds new speakers to improve surround impression.
Starting with a 5.1 system Audyssey DSX® first adds Wide channels for the biggest impact on envelopment. Research in human hearing has proven that information from the Wide channels is much more critical in the presentation of a realistic soundstage than the Back Surround channels found in traditional 7.1 systems. Audyssey DSX® then creates a pair of Height channels to reproduce the next most important acoustical and perceptual cues. In addition to these new Wide and Height channels, Audyssey DSX® applies Surround Envelopment Processing to enhance the blend between the front and surround channels.

Audyssey Dynamic Volume®
Dynamic Volume solves the problem of large variations in volume level between television programs, commercials, and between the soft and loud passages of movies. Audyssey Dynamic EQ® is integrated into Dynamic Volume so that as the playback volume is adjusted automatically, the perceived bass response, tonal balance, surround impression, and dialog clarity remain the same.

Audyssey LFC™ (Low Frequency Containment)
Audyssey LFC™ solves the problem of low frequency sounds disturbing people in neighboring rooms or apartments. Audyssey researchers found the range of frequencies that most readily penetrate wood and cement construction typical of homes and apartments and then created a technology to contain them. Audyssey LFC™ dynamically monitors the audio content and removes the low frequencies able to pass through walls, floors and ceilings. Audyssey LFC™ then applies psychoacoustic processing to restore the perception of low bass for listeners in the room. The result is great sound that no longer disturbs the neighbors.

Audyssey MultEQ® XT 32
MultEQ® XT 32 is a room equalization solution that calibrates any audio system so that it can achieve optimum performance for every listener in a large listening area. Based on several room measurements, MultEQ® XT 32 calculates an equalization solution that corrects for both time and frequency response problems in the listening area and also performs a fully automated surround system setup.

Auto Lip Sync
If you connect the unit to a TV that supports the Auto Lip Sync function, it can automatically correct delay between the audio and video.

B

Bass Sync
Audio sources such as BD and DVD inherently have time delay between the bass components of the satellite channel and the LFE channel. This function adjusts such a delay for reproducing (replaying) richer bass sound during playback. This function is by default set to 0 msec. Since the delay varies according to the title, play back the audio source and adjust to the most effective value for playback. For some audio sources that are played back, this function may have little effect.

D

Deep Color
An imaging technology supported by HDMI. Unlike RGB, which uses 8 bits (256 shades) per color, it can use 10 bits (1024 shades), 12 bits (4096 shades), or 16 bits (65536 shades) to produce colors in higher definition.
Both devices linked via HDMI must support Deep Color.

Denon Link HD
Denon Link HD uses the clock of the AV amplifier connected by Denon Link HD to achieve HDMI signal transfer with low jitter.

DLNA
DLNA and DLNA CERTIFIED are trademarks and/or service marks of Digital Living Network Alliance. Some contents may not be compatible with other DLNA CERTIFIED® products.

Dolby Digital
Dolby Digital is a multi-channel digital signal format developed by Dolby Laboratories.
A total of 5.1 channels are played: 3 front channels ("FL", "FR" and "C"), 2 surround channels ("SL" and "SR") and the "LFE" channel for low frequencies.
Because of this, there is no crosstalk between channels and a realistic sound field with a "three-dimensional" feeling (sense of distance, movement and positioning) is achieved.
A realistic, powerful sense of presence is achieved when playing movie sources in AV rooms as well.

Dolby Digital EX
Dolby Digital EX is a 6.1-channel surround format proposed by Dolby Laboratories that allows users to enjoy in their homes the "DOLBY DIGITAL SURROUND EX" audio format jointly developed by Dolby Laboratories and Lucas Films.
The 6.1 channels of sound, including surround back channels, provide improved sound positioning and expression of space.

Dolby Digital Plus
Dolby Digital Plus is an improved Dolby Digital signal format that is compatible with up to 7.1 channels of discrete digital sound and also improves sound quality thanks to extra data bit rate performance. It is upwardly compatible with conventional Dolby Digital, so it offers greater flexibility in response to the source signal and the conditions of the playback device.

Dolby Pro Logic Ⅱ
Dolby Pro Logic Ⅱ is a matrix decoding technology developed by Dolby Laboratories.
Regular music such as that on CDs is encoded into 5 channels to achieve an excellent surround effect. The surround channel signals are converted into stereo and full band signals (with a frequency response of 20 Hz to 20 kHz or greater) to create a "three-dimensional" sound image offering a rich sense of presence for all stereo sources.

Dolby Pro Logic Ⅱx
Dolby Pro Logic Ⅱx is a further improved version of the Dolby Pro Logic Ⅱ matrix decoding technology. Audio signals recorded in 2 channels are decoded to achieve a natural sound with up to 7.1 channels. There are three modes: "Music" suited for playing music, "Cinema" suited for playing movies, and "Game" which is optimized for playing games.

Dolby Pro Logic IIz
Dolby Pro Logic IIz introduces a new dimension to Home Entertainment through the addition of a pair of front height channels. Compatible with stereo, 5.1-channel and 7.1-channel content, Dolby Pro Logic IIz provides enhanced spaciousness, depth and dimension to movies, concert video and video game playback while maintaining the full integrity of the source mix.
Dolby Pro Logic IIz identifies and decodes spatial cues that occur naturally in all content, directing this information to the front height channels, complementing the performance of left and right surround sound speakers. Content that is encoded with Dolby Pro Logic IIz height channel information can be even more revealing, with perceptually discrete height channel information bringing an exciting new dimension to home entertainment.
Dolby Pro Logic IIz, with front height channels is also an ideal alternative for households that cannot support the placement of back surround speakers of a typical 7.1-channel system but may have bookshelf space available to support the addition of height speakers.

Dolby TrueHD
Dolby TrueHD is a high definition audio technology developed by Dolby Laboratories, using lossless coding technology to faithfully reproduce the sound of the studio master.
This format provides the facility to support up to 8 audio channels with a sampling frequency of 96 kHz/24 bit resolution and up to 6 audio channels with a sampling frequency of 192 kHz/24 bit resolution. Dolby TrueHD is adopted for applications that put very high importance on sound quality.

Downmix
This function converts the number of channels of surround audio to less number of channels and plays back.

DTS
This is an abbreviation of Digital Theater System, which is a digital audio system developed by DTS. When playing back audio by connecting this system with a device such as DTS amplifier, accurate sound field position and realistic sound effect as if you are in a movie theater can be obtained.

DTS 96/24
DTS 96/24 is a digital audio format enabling high sound quality playback in 5.1 channels with a sampling frequency of 96 kHz and 24 bit quantization on DVD-Video.

DTS Digital Surround
DTS Digital Surround is the standard digital surround format of DTS, Inc., compatible with a sampling frequency of 44.1 or 48 kHz and up to 5.1 channels of digital discrete surround sound.

DTS-ES™ Discrete 6.1
DTS-ES™ Discrete 6.1 is a 6.1-channel discrete digital audio format adding a surround back (SB) channel to the DTS digital surround sound.
Decoding of conventional 5.1-channel audio signals is also possible according to the decoder.

DTS-ES™ Matrix 6.1
DTS-ES™ Matrix 6.1 is a 6.1-channel discrete digital audio format inserting a surround back (SB) channel to the DTS digital surround sound through matrix encoding. Decoding of conventional 5.1-channel audio signals is also possible according to the decoder.

DTS Express
DTS Express is an audio format supporting low bit rates (max. 5.1 channels, 24 to 256 kbps).

DTS-HD
This audio technology provides higher sound quality and enhanced functionality than the conventional DTS and is adopted as an optional audio for Blu-ray Disc. This technology supports multi-channel, high data transfer speed, high sampling frequency, and lossless audio playback. Maximum 7.1-channels are supported in Blu-ray Disc.

DTS-HD High Resolution Audio
DTS-HD High Resolution Audio is an improved version of the conventional DTS, DTS-ES and DTS 96/24 signals formats, compatible with sampling frequencies of 96 or 48 kHz and up to 7.1 channels of discrete digital sound. High data bit rate performance provides high quality sound. This format is fully compatible with conventional products, including conventional DTS digital surround 5.1-channel data.

DTS-HD Master Audio
DTS-HD Master Audio is a lossless audio format created by Digital Theater System (DTS). This format provides the facility to support up to 8 audio channels with a sampling frequency of 96 kHz/24 bit resolution and up to 6 audio channels with a sampling frequency of 192 kHz/24 bit resolution. It is fully compatible with conventional products, including conventional DTS digital surround 5.1-channel data.

DTS Neo:X
This matrix decoding technology uses the DTS NEO:X decoder to playback 2-channel source or 5.1/6.1/7.1 channel surround sources as a maximum of 11.1 channel surround sound. There are 3 modes: "Music" suited for playing music, "Cinema" suited for playing movies, and "Game" which is optimized for playing games.

Dynamic range
The difference between the maximum undistorted sound level and the minimum discernible level above the noise emitted by the device.

F

FLAC
FLAC stands for Free lossless Audio Codec, and is a lossless free audio file format. Lossless means that the audio is compressed without any loss in quality. The FLAC license is as shown below.

Copyright (C) 2000,2001,2002,2003,2004,2005,2006,2007,2008,2009 Josh Coalson

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:
- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

H

HDCP
When transmitting digital signals between devices, this copyright protection technology encrypts the signals to prevent content from being copied without authorization.

HDMI
This is an abbreviation of High-Definition Multimedia Interface, which is an AV digital interface that can be connected to a TV or amplifier. Video signal and audio signal can be connected using 1 cable.

I

iTunes
iTunes is the name of the multimedia player provided by Apple Inc. It enables management and playback of multimedia contents including music and movies. iTunes supports many main file formats including AAC, WAV, and MP3.

L

LFE
This is an abbreviation of Low Frequency Effect, which is an output channel that emphasizes low frequency effect sound. Surround audio is intensified by outputting 20 Hz to 120 Hz deep bass.

M

MAIN ZONE
The room where this unit is placed is called the MAIN ZONE .

MP3 (MPEG Audio Layer-3)
This is an internationally standardized audio data compression scheme, using the "MPEG-1" video compression standard. It compresses the data volume to about one eleventh its original size while maintaining sound quality equivalent to a music CD.

MPEG (Moving Picture Experts Group), MPEG-2, MPEG-4
These are the names for digital compression format standards used for the encoding of video and audio. Video standards include "MPEG-1 Video", "MPEG-2 Video", "MPEG-4 Visual", "MPEG-4 AVC". Audio standards include "MPEG-1 Audio", "MPEG-2 Audio", "MPEG-4 AAC".

P

Progressive (sequential scanning)
This is a scanning system of video signal that displays 1 frame of video as one image. Compared to the interlace system, this system provides images with less flickering and bleeding.

Protection Circuit
This is a function to prevent damage to devices within the power supply when an abnormality such as an overload, excess voltage occurs or temperature for any reason.
In this unit, the power indicator blinks and the unit enters standby mode when an abnormality occurs.

S

Sampling frequency
Sampling involves taking a reading of a sound wave (analog signal) at regular intervals and expressing the height of the wave at each reading in digitized format (producing a digital signal).
The number of readings taken in one second is called the "sampling frequency". The larger the value, the closer the reproduced sound is to the original.

Speaker impedance
This is an AC resistance value, indicated in Ω (ohms). Greater power can be obtained with this value smaller.

sYCC601 color
Like "x.v.Color", each of these color spaces defines a palette of available colors that is larger than the traditional RGB color model.

V

vTuner
This is a free online content server for Internet Radio. Note that usage fees are included in upgrade costs.
For inquiries about this service, visit the vTuner site below.
vTuner website: http://www.radiodenon.com
This product is protected by certain intellectual property rights of Nothing Else Matters Software and BridgeCo. Use or distribution of such technology outside of this product is prohibited without a license from Nothing Else Matters Software and BridgeCo or an authorized subsidiary.

W

Windows Media DRM
This is a copyright protection technology developed by Microsoft.
Content providers are using the digital rights management technology for Windows Media contained in this device (WM-DRM) to protect the integrity of their content (Secure Content) so that their intellectual property, including copyright, in such content is not misappropriated. This device uses WM-DRM software to play Secure Content (WM-DRM Software). If the security of the WM-DRM Software in this device has been compromised, owners of Secure Content (Secure Content Owners) may request that Microsoft revoke the WM-DRM Software's right to acquire new licenses to copy, display and/or play Secure Content. Revocation does not alter the WM-DRM Software's ability to play unprotected content. A list of revoked WM-DRM Software is sent to your device whenever you download a license for Secure Content from the Internet or from a PC. Microsoft may, in conjunction with such license, also download revocation list onto your device on behalf of Secure Content Owners.

Windows Media Player Ver.11 or later
This is a media player distributed free of charge by Microsoft Corporation.
It can play playlists created with Ver.11 or later of Windows Media Player, as well as WMA, DRM WMA, WAV, and other files.

WMA (Windows Media Audio)
This is audio compression technology developed by Microsoft Corporation.
WMA data can be encoded using Windows Media® Player Ver.7, 7.1, Windows Media® Player for Windows® XP and Windows Media® Player 9 Series.
To encode WMA files, only use applications authorized by Microsoft Corporation. If you use an unauthorized application, the file may not work properly.

X

x.v.Color
This function lets HDTVs display colors more accurately. It enables display with natural, vivid colors. "x.v.Color" is trademark of Sony Corporation.

Z

ZONE2
This unit can operate in a room other than the room where this unit is placed (MAIN ZONE) (ZONE2 playback). The room for ZONE2 playback is called ZONE2.

ZONE3
This unit can operate in a room other than the room where this unit is placed (MAIN ZONE) (ZONE3 playback). The room for ZONE3 playback is called ZONE3.

ZONE4
This unit can operate in a room other than the room where this unit is placed (MAIN ZONE) (ZONE4 playback). The room for ZONE4 playback is called ZONE4.

Troubleshooting

If a problem should arise, first check the following:
1. Are the connections correct?
2. Is the set being operated as described in the owner's manual?
3. Are the other devices operating properly?
If this unit does not operate properly, check the items listed in the table below. Should the problem persist, there may be a malfunction.
In this case, disconnect the power immediately and contact your store of purchase.

[General]

Symptom	Cause/Solution	Page
Power does not turn on.	• Check whether the power plug is correctly inserted into the power outlet. • The protection circuit is active. Disconnect the power plug from the electric outlet, wait 5 to 10 seconds and then insert it back into the outlet.	32 195
Power automatically switches to standby mode.	• The sleep timer is set. Turn on the power again, or change the sleep timer settings. • "Auto Standby" is triggered when there is no operation for a set amount of time. To disable "Auto Standby", set "Auto Standby" on the menu to "Off".	105, 113 153
Display is off.	• Set "Dimmer" on the menu to something other than "Off".	153
The power indicator is blinking red in intervals of approximately 2 seconds.	• Due to the temperature rise within this unit, the protection circuit is working. Please turn off power once, and re-apply the power after the temperature has fallen sufficiently. • Please re-install this unit in a place having good ventilation.	195 –
The power indicator is blinking red in intervals of approximately 0.5 seconds.	• Please use speakers which have the specified impedance. • The protection circuit has been activated because the speaker cable core wires are touching, a core wire has come loose from the terminal, or a core wire is touching the rear panel of this unit. After unplugging the power cord, take corrective action such as firmly re-twisting the core wire or taking care of the terminal, and then reconnect the wire.	93 93
After turning on the power, the power indicator is blinking red in intervals of approximately 0.5 seconds.	• This unit amplifier circuit has failed. Turn off the power and please contact the DENON service adviser.	–
Set does not operate properly.	• Reset the microprocessor.	201

[HDMI]

Symptom	Cause/Solution	Page
No audio is output with HDMI connection.	• Check the connection of the HDMI connectors. • When outputting HDMI audio from the speakers, set "HDMI Audio Out" on the menu to "AVR". • When outputting HDMI audio from a TV, set "HDMI Audio Out" on the menu to "TV".	11, 12 129 129
No video is output with HDMI connection.	• Check the connection of the HDMI connectors. • Set the input source to match the connected HDMI connector. • Check whether the TV is compatible with copyright protection (HDCP). If connected to a device not compatible with HDCP, video will not be output correctly.	11, 12 11, 12, 41 14
When the following operations are performed on devices compatible with HDMI control, the same operations occur on this unit. • Power ON/OFF • Switching audio output devices • Adjust volume • Switch input source	• Set "HDMI Control" in the menu to "Off". Furthermore, if you do not want to link the power off operation with devices compatible with HDMI control, set "Power Off Control" in the menu to "Off".	102, 130, 131
When the HDMI ZONE4 function is used and an operation is performed in MAIN ZONE, the following operations occur. • The player is turned off or playback pauses. • The input source on this unit automatically changes.	• "HDMI Control" is set to "On" and "Control Monitor" is set to "Monitor 1" or "Monitor 2". In this case, the HDMI control function set for MAIN ZONE affects playback in ZONE4. When using the HDMI ZONE4 function, from the menu, set "HDMI Control" to "Off" or set "Control Monitor" to "ZONE4". • When the input source for ZONE4 is "SOURCE", select an input source that is different from the one for MAIN ZONE.	102, 130 –

Symptom	Cause/Solution	Page
When the HDMI ZONE4 function is used, Dolby TrueHD/ DTS HD Master Audio/Dolby Digital/ DTS cannot be played back in MAIN ZONE.	• Make sure that "HDMI Audio Out" in the menu is set to "AVR". When a same input source is selected for MAIN ZONE and ZONE4, set the **ZONE4 ON/OFF** button to "OFF", or change the input source for ZONE4 to an input source that is different from the one for MAIN ZONE.	129
When the HDMI ZONE4 function is used, no video or audio is output to TV in ZONE4.	• Make sure that the power is on for ZONE4. • Check the input source for ZONE4. • Check the output settings (resolution/audio format) for the input device. • The HDMI 7 / MHL connector on the front panel does not support the HDMI ZONE4 function. • For ZONE4, playback is only possible when the input signals are HDMI signals.	113 113 – – –
When playing back the input device just to use the HDMI ZONE4 function, the TV used for MAIN ZONE is turned on.	• "HDMI Control" in the menu is set to "On". When using the HDMI ZONE4 function, set "HDMI Control" in the menu to "Off".	102, 130

【Video】

Symptom	Cause/Solution	Page
No picture appears.	• Check the connection between the video output terminal of this unit and the input terminal of the TV. • Match the input settings to the input terminal of the TV connected to this unit.	11, 16 –

【Audio】

Symptom	Cause/Solution	Page
Audio is not output.	• Check the connections for all devices.	11,12,13,16, 17,18,19,20, 21,22,23,25, 26,27,28,29, 30, 31
	• Check the speaker connections and configurations.	94, 95, 96, 97, 98, 111
	• Check whether the audio device power is turned on. • Adjust the master volume. • Cancel the mute mode. • Check the connection with the playback device and select the proper input source. • Match the input mode and the terminal assigned to be the digital input terminal. • Disconnect the headphones. No sound is output from the speakers when headphones are connected.	– 42, 113 42, 113 41, 113 138 171
The volume does not increase.	• The maximum volume is set too low. Set the maximum volume using "Limit"on the menu. • Power for external devices connected to the output connectors of the unit may not be turned on. Check the power of connected external devices.	124 –
No sound is produced from surround speaker.	• Check if the surround speakers are connected to the SURROUND terminals.	–
No sound is produced from surround back speaker.	• Check if "Assign Mode" is set appropriately in order to output audio from the surround back speakers. • Set "Speaker Config." – "Surr. Back" on the menu to something other than "None". • Set the sound mode to something other than "STEREO" and "VIRTUAL".	141 142 84
No sound is produced from front height speaker.	• Set "Speaker Config." – "Front Height" on the menu to something other than "None".	142
No sound is produced from front wide speaker.	• Set "Speaker Config." – "Front Wide" on the menu to something other than "None".	142

Symptom	Cause/Solution	Page
No sound is produced from subwoofer.	• Check the subwoofer connections. • Turn on the subwoofer's power. • Set "Speaker Config." – "Subwoofer" on the menu to "2spkrs" or "1spkr". • If "Front" and "Center" for "Speaker Config." are set to "Large", and "Subwoofer Mode" is set to "LFE", no sound may be output from the subwoofers, depending on the input signal or selected sound mode.	94, 95, 96, 97, 98 – 142 142, 144
DTS sound is not output.	• Set "Decode Mode" on the menu to "Auto" or "DTS".	138
Dolby TrueHD, DTS-HD, Dolby Digital Plus audio is not output.	• Make HDMI connections.	11, 12
Dolby PLII mode or DTS NEO:X mode cannot be selected.	• Check that "Speaker Config." – "Center" or "Surround" is set to other than "None". If the speaker system is 2.0/2.1ch, this sound mode cannot be selected. • When headphones are used, Dolby PLII or DTS NEO:X cannot be selected.	142 –
Audyssey MultEQ® XT 32, Audyssey Dynamic EQ® and Audyssey Dynamic Volume® cannot be selected.	• Switch the sound mode to other than "DIRECT" or "PURE DIRECT". • When headphones are used, Audyssey MultEQ® XT 32, Audyssey Dynamic EQ® and Audyssey Dynamic Volume® cannot be selected.	84 –
Audyssey DSX® cannot be selected.	• Check that "Speaker Config." – "Front Height" or "Front Wide" is set to other than "None". • Check that "Speaker Config." – "Center" is set to other than "None". • Switch the sound mode to DOLBY listening mode or DTS listening mode. • When headphones are used, Audyssey DSX® cannot be selected.	142 142 84 –
Audyssey Dynamic EQ® and Audyssey Dynamic Volume® cannot be selected.	• Run Audyssey® Setup.	33, 99
"Restorer" cannot be selected.	• Check that an analog signal or PCM signal (Sample Rate=44.1/48 kHz) is input. For playback of multichannel signals such as Dolby Digital or DTS surround, "Restorer" cannot be used. • Switch the sound mode to other than "DIRECT" or "PURE DIRECT".	124 84

【HD Radio】

Symptom	Cause/Solution	Page
Reception fails, or there is a lot of noise or distortion.	• Change the antenna orientation or position. • Separate the AM loop antenna from the unit. • Use an FM outdoor antenna. • Separate the antenna from other connection cables.	27 27 27 27

[iPod / USB memory device / Internet Radio / Media Server / Flickr / Pandora / SiriusXM / Spotify]

Symptom	Cause/Solution	Page
iPod cannot be played.	• Some iPods do not support being used connected directly to the iPod/USB port.	23
The file names are not displayed properly ("...", etc.).	• Characters that cannot be displayed are used. This is not a malfunction. On this unit, characters that cannot be displayed are replaced with a "." (period). • Invalid tags are used for files within the USB memory device connected to this unit. Use tags that are supported by this unit.	– 47
When a USB memory device is connected, "No Connection" is displayed.	• The set cannot recognize a USB memory device. Check the connection. • This unit supports mass storage class and MTP-compatible USB memory devices. It will not recognize other USB memory devices. • A USB memory device that the set cannot recognize is connected. This is not a malfunction. DENON does not guarantee that all USB memory devices will operate or receive power. • USB memory device is connected via USB hub. Connect the USB memory device directly to the iPod/USB port. • The unit supports file structures with up to 8 levels and a total maximum of 5000 subfolders and files per 1 folder. Change the file structure of the USB memory device if necessary.	23 – – – 47
Files on a USB memory device cannot be played.	• The USB memory device format should be set to FAT16 or FAT32. For details, refer to the USB memory device's operating instructions. • If the USB memory device is divided into multiple partitions, only files in partition one can be played. • Files are stored in a non-compatible format. Record the files in a compatible format. • You are attempting to play a file that is copyright protected. Files that are copyright protected cannot be played on this unit.	– – 47 47
Internet Radio cannot be played.	• Ethernet cable is not properly connected or network is disconnected. Check the connection status. • Program is being broadcast in non-compatible format. Only Internet Radio programs in MP3 and WMA can be played on this unit. • The firewall of the PC or router has been activated. Check the firewall settings of the connected PC or router. • Radio station is not currently broadcasting. Choose a radio station that is currently broadcasting. • IP address is wrong. Check the set's IP address. • Some radio stations may go silent at certain times of the day. In this case, no audio is output even when a station is received. Try again later, or switch to another radio station.	31 59 – 59 147 –

Symptom	Cause/Solution	Page
Files stored on a computer cannot be played.	• Files are stored in a non-compatible format. Record in a compatible format. • You are attempting to play a file that is copyright protected. Files that are copyright protected cannot be played on this unit. • Set and computer are connected by USB cable. The set's iPod/USB port cannot be used for connection to a computer. • Media sharing settings are not correct. Change media sharing settings so that the unit can access the folders on your computer.	62 62 – 63
Music stored on a NAS cannot be played.	• If you use a NAS in conformity with the DLNA standard, enable the DLNA server function in the NAS setting. • If you use a NAS that does not conform with the DLNA standard, play the music via a PC. Set Windows Media Player's media sharing function and add NAS to the selected play folder. • If connection is restricted, set audio equipment as the connection target.	– 63 –
Server is not found, or it is not possible to connect to the server.	• The computer's or router's firewall is activated. Check the computer's or router's firewall settings. • Computer's power is not turned on. Turn on the power. • Server is not running. Launch the server. • Set's IP address is wrong. Check the set's IP address.	– – – 147
Cannot connect to preset or favorite radio stations.	• Radio station is not currently broadcasting. Wait a while before trying again. • Radio station is not currently in service. It is not possible to connect to radio stations that are no longer in service.	– –
A list of broadcasting stations is not displayed.	• Connection to the network is unstable. Reconnect to the network or redo the "Network" setting in the menu.	31, 146
For some radio stations, "Radio station server full" or "Connection down" is displayed and station cannot be connected to.	• Station is congested or not currently broadcasting. Wait a while before trying again.	–
Sound is broken during playback.	• Network or USB memory device's signal transfer speed is slow or communications lines or radio station is congested. This is not a malfunction. When playing broadcast data with a high bit rate, the sound may be broken, depending on the communications conditions.	–

☞ See overleaf

Symptom	Cause/Solution	Page
Sound quality is poor or noise is heard during play.	• File being played has a low bit rate. This is not a malfunction.	–
Cannot login to Pandora. (“Email address” or “Password” is displayed.)	• Login information is incorrect. Check if the “Email address” for Pandora has been properly entered. Re-enter the “Password”. (Password is not displayed.) http://www.pandora.com/denon	69

【AirPlay】

Symptom	Cause/Solution	Page
The AirPlay icon is not displayed in iTunes or on the iPhone/iPod touch/iPad.	• This unit and the computer or iPhone/iPod touch/iPad are not connected to the same network (LAN). Connect the computer or iPhone/iPod touch/iPad to the same network as this unit. • iTunes or the iPhone/iPod touch/iPad do not have firmware that supports AirPlay installed. Update to the latest firmware.	31 –
No sound.	• The volume in iTunes or on the iPhone/iPod touch/iPad is set to the minimum setting. Adjust the volume to the optimum level. • This unit is not selected in the screen that is displayed when iTunes or the iPhone/iPod touch/iPad is started. Start iTunes or switch on the iPhone/iPod touch/iPad, click the AirPlay icon in the displayed screen, and select this unit. • AirPlay playback has not started. Click the ► button in iTunes or press the ► button on the iPhone/iPod touch/iPad.	– 82 –
When using AirPlay with the iPhone/iPod touch/iPad, the sound suffers from intermittent breaks or AirPlay does not function.	• Quit the application running in the background of the iPhone/iPod touch/iPad, and then play using AirPlay. • When playing via a wireless connection, outside conditions may affect the unit. To remedy this, change the network environment, e.g. shorten the distance to the wireless LAN access point. • Update the iPhone/iPod touch/iPad application or iTunes to the latest version.	– – –

【Remote control unit】

Symptom	Cause/Solution	Page
The set cannot be operated with the remote control unit.	• Batteries are worn out. Replace with new batteries. • Operate the remote control unit within a distance of about 23 ft/7 m from this unit and at an angle of within 30°. • Remove any obstacle between this unit and the remote control unit. • Insert the batteries in the proper direction, checking the ⊕ and ⊖ marks. • The set’s remote control sensor is exposed to strong light (direct sunlight, inverter type fluorescent bulb light, etc.). Move the set to a place in which the remote control sensor will not be exposed to strong light. • The setting of the zone to operate does not match. Press **ZONE SELECT** to select the zone to operate.	175 175 175 175 175 34, 99, 113

Resetting the microprocessor

Perform this procedure if the display is abnormal or if operations cannot be performed.
When the microprocessor is reset, all the settings are reset to their default values.

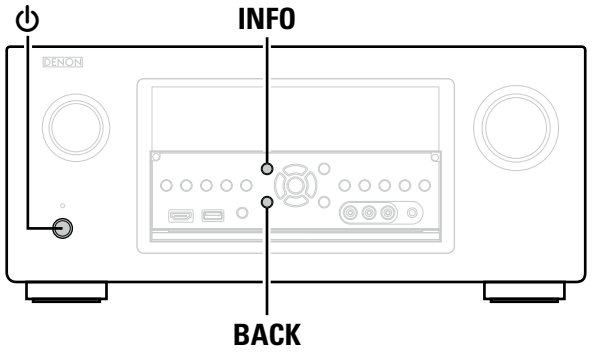

1 **Turn off the power using ⏻.**

2 **Press ⏻ while simultaneously pressing INFO and BACK.**

3 **Once the display starts flashing at intervals of about 1 second, release the two buttons.**

If in step 3 the display does not flash at intervals of about 1 second, start over from step 1.

Specifications

❑ Audio section

- **Power amplifier**

Rated output:
Front:
150 W + 150 W (8 Ω, 20 Hz – 20 kHz with 0.05 % T.H.D.)
190 W + 190 W (6 Ω, 1 kHz with 0.7 % T.H.D.)
Center:
150 W (8 Ω, 20 Hz – 20 kHz with 0.05 % T.H.D.)
190 W (6 Ω, 1 kHz with 0.7 % T.H.D.)
Surround:
150 W + 150 W (8 Ω, 20 Hz – 20 kHz with 0.05 % T.H.D.)
190 W + 190 W (6 Ω, 1 kHz with 0.7 % T.H.D.)
Surround back / Front height / Front wide:
150 W + 150 W (8 Ω, 20 Hz – 20 kHz with 0.05 % T.H.D.)
190 W + 190 W (6 Ω, 1 kHz with 0.7 % T.H.D.)

Dynamic power: 170 W x 2ch (8 Ω)
280 W x 2ch (4 Ω)

Output connectors: 4 – 16 Ω

- **Analog**

Input sensitivity/Input impedance: 200 mV/47 kΩ
Frequency response: 10 Hz – 100 kHz — +1, –3 dB (DIRECT mode)
S/N: 102 dB (IHF–A weighted, DIRECT mode)
Distortion: 0.005 % (20 Hz – 20 kHz) (DIRECT mode)
Rated output: 1.2 V

- **Digital**

D/A output:
Rated output — 2 V (at 0 dB playback)
Total harmonic distortion — 0.008 % (1 kHz, at 0 dB)
S/N ratio — 102 dB
Dynamic range — 100 dB

Digital input: Format — Digital audio interface

- **Phono equalizer (PHONO input — MEDIA PLAYER OUT)**

Input sensitivity: 2.5 mV
RIAA deviation: ±1 dB (20 Hz – 20 kHz)
S/N: 74 dB (IHF–A weighted)
Rated output: 150 mV
Distortion factor: 0.03 % (1 kHz, 3 V)

❑ Video section

- **Standard video connectors**

Input/output level and impedance: 1 Vp-p, 75 Ω
Frequency response: 5 Hz – 10 MHz — 0, –3 dB (when "Video Conversion" set to "Off")

- **Color component video connector**

Input/output level and impedance:
Y signal — 1 Vp-p, 75 Ω
P_B / C_B signal — 0.7 Vp-p, 75 Ω
P_R / C_R signal — 0.7 Vp-p, 75 Ω

Frequency response: 5 Hz – 60 MHz — 0, –3 dB (when "Video Conversion" set to "Off")

❑ Tuner section

(ANTENNA input – MEDIA PLAYER OUT)

		[FM]	[AM]
		(Note: µV at 75 Ω, 0 dBf = 1 x 10^{-15} W)	
Receiving Range:		87.5 MHz – 107.9 MHz	530 kHz – 1710 kHz
Usable Sensitivity:		1.5 µV (14.8 dBf)	20 µV
S/N (IHF–A weighted):	MONO	78 dB	
	STEREO	68 dB	
	HD	85 dB	85 dB
Distortion (1 kHz):	MONO	0.1 %	
	STEREO	0.2 %	
	HD	0.02 %	0.02 %

❑ Switching hub

Standard
IEEE 802.3 (10 Base-T)-compliant
IEEE 802.3u (100 Base-TX)-compliant

Number of ports 4 ports

❑ General

Power supply: AC 120 V, 60 Hz
Power consumption: 780 W
Power consumption in standby mode: 0.1 W
Power consumption in CEC standby mode: 0.5 W
Power consumption in network standby mode: 5.1 W

For purposes of improvement, specifications and design are subject to change without notice.

Index

☞ Numerics

2ch Playback 145
3D 13
4K 13

☞ A

Accessories 2
Add New Feature 155
Adjust EQ 127
Adjusting the master volume 42
Adobe RGB color / Adobe YCC601 color 193
AirPlay 82, 193
AL32 Processing Multi Channel 193
All Zone Stereo Off 81
All Zone Stereo On 80
AM loop antenna 27
Amp Assign 141
Analog Inputs 137
Analog Video Out 132
App Store 193
ARC 10
Aspect Ratio 132
Audio 120
Audio Delay 124
Audyssey 125
Audyssey DSX® 91, 126
Audyssey Dynamic EQ® 125, 193
Audyssey Dynamic Surround Expansion 193
Audyssey Dynamic Volume® 126, 193
Audyssey LFC™ 126, 193
Audyssey MultEQ® XT 32 ..... 125, 193
Audyssey® Setup 33, 99
Auto Lip Sync 129, 193
Auto Preset Memory 54
Auto Standby 153

☞ B

Bass 123, 144, 151
Bass Sync 121, 193
Bi-amp 95
Brightness 129

☞ C

Cable
- Audio cable 15
- Coaxial digital cable 15
- Component video cable 15
- Ethernet cable 15
- HDMI cable 11, 12
- Optical cable 15
- Speaker cable 93
- Subwoofer cable 93
- Video cable 15

Center Gain 122
Center Width 122
Channel 151
Channel Indicators 153
Characters 118
Check Results 40
Cinema EQ 121
Condensation 4
Connection
- Blu-ray Disc player 12, 19
- Cable TV 17
- CD player 25
- Denon Link HD 13
- Digital camcorder 12, 21
- DVD player 12, 18
- EXTERNAL IN 28
- External power amplifier 29
- Game console 12, 20
- HDMI 9
- HD Radio reception 27
- Home network (LAN) 31
- iPod (USB) 23
- Media player 12, 22
- Mobile 12
- Power cord 32
- Record player 26
- REMOTE CONTROL 30
- RS-232C 30
- Satellite tuner 17
- Set-top box 12, 17
- Speaker 93
- TRIGGER OUT 30
- TV 11, 16
- USB memory device 23

Containment Amount 126
Content Type 13
Contrast 129
Control Monitor 130
Crossovers 144
Curve Copy 127

☞ D

Decode Mode 138
Deep Color 14, 193
Delay Time 122
Denon Link HD 13, 42, 193
Diagnostics 149
Dialog Enhancer 121
Digital Inputs 137
Dimension 122
Dimmer 153
Direct Tune 53
Display 172
Distances 143
DLNA 193
Dolby
- Dolby Digital 88, 193
- Dolby Digital EX 88, 193
- Dolby Digital Plus 88, 193
- Dolby Pro Logic II 88, 193
- Dolby Pro Logic IIx 88, 193
- Dolby Pro Logic IIz 88, 91, 194
- Dolby TrueHD 88, 194

Downmix 194
DTS 194
- DTS 96/24 ..... 88, 194
- DTS Digital Surround 194
- DTS-ES Discrete 6.1 ..... 88, 194
- DTS-ES Matrix 6.1 ..... 88, 194
- DTS Express 88, 194
- DTS-HD 88, 194
- DTS-HD High Resolution Audio 194
- DTS-HD Master Audio 194
- DTS Neo:X 88, 91, 194

Dynamic Compression 121
Dynamic EQ 125
Dynamic range 194
Dynamic Volume 126

☞ E

Edit Name 147
Effect Level 122
Enhancer 121, 129
Error messages (Audyssey® Setup) 38

☞ F

Firmware 154
FLAC 194
Flickr 66, 67
FM indoor antenna 27
Format 133
Friendly Name 147
Front Display 153
Front Height 142
Front height speaker 92, 94
Front Panel 170
Front Speaker 145
Front Wide 142
Front wide speaker 92, 94

☞ G

General 150
Graphic EQ 127

☞ H

HDCP 14, 195
HDMI 9, 13, 195
HDMI Audio Out 129
HDMI Control 102, 130
HDMI Pass Through 130
HDMI Setup 129
HDMI ZONE4 function 111
HD Radio reception 50
Headphones 171
Height Gain 123
Hide Sources 137
High Pass Filter 151
Hue 129

☞ I

Impedance 145
Info 133
Information 147, 153
- Audio 153
- Firmware 154
- Video 153
- ZONE 154

Input Assign 135
Input Mode 138
Inputs 134
Input Select 138
Input signal 187
Inputting characters 118
InstaPrevue 104
Internet Access 149
iPod Browse Mode 45
i/p Scaler 131
iTunes 195

L

Language 151
Lch Level 151
Levels 143
LFE 195
Limit 124
Listening mode 84
Listening position 33
Lock 156
Loudness Management 121
Low Frequency Effects 122

M

Maintenance Mode 149
MAIN ZONE 195
Manual Setup 141
Menu map 114
Mode 124
MP3 195
MPEG 195
MultEQ® XT 32 125
Mute Level 124, 151

N

Network 40, 146, 147
Noise Reduction 129
Notifications 155
Now Playing 133

O

On Screen Display 133
Output Settings 131

P

Pandora® 66, 69
Panorama 122
Pass Through Source 130
Physical Connection 149
Picture Adjust 129
Picture Mode 80, 129
Playback
- ALAC 47, 62
- Blu-ray Disc player 42
- CD player 43
- Denon Link HD 42
- Direct 84, 89
- DSD Direct 84, 89
- DVD player 42
- FLAC 47, 62
- Flickr 67
- HD Radio reception 51
- Internet Radio 59
- iPod (USB) 44
- JPEG 47, 62
- MP3 ..... 47, 59, 62
- MPEG-4 AAC 47, 62
- NAS 62
- Original listening mode 89
- Pandora® 69
- PC 62
- Pure direct 84, 89
- SiriusXM 72
- Spotify 74
- Stereo 89
- Super Audio CD 43
- USB memory device 47
- WAV 47, 62
- WMA 47, 59, 62
- ZONE2/ZONE3/ZONE4 113

Power Off Control 131
Power On Level 124
Power On Volume 151
Preset codes 157, 205
Preset Memory 55
Preset Name 56
Preset Skip 57
Progressive 195
Progressive Mode 132
Protection circuit 195

Q

Quick select 106
Quick Select Names 152

R

Random 46, 77
Rch Level 151
Rear panel 173
REC OUT mode 107
Reference Level Offset 125
Remote control unit 174
- Inserting the batteries 175
- Learning function 163
- Macro function 165
- Operating devices 161
- Operating external devices 160
- Registering preset codes 157
- Setting the back light 168

Remote ID 152
Remove from Favorites 79
Repeat 46, 77
Resetting the microprocessor 201
Resolution 132
Restorer 124
Room Size 122
Router Access 149

S

Sampling frequency 195
Saturation 129
Save to Favorites 78
Scale 124
Selecting the input source 41
Settings 148
Setup Lock 156
SiriusXM 66, 72
Sleep timer 105, 113
Slideshow 79
Slideshow Interval 79
Sound Mode 84, 184
Source Level 137
Source Rename 137
Speaker
- Connect 93
- Install 91
- Set up 33, 99

Speaker Config. 142
Speaker impedance 93, 195
Speakers 139
Speaker Select 123
Speaker Selection 127
Spotify 66, 74
Stage Height 126
Stage Width 126
Subwoofer 121
Subwoofer 1 Level 121
Subwoofer 2 Level 121
Subwoofer Level 121
Subwoofer setting 34
Surr. Back 142
Surround back speaker 92, 94
Surround Parameter 121
SW Level Matching 39
sYCC601 color 195

T

Text Search 76
Tone 123
Tone Control 123
Trademark 176
Treble 123, 151
Trigger Out 1/2 152
Troubleshooting 196
Tune Mode 52
Turning off the sound temporarily 42
Turning the power on 41
TV Format 133

U

Update 154
USB Select 76

V

Vertical Stretch 130
Video 128
Video conversion 7
Video Conversion 131
Video Mode 131
Video Output 130
Video Select 138
Video Source 138
Volume 124, 133
Volume Level 151
Volume Limit 151
vTuner 61, 195

W

Web control 108
Windows Media DRM 195
Windows Media Player 195
WMA 195

X

x.v.Color 195

Z

ZONE 132
ZONE2 Setup 151
ZONE2/ZONE3/ZONE4 ..... 111, 172, 195
ZONE3 Setup 151
Zone mode setting 34, 99
Zone Rename 152

AVR

D	Denon	73347

CBL/SAT group (0＊＊＊＊)

CBL

A	ABN	03322
	ADB	01927, 02254
	Alcatel-Lucent	02901
	Amino	01602, 01481, 01822, 02482
	Arion	03034, 03336
	Arris	02187
	AT&T	00858
	au	03444, 03445, 03485, 03534
B	BBTV	02516, 02518, 02980
	Bell	01998
	BIG.BOX	03465
	Bright House	01376, 01877
	BSI	02979
	BT	02294
C	C&M	02962, 02979, 03319, 03407
	Cable Magico	03035
	Cable One	01376, 01877
	Cable&Wireless	01068
	Cablecom	01582
	Cablevision	01376, 01877, 03336
	CCS	03322
	Celrun	02959, 03196, 03442
	Channel Master	03118
	Charter	01376, 01877, 02187
	Chunghwa	01917
	Cisco	01877, 00858, 01982, 02345, 02378, 02563, 03028, 03265, 03294
	CJ	03322
	CJ Digital	02693, 02979
	CJ HelloVision	03322
	ClubInternet	02132
	CMB	02979, 03389
	CMBTV	03498
	CNS	02350, 02980
	Com Hem	00660, 01666, 02015, 02832
	Comcast	01376, 00476, 01877, 01982, 02187
	Coship	03318
	Cox	01376, 01877
D	Daeryung	01877
	DASAN	02683
	Digeo	02187
	Director	00476
	DMT	03036
	DSD	03340
	DST	03389
	DV	02979
E	Echostar	03452
	Entone	02302
F	Freebox	01976
G	GBN	03407
	GCS	03322
	GDCATV	02980
	Gehua	00476
	General Instrument	00476
H	Hana TV	02681, 02881, 02959
	Handan	03524
	HCN	02979, 03340
	HDT	02959, 03465
	Hello TV	03322
	HelloD	02979
	Hi-DTV	03500
	Hikari TV	03237
	Homecast	02977, 02979, 03389
	Huawei	01991
	Humax	00660, 01981, 01983, 02165, 02620, 02683, 02701, 02832, 02881, 02962, 03051, 03053
	HYA	02989
	Hyroad	02979
I	I-Digital	03319, 03499
	i3 Micro	01602
	Insight	01376, 01877
	ITV	02979, 03389
J	J:COM	02700, 02701, 02703, 02752, 03051, 03053
	JCN	03491
	Jerrold	00476
	Jiuzhou	01991
K	Kabel Deutschland	01981, 01983
	KabelBW	01981, 01983, 02174
	Kaon	02979, 03389, 03407
	kbro	02350
	KCN	02979, 03389
	KCTV	02979, 03340
	KCTV JEJU	02979, 03356
	KCTV-KJ	03500
	KDDI	03444, 03445, 03485, 03534
	KDMC	02979
	Kiryung	03498
	Kiss	02132
	Knology	01877
	KoolConnect	01481
	KT	02683, 03478
L	LG	02692, 02979, 03196, 03340, 03389, 03406, 03407, 03500
	LG U+	02682, 03196
M	Mediacom	01376, 01877
	Mega	02683
	Mega TV	02683
	Minerva Networks	03118
	MIO	02275, 02802
	mio TV	02275, 02802
	Mitsubishi	03274, 03444, 03485
	Motorola	01376, 00476, 00858, 01562, 01982, 01998, 02275, 02378, 03445, 03534
	MovieLink	03276
	Moxi	02187
	MTS	01998
	MyLGTV	02682
	Myrio	01602, 01822
N	Neuf TV	03107
	NIB	03322
	Now TV	02014
	NTL	01068, 01060
	NTT	03237, 03274
	Nuevo Siglo	03524
O	Oi TV	03452, 03454
	OllehTV	02683, 03478
	Ono	01068, 01562
	Optus	01060
	Orange	02407
P	Pace	01376, 01877, 01068, 01060, 01982, 02620, 03454
	Panasonic	01982, 02703, 02752, 03474, 03475
	Philips	01582, 02174, 02294
	Pioneer	01877, 02700
	Pirelli	02944
	Premiere	02620
	Prime	03033
	PX	03348
Q	Qook TV	02683
	Qrix	02979, 03465
	Qtel	01822
R	RCN	01376, 00476
	Rogers	01877
S	Sagem	02407
	Samsung	01877, 01060, 01666, 01987, 02015, 02174, 02407, 02610, 02683, 02962, 02979, 03319, 03322, 03340, 03407, 03491
	Sasktel	01998
	SBC	03406
	Scientific Atlanta	01877, 00858, 01982, 01987, 02132, 02345, 03028
	SCS	03500
	SCV	02950
	Sejin	01602
	Seokyung	03340
	SetaBox	01917
	SFR	03107
	Sharp	03349
	Shaw	01376, 02187
	SingTel	01998, 02275, 02802
	SK Broadband	02959, 03442
	SK BTV	03442
	SKBtv	02681, 02881, 02959
	SKY	02620
	SKY Deutschland	02174, 02620
	SkyCable	02893, 02950, 03241, 03318, 03521
	Skyworth	01991, 02893, 03521
	SMtronics	03319
	StarHub	01927
	Stofa	02015
	Suddenlink	01376, 01877
	SureWest	01481, 01998
	Suwon Cable	03319
T	T-Home	02132
	Tbroad	03319
	TCN	03340
	Technotrend	03035
	Telefonica	02901, 02944, 03028, 03033, 03034, 03035, 03036
	Telenet	01920
	Telewest	01068, 01987
	Telus	02345
	TFN	03127, 03139
	Thomson	01582, 01981, 01982, 01983, 02174, 02407
	Time Warner	01376, 01877, 02187
	ToongTV	03322
	Topfield	02981
	TopTV	01991
	Topway	01991
	TP	02407
	True Visions	03075
U	U+	03196
	Unihan	02453
	Unitymedia	02610
	UPC	01582
V	VeeTV	03231
	Verizon	02378
	Vidéotron	01877
	Virgin Media	01068, 01060, 01987, 02563, 03265
	VTR	01376
W	Welho	02832
	WideOpenWest	01877
	WNC	03118
Y	YBN	03322
	Yuxing	02014
Z	Zhong Hua Dian Xin	01917
	Ziggo	00660, 01666, 02015
	ZyXEL	02944

CBL/PVR Combination

A	Amino	01822
	Arion	03336
	Arris	02187
	au	03444
B	BBTV	02980
	Bright House	01376, 01877
C	C&M	02962, 03407
	Cable One	01376, 01877
	Cablecom	01582
	Cablevision	01376, 01877, 03336
	CCS	03322
	Celrun	03442
	Charter	01376, 01877, 02187
	Cisco	01877, 01982, 03265
	CJ HelloVision	03322
	Com Hem	02832
	Comcast	01376, 01877, 01982, 02187
	Cox	01376, 01877
D	Digeo	02187
F	Freebox	01976
G	GCS	03322
H	Hana TV	02959
	Handan	03524
	Hello TV	03322
	Humax	01981, 01983, 02165, 02620, 02832, 02962, 03051, 03053
I	I-Digital	03499
	Insight	01376, 01877
J	J:COM	02700, 02703, 03051, 03053
K	kbro	02350
	KDDI	03444
	Knology	01877
M	Mediacom	01376, 01877
	Mitsubishi	03444
	Motorola	01376
	Moxi	02187
	Myrio	01822

N	Nuevo Siglo	03524
P	Pace	01877, 02620
	Panasonic	01982, 02703
	Philips	01582
	Pioneer	01877, 02700
R	Rogers	01877
S	Samsung	01877, 01987, 03407
	Scientific Atlanta	01877, 01982, 01987
	Shaw	01376, 02187
	SK Broadband	03442
	SK BTV	03442
	SKY	02620
	SKY Deutschland	02620
	SkyCable	03241, 03521
	Skyworth	03521
	StarHub	01927
	Suddenlink	01376, 01877
T	Telenet	01920
	Telewest	01987
	Thomson	01582
	Time Warner	01376, 01877, 02187
	ToongTV	03322
	Topfield	02981
	True Visions	03075
U	UPC	01582
V	Vidéotron	01877
	Virgin Media	01987, 02563, 03265
	VTR	01376
W	Welho	02832
	WideOpenWest	01877
Y	YBN	03322

IP TV

A	ADB	02254
	Alcatel-Lucent	02901
	Amino	01481, 02482
	AT&T	00858
	au	03445, 03485, 03534
B	BBTV	02516, 02518, 02980
	Bell	01998
	BT	02294
C	Celrun	02959, 03196, 03442
	Channel Master	03118
	Chunghwa	01917
	Cisco	00858, 02345, 02378, 03028
	ClubInternet	02132
	CNS	02980
D	DASAN	02683
E	Echostar	03452
	Entone	02302
G	GDCATV	02980
H	Hana TV	02681, 02959
	HDT	02959
	Humax	02683
K	KDDI	03445, 03485, 03534
	Kiss	02132
	KoolConnect	01481
	KT	02683
L	LG	03196
	LG U+	02682, 03196
M	Mega	02683
	Mega TV	02683
	Minerva Networks	03118
	MIO	02275, 02802
	mio TV	02275, 02802
	Mitsubishi	03274, 03485
	Motorola	01376, 00476, 00858, 01998, 02275, 02378, 03445, 03534
	MTS	01998
	MyLGTV	02682
N	Neuf TV	03107
	Now TV	02014
	NTT	03237, 03274
O	Oi TV	03452, 03454
	OllehTV	02683
	Orange	02407
P	Pace	03454
	Philips	02174
	Pirelli	02944
Q	Qook TV	02683
	Qtel	01822
S	Sagem	02407
	Samsung	02174, 02407, 02683
	Sasktel	01998
	Scientific Atlanta	00858, 02345, 03028
	SetaBox	01917
	SFR	03107
	SingTel	01998, 02275, 02802
	SK Broadband	02959, 03442
	SK BTV	03442
	SKBtv	02681, 02959
	SKY Deutschland	02620
	Skyworth	02893
	SureWest	01481, 01998
T	T-Home	02132
	Telefonica	02901, 02944, 03028
	Telus	02345
	Thomson	02174, 02407
U	U+	03196
	Unihan	02453
V	Verizon	02378
W	WNC	03118
Y	Yuxing	02014
Z	Zhong Hua Dian Xin	01917
	ZyXEL	02944

SAT

	@sat	01300
	@Sky	01334
A	ABsat	00713
	Acoustic Solutions	01284
	ADB	00887, 01887
	AEG	02738, 02813
	Agora	01284
	Airis	01993
	Akura	01626
	Alba	00713, 01284, 02034
	Alltech	00713
	Allvision	01334
	Altech UEC	02059
	Amitronica	00713
	Amstrad	00847, 01175, 00713, 01662, 01693
	Anglo	00713
	Ankaro	00713
	Ansonic	02418
	Apro	01672
	Arena	01736
	Arnion	01300
	ASA	00740
	ASCI	01334
	ASLF	00713
	AssCom	00853
	Astra	00713
	Astrell	01986, 02418
	Astro	00173, 00658, 01099, 01100, 01836, 02026, 02627
	Atlanta	02418
	Atom	02289
	Audiola	02418
	Audioline	01672
	Aurora	00879
	Austar	00879
	Auvisio	02531
	Avanit	01631
	Awa	02418
	Axil	01413, 01777, 01993, 02418
	Axitronic	01626
B	B.net	01672
	B@ytronic	00740
	Bell	00775
	Belson	02418
	Best Buy	01993, 02728
	Black Diamond	01284
	Blaupunkt	00173
	Blue Sky	00713
	Boca	00713, 02026, 02308, 02458, 02797, 02813
	Boshmann	01413, 01631
	Boxer	01692, 01957
	Brainwave	00658, 01672
	Broco	00713
	BskyB	00847, 01175, 01662, 01693
	Bubu Sat	00713
	Bush	01284, 01291, 01626, 01672, 01935, 01993, 02034, 02376, 02418, 02813
C	Canal Digital	00853, 01334, 01780
	Canal+	00853, 02657
	CanalSat	00853, 02657
	CDV	01993
	Century	00856
	CGV	01413, 01567, 02034
	Chess	00713, 01334, 01626, 02026
	Cignal	02289, 03128
	CityCom	00299, 00658, 01176
	Classic	01672
	Clatronic	01413, 02738
	Clayton	01626
	CMX	02205
	Cobra	02531
	Com Hem	01176, 01915, 02357
	Comag	01413, 01886, 02026, 02308, 02458, 02797, 02813
	Comsat	01413
	Comwell	01956
	Coomax	02531
	Coship	01672
	Croner	02813
	Crown	01284
	CS	01631
	Cyfra+	01409
	Cyfrowy Polsat	00853, 02262, 02527
D	D-box	00723, 01114
	Daewoo	00713
	DAK	01993
	Dantax	01626
	DASAN	03321
	Denver	02418
	Dgtec	01631, 02418
	Di-Way	02289
	Dicra	02738
	Digenius	00299
	Digi	02026
	Digiality	01334
	DigiCrystal	02978
	Digihome	01284, 01935, 02034
	DigiLogic	01284, 02034, 02241
	DigiMax	02273
	DigiQuest	01300, 01631, 02278, 02738
	Digital	02273, 02308
	DigitalBox	01100, 01631, 01886, 02289
	Digiwave	01631
	Dikom	02531
	Dilog	01780, 01957
	DiPro	02278
	DirecTV	01377, 00392, 00566, 00099, 03377
	Dish Network	00775
	Dishpro	00775
	DishTV	01300, 01780
	Diunamai	02531
	DMT	03321
	Doro	01672
	DRE	01176
	Dream Multimedia	01237, 01652, 01923
	DSE	02418, 02813
	DSTV	00879
	Dual	02034
	Durabrand	01284, 02034, 02241
	DVX	01993
	Dyon	02738, 02813
E	Echostar	00775, 00853, 00713, 01323, 01409, 02262, 02272, 02527
	Eco-Star	01413
	Edision	01631, 02306, 02712
	Ei8ht	02978
	Einhell	00713
	Elap	00713, 01413, 01567
	Elbe	02418
	Electron	01956
	Elisa	01322
	Elless	00740
	Elsat	00713
	Embratel	02796
	Energy Sistem	01631, 02289, 02418
	Engel	00713, 01993
	Etisalat	02443
	Europhon	00299, 00713, 01334
	Europsat	01413, 01611
	Eurosat	01886
	Eurosky	00299, 00740
	Eutelsat	00713
	Eutra	00740
	Evesham Technology	02034
F	Fagor	01611
	Fenner	00713
	Ferguson	01291, 01935
	Finepass	01780
	Finlux	01626

	FinnSat	00740, 01195, 01197
	Flair Mate	00713
	FMD	01413
	Fortec Star	01631
	Foxtel	00879, 01176, 01356
	Fracarro	00713
	Freesat	02376
	Freesat+	02443
	freeview	02982
	Fte Maximal	00713, 01886
	Fuba	00173, 00299, 02750
	Fuji Onkyo	01631, 02728
G	Galaxis	00853, 00879
	Galaxy	01956
	GE	00566
	General Instrument	00869
	General Satellite	01176
	Globo	00740, 01334, 01429, 01626, 02026, 02273
	GoGen	02738
	GOI	00775
	Gold Box	00853
	Gold Vision	01631
	GoldMaster	01334, 01722
	Goodmans	01284, 01291, 02034, 02376
	Gradiente	00856, 00099, 00887
	Gran Prix	00740
	Grandin	01626
	Grocos	01409
	Grundig	00847, 00853, 00173, 00879, 01284, 01291, 01672, 01780, 02034, 02376
H	Haier	02418
	Hailo	02289
	Hallo	01626
	Hama	01567
	Handan	01780, 01957
	Hanseatic	01099, 01100
	Hauppauge	01672
	HB	01736
	HDT	01255, 03321
	Hiro	01886
	Hirschmann	00173, 00299, 00740, 01886, 02026
	Hitachi	01284, 02034
	Homecast	01736
	Hornet	01300
	HTS	00775
	Hughes Network Systems	01377
	Humax	01377, 03321, 02736, 02443, 02408, 02357, 02289, 02144, 01989, 01915, 01882, 01808, 01788, 01675, 01427, 01255, 01176
I	i-Box	01652
	ID Digital	01176
	ID Sat	01334, 02289
	Illusion	01631
	Imperial	01195, 01197, 01334, 01429, 01672
	Indovision	00856, 00887, 01255, 01887, 01989
	iNETBOX	01237, 01652
	Inno Hit	01626
	Innova	00099
	Inves	01993
	inVion	02418
	iotronic	01413
	IQ	02813
	ISkyB	00887
	ITT	02418
	ITT Nokia	00723
J	J-Point	01836
	Jaeger	01334
	Jerrold	00869
	Jiuzhou	03140
	JVC	00775
K	K-SAT	00713
	KabelBW	01195, 01197, 01882, 01915
	Kamm	00713
	Kaon	01300, 02697
	Kathrein	00173, 00658, 00713, 01561, 01567, 02263, 02569
	Kenwood	00853
	König	01567, 01631, 02289
	Koscom	01956
	KPN	01986
	Kreiling	00658, 01626
	Kreiselmeyer	00173
	KT	03321
L	L&S Electronic	01334
	LaSAT	00173, 00299, 00740
	Lauson	02531
	Lava	01631
	Leiko	01626
	Lemon	01334
	Lenco	00713
	Lenoxx	01611
	LG	03193, 03321
	Lifesat	00299, 00713
	Linsar	01284
	Listo	01626
	Lodos	01284
	Logik	01284, 02034
	LogiSat	02797, 02813
	Lorenzen	00299
	Luxor	01935, 02034
M	Macab	00853
	Magic TV	02982
	Majestic	02738
	Manata	00713
	Manhattan	01300
	Maplin	02034
	Marusys	02799
	Maspro	00173, 00713
	Matsui	00173, 01284, 01626
	Maxell	03438
	Maximum	01334, 01672, 01986, 02813
	Mediabox	00853
	Mediacom	01206
	MediaSat	00853
	Mediaset	02750
	Medion	00299, 00713, 00740, 01334, 01626, 02026, 02797
	Medison	00713
	Mega TV	03321
	MegaSat	01631, 01886, 02289, 02813
	Metronic	00713, 01334, 01413, 01631, 01986, 02418, 02738
	Metz	00173
	MiCO	01993
	Micro	00713, 02797, 02813
	Micro electronic	00713, 02308, 02813
	Micro Technology	00713
	Micromaxx	00299
	Microstar	00299
	Microtec	00713
	Morgan's	00713, 02026
	Motorola	00869, 00856, 03469
	Movistar	02262, 02263, 02272, 02527, 02761, 03029
	Multichoice	00879, 02059, 02060
	myfreeviewHD	02982
	Mysat	00713
N	Neom	01993
	NEOTION	01334
	NET	02262
	Netgem	01322
	Netsat	00099, 00887
	Neuf TV	01322
	Neuhaus	00713
	Neuling	02458
	Neusat	00713
	Next Level	00869
	Nextvision	01956
	NextWave	01956
	Nikkai	01993
	Nikko	00723, 00713
	Nilox	02278
	Nokia	00853, 00723, 01023
	Nordmende	01611
	NPG	01631, 02289, 02531
O	Olleh-Skylife	03321
	OllehTV	03321
	Omni	01993
	Onn	01284, 02034, 02241
	Openbox	01956
	Opensat	01956
	Optex	00713, 01413, 01611, 01626
	Opticum	02273
	Optus	00879, 01356
	Orbis	01334
	Orbitech	01099, 01100, 01195, 01197
	Orton	02273
P	Pace	00847, 00853, 00887, 01175, 03482, 03469, 03111, 02796, 02657, 02060, 02059, 01887, 01693, 01682, 01662, 01356, 01323
	Pacific	01284
	Palcom	00299, 01409, 01611
	Panasat	00879
	Panasonic	00847, 01304, 03239, 03484, 03939
	Panda	00173
	Pass	01567
	peeKTon	01993, 02418
	Philips	00856, 00099, 00853, 00173, 01114, 00887, 01499, 01672, 01836, 02176, 02619, 03469
	Phoenix	01956, 02418
	Phonotrend	01780
	Pino	01334
	Pioneer	00853
	Pixel Magic	02982
	Pixela	03409
	PLDT	02836
	PMB	00713, 01611
	Premium	01736
	Pro Basic	00853, 02205, 02531
	Proline	01284
	Proscan	00392, 00566
Q	Qook TV	03321
	Qook-SkyLife	03321
	Quelle	00299
R	RadioShack	00869
	Radix	01255
	RCA	00392, 00566, 00855, 01291
	RiksTV	01692
	Roadstar	00853, 00713
	Rollmaster	01413
	Ross	02540
	Rover	00713
	Rownsonic	01567
S	SAB	01300, 01631, 01956
	Saba	00740, 02205
	Sagem	01114, 01690, 01692, 03029
	Sagemcom	01692
	Saivod	02418
	Samsung	01377, 00853, 01175, 01206, 01255, 01662, 01682, 03321
	Sansui	01545
	Sanyo	01626, 03436, 03437
	Sat Control	01300
	Sat Industrie	01611
	Sat Team	00713
	SAT+	01409
	SatCatcher	01956
	Satec	00713
	Satlink	02273
	Satplus	01100
	SatyCon	01631
	Schaub Lorenz	02034, 02418
	Schneider	01206
	Schwaiger	00740, 01334, 01429, 01631, 01672, 02308, 02458, 02797, 02813
	Scientific Atlanta	01980
	SCS	00299, 00740
	Sedea Electronique	01206, 01626
	Seeltech	01993
	SEG	01284, 01626, 01993, 02034
	Servimat	01611
	ServiSat	00713
	Set-One	02728
	Shark	01631
	Sharp	01935, 02034
	Shaw Direct	00869
	Sherwood	01409
	Siemens	00173, 01334, 01429, 01626, 01657, 01672, 02418
	Sigmatek	02418, 02813
	SignalMAX	01956
	Silva	00299
	Silva Schneider	00740
	SilverCrest	02026, 02308, 02458
	Skantin	00713
	SKR	00713
	SKY	00856, 00099, 00847, 00887, 01175, 01358, 01499, 01662, 01693, 02619, 03469, 03482
	Sky Brasil	00856, 00887, 01358, 01499, 02619, 03111
	SKY Deutschland	00723, 01429, 02176
	SKY Italia	00853, 01356, 01693
	SKY Mexico	00856, 00887, 01358, 02619, 03469, 03482
	SKY PerfecTV!	02299, 03049, 03484, 03939
	SkyCable	01631, 01957

	SkyLife	01255, 03321
	Skymaster	00713, 01334, 01409, 01545, 01567, 01611, 02205, 02241, 02409, 02728
	Skymax	01413
	Skypex	00740
	Skyplus	01175, 00740, 01334, 02026
	SkySat	00713, 01100
	Skyvision	01334, 02797
	Skyworth	01631
	SL	00299, 00740, 01672, 02026
	SM Electronic	00713, 01409
	Smart	00713, 01413, 01631, 02289
	Sony	00847, 00853, 01558, 02299, 03049, 03446, 03448
	Star	00887
	Star Choice	00869
	Starland	00713
	Stream System	01300
	Strong	00853, 00879, 00713, 01284, 01300, 01409, 01626, 02235, 02418, 02813
	Sunny	01300
	Sunsat	00713
	Sunstech	01993, 02738
	Supernova	00887
	Supratech	01413, 01993
	Systec	01334
	Sytech	02418
T	Tatung	03117
	TBoston	02418
	Teac	01322, 01957, 02813
	Technical	01626
	Technicolor	03469
	Technika	01284, 01672, 02034
	TechniSat	01099, 01100, 01195, 01197, 01322
	Technoit	02278
	Technosat	01206
	Technosonic	01672
	Technotrend	01429, 01672, 02263
	Techwood	01284, 01626, 01935, 02034
	TELE System	01409, 01611, 02750, 02813
	Telefonica	01692, 02262, 02263, 02272, 02527, 02761, 03029
	Telestar	01099, 01100, 01195, 01197, 01334, 01626, 01672, 02540
	Televes	01300, 01334
	Televisa	00887
	Telsey	02738
	TelSKY	02540
	Tevion	00713, 01409, 01672, 01993, 02026, 02205, 02813
	Thomson	00392, 00847, 00853, 01175, 00713, 01291, 01662, 01935, 02176, 02619, 03469
	Tiny	01672
	Titan	01886, 02205
	Tividi	01429, 01736
	TNT SAT	01692
	Tonna	00713, 01611, 02458
	Topfield	01206, 01545, 01722, 01783, 01824, 01986
	Toshiba	01284, 01429
	Transparent Video Systems	01780, 01957
	Triax	00853, 00713, 01291, 01413, 01611, 01626, 01631, 01886, 02026
	Tricolor TV	01176
	True Visions	02408, 03140
	TT-micro	01429
	Turnsat	00713
	TVB	01989
	TWF	01993
	Twinner	00713, 01611
U	UEC	00879, 01356, 01358
	United	01626, 02278, 02418
	Unitymedia	01429, 01882
	Univers	01886
	Universum	00173, 00299, 00740, 01099
	Unixbox	01652
V	Vantage	02297
	Vaova	01993
	Variosat	00173
	VEA	02418
	Vestel	01284, 02034
	VH Sat	00299
	Via Embratel	02796
	Viasat	01195, 01197, 01682, 02235
	Viola Digital	01672
	Vision	01626, 01886
	Visiosat	00713, 01413
	Vitecom	01413, 02531
	Viva	00856
	Vivax	02418
	Volcasat	02418
	Voom	00869
	Vu+	02799
W	Wavelength	01413
	Welho	02357
	Wharfedale	01284, 01935, 02034
	Winix	02278
	Wintel	00299
	Wisi	00173, 00299, 00740, 01986
	Woxter	02418, 02813
X	Xoro	02738, 02813
	Xsat	00847, 00713, 01323
	Xtreme	01300
Y	Yakumo	01413
	Yamada	01993
	Yes	00887, 01887
	Yess	02978
Z	ZapMaster	00740
	Zehnder	00740, 01334, 01413, 01631, 01777, 02034, 02289
	Zenith	00856, 03469
	Ziggo	01499, 01657, 02443
	Zinwell	02761

CBL/SAT/PVR Combination

C	Com Hem	01176, 02357
F	Foxtel	01356
H	Handan	01957
	Humax	01176, 02357, 02443
K	Kaon	01300
	Kathrein	01561, 02569
P	Pace	01356
S	Siemens	01657
T	TechniSat	01195, 01197
	Topfield	01545, 01783
V	Vantage	02297
W	Welho	02357
Z	Ziggo	01657, 02443

SAT - IP TV

D	DMT	03321
K	KT	03321
L	LG	03321
O	Olleh-Skylife	03321
	OllehTV	03321
Q	Qook-SkyLife	03321
S	SkyLife	03321

SAT/PVR Combination

	@sat	01300
A	AEG	02738, 02813
	Amstrad	01175, 01662, 01693
B	B@ytronic	00740
	Bell	00775
	Boca	02308, 02797, 02813
	Boxer	01957
	BskyB	01175, 01662, 01693
C	Canal+	02657
	CanalSat	02657
	Comag	02308, 02797, 02813
	Cyfrowy Polsat	02527
D	Digihome	02034
	DigiQuest	01300
	Digital	02308
	Dilog	01957
	DirecTV	01377, 00392, 00099, 03377
	Dish Network	00775
	Dishpro	00775
	Dream Multimedia	01237, 01923
	Dyon	02738, 02813
E	Echostar	00775, 02272, 02527
	Edision	01631, 02712
	Embratel	02796
	Etisalat	02443
	Eurosky	00740
F	Foxtel	01356
	Freesat+	02443
	Fuji Onkyo	01631
G	Goodmans	02034
H	Handan	01957
	Hirschmann	00740
	Hitachi	02034
	Humax	01377, 01176, 01427, 01675, 01788, 01808, 02357, 02443
I	ID Sat	01334
	iNETBOX	01237
J	JVC	00775
K	Kaon	01300
	Kathrein	00658, 01561, 02569
L	LaSAT	00740
	LogiSat	02797, 02813
	Luxor	01935
M	Marusys	02799
	Maxell	03438
	Maximum	01334, 02813
	Mediacom	01206
	Medion	00740, 02797
	MegaSat	01631, 02813
	Micro	02797, 02813
	Micro electronic	02308
	Motorola	00869
	Movistar	02272, 02527, 03029
	Multichoice	02059, 02060
N	NEOTION	01334
	Nokia	01023
O	Omni	01993
	Orbitech	01195, 01197
P	Pace	01175, 01356, 01662, 01682, 01693, 02059, 02060, 02657, 02796
	Panasonic	01304, 03484, 03939
	Philips	00099
	Proscan	00392
R	Ross	02540
S	Sagem	01692, 03029
	Samsung	01377, 01175, 01206, 01662, 01682
	Sansui	01545
	Sanyo	03436, 03437
	Sat Control	01300
	Schneider	01206
	Schwaiger	00740, 02308
	Sedea Electronique	01206
	SEG	02034
	Sharp	01935, 02034
	Shaw Direct	00869
	Siemens	01657
	SilverCrest	02308
	SKY	01175, 01358, 01662, 01693
	Sky Brasil	01358
	SKY Italia	01356, 01693
	SKY PerfecTV!	02299, 03484, 03939
	SkyCable	01631, 01957
	Skymaster	01545
	Skypex	00740
	Skyplus	01175, 00740, 01334
	Skyvision	02797
	Skyworth	01631
	SL	00740
	Smart	01631
	Sony	02299
	Star Choice	00869
	Stream System	01300
	Strong	01300, 02813
	Sunny	01300
T	Tatung	03117
	Teac	01957
	TechniSat	01195, 01197
	Technosat	01206
	Telefonica	01692, 02272, 02527, 03029
	Telestar	01195, 01197, 02540
	TelSKY	02540
	Thomson	01175, 01662, 01935
	TNT SAT	01692
	Topfield	01206, 01545, 01783, 01824
U	UEC	01358
V	Vantage	02297
	Via Embratel	02796
	Viasat	01195, 01197, 01682
	Vu+	02799
W	Wisi	00740
X	Xoro	02738, 02813
	Xtreme	01300
Y	Yamada	01993
Z	Zehnder	00740, 01777, 02034

MEDIA PLAYER / Video - Accessory

A	A.C.Ryan	02709
	ABS	01272
	Acer	01272
	Alienware	01272
	Apple	02615
	Asus	02987
C	Claritas	01272
	CyberPower	01272
D	Daily Media	01272
	Digitech	02260
E	Elonex	01272
	Eminent	02260
	Emtec	02709
F	Fantec	02709
	Fujitsu Siemens	01272
G	Gateway	01272
H	Hewlett Packard	01272
	hFX	01272
	Howard Computers	01272
	Hush	01272
I	iBUYPOWER	01272
	iconBIT	02709
	ISTAR	02260
L	LaCie	03345
	LG	03373
	Linksys	01272
M	Magnavox	03339
	Mede8er	02709
	Media Center PC	01272
	Microsoft	01272, 01805
	Mind	01272
N	Netgear	03292, 03324
	Niveus Media	01272
	Northgate	01272
P	Packard Bell	01272
	Patriot	03307
	Philips	01272, 03526
	PopBox	02260
	Popcorn Hour	02260
R	RCA	03335
	Ricavision	01272
	Roku	02371, 03061
S	Samsung	01967
	Seagate	02698
	Sony	01272, 02713
	Stack 9	01272
	Systemax	01272
T	Tagar Systems	01272
	Tec	03522
	Toshiba	01272
	Touch	01272
	Trust	01272
V	VIA Technologies	01272
	Viewsonic	01272
	Voodoo	01272
W	Western Digital	02558
	Woxter	02709
X	Xbox	01272, 01805
Y	Yamaha	02865
Z	ZT Group	01272

TV group (1****)

TV

	888	10264
A	A.R. Systems	10556, 10037
	Accent	10037
	Acer	11339
	Acoustic Solutions	11037, 11523, 11667, 11865, 12676
	Action	10650
	Addison	10653, 10108, 10092, 11150
	Admiral	10093, 10463, 10264, 10179, 13485
	AEG	11037, 11163, 11324, 11556, 12197
	Agashi	10264
	Aiko	10037, 10264, 10092
	Aim	10706, 10037
	Aiwa	11910, 11916
	Akai	10812, 10702, 10765, 10178, 10030, 10556, 10037, 10548, 10714, 10264, 10208, 11326, 11413, 11675, 11865, 12414, 12676, 13183
	Akiba	10037
	Akira	11243, 12241
	Akito	10037
	Akura	10171, 10037, 10714, 10668, 11037, 10264, 11363, 11498, 11556, 11585, 11667, 11687, 11770, 11983
	Alaron	10179
	Alba	10037, 10714, 10668, 11037, 10036, 10587, 10443, 10474, 11585, 11865, 12104, 12676
	Alien	11037
	Allstar	10037
	America Action	10180
	Amstrad	10171, 10037, 11037, 10264
	Anam	10250, 10180, 10037, 10650
	Andersson	11163, 11585
	Anglo	10264
	Anhua	10051
	Anitech	10037, 10264, 10474
	Ansonic	10037, 10668
	AOC	10093, 10180, 10178, 10030, 10625, 10108, 10092, 10179, 10474, 11150, 11365, 11589, 12014, 12087, 12214, 12621
	Aolinpike	10264
	Apex Digital	10765, 10767, 12397
	Ardem	10037, 10714
	Arena	10037
	Aristona	10556, 10037
	ART	11037
	Art Mito	11585
	ASA	10179
	Asberg	10037
	Astra	10037
	Asuka	10264
	Asus	12175, 13340
	ATD	10698
	Atlantic	10037
	Audinac	10180
	Audiosonic	10037, 10714, 10264, 11675, 11983, 12104
	Audioton	10264
	Audiovox	10180, 10092, 11276, 11564, 11865, 11937, 12121, 12513
	Audioworld	10698
	Auria	12087, 12277
	Aventura	10171
	Awa	10264, 10036, 10108, 12241
	Axion	11937
	Axxon	10714
B	Baihe	10264
	Baile	10661
	Baird	10208
	Bang & Olufsen	10620
	Baohuashi	10264
	Barco	10556
	Basic Line	10556, 10037, 10668, 11037, 11163
	Baur	10037, 10195, 10512
	Baysonic	10463, 10180
	BBK	11523
	Beaumark	10178
	Beijing	10812, 10264, 10208, 10661
	Beko	10037, 10714, 10808, 11652, 12125
	Bell & Howell	10017
	Belson	10698, 12032, 12241
	Belstar	11037
	BenQ	11523, 11756, 12449, 12730
	Bensten	11326
	Beon	10037
	Berkshire	10047
	Berthen	10556, 10668
	Bestar	10037
	Bestwell	11326
	Bexa	12493
	BGH	10898
	Black Diamond	11037, 10587, 11163
	Blaupunkt	10195, 10036
	Blue Sky	10556, 10037, 10625, 10714, 10668, 11037, 10624, 11243, 11314, 11324, 11363, 11652, 11916, 12153
	BlueH	11745
	Bluetech	12561
	Boca	11652
	bogo	12561
	Boman	11324
	Bork	11363
	BPL	10037, 10208
	Bradford	10180
	Brandt	10625, 10714, 10560
	Brinkmann	10037, 10668
	Brionvega	10037
	Britânia	12414
	Broksonic	10463
	Bush	10556, 10037, 10714, 10668, 11037, 10698, 10264, 10036, 10587, 12214, 12241, 12676, 12125, 12104, 12053, 12032, 12007, 11983, 11916, 11865, 11687, 11667, 11652, 11645, 11589, 11585, 11556, 11243, 10661, 10443, 10208
	Byd:sign	11311
C	Cameron	11523
	Camper	10037
	Candela	13546
	Candle	10030
	Capetronic	10030
	Capsonic	10264
	Carad	10668, 11037
	Carena	10037
	Carnivale	10030
	Carrefour	10037, 10036
	Cascade	10037
	Casio	10037
	Cathay	10037, 10474
	CCE	10037
	Celebrity	10000
	Celera	10765
	Celestial	10767, 11243
	cello	11770
	Centrum	11037
	Centurion	10037
	Changcheng	10051, 10264, 10661
	Changfeng	10264
	Changhong	10156, 10765, 10264, 10508, 10767, 11156, 11243, 11498, 11910
	Chimei	11666
	Ching Tai	10092, 10179, 10474
	Chun Yun	10000, 10180, 10706, 10092, 10179, 10474, 11150, 11687, 11756
	Chunfeng	10264
	Chung Hsin	10180, 10053, 10036, 10108, 10474, 11150
	Cineral	10092
	Cinex	11556
	Citizen	10180, 10030, 10092
	Clarion	10180
	Clarivox	10037
	Clatronic	10037, 10714, 10264, 11324
	Clayton	11037
	Coby	12306, 12315, 12340, 12343, 12344, 12345, 12347, 12348, 12350, 13478
	Commercial Solutions	10047, 11447
	Condor	10037, 10264
	Conia	11498, 11523, 11687, 12032
	Conrac	10808
	Conrowa	10156, 10698, 10264, 11156
	Contec	10180, 10037, 10036
	Contex	13309
	Coradir	12844
	Cosmel	10037
	CPTEC	10625, 11363
	Craig	10180, 13423
	Crosley	10000
	Crown	10180, 10053, 10037, 10714, 10668, 11037, 10208, 11652
	CTX	11756
	Curtis	11326, 12352, 12397, 12466, 12855, 13228, 13577
	Curtis Mathes	10047, 10051, 10093, 10702, 10030, 11661, 11347
	CXC	10180
	Cyberpix	11667
	Cytron	11326
	Cytronix	11298
D	D-Vision	10556, 10037, 12197
	Daenyx	10180, 10179
	Daewoo	10180, 10178, 10030, 11661, 10556, 10037, 10634, 10108, 10092, 10474, 10624, 10661, 11150, 12098
	Dansai	10037, 10036, 10208
	Dantax	10714, 11037, 11163, 11652, 11916
	Datsura	10208
	Dawa	10037
	Daytron	10180, 10037
	Dayu	10661

	De Graaf	10548, 10208
	DEC	11326
	Decca	10037
	Dell	11264, 11863
	Denko	10264
	Denver	10037, 10587, 11770, 12197
	Desmet	10037
	Dew	11770
	Diamant	10037
	Diamond	10706, 10698
	Digatron	10037
	Digihome	11667
	Digiline	10037, 10668
	Digisonic	11826
	Digitor	10037, 10698
	Dikom	12561
	Dish Network	11948
	Disney	11665, 11892
	diVision	12197
	Dixi	10037
	DL	10587, 11326, 11363
	DMTech	11937
	Domeos	10668
	Dream Vision	11704
	Drean	10037
	DSE	10698, 10767, 11326, 11556, 12241
	Dual	10037, 11037, 11163, 11585, 11667, 12032, 12241, 12676
	Dumont	10017
	Durabrand	10463, 10180, 10178, 10171, 10714, 11037, 11652, 11665
	Dux	10037
	DX Antenna	11817, 13460
	DX Broadtec	13460
	Dynaconnective	12811
	Dynatron	10037
	Dynex	11810, 12049, 12184
E	E.S.C.	10037, 10474
	E:max	11324
	Easy Living	11666, 12104
	ECE	10037
	Elbe	10556, 10037
	Electroband	10000
	Electrohome	10463, 11670
	Elekta	10264
	Elektra	10017, 11661
	Element	11687, 11886, 12183, 12964, 13559
	Elfunk	11037, 11208
	ELG	10037
	Elin	10037, 10548
	Elite	10037
	Elta	10264, 10474
	Emerson	10463, 10180, 10178, 10171, 11661, 10037, 10714, 10668, 10624, 11394, 10179, 11665, 11864, 11886, 11944, 11963, 12183
	Envision	10030, 11365, 11506, 11589, 12014, 12087
	Erres	10037
	ESA	10812, 10171, 11944, 11963
	Essentials	12486
	Ether	10030
	Eurofeel	10264
	Euroman	10037, 10264
	Europa	10037
	Europhon	10037
	Evesham Technology	11248, 11667
	Evolution	11756
	Evotel	12561
	Excello	11037, 11326
	Exquisit	10037
F	F&U	12676
	Fair Mate	11326
	Feiyan	10264
	Ferguson	10053, 10037, 10625, 10548, 10560, 10195, 11037, 10443, 11585, 11865, 12053
	Fidelity	10171, 10037, 10264, 10474, 10512
	Finlandia	10548, 10208
	Finlux	10556, 10037, 10714, 10179, 10808, 11248, 11556, 11667, 12676
	Firstline	10556, 10037, 10714, 10668, 11037, 10208, 10624, 10808, 11363
	Fisher	10047, 10036, 10208
	Flint	10037, 10264
	Fluid	12964
	Formenti	10037
	Fortress	10093
	Fraba	10037
	Freesat	11636
	Friac	10037
	Frigidaire	11826
	Frontech	10264, 10474
	Fujimaro	11498, 11687
	Fujimaru	11687
	Fujitsu	10179
	Fujitsu Siemens	10808, 11163, 11248, 11298, 11666
	Funai	10000, 10180, 10171, 10714, 10668, 11037, 10264, 10179, 11271, 11394, 11666, 11817, 11963
	Furi	10264
	Futronic	10264
	Futuretech	10180
G	G-Hanz	12449
	G-HanzS	11363
	Gaba	11037
	Galaxi	10037
	Galaxis	10037
	Gateway	11756
	GE	10047, 10051, 10093, 10180, 10765, 10178, 10030, 11447, 11454, 10625, 10560, 10092, 11347, 11547
	GEC	10037
	Genesis	10037
	Genexxa	10037
	Gericom	10808, 11298
	GFM	10171, 11665, 11864, 11886, 11963
	Gibralter	10017, 10030
	Gibson	11826
	Gilma	12449
	Gintai	10474, 11150
	Global Home	10767
	Godrej	11585
	Gold	11770
	Gold Vision	10661
	Goldfunk	10668
	GoldStar	10178, 10030, 10037, 10714, 10474, 11150, 11910
	Goodmans	10556, 10037, 10625, 10714, 10560, 10668, 10634, 11037, 10264, 10036, 12053, 12393, 12676, 11983, 11916, 11687, 11667, 11645, 11585, 11523, 11163, 10808, 10661, 10624, 10179
	Gorenje	11585, 12676
	GPX	10179, 13402
	Gradiente	10053, 10037, 11804
	Graetz	10714, 11163
	Granada	10037, 10548, 10560, 10036, 10108, 10208
	Grandin	10556, 10037, 10714, 10668, 11037, 10624, 11298, 11652
	Grundig	10706, 10556, 10037, 10195, 10036, 10587, 10443, 11223, 11523, 11645, 11667, 11916, 12007, 12053, 12125, 12561
	Grunkel	11163
	Grunpy	10180, 10179
	GVA	11326, 11363, 12098
H	H & B	10808
	Haaz	10706
	Haier	10037, 10698, 10587, 10508, 11748, 11749, 11983, 12214, 12309, 12449, 13382
	Haiyan	10264
	Halifax	10264
	Hallmark	10178
	Hankook	10180, 10178, 10030
	Hannspree	11348, 11745, 11826
	Hanseatic	10556, 10037, 10625, 10714, 10634, 10661, 10808
	Hantarex	10037, 12197
	Hantor	10037
	Harley Davidson	10179
	Harvard	10180
	Harwood	10037
	Hauppauge	10037
	Havermy	10093
	HB	10714, 11324
	HCM	10037, 10264
	Heran	11826
	Herosonic	11826
	Highline	10037, 10264
	Hikona	10474, 11983
	Himitsu	10180
	Hinari	10037, 10264, 10036, 10179, 10208, 10443
	HiPlus	11826
	Hisawa	10714
	Hisense	10156, 10556, 10508, 10208, 11156, 11208, 11314, 11363, 12098, 12183, 12355, 12419
	Hitachi	10156, 10150, 10178, 10030, 11145, 11256, 10037, 10548, 10634, 11037, 10036, 10108, 10508, 11643, 11667, 11691, 11854, 12170, 12207, 12214, 12676, 13317, 13456, 11585, 11576, 11163, 11156, 11150, 10744, 10679, 10578, 10474, 10179, 10092
	Hitachi Fujian	10150, 10108
	Hitec	10698
	Höher	10714, 11163, 11556
	Hongmei	10093, 10264, 11910
	Hongyan	10264
	Hornyphon	10037
	Hua Tun	11150
	Huangshan	10264
	Huanyu	10264, 11910
	Huaqiang	10264
	Huari	10264
	Hugoson	11666
	Huodateji	10051
	Hypson	10556, 10037, 10714, 10668, 11037, 10264
	Hyundai	10706, 11037, 10698, 10767, 11326, 11523, 11556, 11770, 12676
I	Iberia	10037
	ICE	10037, 10264
	iDEAL	11556
	iLo	11286, 11394, 11665, 11684, 11990
	Imperial	10037
	Imperial Crown	10264, 10661
	Indiana	10037
	Initial	11990
	Inno Hit	11037, 11163, 11585
	Innova	10037
	Innowert	11298
	Insignia	10463, 10171, 11326, 11423, 11564, 11892, 11963, 12049, 12184, 12417
	Inspira	11556
	Inteq	10017
	Interbuy	10037, 10264
	Interfunk	10037, 10512
	Internal	10556, 10624
	Intervision	10037, 10264
	Irradio	10037
	IRT	11661, 10698
	Isis	12676
	Isukai	10037
	iSymphony	13094
	ITS	10037, 10264
	ITT	10548, 10179, 10208, 11523, 12125, 12676
	ITT Nokia	10180, 10548, 10179, 10208
	ITV	10037, 10264
J	J:COM	12811
	JCB	10000
	JCM	12256
	Jean	10156, 10051, 10036, 10092, 10179, 10474
	Jensen	11326
	Jiahua	10051
	JiaLiCai	10264
	Jinfeng	10051, 10208
	Jinhai	11910
	Jinque	10264
	Jinta	10264, 11910
	Jinxing	10156, 10556, 10037, 10698, 10264
	JMB	10556, 10634, 10443, 12676
	Jubilee	10556
	Juhua	10264
	JVC	10093, 10463, 10053, 10036, 10650, 10653, 10508, 11253, 11428, 11601, 11774, 12271
K	Kaige	10264
	Kaisui	10037
	Kangchong	11910
	Kangli	10264, 10661
	Kangyi	10264
	Karcher	10714, 10264, 11324, 11556, 12125
	Kathrein	10556
	KDS	11498, 11687
	KEC	10180

	Ken Brown	10463
	Kendo	10037, 11037, 11585, 12676
	Kenia	10030
	Kennex	11037
	Kenwood	10030
	Keymat	11326
	Khind	10706, 10661
	Kioto	10706, 10556
	Kiton	10037, 10668
	KLH	10765, 10767
	KLL	10037
	Kneissel	10556, 10037
	Kolin	10180, 10150, 10053, 10037, 10036, 10108, 10474, 11150, 11240, 11331, 11610
	Kolster	10037
	Kongque	10264
	König	10037
	Konka	10037, 10714, 10587, 10725, 13419
	Korpel	10037
	Kosmos	10037
	KTV	10180, 10030
	Kuaile	10264
	Kunlun	10051, 10264, 10208, 10661
	Küppersbusch	12676
L	L&S Electronic	10714, 10808
	Lavic	11363
	Lavis	11037
	Lecson	10037
	Lenco	10037, 11037, 10587, 10474, 11983
	Leyco	10037, 10264
	LG	10017, 11265, 10178, 10030, 11447, 10556, 10037, 10714, 10698, 10108, 12731, 12424, 12362, 12358, 12182, 11840, 11663, 11423, 10856, 10474
	Liesenkötter	10037
	Lifetec	10037, 10714, 10668, 11037
	Linetech	12676
	Linsar	11585, 11667, 12676
	Local India Brand	10264, 10208, 11413
	Local Malaysia Brand	10698
	Lodos	11037
	Loewe	10037, 10512, 10633, 11884
	Logik	11037, 10698, 11687, 11865, 12241, 12486
	Logix	10668
	Longjiang	10264
	Luma	11037
	Lumatron	10037, 10668, 10264, 11937
	Lumenio	10037
	Lux May	10037
	Luxor	10548, 11037, 10179, 10208, 11163, 12676
	LXI	10047, 10156, 10178
M	Madison	10037
	MAG	11498, 11687
	Magnavox	10051, 10030, 10171, 11454, 10706, 10036, 10179, 11365, 11455, 11506, 11866, 11867, 11944, 11963, 11990, 12372
	Magnum	10037, 10714, 11556
	Mandor	10264
	Manesth	10037, 10264
	Manhattan	10037, 10668, 11037
	Marantz	10030, 11454, 10556, 10037
	Mark	10037, 10714
	Marks & Spencer	11770
	Mascom	11556
	Mastro	10053, 10706, 10698, 11556
	Masuda	10037, 10264
	Matsui	10556, 10037, 10714, 10195, 11037, 10036, 10208, 10443, 10744, 11666, 11667, 11916, 12007, 12486, 12676
	Matsushita	10250, 10051, 10650
	Matsuviama	10587
	Maxdorf	11276
	Maxent	10762
	Maxess	12493
	Maxim	11556
	Meck	10698
	Mediator	10556, 10037
	Medion	10556, 10037, 10714, 10668, 11037, 10698, 10512, 10808, 11163, 11248, 11556, 11585, 11667, 12676
	Megatron	10178
	MEI	11037
	Meile	10264, 11910
	Melectronic	10037, 10714, 10634, 10195, 10512, 10661, 11652
	Memorex	10250, 10463, 10150, 10178, 11037, 10179, 11665, 11670, 11892
	Memory	11983
	Mercury	10037
	Mermaid	10037
	Metronic	10625
	Metz	10668, 10195, 11037, 10587, 11163
	MGA	10150, 10178, 10030
	Micromaxx	10037, 10714, 10668, 11037, 10808, 11324
	Microstar	10808
	Midland	10047, 10017, 10051
	Mikomi	10744, 11585, 11667
	Minato	10037
	Minerva	10195, 10108, 11248
	Ministry Of Sound	11667
	Minoka	10037
	Mintek	11990
	Mirai	11666
	Miray	13309, 13321
	Mitsai	11556
	Mitsubishi	10250, 10093, 10180, 10150, 11250, 10178, 10030, 10556, 10037, 11037, 10036, 10108, 13542, 13514, 13500, 13330, 12313, 11797, 11150, 10512, 10474, 10179
	Mivar	10609
	Moree	10037
	Morgan's	10037
	Moserbaer	11585, 12449
	Motorola	10093
	MTC	10030, 10512
	MTlogic	10714, 12104
	Mudan	10051, 10264, 10208
	Multitec	10037, 10668, 11037, 11556
	Multitech	10180, 10037, 10264
	Murphy	10474
	Mx Onda	11498, 11687, 11983
	Myrica	11666
	Myryad	10556
N	NAD	10156, 10178, 10037, 11156
	Naiko	10037
	Nakimura	10037
	Nanbao	10264, 11910
	Nansheng	10264
	National	10051, 10508, 10208
	Naxa	12104, 13382
	NEC	10156, 10051, 10053, 10178, 10030, 10264, 10036, 10653, 10508, 10474, 10661, 11150, 11704, 11797, 12461
	Neckermann	10556, 10037
	NEI	10037, 11037
	NEO	11324
	Neoka	11826
	Nesco	10179
	Netsat	10037
	NetTV	10762
	Neufunk	10556, 10037, 10714
	New Sonic	11826
	New Tech	10556, 10037
	Newave	10093, 10178, 10092, 11150
	Nexus Electronics	12183
	Nikai	11163
	Nikkai	10037, 10264, 10036
	Nikkei	10714
	Nikko	10178, 10030, 10092
	Nikon	11910
	Nimbro	12104
	Noblex	10264
	Nokia	10180, 10548, 10179, 10208
	Norcent	11365, 11589, 11745
	Nordmende	10037, 10714, 10560, 10195, 11163, 11413, 11585, 11667, 12007
	Normerel	10037
	Nortek	10668
	Norwood Micro	11286
	Novatronic	10037
	Novex	11523
	Novita	11585
	NTC	10092
O	O.K.Line	11037, 11324
	Oceanic	10548, 10208
	Odeon	10264
	Odys	12513
	Okano	10037, 10264
	OKI	11585, 11667, 12125, 12676
	Ölevia	11240, 11331, 11610
	Omega	10264
	Omni	10698
	Onei	11667
	Onida	10053, 10653, 11253, 12414
	Onimax	10714
	Onix	10698
	Onn	11667, 11770, 12125
	Onwa	10180
	Onyx	11770
	Opera	10037, 10714, 11770
	Optimus	10250, 10650
	Optoma	11348
	Optonica	10093
	Orbit	10037
	Orion	10463, 10556, 10037, 10714, 11037, 10264, 10179, 10443, 10474, 11916, 12007, 12032, 12108
	Orline	10037
	Ormond	10668, 11037
	Osaki	10556, 10037, 10264, 10474
	Osio	10037
	Osume	10037, 10036, 10474
	Otic	11326, 11498, 11687, 11983
	Otto Versand	10093, 10556, 10037, 10195, 10036, 10512
P	Pacific	10556, 10714, 11037, 10443, 11324, 11916
	Packard Bell	10092, 11314
	Palladium	10556, 10037, 10714
	Palsonic	10037, 10698, 10264, 10725, 11326, 12461
	Panama	10037, 10264
	Panasonic	10250, 10051, 10037, 10548, 10650, 10108, 10508, 12170, 11946, 11941, 11650, 11636, 11480, 11291, 11271, 11168, 10208
	Panavision	10037
	Panda	10051, 10706, 10698, 10264, 10508, 10208, 11910
	PARK	12104
	Penney	10047, 10156, 10051, 10178, 10030, 11347
	Perdio	10037
	Perfekt	10037
	Petters	10037, 11523
	Philco	10463, 10180, 10178, 10030, 10171, 11661, 10037, 13426, 13022, 12414, 11963, 11665, 11394, 11271, 10474, 10179, 10092
	Philips	10017, 10000, 10051, 10178, 10030, 10171, 11454, 10556, 10037, 10108, 11756, 11866, 11867, 11887, 12227, 12372, 12374, 12800, 11744, 11506, 11455, 11394, 10810, 10639, 10512, 10474, 10092
	Phocus	10714, 11652
	Phoenix	10037
	Phonola	10556, 10037
	Pilot	10030, 10706
	Pioneer	10037, 10698, 10512, 10679, 11260, 11457, 11636
	Pionier	11556
	Pixela	13496
	Planar	11589
	Plantron	10037, 10264
	Playsonic	10037, 10714, 11652
	Plustron	11770
	Polaroid	10765, 11276, 11286, 11314, 11326, 11498, 11523, 11645, 11687, 11826, 12121, 12125
	Polyvision	10889
	Portland	11661, 10092, 10624
	Power Acoustik	11865
	Powerpoint	10037, 10698, 11770
	Premier	10264
	Prima	10264, 10474, 11749
	Princess	11326
	Prinston	11037
	Prism	10051
	Pro Vision	10556, 10037, 10714, 11324, 12197
	Prodia	13496
	Profilo	11556
	Profitronic	10037
	Proline	10037, 10625, 10634, 11037
	Proscan	10047, 10030, 11447, 11347, 12147, 12183, 12256, 13577
	Prosco	10156

	Prosonic	10037, 10714, 10668, 11163, 11314, 11324, 11523, 11585, 11667, 11770, 11865, 12125, 12197, 12676
	Protech	10037, 10668, 11037, 10264
	Proton	10178, 10030, 10474
	Proview	11498, 11687
	Pulsar	10017
	Pye	10556, 10037
Q	Qingdao	10051, 10264, 10208
	Quadro	11326
	Quasar	10250, 10051, 10650, 10474, 11291
	Quelle	10037, 10668, 10195, 11037, 10512
	Questa	10036
R	R-Line	10037
	Radiola	10556, 10037
	Radiomarelli	10037
	RadioShack	10047, 10180, 10178, 10030, 10037
	Radiotone	10037, 10668, 11037, 10264
	Rank Arena	10036
	RCA	10047, 10000, 10051, 10093, 10178, 10030, 11661, 11447, 11454, 10625, 10560, 10618, 12746, 12434, 12247, 12932, 12187, 13577, 11953, 11948, 11781, 11547, 11347, 10679, 10624, 10092, 10090
	Realistic	10180, 10178, 10030
	Recco	10706
	Recor	10037
	Rectiligne	10037
	Red	12032
	Red Star	10037
	Rediffusion	10548, 10036
	Reflex	10037, 10668, 11037
	Relisys	11585, 11645
	Relon	11826
	Remotec	10250, 10093, 10171, 10037
	Reoc	10714, 12197
	Revox	10037, 10808
	Rex	10264
	RFT	10037, 10264
	Roadstar	10037, 10714, 10668, 11037, 10264, 11916
	Rolsen	12098
	Rover	10036
	Rowa	10037, 10698, 10264, 10587, 10898, 12042
	Runco	10017, 10030
S	Saba	10250, 10625, 10548, 10714, 10560
	Sagem	10618
	Saisho	10264
	Saivod	10037, 10668, 11037, 11163, 11556
	Sakura	11326
	Salora	10548, 10208, 11556, 12125, 12197
	Sampo	10093, 10178, 10030, 10171, 10036, 10650, 10092, 10474, 10762, 10898, 13419
	Samsung	10156, 10093, 10812, 10702, 10178, 10030, 10556, 10037, 10264, 10587, 10618, 10650, 10179, 10208, 10474, 10092, 10090, 11150, 11619, 11632, 12042, 12051
	Sanjian	10264
	Sanken	12042
	Sansei	10092
	Sansui	10463, 10171, 10706, 10037, 10714, 10898, 11243, 11248, 11413, 11556, 11670, 11892, 13564
	Sanyo	10156, 10180, 11037, 10264, 10036, 10508, 13348, 12676, 12461, 11667, 11585, 11498, 11365, 11276, 11208, 11150, 11142, 10474, 10208
	Sanyuan	10093
	SBR	10556, 10037
	Sceptre	11360, 11599, 12337, 12506
	Schaub Lorenz	10548, 10714, 11324, 11363, 11667, 12125, 12241, 12676
	Schneider	10556, 10037, 10714, 10668, 11037, 12676
	Schöntech	11037
	Scotch	10178
	Scott	10180, 10178, 10179, 11983
	Sears	10047, 10156, 10178, 10171, 10179
	Seaway	10634
	Seelver	11037
	SEG	10037, 10668, 11037, 10264, 10036, 10624, 11163, 11523, 12125
	SEI	10037
	Sei-Sinudyne	10037
	Seiki	10178, 12964, 13559
	Semivox	10463, 10180
	Semp	10156, 11743
	Semp Toshiba	10156, 11743
	Sencor	10714
	Sens	11865
	Serie Dorada	10156, 10180, 10178, 10030
	Serino	10093
	Shancha	10264
	Shanghai	10264, 10208, 11910
	Sharp	10093, 10053, 10030, 10036, 10650, 11193, 13101, 12810, 12676, 12360, 12214, 11659, 11423, 11407, 11393, 10818, 10474
	Shen Ying	10092, 10179, 10474
	Shencai	10264
	Sheng Chia	10093, 10179, 10474, 11150
	Shenyang	10264
	Shinco	11990
	Shinelco	12104
	Shintoshi	10037
	Shivaki	10178, 10037, 10443
	Shorai	10179
	Siam	10037
	Siemens	10037, 10195
	Siera	10556, 10037
	Sigmac	13423
	Silva	10037
	Silva Schneider	10037, 11556, 12125, 12197
	Silvano	10587
	Silver	10036, 10179
	SilverCrest	11037, 12676
	Singer	11556
	Sinudyne	10037
	SKY	10037, 11745
	Skygiant	10180
	Skyworth	10037, 10698, 10264
	Sliding	11324
	SLX	10668
	Soemtron	11298
	Solavox	10037, 10548
	Soniko	10037
	Soniq	12493
	Sonitron	10208
	Sonneclair	10037
	Sonoko	10037, 10264
	Sonolor	10548, 10208
	Sontec	10037
	Sontech	11983
	Sony	10000, 11505, 10036, 10810, 11300, 11551, 11625, 11651, 11825, 12568, 12571, 12736, 12747, 12778
	Soundesign	10180, 10178, 10179
	Soundwave	10037, 11037
	Sowa	10156, 10051, 10178, 10036, 10092, 10474, 11150
	Soyea	12042
	Soyo	11826
	Spectroniq	11498, 11687
	Squareview	10171
	SR Standard	10037, 11037
	SSS	10180
	Starlite	10180, 10037, 10264
	Stern	10264
	Strato	10037, 10264, 12032
	Strong	11163
	SunBriteTV	11610, 12337
	Sungoo	11248
	Sunny	10037
	Sunstar	10037, 10264
	Sunview	13265
	Sunwood	10037
	Superscan	10093, 10864, 11944
	Supersonic	10208, 12104
	SuperTech	10556, 10037
	Supra	10178
	Supreme	10000
	Susumu	10474
	SVA	10587, 11326, 11498, 11963, 12042
	Svasa	10208
	Swisstec	11745, 12104, 12106
	Sylvania	10030, 10171, 10587, 11271, 11314, 11394, 11665, 11864, 11886, 11944, 11963
	Symphonic	10180, 10171, 11394, 11944
	Synco	10000, 10093, 10178, 10036, 10092, 10474, 11826
	Syntax	11240, 11331, 11610
	Sysline	10037
T	Tacico	10178, 10092, 10179, 10474, 11150
	Tai Yi	11150
	Talent	10178
	Tandy	10093
	Tashiko	10036, 10650, 10092, 11150
	Tatung	10156, 10051, 10037, 10036, 10474, 11150, 11156, 11248, 11286, 11324, 11556, 11687, 11756, 11916
	Tauras	12197
	TCL	10706, 10698, 10898, 11916, 12414, 12434, 12449, 13183
	TCM	10714, 10808
	Teac	10178, 10171, 10706, 10037, 10714, 10668, 11037, 10698, 10264, 10587, 10624, 10512, 10898, 11248, 11363, 11645, 11770, 11983, 12032, 12241
	Tec	10037, 10474
	Tech Line	10037, 10668, 11163
	Technica	11037, 12106
	Technics	10250, 10051, 10556, 10650
	Technika	11667, 11865, 11983, 12032, 12106, 12125, 12197, 12676
	TechniSat	10556
	Technisson	10714, 11652
	Techno	11585
	Technol Ace	10179
	Technosonic	10556, 10625, 11324, 11326, 12032
	Techvision	12032
	Techwood	10051, 11037, 11163, 11667, 12676
	Tecnimagen	10556
	Teco	10051, 10093, 10053, 10178, 10030, 10264, 10036, 10653, 10092, 10474, 10762, 11523, 11687, 11838
	Tedelex	10208
	Teknika	10180, 10150, 10092, 10179
	TELE System	11585, 12125
	Telecor	10037
	Telefunken	10702, 10037, 10625, 10714, 10560, 10698, 10587, 11243, 11326, 11556, 11585, 11667, 12676
	Telefusion	10037
	Telegazi	10037, 10264
	Telemeister	10037
	Telesonic	10037
	Telestar	10556, 10037
	Teletech	10037, 10668, 11037
	Teleton	10036
	Teleview	10037
	Tempest	10264
	Tennessee	10037
	Tensai	10037, 11037
	Tera	10030, 10092, 10474
	Tesla	10556, 10037, 10714, 11037, 11652
	Tevion	10556, 10037, 10714, 10668, 11037, 12241, 12032, 11687, 11667, 11645, 11585, 11556, 11498, 11298, 11248, 10808, 10767
	Thomson	11447, 10037, 10625, 10560
	Thorn	10037, 10036, 10512
	Tiane	10093
	TMK	10178
	TML	11756
	TNCi	10017
	Tobo	10264
	Tokai	10037, 10668, 11037
	Tokaido	11037
	Tongguang	10264
	Tongtel	10587
	Tophouse	10180
	Topline	10668, 11037
	Toshiba	10156, 10093, 11265, 11256, 10195, 11037, 10264, 10036, 10618, 10650, 10508, 11945, 12006, 12311, 12676, 12724, 13105, 13492, 13503, 13504, 13570, 11916, 11743, 11704, 11656, 11652, 11556, 11524, 11508, 11156, 11150, 10767
	Tosumi	11770
	Toyoda	10264
	Trakton	10264
	TRANS-continents	10556, 10037, 10668, 11037
	Transonic	10037, 10698, 10264, 10587, 10512, 11326, 11363
	Triad	10556
	Trio	11248, 11498, 11687
	Tristar	10264

	Triumph	10556, 10037
	TruTech	11665
	Tuntex	10030, 10092, 10474
	TVS	10463
	TVTEXT 95	10556
U	Uher	10037
	Ultravox	10037
	UMC	11745, 12106
	Unic Line	10037
	Uniden	12122
	United	10556, 10037, 10714, 11037, 10587, 11163, 11523, 11652, 11770, 11916, 11983, 12125
	Universal	10037, 10714
	Universum	10037, 10668, 10195, 11037, 10264, 10036, 10618, 10474, 10512, 10808, 11163
	Univox	10037
	US Logic	11286
V	V7 Videoseven	11666
	Vector Research	10030
	Venturer	11865
	Venus	11326
	Vestel	10037, 10668, 11037, 11163, 11585, 11667
	Vexa	10037
	Victor	10250, 10053, 10036, 10650, 10653, 11428
	Videocon	10037, 10508
	VideoSystem	10037
	Vidtech	10178, 10036
	Viewsonic	10864, 10885, 11365, 11564, 11578, 11627, 11742, 11745, 12014, 12049, 12087, 12277, 13247
	Viore	11684, 12104, 12352, 13094, 13118, 13382
	Vision	10037, 10264, 10474, 11826
	Vistron	11363
	Visual Innovations	12106
	Vito	12376
	Vivax	11326
	Vizio	10864, 10885, 11756, 11758, 12116, 12512, 12757, 13758
	Vortec	10037
	Voxson	10178, 10037, 12197
	VU	11365, 12098, 12449
W	Walker	11667
	Waltham	10037, 10668, 11037, 10443
	Wansa	12098
	Wards	10047, 10017, 10000, 10156, 10051, 10180, 10178, 10030, 10179, 11156, 11347
	Warumaia	10661
	Watson	10037, 10714, 10668, 11037
	Waycon	10156
	Wega	10037, 10036
	Welltech	10714, 11652
	Weltstar	11037
	Westinghouse	10885, 10889, 11282, 11300, 11577, 11712, 11826, 13470, 13579
	Wharfedale	10556, 10037, 11324, 11556, 11667, 11983
	White Westinghouse	10463, 11661, 10037, 10624
	Wilson	10556
	Windsor	10668, 11037
	Windy Sam	10556
	Wintel	10714
	World-of-Vision	11298
	Wyse	11365
X	Xenius	10634, 10661
	Xi-En	11770
	Xiahua	10698, 10264
	Xiangyang	10264
	Xihu	10264
	Xinghai	10264
	Xinrisong	11910
	Xiron	11983
	XLogic	10698
	Xoceco	10725, 12121, 13022
	Xomax	11770
	Xoro	11243
	Xrypton	10037
	Xuelian	11910
Y	Yamaha	10030, 10650, 11407, 11576
	Yamishi	10037
	Yapshe	10250
	Yokan	10037
	Yoko	10037, 10264
	Yongbao	11910
	Yousida	11910
	YU-MA-TU	10037
Z	Zenith	10047, 10017, 10000, 10463, 11265, 10178, 10030, 11145, 11661, 10092, 10624, 11365, 11423, 12358, 12362, 12731
	Zepto	11585
	Zinwell	12116
	Zonda	10698

TV/DVD Combination

A	Acoustic Solutions	11865
	AEG	12197
	Akai	11675, 11865, 12676
	Akura	11770, 11983
	Alba	10587, 11865, 12104, 12676
	Audiosonic	11983, 12104
	Audiovox	11865, 11937, 12513
	Axion	11937
B	Belson	12241
	Black Diamond	11037
	Blue Sky	11037, 12153
	Bush	11037, 10698, 10587, 11556, 11983, 12104, 12676
C	cello	11770
	Centrum	11037
	Changhong	11243
	Coby	12315, 12340, 12343, 12344, 12347, 12350
	Coradir	12844
	Crown	11037
	Curtis	12466, 12855
D	D-Vision	12197
	Denver	10587, 11770, 12197
	Dew	11770
	DMTech	11937
	Dual	11037, 12241
	Dynaconnective	12811
	Dynex	11810, 12049, 12184
E	Easy Living	12104
	Electrohome	11670
	Elfunk	11037
	Emerson	11394, 11864, 11886, 11963
	ESA	11963
	Essentials	12486
F	Ferguson	11037
	Finlux	11556
	Funai	11963
G	GFM	11963
	Gold	11770
	Goodmans	11037, 11687, 11983, 12676
H	Haier	11748, 12309
	Hantarex	12197
	Hikona	11983
	Hitachi	11037, 11667, 12207, 12676, 13317, 13456
	Hyundai	11770
I	iLo	11990
	Initial	11990
	Insignia	11963, 12049, 12417
	iSymphony	13094
J	J:COM	12811
	JVC	11774, 12271
L	Lenco	10587, 11983
	LG	11423
	Linsar	12676
	Logik	11037, 11687, 11865, 12486
	Luxor	11037
M	Magnavox	11866, 11944, 11963, 11990, 12372
	Marks & Spencer	11770
	Matsui	11037, 12486, 12676
	Medion	12676
	Memorex	11670
	Memory	11983
	Mintek	11990
	Mitsubishi	13330
	MTlogic	12104
	Mx Onda	11983
N	Naxa	12104, 13382
	Nimbro	12104
O	Onn	11770
	Onyx	11770
	Opera	11770
	Otic	11983
P	Panasonic	11941, 12170
	Philips	11454, 10556, 11394, 12372
	Plustron	11770
	Polaroid	11523
	Power Acoustik	11865
	Powerpoint	10698, 11770
	Proscan	12256
	Prosonic	11770, 11865, 12197, 12676
R	RCA	11447, 11948, 12187, 12746, 12932
S	Salora	12197
	Samsung	12051
	Sansui	11670, 13564
	Sanyo	12676
	Scott	11983
	SEG	11037
	Sens	11865
	Sharp	10818, 12360, 12676
	Shinco	11990
	Shinelco	12104
	Soniq	12493
	Sontech	11983
	Sony	12778
	Supersonic	12104
	Swisstec	12104
	Sylvania	10171, 11394, 11864, 11886, 11963
T	Tauras	12197
	TCL	11916
	Teac	10698, 10587, 11770, 11983, 12241
	Technica	11037
	Technika	11865, 11983, 12106
	Telefunken	10698
	Teletech	11037
	Tevion	12241
	Thomson	10625
	Toshiba	11256, 11524, 12006, 13105, 13492
	Tosumi	11770
	Transonic	10587
U	UMC	12106
	United	11037, 10587, 11770, 11983
V	Venturer	11865
	Vestel	11037
	Viewsonic	10864, 12049
	Viore	12104, 12352, 13094, 13118, 13382
W	Weltstar	11037
	Westinghouse	11300, 11712
	Wharfedale	11983
X	Xiron	11983
	Xomax	11770

TV/VCR Combination

A	Aiwa	11910, 11916
	America Action	10180
	Amstrad	10171
	Audiovox	10180
B	Blue Sky	10624, 11916
	Broksonic	10463
	Bush	11916
C	Curtis Mathes	10051
D	Daewoo	10624
	Dantax	11916
E	Emerson	10463, 10624
F	Ferguson	10625
	Fidelity	10171
	Firstline	10624
G	GE	10047, 10051, 10093
	GoldStar	10037
	Goodmans	10624, 11916
	Gradiente	11804
	Grandin	10624
	Grundig	10556, 10037, 10195, 11916
H	Hinari	10036, 10179
I	Internal	10624
J	JVC	11253
L	LG	10178
M	Matsui	11916
	Memorex	10250
	Mitsubishi	10093, 10556, 11150
O	Orion	10463, 11916
P	Pacific	11916
	Panasonic	10250, 10051
	Penney	10051
	Philips	10556, 10037
	Portland	10624
Q	Quasar	10250, 10051
R	Radiola	10556
	RCA	10047, 10051, 10093
	Roadstar	11916

S	Saba	10625
	Sansui	10463
	Schneider	10556, 10037
	SEG	10624
	Sharp	10093
	Siemens	10037
	Sony	10000, 11505
T	Tatung	11916
	Teac	10178, 10171, 10624
	Technics	10556
	Thomson	10625
	Toshiba	11916, 11945, 12006
U	United	11916
W	White Westinghouse	10624
Z	Zenith	10017

TV/VCR/DVD Combination

E	Emerson	11944, 11963
	ESA	11944
I	Insignia	11963
M	Magnavox	11944, 11963
P	Panasonic	11941, 11946
R	RCA	11953
S	Superscan	11944
	Sylvania	11944
	Symphonic	11944
T	Toshiba	11945

VCR/PVR group (2****)

VCR

A	ABS	21972
	Accent	20072
	Accurian	20000
	Admiral	20048, 20209
	Adventura	20000
	Adyson	20072
	AEG	21593
	Aiko	20278
	Aim	20278, 20642
	Aiwa	20037, 20032, 20000, 20209, 20041, 20742, 21137
	Akai	20037, 20240, 20000, 20041, 20642
	Akiba	20072
	Akura	20041, 20072
	Alba	20081, 20000, 20209, 20072, 20278
	Alienware	21972
	Allegro	20039, 21137
	Allorgan	20240
	Allstar	20081
	America Action	20278
	American High	20035
	Amstrad	20000, 20072, 20278
	Anam	20162, 20037, 20240, 20278, 21562
	Anitech	20072
	Ansonic	20000
	Aristona	20081
	ASA	20037, 20081
	Asha	20240
	Asuka	20037, 20081, 20000, 20072
	Audiolab	20081
	Audiosonic	20278
	Audiovox	20037, 20278
	AVP	20000
	Awa	20037, 20043, 20278, 20642, 20320
B	Baird	20000, 20104, 20041, 20278
	Basic Line	20104, 20072, 20278
	Beaumark	20240
	Bell & Howell	20104
	Bestar	20278
	Black Diamond	20642
	Black Panther	20278
	Blaupunkt	20162, 20081
	Blue Sky	20037, 20209, 20072, 20278, 20642, 20742, 21137
	Bondstec	20072
	Brandt	20041, 20320
	Brandt Electronique	20041
	Brinkmann	20209
	Broksonic	20121, 20209, 20742
	Bush	20081, 20000, 20209, 20072, 20278, 20642, 20742
C	Calix	20037
	Canon	20035
	Carena	20081, 20209
	Carrefour	20045
	Carver	20081
	Casio	20000
	Cathay	20278
	CCE	20072, 20278
	Centrum	20593, 21593
	CGE	20000, 20041
	Changhong	20048, 20081
	Cimline	20209, 20072
	Cineral	20278
	CineVision	21137
	Citizen	20037, 20278
	Clatronic	20000, 20072, 21593
	Colt	20072
	Condor	20278
	Craig	20037, 20047, 20240, 20072
	Crosley	20081, 20000
	Crown	20037, 20072, 20278
	Curtis Mathes	20060, 20035, 20162, 20240, 20041, 20278
	Cybernex	20240
	CyberPower	21972
	Cyrus	20081
D	Daewoo	20045, 20104, 20209, 20278, 20642, 21137
	Dansai	20072, 20278
	Dantax	20742
	Daytron	20278
	De Graaf	20048, 20081, 20042, 20104
	Decca	20081, 20000, 20067, 20209, 20041
	Deitron	20278
	Dell	21972
	Denko	20072
	Denon	20042
	Diamant	20037
	Digitor	20642
	DirecTV	20739
	Domland	20209
	DSE	20000, 20642, 21593
	Dual	20081, 20000, 20041, 20278
	Dumont	20081, 20000, 20104
	Durabrand	20039, 20642, 20593, 21593
	Dynatech	20000
E	E.S.C.	20240, 20278
	Elbe	20278
	Elcatech	20072
	Electrohome	20037, 20043
	Electrophonic	20037
	Elin	20240
	Elsay	20072
	Elta	20072, 20278
	Emerex	20032
	Emerson	20035, 20037, 20240, 20045, 20000, 20121, 20043, 20209, 20072, 20278, 20593, 21593
	ESA	21137
	EuroLine	21593
F	Ferguson	20000, 20041, 20278, 20320, 20742
	Fidelity	20240, 20000, 20072
	Finlandia	20037, 20048, 20081, 20000, 20042, 20104, 20043
	Finlux	20081, 20000, 20042, 20104
	Firstline	20037, 20045, 20042, 20043, 20209, 20072, 20278, 21137
	Fisher	20047, 20104
	Flint	20209
	Frontech	20072
	Fuji	20035, 20033
	Fujitsu	20045, 20000
	Fujitsu General	20037
	Fujitsu Siemens	21972
	Funai	20000, 20593, 21593
G	Galaxi	20000
	Galaxis	20278
	Garrard	20000
	Gateway	21972
	GE	20060, 20035, 20048, 20240, 20320, 20202
	GEC	20081
	General	20045
	Genexxa	20104
	GFM	21593
	Go Video	20240, 21137
	GoldHand	20072
	GoldStar	20037, 20000, 20209, 21137
	Goodmans	20037, 20081, 20240, 20000, 20209, 20072, 20278, 20642, 20742
	GPX	20037
	Gradiente	20000, 21137
	Graetz	20240, 20104, 20041
	Granada	20037, 20048, 20081, 20240, 20000, 20042, 20104
	Grandin	20037, 20000, 20209, 20072, 20278, 20742
	Grundig	20081, 20072, 20320, 20742
H	Hanseatic	20037, 20081, 20209
	Haojie	20240
	Harley Davidson	20000
	Harman/Kardon	20081
	Harwood	20072
	HCM	20072
	Hewlett Packard	21972
	HI-Q	20047
	Hinari	20240, 20209, 20041, 20072, 20278
	Hisawa	20209
	Hischito	20045
	Hitachi	20037, 20081, 20240, 20000, 20042, 20041, 20593
	Höher	20278, 20642
	Hornyphon	20081
	Howard Computers	21972
	Hughes Network Systems	20042
	Humax	20739
	Hush	21972
	Hypson	20037, 20000, 20209, 20072, 20278
I	iBUYPOWER	21972
	Imperial	20000
	Ingersoll	20240, 20209
	Inno Hit	20072
	Instant Replay	20035
	Interbuy	20037, 20072
	Interfunk	20081, 20104
	Internal	20278
	International	20037, 20278, 20642
	Intervision	20037, 20000, 20209, 20278
	Irradio	20037, 20081, 20072, 21137
	ITT	20240, 20104, 20041
	ITV	20037, 20278
J	JBL	20278
	Jensen	20041
	JMB	20209, 20742
	Joyce	20000
	JVC	20081, 20045, 20067, 20041
K	Kaisui	20072
	Kambrook	20037
	Karcher	20081, 20278, 20642
	KEC	20037, 20278
	Kendo	20037, 20209, 20072, 20278, 20642
	Kenwood	20067, 20041
	KIC	20000
	Kimari	20047
	KLH	20072
	Kneissel	20037, 20209, 20278
	Kodak	20035, 20037
	Kolin	20043, 20041
	Kolster	20209
	Korpel	20072
	Kuba Electronic	20047
	Kyoto	20072
L	Lenco	20278
	Leyco	20072
	LG	20037, 20045, 20000, 20042, 20209, 20278, 21137
	Lifetec	20209
	Linksys	21972
	Lloyd's	20000
	Loewe	21062, 20162, 20037, 20081, 21562
	Logik	20240, 20209, 20072
	Lumatron	20593, 21137
	Lunatron	21137
	Lux May	20072
	Luxor	20048, 20047, 20104, 20043, 20072
	LXI	20037
M	Magnasonic	20278, 20593
	Magnavox	20035, 20039, 20081, 20000, 20642, 20593, 21593
	Magnin	20240
	Magnum	20642
	Manesth	20081, 20045, 20209, 20072
	Marantz	20035, 20081, 20209

	Mark	20000, 20278
	Marta	20037
	Mascom	20642
	Mastec	20642
	Master's	20278
	Matsui	20037, 20240, 20209, 20278, 20742
	Matsushita	20035, 20162
	Media Center PC	21972
	Mediator	20081
	Medion	20209, 20642
	MEI	20035
	Melectronic	20037, 20000
	Memorex	20035, 20162, 20037, 20048, 20039, 20047, 20240, 20000, 20104, 20209
	Memphis	20072
	Metronic	20081
	Metz	21062, 20162, 20037, 20081, 21562, 20836, 20837
	MGA	20240, 20043
	MGN Technology	20240
	Micromaxx	20209
	Microsoft	21972
	Migros	20000
	Mind	21972
	Minolta	20042
	Mitsubishi	20048, 20081, 20000, 20067, 20043, 20041, 20642
	Motorola	20035, 20048
	MTC	20240, 20000
	Multitec	20037
	Multitech	20000, 20072
	Murphy	20000
	Myryad	20081
N	NAD	20104
	Naiko	20642
	NAP	20039
	Nebula Electronics	20033
	NEC	20035, 20037, 20048, 20104, 20067, 20041, 20278, 21137
	Neckermann	20081, 20041
	Nesco	20000, 20072
	Neufunk	20209, 21137
	Newave	20037
	Nikkai	20072, 20278
	Nikko	20037
	Niveus Media	21972
	Noblex	20240
	Nokia	20048, 20081, 20240, 20042, 20104, 20041, 20278
	Nordmende	20067, 20041, 20642, 20320
	Northgate	21972
	Nu-Tec	20209
O	Oceanic	20048, 20081, 20000, 20104, 20041, 20320
	Okano	20209, 20072, 20278
	Olympus	20035
	Onimax	20642
	Optimus	21062, 20162, 20037, 20048, 20104, 20593
	Orbit	20072
	Orion	20121, 20209, 20742
	Orson	20000
	Osaki	20037, 20000, 20072
	Osume	20072
	Otake	20209
	Otto Versand	20081
P	Pacific	20000, 20642, 20742
	Packard Bell	21972
	Palladium	20037, 20209, 20041, 20072
	Palsonic	20000, 20072, 20642
	Panasonic	21062, 20035, 20162, 21562, 20616, 20836, 20837
	Pathe Cinema	20043
	Pathe Marconi	20041
	Penney	20035, 20037, 20240, 20042
	Pentax	20042
	Perdio	20000, 20209
	Philco	20035, 20000, 20209, 20072
	Philips	20035, 20081, 20000, 20593, 20739
	Phoenix	20278
	Phonola	20081
	Pilot	20037
	Pioneer	20162, 20081, 20042, 20067
	Polk Audio	20081
	Portland	20278
	Presidian	21593
	Prinz	20000
	Pro Vision	20278
	Profitronic	20081, 20240
	Proline	20000, 20278, 20642, 20320
	Proscan	20060, 20202
	Prosco	20278
	Prosonic	20209, 20278
	Protech	20081, 20072
	Pulsar	20039
	Pye	20081, 20000
Q	Qisheng	20060
	Quasar	20035, 20162, 20278
	Quelle	20081
R	Radialva	20037, 20048, 20081, 20072
	Radiola	20081
	Radionette	20037, 21137
	RadioShack	20037, 20000
	Radix	20037
	Randex	20037
	Rank	20041
	Rank Arena	20041
	RCA	20060, 20035, 20048, 20240, 20000, 20042, 20320, 20202, 20880
	Realistic	20035, 20037, 20048, 20047, 20000, 20104
	ReplayTV	20616
	Rex	20041
	RFT	20072
	Ricavision	21972
	Rio	21137
	Roadstar	20037, 20081, 20240, 20072, 20278, 20742
	Royal	20072
	Runco	20039
S	Saba	20041, 20278, 20320
	Saisho	20209
	Salora	20104, 20043
	Sampo	20037, 20048
	Samsung	20240, 20045, 20742
	Sanky	20048, 20039
	Sansei	20048
	Sansui	20000, 20067, 20209, 20041, 20072
	Sanyo	20048, 20047, 20240, 20104, 20067, 21137
	Saville	20240, 20278
	SBR	20081
	ScanSonic	20240
	Sceptre	20104
	Schaub Lorenz	20000, 20104, 20041
	Schneider	20037, 20081, 20240, 20000, 20042, 20072, 20278, 20642, 21137
	Scott	20045, 20121, 20043, 20593
	Sears	20035, 20037, 20047, 20000, 20042, 20104
	Seaway	20278
	SEG	20081, 20240, 20072, 20278, 20642, 20593
	SEI	20081
	Sei-Sinudyne	20081
	Seleco	20037, 20041
	Semivox	20045, 20209
	Semp	20045
	Semp Toshiba	20045
	Sentra	20072
	Setron	20072
	Sharp	20037, 20048, 20209, 20848, 21137
	Shinco	20000
	Shintom	20104, 20072
	Shivaki	20037
	Shogun	20240
	Siemens	20037, 20081, 20104, 20320
	Siera	20081
	Signature	20035
	Silva	20037
	Silva Schneider	21137
	Silver	20278
	SilverCrest	20642
	Singer	20045, 20072
	Sinudyne	20081, 20209
	Sonic Blue	20616, 21137
	Sonneclair	20072
	Sonolor	20048
	Sontec	20037, 20278
	Sonwa	20642
	Sony	20035, 20032, 20033, 20000, 21032, 21972
	Soundwave	20037, 20209
	SR Standard	20278
	Ssangyong	20072
	Stack 9	21972
	Stern	20278
	STS	20042
	Sunkai	20209, 20278
	Sunstar	20000
	Suntronic	20000
	Sunwood	20072
	Supra	20037, 20278
	Sylvania	20035, 20081, 20000, 20043, 20593, 21593
	Symphonic	20000, 20593, 21593
	Systemax	21972
T	T+A	20162
	Tagar Systems	21972
	Taisho	20209
	Tandberg	20278
	Tandy	20000, 20104
	Tashiko	20037, 20048, 20081, 20240, 20000
	Tatung	20048, 20081, 20045, 20000, 20067, 20043, 20209, 20041, 20742
	Teac	20037, 20000, 20041, 20072, 20278, 20642, 20593, 21593
	Tec	20072
	Tech Line	20072
	Technics	20035, 20162, 20081
	Teco	20035, 20037, 20048, 20041
	Tedelex	20037, 20209, 20642
	Teknika	20035, 20037, 20000
	Teleavia	20041
	Telefunken	20209, 20041, 20278, 20642, 20320, 20593
	Telestar	20037
	Teletech	20000, 20072, 20278
	Tenosal	20072
	Tensai	20037, 20000, 20072, 20278
	Tesla	20081
	Tevion	20209, 20642
	Texet	20278
	Thomas	20000
	Thomson	20060, 20067, 20041, 20278, 20320, 20202
	Thorn	20037, 20104, 20041
	TiVo	20739
	TMK	20240
	Tokai	20037, 20104, 20041, 20072
	Toshiba	20081, 20045, 20042, 20067, 20043, 20209, 20041, 20742, 21972
	Totevision	20037, 20240
	Touch	21972
	Towada	20072
	Toyoda	20278
	Tradex	20081
	Triad	20278
U	Uher	20240
	Ultravox	20278
	Unitech	20240
	United	20742, 21593
	Universum	20037, 20081, 20240, 20000, 20104, 20209, 21137
V	Vector	20045
	VIA Technologies	21972
	Victor	20067, 20041
	Video Concepts	20045
	Video Technic	20000
	Videomagic	20037
	Videosonic	20240
	Viewsonic	21972
	Villain	20000
	Voodoo	21972
W	Wards	20060, 20035, 20048, 20039, 20047, 20081, 20033, 20240, 20045, 20000, 20042, 20072
	Watson	20081, 20642
	Weltblick	20037
	Wharfedale	20642, 20593
	White Westinghouse	20209, 20072, 20278
X	XR-1000	20035, 20000, 20072
Y	Yamaha	20041
	Yamishi	20072, 20278
	Yokan	20072
	Yoko	20037, 20240, 20072
	Yoshita	20072
Z	Zenith	20037, 20039, 20033, 20000, 20209, 21137
	ZT Group	21972
	ZX	20209

PVR

A	ABS	21972
	Alienware	21972
C	CyberPower	21972
D	Dell	21972
	DirecTV	20739
G	Gateway	21972
H	Hewlett Packard	21972
	Howard Computers	21972
	Humax	20739
	Hush	21972
I	iBUYPOWER	21972
L	Linksys	21972
M	Media Center PC	21972
	Microsoft	21972
	Mind	21972
N	Niveus Media	21972
	Northgate	21972
P	Panasonic	20616
	Philips	20739
R	RCA	20880
	ReplayTV	20616
S	Sonic Blue	20616
	Sony	21972
	Stack 9	21972
	Systemax	21972
T	Tagar Systems	21972
	TiVo	20739
	Toshiba	21972
	Touch	21972
V	Viewsonic	21972
	Voodoo	21972
Z	ZT Group	21972

SAT/PVR Combination

D	DirecTV	20739

TV/VCR Combination

A	Aiwa	20000, 20742, 21137
	America Action	20278
	Amstrad	20000
	Audiovox	20278
B	Bestar	20278
	Blue Sky	20278, 20742
	Broksonic	20742
	Bush	20742
C	Citizen	20278
	Colt	20072
	Curtis Mathes	20035
D	Daewoo	20278
	Dantax	20742
E	Emerson	20278, 20593
F	Ferguson	20000, 20278, 20742
	Fidelity	20000
	Firstline	20278
	Funai	20000, 20593
G	GE	20060, 20035, 20048, 20240
	GoldStar	20037
	Goodmans	20278, 20742
	Gradiente	21137
	Grandin	20278, 20742
	Grundig	20081, 20742
	Harley Davidson	20000
H	Hitachi	20000, 20593
	Hypson	20037
I	Internal	20278
J	JBL	20278
K	Kambrook	20037
	Kneissel	20278
L	LG	20037
	Lloyd's	20000
	Loewe	20037
M	Magnasonic	20278, 20593
	Magnavox	20081, 20000, 20593
	Magnin	20240
	Matsui	20742
	Memorex	20162, 20037
	MGA	20240
	Mitsubishi	20048, 20081, 20043
O	Optimus	20162, 20593
	Orion	20742
P	Pacific	20742
	Palsonic	20000
	Panasonic	20035, 20162
	Penney	20035, 20037, 20240
	Philips	20081
Q	Quasar	20035, 20162
R	Radiola	20081
	RadioShack	20000
	RCA	20060, 20035, 20048, 20240
	Roadstar	20742
	Saba	20320
S	Samsung	20240, 20742
	Sansui	20000
	Sanyo	20240
	Schneider	20081, 20000
	Sears	20037, 20000
	Sharp	20037, 20048
	Shivaki	20037
	Siemens	20081
	Sony	20032, 20000
	Sylvania	20081, 20593
	Symphonic	20000, 20593
T	Tatung	20742
	Teac	20037, 20000, 20642, 20593
	Technics	20081
	Telefunken	20278
	Thomas	20000
	Thomson	20278
	Toshiba	20742
U	United	20742
W	White Westinghouse	20278
Z	Zenith	20000

BD/DVD group (3****)

DVD

	3D LAB	30539
A	Accurian	30675
	Acoustic Solutions	30730, 30713, 32082
	AEG	30770, 30790, 30675, 31233, 32173
	Afreey	30698
	Aim	30672
	Airis	30672, 31107
	Aiwa	30533, 30641
	Akai	30770, 30695, 30790, 30675, 30884, 31233
	Akura	31233, 31383
	Alba	30672, 30539, 30717, 30695, 30730, 30713, 30884
	Alco	30790
	Amitech	30770, 32187
	Amstrad	30770, 30790, 30713, 32139
	AMW	30872
	Ansonic	30831
	Apex Digital	30672, 30717, 30796, 31061
	Aristona	30539, 30646
	Arrgo	31023
	ASDA	32213
	Audio Authority	32555
	Audiosonic	31383
	Audiovox	30717, 30790
	Audioworld	30790
	Audix	30713
	Autovox	30713
	AVideo	32173
	Awa	30730, 30872, 32587
	Axil	32139
	Axion	30730
B	Basic Line	30713
	Bel Canto Design	31571
	Belson	32139
	Berthen	31643
	Best Buy	32139
	Black Diamond	30713, 30884
	Blaupunkt	30717
	Blu:sens	31233
	Blue Parade	30571
	Blue Sky	30672, 30651, 30695, 30790, 30713, 30884, 32623
	Brainwave	30770
	Brandt	30503, 30651, 30551
	Broksonic	30695
	Bush	30672, 30717, 30730, 30831, 30713, 30884, 31383
	Byd:sign	30872
C	California Audio Labs	30490
	CCE	30730
	Centrex	30672
	Centrum	30675, 30713
	Changhong	30627, 31061
	Cinea	30831
	Cineral	30730
	Cinetec	30713, 30872
	Citizen	30695
	CJ Digital	31643, 32173
	Classic	30730
	Clatronic	30672, 30675, 31233
	Clayton	30713
	CMX	31643
	Coby	30730, 31107, 31628, 32494
	Codex	31233
	Compacks	31107
	Conia	30672
	Contel	32331
	Continental Edison	30831, 30872
	Craig	30831
	Crown	30770, 30713
	Cybercom	30831
	CyberHome	31023
	Cytron	30651
D	Daenyx	30872
	Daewoo	30770, 30872, 32187
	Dansai	30770
	Dantax	30539, 30790, 30713
	Datsun	31233
	Daytek	30872
	Dayton Audio	30872
	DCE	30831
	Decca	30770
	Denon	30490, 31634, 32258, 32748, 33698
	Denver	30672, 31107
	Dgtec	30672
	Diamond	30651, 30790
	Dicra	32173
	Digihome	30713
	DigiLogic	30713
	digiRED	30717
	Digital	32173
	DigitalMax	31738
	Digitor	30651
	Digitrex	30672
	DiK	30831
	Disney	30831, 30675, 31270
	DK Digital	30831, 31643, 32095
	DMTech	32173, 32187
	Dragon	30831
	DSE	30675, 32095
	Dual	30651, 30730, 30831, 30790, 30713, 30884, 31023
	Durabrand	30831, 30675, 30713, 31023
	DVS	30672
	Dynex	32596
E	E:max	30770, 31233, 31643
	ECC	30730
	Elfunk	30713, 30884
	Elin	30770
	Elite	32854
	Elta	30672, 30770, 31233, 31643, 32173
	Eltax	31233
	Emerson	30675, 32213
	Encore	30698
	EuroLine	30675, 31233, 31643
F	Fenner	30651
	Ferguson	30651, 30695, 30713, 30884
	Finlux	30672, 30741, 30770
	Firstline	30713
	Funai	30695, 30675
G	G-Hanz	32213
	G-HanzS	32213
	GE	30522, 30717
	GFM	30675
	Go Video	30744, 30741, 31044, 31075
	GoldStar	30741
	Goodmans	30651, 30730, 30790, 30713, 30884, 31383
	GoWell	31643
	GPX	30741
	Gradiente	30651
	Gran Prix	30831
	Grandin	30713, 31233, 32173
	Greenhill	30717

	Grundig	30539, 30651, 30551, 30695, 30790, 30713, 31643
	Grunkel	30770, 30831, 30790
	GVG	30770
H	H & B	30713, 31233, 32173
	Hanseatic	30741, 30790
	Harman/Kardon	31229, 32927
	HE	30730
	Hello Kitty	30831
	Henss	30713
	Hikona	31383
	Hitachi	30573, 30664, 30695, 30713, 30884
	Hitech	33523
	Hiteker	30672
	Höher	30651, 30831, 30713, 31643, 32173
	Home Electronics	30770, 30730
	Home Tech Industries	31107, 31643
	Humax	30646
	HYD	31233
	Hyundai	31061
I	Iekei	31107
	Ingersoll	31023
	Initial	30717
	Inno Hit	30713
	Insignia	30741, 30675, 32095, 32428, 32596
	Integra	30571, 30627, 31634, 31769, 32147
	Irradio	30646, 31233
	ISP	30695
	it's	30717
	ITT	31233
J	JDB	30730
	JMB	30695
	JNC	30672
	JVC	30503, 30539, 30623, 30867, 31164, 31602, 32365, 32855
	jWin	30672
K	Kansai	31107
	Kansas Technologies	31233
	Kawasaki	30790
	Kendo	30672, 30831, 30713
	Kennex	30770, 30713
	Kenwood	30490, 30534
	KeyPlug	31643
	Kiiro	30770
	King D'Home	30796
	King Vision	31643
	KLH	30717, 30790
	Koss	30651
	KXD	31107
L	Lazer	32173
	Leiker	30872
	Lenco	30651, 30770, 30713, 31383
	Lexicon	32545
	LG	30741, 30790, 31233, 31602
	Lifetec	30651, 30831
	LiteOn	31738
	LM	31643
	Lodos	30713, 30884
	Loewe	30539, 30741
	Logik	30713, 30884, 32594
	Logitech	32639
	Lumatron	30741, 30695, 30713
	Lunatron	30741
	Luxman	30573
	Luxor	30717, 30713, 30884
M	Magnasonic	30651
	Magnavox	30503, 30539, 30646, 30675, 30713, 31354, 31506
	Magnum	31382
	Majestic	31107
	Manhattan	30713
	Marantz	30539, 31627, 32414
	Mark	30713
	Marquant	30770, 31628
	Matsui	30672, 30651, 30695, 30713, 30884
	Maxim	30713, 30872
	MBO	30730
	McIntosh	31533
	MDS	30713
	Mecotek	30770
	Medion	30651, 30630, 30741, 30831, 31107, 31270
	MEI	30790
	Memorex	30695, 30831, 31270, 32213, 32331, 33153
	Memory	31383
	Metz	30571, 30713
	Micromaxx	30695
	Micromedia	30503, 30539
	Micromega	30539
	Microsoft	30522
	Microstar	30831
	Minax	30713
	Minoka	30770
	Mintek	30717
	Miray	33506
	Mitsubishi	31521, 30713, 33133
	Mizuda	30770
	Mustek	30730
	Muvid	31643, 32173
	Mx Onda	30651, 31383
	Mystral	30831
N	NAD	30741
	Naiko	30770
	NEC	30741, 30785, 31602
	Neom	31643
	Nesa	30717
	Nevir	30672, 30770, 30831
	Nexius	30790
	Noblex	31233
	Norcent	30872, 31107
	Nordmende	30831
	Nortek	31643, 32173
O	Ölevia	32331
	Olidata	30672
	Omni	30698
	One For All	32555
	Onkyo	30503, 30627, 31627, 31769, 32147, 32562
	Oppo	32545
	Orbit	30872, 31643
	Orion	30695, 30713, 31233
	Oritron	30651
	Ormond	30713
	Otic	31383
P	Pacific	30831, 30790, 30713
	Packard Bell	30831
	Palladium	30695, 30713
	Palsonic	30672
	Panasonic	30503, 30490, 31579, 31641, 31762, 32523, 32710, 32859, 33641, 33944, 33949
	Panda	30717, 31107
	Pelican Accessories	30533
	Philco	30790, 30675
	Philips	30503, 30539, 30646, 30675, 30713, 31267, 31340, 31354, 31506, 32056, 32084, 32334, 32434, 32789, 32791
	Pioneer	30571, 30142, 30631, 31531, 31571, 32442, 32854
	Play It	31643
	Polaroid	31061
	Polk Audio	30539
	Portland	30770
	Powerpoint	30872
	Presidian	30675, 31738
	Prinz	30831
	Prism	30831
	PrivateLabel	32616
	Pro Vision	30730, 31107
	Proceed	30672
	Proline	30672, 30651, 31643, 31738, 32082, 32616
	Proscan	30522
	Proson	30713
	Prosonic	32082, 32187
	Pye	30539, 30646
Q	QONIX	30790
	Qwestar	30651
R	Radionette	30741
	Radiotone	30713
	RCA	30522, 30571, 30717, 30790, 30822, 31769, 32213, 32587, 32592, 32594
	RE-BL	32555
	REC	30490
	Recco	30698
	Red	32213
	Red Star	30770, 31107
	Richmond	31233
	Roadstar	30672, 30730, 30713
	Ronin	30872
	Rotel	30623
	Rowa	30717, 30872
S	Saba	30651, 30551, 31643, 32173
	Saivod	30831
	Salora	30741
	Sampo	30698
	Samsung	30490, 30573, 30744, 33195, 32951, 32942, 32843, 32556, 32489, 32329, 32107, 32069, 31635, 31470, 31075, 31044, 30820, 30199
	Sansui	30695, 32082
	Sanyo	30695, 30713
	ScanMagic	30730
	Schaub Lorenz	30770, 31643, 32173
	Schneider	30539, 30646, 30651, 30831, 30790, 30713
	Schöntech	30713
	Scott	30672, 30651, 31233, 31383, 32173
	Seeltech	31643
	SEG	30713, 30872, 30884
	Semp	30503
	Shanghai	30672
	Sharp	30630, 30675, 30713, 32250, 32479, 32652, 33313, 33314
	Sherwood	30717, 30741, 30770, 31043
	Shinco	30717
	Shinsonic	30533
	Siemssen	31382
	Sigmatek	32139
	Silva Schneider	30741, 30831
	SilverCrest	32173
	Sistemas	30672
	Skantic	30539, 30713
	Skymaster	30730
	SM Electronic	30730
	Smart	30713
	Sogo	30672
	Sonashi	30831
	Soniq	30831
	Sontech	31383
	Sony	30533, 31533, 30864, 30772, 31033, 31070, 31431, 31516, 31536, 31633, 32132, 32178, 32180, 32504, 33519, 33939
	Sound Color	31233
	Soundwave	30713
	Spectra	30872
	SR Standard	30651, 30831
	Strato	31382
	Strong	30713
	Sunkai	30770
	Sunstech	30831, 32139
	Superior	31643, 32173
	Supersonic	33946
	Supratech	32139
	SVA	30672, 30717
	Swisstec	32187
	Sylvania	30630, 30675
	Symphonic	30675
	Sytech	30831, 32139
T	Tandberg	30713
	Targa	30741
	Tatung	30770
	TBoston	32139
	Tchibo	30741
	TCL	32587
	TCM	30741, 30790
	Teac	30571, 30717, 30741, 30790, 30675, 31383, 32139
	Technica	30713, 30884
	Technics	30490
	Technika	30770, 30831, 31383, 32187
	Technisson	30672
	Technosonic	30730
	TechnoStar	31643
	Techwood	30713
	TELE System	32173
	Telefunken	30551, 30790
	Teletech	30713, 30884
	Tensai	30651, 30770
	Tevion	30651, 31382
	Theta Digital	30571
	Thomson	30522, 30551, 30831
	Thule Audio	30551
	Tokai	30790, 30698, 31233
	Tokaido	30698
	Toshiba	30503, 30695, 31154, 31510, 31769, 32006, 32277, 32551, 32705, 33157
	TRANS-continents	30831, 30872, 31233

	Transonic	30730
	Trent	31643
	Trevi	30831
	TVE	30713
U	UMC	32187
	United	30695, 30730, 30675, 30713, 30884, 31233, 31383, 31643
	Universum	30741, 30790, 30713
	Urban Concepts	30503
V	Venturer	30790, 31769, 32082
	Vestel	30713, 30884
	Viore	32553
	Vizio	32563
	Voxson	30730, 30831
	Vtrek	32587
W	Waitec	30730, 31233
	Walkvision	30717
	Waltham	30713
	WB Electronics	32555
	Welkin	30831
	Wellington	30713
	Weltstar	30713
	Wharfedale	30790, 30698, 30713, 31383
	Wilson	30831, 31233
	Windsor	30713
	Windy Sam	30573
	Woxter	32139
X	X-View	31233
	Xbox	30522
	Xenius	30790
	Xiron	31383
	XMS	30770
Y	Yamada	30872, 32139
	Yamaha	30490, 30539, 30646, 30545, 30817, 31354, 32298, 32558
	Yamakawa	30872
	YBA	30872
	Yukai	30730
Z	Zenith	30503, 30741

Blu-ray Disc

D	Denon	32258, 32748, 33698
E	Elite	32854
F	Funai	30675
H	Harman/Kardon	32927
I	Insignia	30675, 32428, 32596
	Integra	32147
J	JVC	32365, 32855
L	Lexicon	32545
	LG	30741, 31602
M	Magnavox	30675
	Marantz	32414
	Memorex	32331
	Mitsubishi	33133
O	Ölevia	32331
	Onkyo	32147, 32562
	Oppo	32545
P	Panasonic	31641, 32523, 32710, 32859, 33641, 33944, 33949
	Philips	32084, 32434, 32789
	Pioneer	30142, 32442, 32854
S	Samsung	30199, 32951, 33195
	Sharp	32250, 32479, 32652, 33313, 33314
	Sony	31516, 32178, 32180, 32504, 33519, 33939
	Sylvania	30675
T	Toshiba	32551, 32705, 33157
V	Viore	32553
	Vizio	32563
Y	Yamaha	32298

DVD-R

A	Accurian	30675
	Aristona	30646
D	Denon	30490
	DigitalMax	31738
E	Emerson	30675
F	Funai	30675
G	Go Video	30741
	GPX	30741
H	Humax	30646
I	Irradio	30646
J	JVC	31164
L	LG	30741
	LiteOn	31738
	Loewe	30741
M	Magnavox	30646, 30675, 31506
	Medion	30741
	Mitsubishi	33133
P	Panasonic	30490, 31579, 32523, 32710, 32859, 33944, 33949
	Philips	30646, 31340, 31506
	Pioneer	30631
	Presidian	31738
	Proline	31738
	Pye	30646
R	RCA	30522
S	Samsung	30490, 31470, 31635, 32107, 32489, 32942
	Schneider	30646
	Sharp	30630, 30675, 32479, 33313, 33314
	Sony	31033, 31070, 31431, 31516, 31536, 31633, 32132, 32178, 32180, 33519, 33939
	Sylvania	30675
T	Targa	30741
	Thomson	30551
	Toshiba	31510, 32277, 32551
Y	Yamaha	30646
Z	Zenith	30741

HD-DVD

I	Integra	31769
L	LG	30741
O	Onkyo	31769
R	RCA	31769
T	Toshiba	31769

TV/DVD Combination

A	Acoustic Solutions	32082
	Akai	30695
	Akura	31383
	Alba	30695, 30884
	Audiosonic	31383
B	Black Diamond	30713, 30884
	Blue Sky	30713, 30884
	Broksonic	30695
	Bush	30713, 30884, 31383
C	Centrum	30713
	Citizen	30695
	Crown	30713
D	Dual	30713, 30884
E	Elfunk	30713, 30884
	Emerson	30675
F	Ferguson	30695, 30713, 30884
G	Goodmans	30713, 30884, 31383
	Grandin	30713
	Grundig	30539, 30695
H	Hikona	31383
	Hitachi	30713, 30884
L	Lenco	31383
	Logik	30713, 30884
	Luxor	30713, 30884
M	Matsui	30713, 30884
	Memory	31383
	Mx Onda	31383
O	Orion	30695
	Otic	31383
P	Philips	30539
	Proline	32082
	Prosonic	32082
S	Sansui	30695, 32082
	Scott	31383
	SEG	30713, 30884
	Sontech	31383
	Supersonic	33946
	Sylvania	30630, 30675
T	Teac	31383
	Technica	30713, 30884
	Technika	31383
	Teletech	30713, 30884
	Thomson	30551
	Toshiba	30695
U	United	30713, 30884, 31383
	Universum	30713
V	Venturer	32082
	Vestel	30884
W	Weltstar	30713
	Wharfedale	31383
X	Xiron	31383

TV/VCR/DVD Combination

F	Ferguson	30695
M	Matsui	30695
S	Sharp	30630

Audio group (4✻✻✻✻)

CD

A	Acoustic Research	40420
	Advantage	40032
	AH!	40157
	Aiwa	40157
	Arcam	40157
	Atoll Electronique	40157
	Audio Research	40157
	Audiolab	40157
	Audiomeca	40157
	Audioton	40157
	AVI	40157
B	Balanced Audio Technology	40157
	Burmester	40420
C	Cairn	40157
	California Audio Labs	40029, 40303
	Cambridge	40157
	Cambridge Audio	40157
	Carver	40157
	CCE	40157
	CDC	40420
	CEC	40420
	Cyrus	40157
D	Denon	40626, 40003, 42867, 42868
	DKK	40000
	DMX Electronics	40157
	Dual	40003
	Dynaco	40157
G	Garrard	40420
	Genexxa	40000, 40032
	Goldmund	40157
	Grundig	40157
H	Harman/Kardon	40157, 40173
	Hitachi	40032
I	Inkel	40180
	Integra	40101
J	JVC	40072
K	Kenwood	40626, 40157, 40028, 40036
	Krell	40157
L	Linn	40157
	Loewe	40157
	Lyngdorf	42766
M	Magnavox	40157
	Marantz	40626, 40029, 40157, 40180
	Matsui	40157
	MCS	40029
	Memorex	40032, 40180
	Meridian	40157
	Micromega	40157
	Miro	40000
	Mission	40157
	MTC	40420
	Myryad	40157
N	NAD	40000
	Naim	40157
	NSM	40157
O	Onkyo	40101
	Optimus	40000, 40032, 40420
P	Panasonic	40029, 40303, 40752
	Parasound	40420
	Philips	40626, 40157
	Pioneer	40032, 40101
	Polk Audio	40157
	Primare	40157
	Proceed	40420
	Proton	40157
Q	QED	40157
	Quad	40157
	Quasar	40029
R	Radiola	40157
	RCA	40032, 40420
	Realistic	40180, 40420
	Restek	40157
	Revox	40157
	Roksan	40420
	Rotel	40157, 40420

	Royal	40420
S	SAE	40157
	Sansui	40157
	SAST	40157
	Sharp	40180
	Sherwood	40180
	Siemens	40157
	Silsonic	40036
	Simaudio	40157
	Sonic Frontiers	40157
	Sony	40490, 40000, 41364, 40185
	Sylvania	40157
T	TAG McLaren	40157
	Tandy	40032
	Tangent	43304
	Tascam	40420
	Teac	40180, 40420
	Technics	40029, 40303
	Thorens	40157
	Thule Audio	40157
	Tokai	40420
	Traxdata	40626
U	Universum	40157
V	Victor	40072
W	Wards	40000, 40032, 40157
Y	Yamaha	40490, 40032, 40036
Z	Zonda	40157

CD-R

D	Denon	40626, 42868
J	JVC	40072
K	Kenwood	40626
M	Marantz	40626
P	Philips	40626
R	RCA	40420
S	Sony	40000, 41364
T	Teac	40420

License

This section describes software license used for this unit. To maintain the correct content, the original (English) is used.

❑ Boost

http://www.boost.org/
Boost Software License - Version 1.0 - August 17th, 2003

Permission is hereby granted, free of charge, to any person or organization obtaining a copy of the software and accompanying documentation covered by this license (the "Software") to use, reproduce, display, distribute, execute, and transmit the Software, and to prepare derivative works of the Software, and to permit third-parties to whom the Software is furnished to do so, all subject to the following:

The copyright notices in the Software and this entire statement, including the above license grant, this restriction and the following disclaimer, must be included in all copies of the Software, in whole or in part, and all derivative works of the Software, unless such copies or derivative works are solely in the form of machine-executable object code generated by a source language processor.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE AND NON-INFRINGEMENT. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR ANYONE DISTRIBUTING THE SOFTWARE BE LIABLE FOR ANY DAMAGES OR OTHER LIABILITY, WHETHER IN CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

❑ Expat

http://www.jclark.com/xml/expat.html

Expat License. Copyright (c) 1998, 1999, 2000 Thai Open Source Software Center Ltd

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

❑ FastDelegate

http://www.codeproject.com/KB/cpp/FastDelegate.aspx

THE WORK (AS DEFINED BELOW) IS PROVIDED UNDER THE TERMS OF THIS CODE PROJECT OPEN LICENSE ("LICENSE"). THE WORK IS PROTECTED BY COPYRIGHT AND/OR OTHER APPLICABLE LAW. ANY USE OF THE WORK OTHER THAN AS AUTHORIZED UNDER THIS LICENSE OR COPYRIGHT LAW IS PROHIBITED.

BY EXERCISING ANY RIGHTS TO THE WORK PROVIDED HEREIN, YOU ACCEPT AND AGREE TO BE BOUND BY THE TERMS OF THIS LICENSE. THE AUTHOR GRANTS YOU THE RIGHTS CONTAINED HEREIN IN CONSIDERATION OF YOUR ACCEPTANCE OF SUCH TERMS AND CONDITIONS. IF YOU DO NOT AGREE TO ACCEPT AND BE BOUND BY THE TERMS OF THIS LICENSE, YOU CANNOT MAKE ANY USE OF THE WORK.

1. Definitions.
   a. "Articles" means, collectively, all articles written by Author which describes how the Source Code and Executable Files for the Work may be used by a user.
   b. "Author" means the individual or entity that offers the Work under the terms of this License.
   c. "Derivative Work" means a work based upon the Work or upon the Work and other pre-existing works.
   d. "Executable Files" refer to the executables, binary files, configuration and any required data files included in the Work.
   e. "Publisher" means the provider of the website, magazine, CD-ROM, DVD or other medium from or by which the Work is obtained by You.
   f. "Source Code" refers to the collection of source code and configuration files used to create the Executable Files.
   g. "Standard Version" refers to such a Work if it has not been modified, or has been modified in accordance with the consent of the Author, such consent being in the full discretion of the Author.
   h. "Work" refers to the collection of files distributed by the Publisher, including the Source Code, Executable Files, binaries, data files, documentation, whitepapers and the Articles.
   i. "You" is you, an individual or entity wishing to use the Work and exercise your rights under this License.
2. Fair Use/Fair Use Rights. Nothing in this License is intended to reduce, limit, or restrict any rights arising from fair use, fair dealing, first sale or other limitations on the exclusive rights of the copyright owner under copyright law or other applicable laws.
3. License Grant. Subject to the terms and conditions of this License, the Author hereby grants You a worldwide, royalty-free, non-exclusive, perpetual (for the duration of the applicable copyright) license to exercise the rights in the Work as stated below:
   a. You may use the standard version of the Source Code or Executable Files in Your own applications.
   b. You may apply bug fixes, portability fixes and other modifications obtained from the Public Domain or from the Author. A Work modified in such a way shall still be considered the standard version and will be subject to this License.
   c. You may otherwise modify Your copy of this Work (excluding the Articles) in any way to create a Derivative Work, provided that You insert a prominent notice in each changed file stating how, when and where You changed that file.
   d. You may distribute the standard version of the Executable Files and Source Code or Derivative Work in aggregate with other (possibly commercial) programs as part of a larger (possibly commercial) software distribution.
   e. The Articles discussing the Work published in any form by the author may not be distributed or republished without the Author's consent. The author retains copyright to any such Articles. You may use the Executable Files and Source Code pursuant to this License but you may not repost or republish or otherwise distribute or make available the Articles, without the prior written consent of the Author.

   Any subroutines or modules supplied by You and linked into the Source Code or Executable Files this Work shall not be considered part of this Work and will not be subject to the terms of this License.
4. Patent License. Subject to the terms and conditions of this License, each Author hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable (except as stated in this section) patent license to make, have made, use, import, and otherwise transfer the Work.
5. Restrictions. The license granted in Section 3 above is expressly made subject to and limited by the following restrictions:
   a. You agree not to remove any of the original copyright, patent, trademark, and attribution notices and associated disclaimers that may appear in the Source Code or Executable Files.
   b. You agree not to advertise or in any way imply that this Work is a product of Your own.
   c. The name of the Author may not be used to endorse or promote products derived from the Work without the prior written consent of the Author.
   d. You agree not to sell, lease, or rent any part of the Work. This does not restrict you from including the Work or any part of the Work inside a larger software distribution that itself is being sold. The Work by itself, though, cannot be sold, leased or rented.
   e. You may distribute the Executable Files and Source Code only under the terms of this License, and You must include a copy of, or the Uniform Resource Identifier for, this License with every copy of the Executable Files or Source Code You distribute and ensure that anyone receiving such Executable Files and Source Code agrees that the terms of this License apply to such Executable Files and/or Source Code. You may not offer or impose any terms on the Work that alter or restrict the terms of this License or the recipients' exercise of the rights granted hereunder. You may not sublicense the Work. You must keep intact all notices that refer to this License and to the disclaimer of warranties. You may not distribute the Executable Files or Source Code with any technological measures that control access or use of the Work in a manner inconsistent with the terms of this License.
   f. You agree not to use the Work for illegal, immoral or improper purposes, or on pages containing illegal, immoral or improper material. The Work is subject to applicable export laws. You agree to comply with all such laws and regulations that may apply to the Work after Your receipt of the Work.
6. Representations, Warranties and Disclaimer. THIS WORK IS PROVIDED "AS IS", "WHERE IS" AND "AS AVAILABLE", WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES OR CONDITIONS OR GUARANTEES. YOU, THE USER, ASSUME ALL RISK IN ITS USE, INCLUDING COPYRIGHT INFRINGEMENT, PATENT INFRINGEMENT, SUITABILITY, ETC. AUTHOR EXPRESSLY DISCLAIMS ALL EXPRESS, IMPLIED OR STATUTORY WARRANTIES OR CONDITIONS, INCLUDING WITHOUT LIMITATION, WARRANTIES OR CONDITIONS OF MERCHANTABILITY, MERCHANTABLE QUALITY OR FITNESS FOR A PARTICULAR PURPOSE, OR ANY WARRANTY OF TITLE OR NON-INFRINGEMENT, OR THAT THE WORK (OR ANY PORTION THEREOF) IS CORRECT, USEFUL, BUG-FREE OR FREE OF VIRUSES. YOU MUST PASS THIS DISCLAIMER ON WHENEVER YOU DISTRIBUTE THE WORK OR DERIVATIVE WORKS.
7. Indemnity. You agree to defend, indemnify and hold harmless the Author and the Publisher from and against any claims, suits, losses, damages, liabilities, costs, and expenses (including reasonable legal or attorneys??? fees) resulting from or relating to any use of the Work by You.
8. Limitation on Liability. EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW, IN NO EVENT WILL THE AUTHOR OR THE PUBLISHER BE LIABLE TO YOU ON ANY LEGAL THEORY FOR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL, PUNITIVE OR EXEMPLARY DAMAGES ARISING OUT OF THIS LICENSE OR THE USE OF THE WORK OR OTHERWISE, EVEN IF THE AUTHOR OR THE PUBLISHER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
9. Termination.
   a. This License and the rights granted hereunder will terminate automatically upon any breach by You of any term of this License. Individuals or entities who have received Derivative Works from You under this License, however, will not have their licenses terminated provided such individuals or entities remain in full compliance with those licenses. Sections 1, 2, 6, 7, 8, 9, 10 and 11 will survive any termination of this License.
   b. If You bring a copyright, trademark, patent or any other infringement claim against any contributor over infringements You claim are made by the Work, your License from such contributor to the Work ends automatically.
   c. Subject to the above terms and conditions, this License is perpetual (for the duration of the applicable copyright in the Work). Notwithstanding the above, the Author reserves the right to release the Work under different license terms or to stop distributing the Work at any time; provided, however that any such election will not serve to withdraw this License (or any other license that has been, or is required to be, granted under the terms of this License), and this License will continue in full force and effect unless terminated as stated above.
10. Publisher. The parties hereby confirm that the Publisher shall not, under any circumstances, be responsible for and shall not have any liability in respect of the subject matter of this License. The Publisher makes no warranty

whatsoever in connection with the Work and shall not be liable to You or any party on any legal theory for any damages whatsoever, including without limitation any general, special, incidental or consequential damages arising in connection to this license. The Publisher reserves the right to cease making the Work available to You at any time without notice

11. Miscellaneous

a. This License shall be governed by the laws of the location of the head office of the Author or if the Author is an individual, the laws of location of the principal place of residence of the Author.

b. If any provision of this License is invalid or unenforceable under applicable law, it shall not affect the validity or enforceability of the remainder of the terms of this License, and without further action by the parties to this License, such provision shall be reformed to the minimum extent necessary to make such provision valid and enforceable.

c. No term or provision of this License shall be deemed waived and no breach consented to unless such waiver or consent shall be in writing and signed by the party to be charged with such waiver or consent.

d. This License constitutes the entire agreement between the parties with respect to the Work licensed herein. There are no understandings, agreements or representations with respect to the Work not specified herein. The Author shall not be bound by any additional provisions that may appear in any communication from You. This License may not be modified without the mutual written agreement of the Author and You

❑ libogg

http://www.xiph.org/ogg/

Copyright (c) 2002, Xiph.org Foundation

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

❑ libvorbis

http://www.xiph.org/vorbis/

Copyright (c) 2002-2004 Xiph.org Foundation

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

❑ Tremolo

http://wss.co.uk/pinknoise/tremolo

Copyright (C) 2002-2009 Xiph.org Foundation Changes Copyright (C) 2009-2010 Robin Watts for Pinknoise Productions Ltd

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

❑ Tremor

http://wiki.xiph.org/index.php/Tremor

Copyright (c) 2002, Xiph.org Foundation

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

❑ Mersenne Twister

http://www.math.sci.hiroshima-u.ac.jp/~m-mat/MT/MT2002/CODES/mt19937ar.c

Copyright (C) 1997 - 2002, Makoto Matsumoto and Takuji Nishimura,
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. The names of its contributors may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

❑ zlib

http://www.zlib.net/

zlib.h – interface of the 'zlib' general purpose compression library version 1.2.3, July 18th, 2005

Copyright (C) 1995-2004 Jean-loup Gailly and Mark Adler

This software is provided 'as-is', without any express or implied warranty. In no event will the authors be held liable for any damages arising from the use of this software.

Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the following restrictions:

1. The origin of this software must not be misrepresented; you must not claim that you wrote the original software. If you use this software in a product, an acknowledgment in the product documentation would be appreciated but is not required.
2. Altered source versions must be plainly marked as such, and must not be misrepresented as being the original software.
3. This notice may not be removed or altered from any source distribution.

Jean-loup Gailly jloup@gzip.org, Mark Adler madler@alumni.caltech.edu

❑ cURL

http://curl.haxx.se

COPYRIGHT AND PERMISSION NOTICE

Copyright (c) 1996 - 2011, Daniel Stenberg, <daniel@haxx.se>.

All rights reserved.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization of the copyright holder.

❑ c-ares

http://c-ares.haxx.se

Copyright 1998 by the Massachusetts Institute of Technology.

Permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of M.I.T. not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission. M.I.T. makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

License Information for the Software Used in the Unit

About GPL (GNU-General Public License), LGPL (GNU Lesser General Public License) License

This product uses GPL/LGPL software and software made by other companies.

After you purchase this product, you may procure, modify or distribute the source code of the GPL/LGPL software that is used in the product.

DENON provides the source code based on the GPL and LPGL licenses at the actual cost upon your request to our customer service center. However, note that we make no guarantees concerning the source code. Please also understand that we do not offer support for the contents of the source code.

Dimensions

Unit : in. (mm)

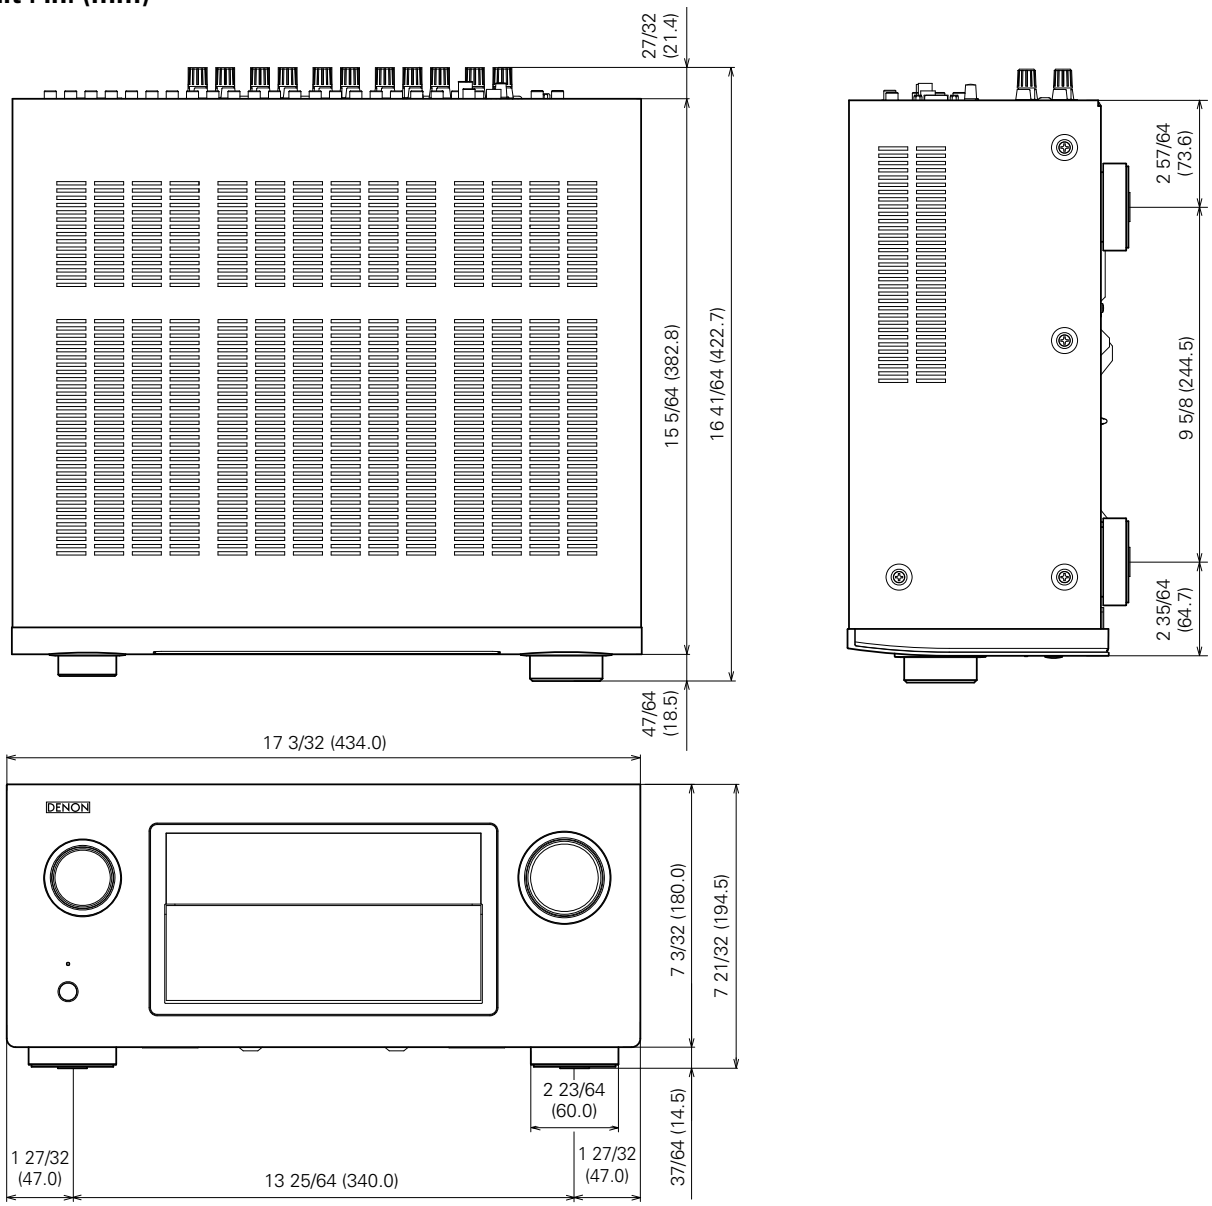

Weight : 36 lbs 6 oz (16.5 kg)

DENON

www.denon.com

V01

D&M Holdings Inc.
3520 10173 10AD