



Smart **Wi-Fi®** camera

Outdoor wired


NHC-OF10

User guide


Thank you for purchasing the **Smart Wi-Fi® fixed camera for outdoor spaces** from Nexxt Home. We are excited to be a part of making your life easier and safer, and to bring peace of mind for the whole family at home.

Product overview


Front view

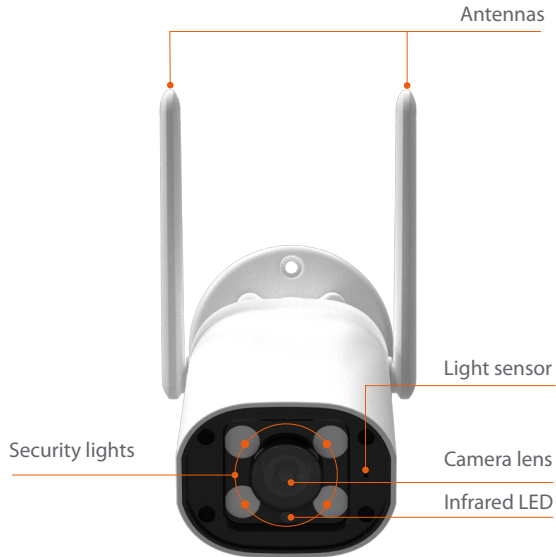



Bottom view

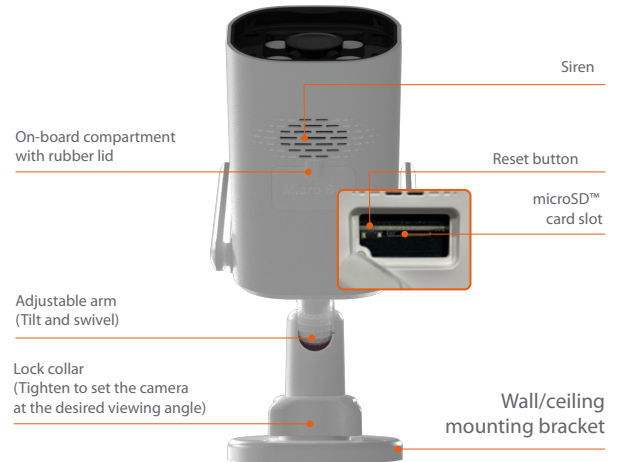

Lateral view

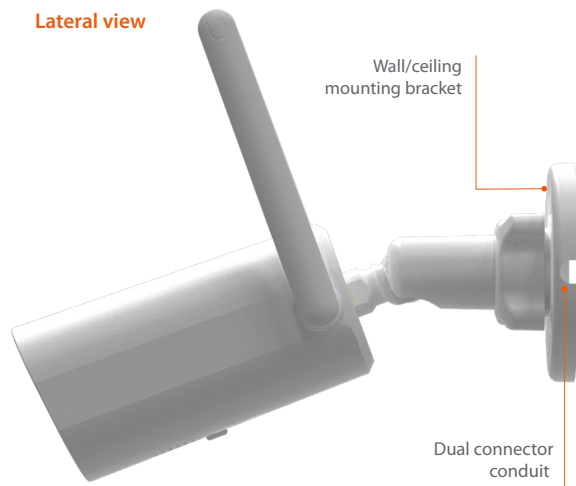

Rear view (dismounted)

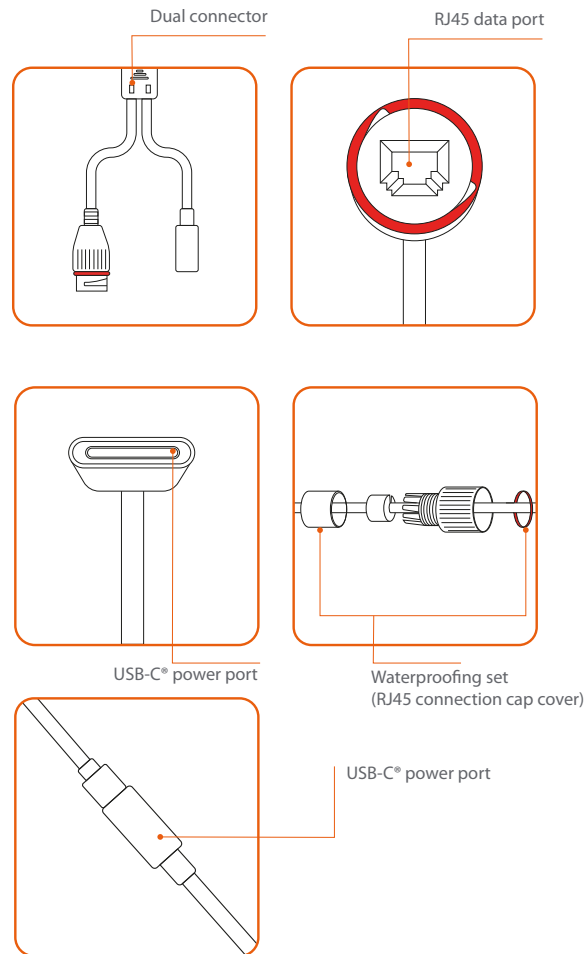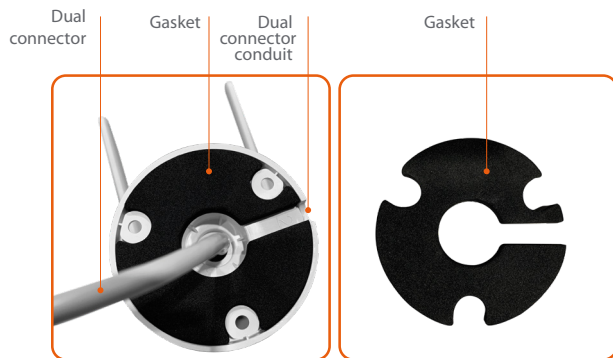

Package content

- Smart Wi-Fi camera with integrated wall/ceiling mounting bracket and dual connector (USB-C® power port + RJ45 data port)
- USB-C® power cable
- Power adapter and its rubber protector
- RJ45 connection waterproofing kit
- Gasket
- Wall screws (x3)
- Wall anchors (x 3)
- Quick start guide

How to power and connect the camera to the internet.

This wired smart Wi-Fi camera comes with an integrated dual connector with two ports, each with a different function:

Input power	Type of connector	Type of internet connection
USB-C® PD port	USB-C® power cable	Powers the camera
RJ45 data port	RJ45 terminated UTP cable *	Optionally allows the device to be connected to an Ethernet-enabled LAN in order to enhance Internet access and boost high-speed data transfer when the camera is too far from the Wi-Fi router.

*The RJ45 terminated UTP cable is not provided.

How to insert the microSD™ card

The Wi-Fi camera comes with a built-in card slot located at the bottom of the unit, which supports a microSD™ card of up to 128GB.

Once you insert the storage card, the camera will automatically start recording and storing videos on that memory. This type of card will normally store about one month of continuous video footage.



Step 1: Gently lift the rubber cover protecting the compartment at the bottom of the camera.

Step 2: Insert the microSD™ card. Make sure you insert it in the correct direction inside the slot.

Step 3: Put the cover back by pushing it down with your thumb until it tightly closes the compartment.


Note: failure to complete step 3 can lead to water damage on the device.

Installing the Nexxt Home App

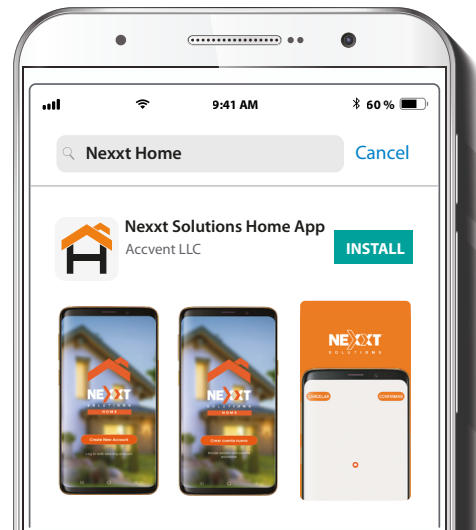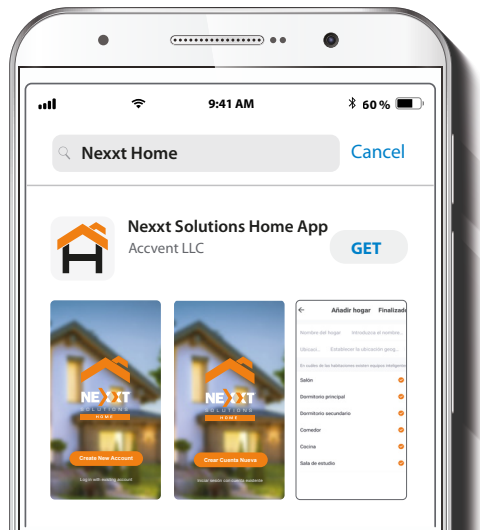

Download the **Nexxt Home app** from Google Play or the Apple App Store. Then follow the next steps.


Step 1

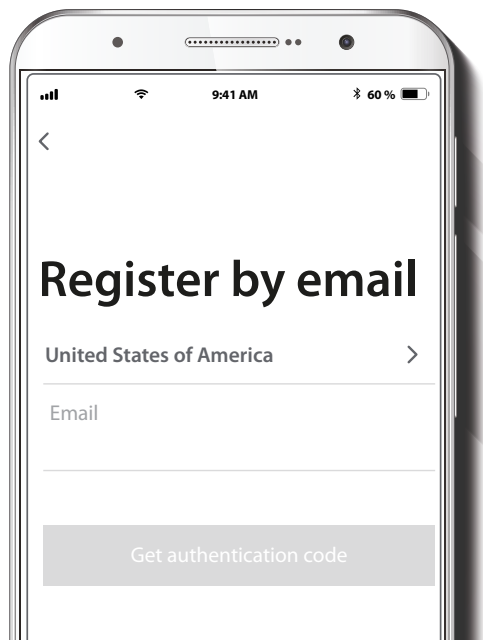

A smartphone mockup displaying the 'Register by email' screen. The status bar at the top shows signal strength, Wi-Fi, 9:41 AM, and 60% battery. The screen has a back arrow in the top left. The main heading is 'Register by email'. Below it is a dropdown menu for 'United States of America' with a right arrow. Underneath is an 'Email' input field. At the bottom is a grey button labeled 'Get authentication code'.

Register by email. Fill in the required fields.


Step 2

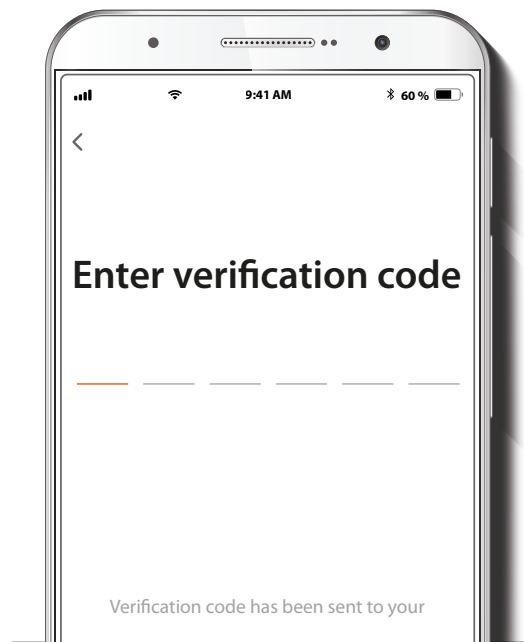

A smartphone mockup displaying the 'Enter verification code' screen. The status bar at the top shows signal strength, Wi-Fi, 9:41 AM, and 60% battery. The screen has a back arrow in the top left. The main heading is 'Enter verification code'. Below it is a five-digit input field with dashed lines and an orange cursor on the first digit. At the bottom, a message states 'Verification code has been sent to your'.


Enter the verification code you received.

Step 3

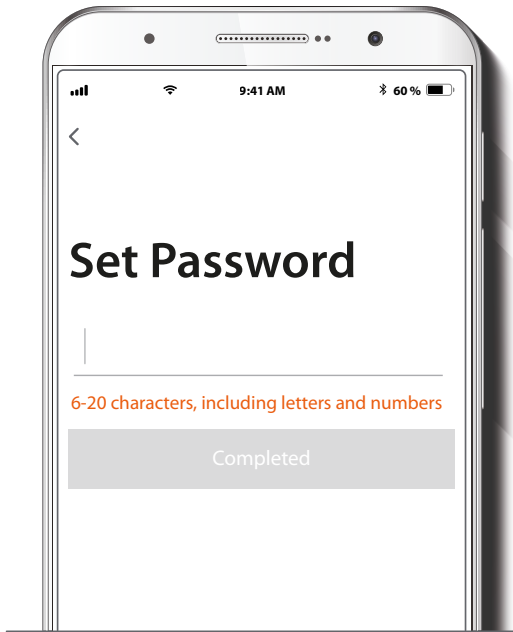

Create a new password and then select **Completed**.


Step 4

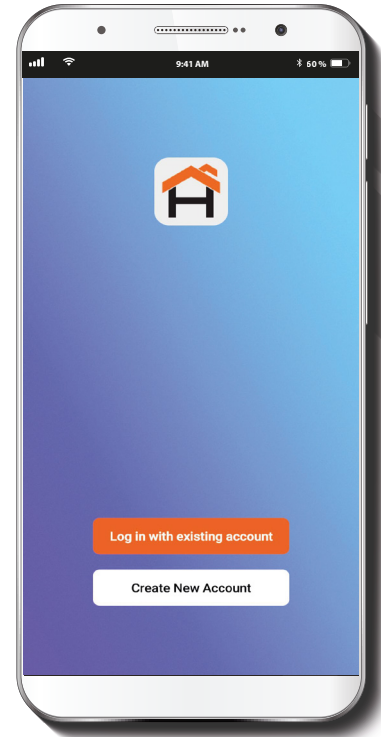

Your Nexxt Home account has been created successfully.


Adding a device to your Nexxt Home account

Step 1

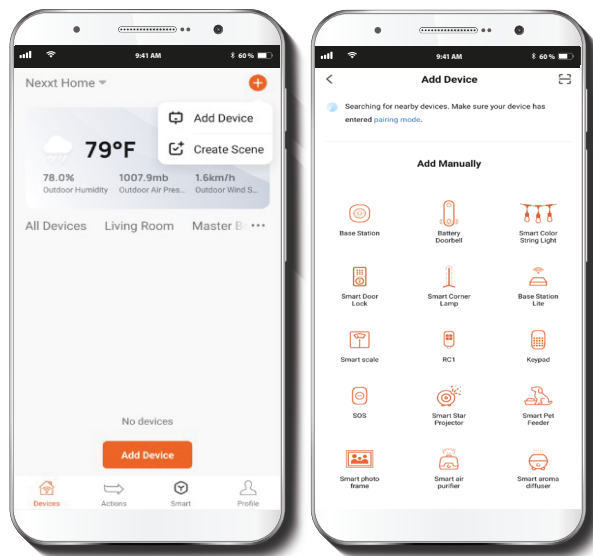


Select "Add device" or the + icon to add the device, followed by the smart camera.

Step 2

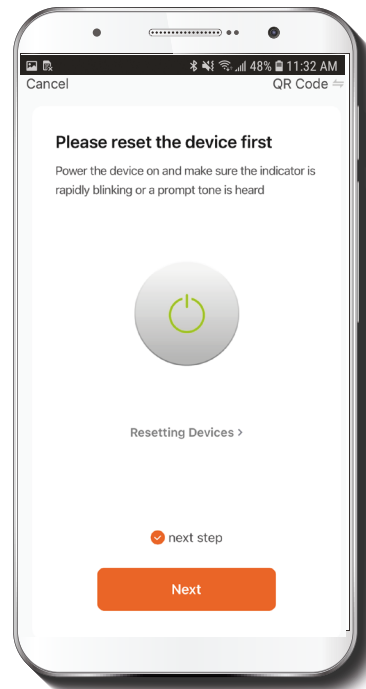


After you click on the smart camera icon, you'll see this page. Click on "Next".

Step 3

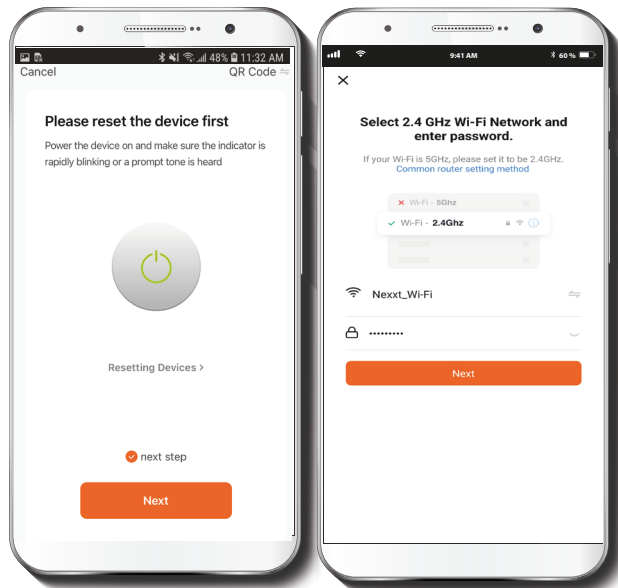

You must connect to a **2.4GHz Wi-Fi network**. Enter your network password.


Step 4

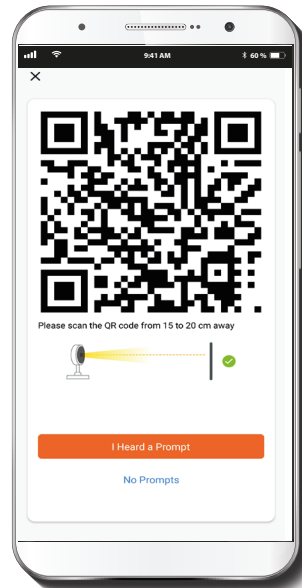


Scan the QR code from your mobile device with the smart camera. Once you hear the tone, click on the **I heard a prompt** button.

If you experience any issues, reset the camera. If a **registered account** added the camera through the app, then another user will be prevented from setting up that camera in a different account, unless permission is granted through the **Share access** option.

Step 5

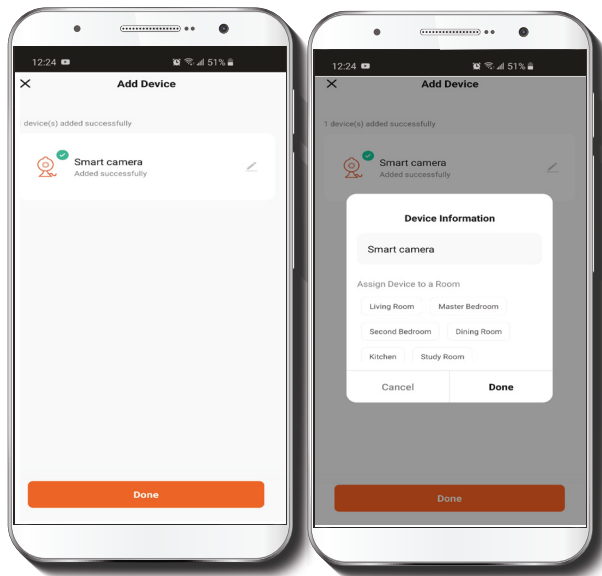

Camera settings

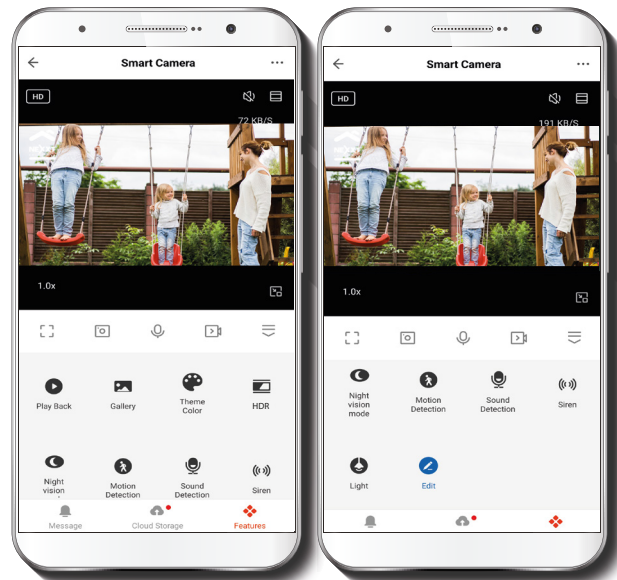

If pairing is successful, the notification **Device added successfully** will be displayed on the screen. Click on the pencil icon to rename the camera, and then select **Save** to store your settings.



Full screen. Switches to full screen view of the camera live feed



Screenshot. Take a still from the camera feed.



Speak through the camera. Allows two-way voice communication through the camera.



Record: Starts recording a video.



Drop-down menu.



Playback: If a microSD™ is installed, you can use the playback function to watch recordings.



Gallery. Presents a list of all recorded videos and photos stored locally or in the cloud.



Theme color. Allows users to customize the appearance of the interface by switching to either light mode or dark mode. The latter is recommended for battery saving.



HDR: The High Dynamic Range technology improves the quality of scenes by enhancing the brightness and contrast ratios of the screen.



Night vision mode. Allows the camera to automatically turn on the infrared light to offset insufficient light conditions.



Device volume. Controls the volume of the camera speaker during two-way audio communications between phone and camera.



Motion detection settings. Turns the motion detection feature on and off. Changes the sensitivity to low, medium, or high.



Siren: Activates or deactivates the alarm.



Light: Turns the light on and off.



Edit: Use it to set up shortcuts to control other compatible smart devices.



Messages: A quick way to view the list of push notifications sent to your mobile device.




Cloud storage: Allows you to purchase a cloud storage service.



Features: Opens a menu with additional camera features.

Settings

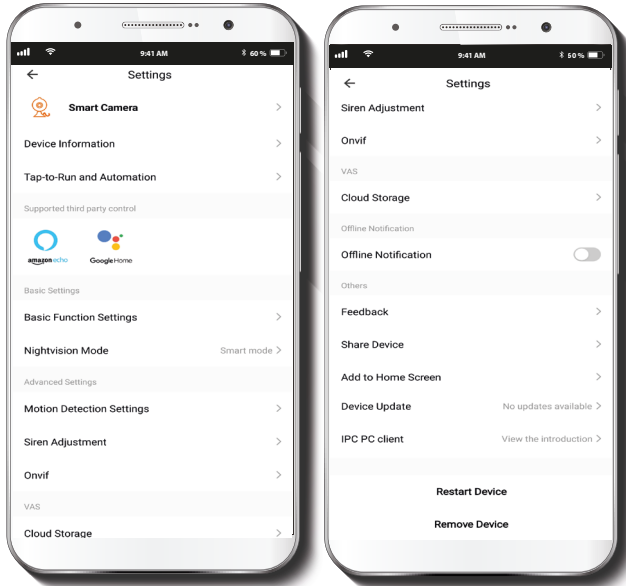


Device name: It allows the user to rename the device. To change the default name, click on device name.

Device information: This menu will display information about the camera.


Tap-To-Run and Automation: Links the smart camera with other smart products to automatically control them through a customized command.

Device name

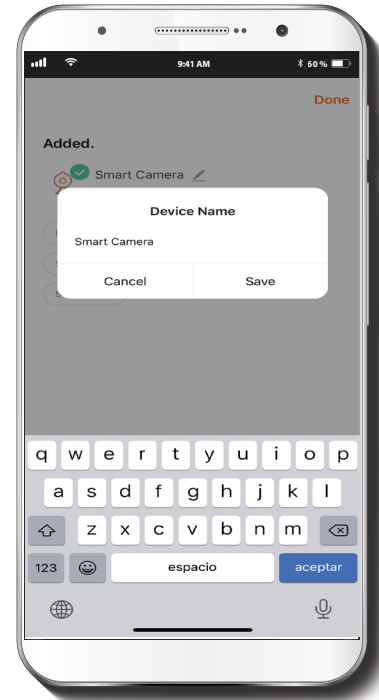


It allows the user to rename the device. To change the default name, click on device name.

Device information

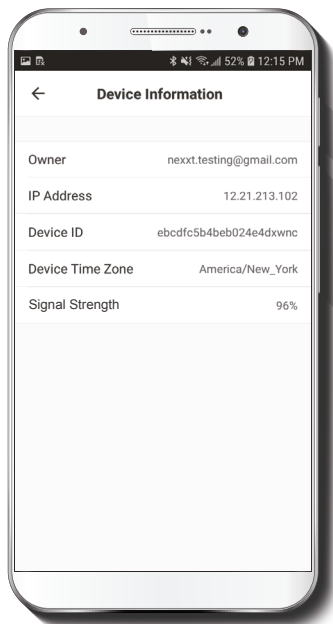

This menu will display information about the camera.

Basic function settings

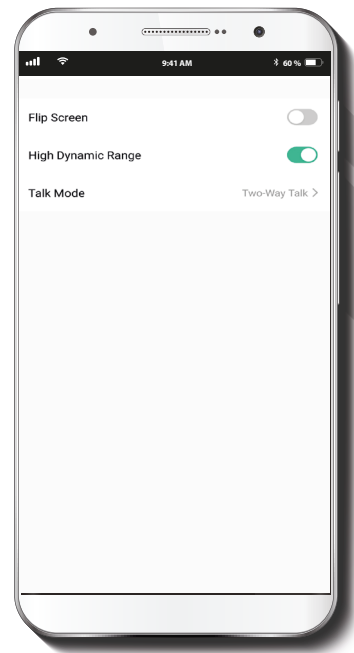


Flip screen: Flips the image 180 degrees if the camera is mounted upside down.

High dynamic range: Enhances the image rendered by the camera, with a wider range of colors, brighter whites, and deeper blacks, which allows you to perceive more details in the darkest and brightest areas of the screen.


Talk mode: Allows either one-way or two-way communication.

IR Night Vision:

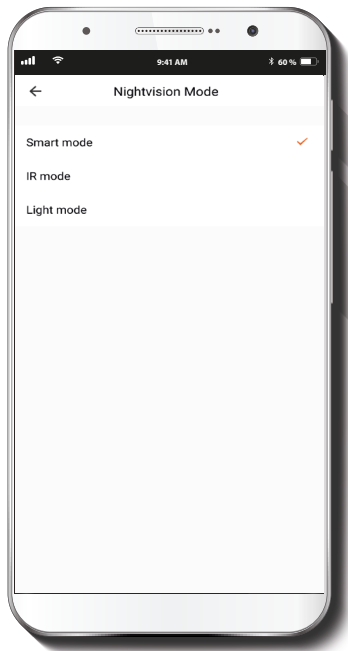


Night vision: Select the night vision configuration settings between the Smart, Infrared and Light modes.

Motion detection settings

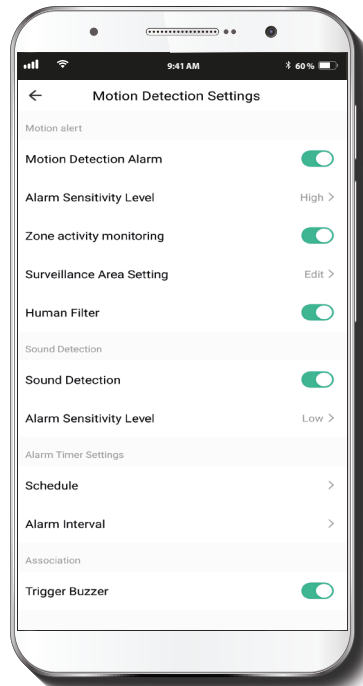


Motion detection settings: Turn the motion detection alarm on and off.
Change the sensitivity between low, medium, or high.
Activate or deactivate the human body detection filter.

Device sound adjustment

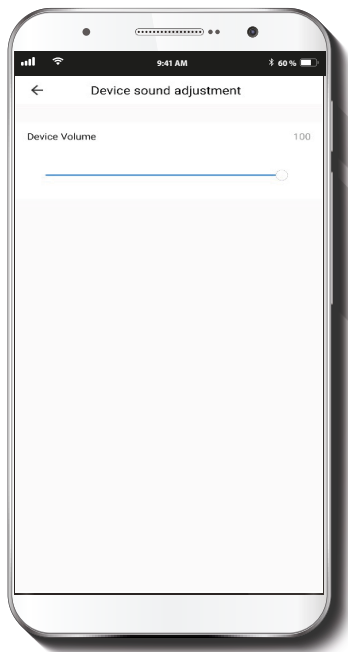


Set up the volume of the camera speaker for two-way audio communications between phone and camera.

ONVIF

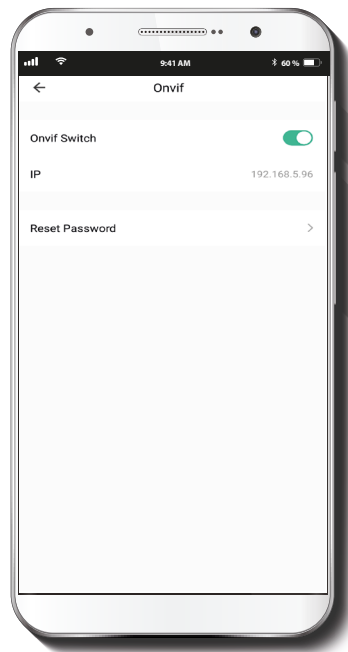

Activate the ONVIF function to allow the camera to work and communicate with devices from multiple manufacturers.

Memory card settings

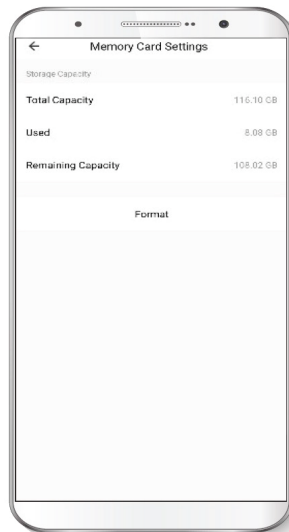

If you are using a memory card, this feature shows you the following options:


Total capacity: Shows the capacity of the microSD™ card.

Used: Shows how much memory has been used.

Remaining capacity: Shows how much space is left on the microSD™ card.

Format: This will format the microSD™ card to be used on the camera.

Recording settings

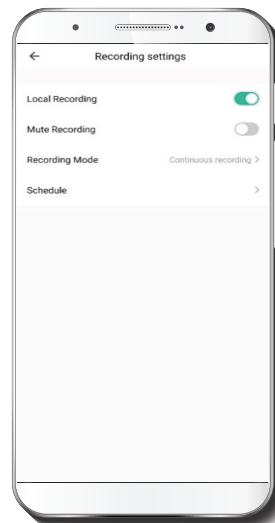

If you are using a memory card, this feature shows you the following options:


Local recording: You can set the camera to constantly record 24/7. How much it records, depends on the size of the microSD™ card.

Mute recording: Turn the camera microphone on or off while recording.

Recording mode: You can switch between Event recording and Continuous recording.


Schedule: Allows you to program when to turn the recording on or off.

Cloud storage

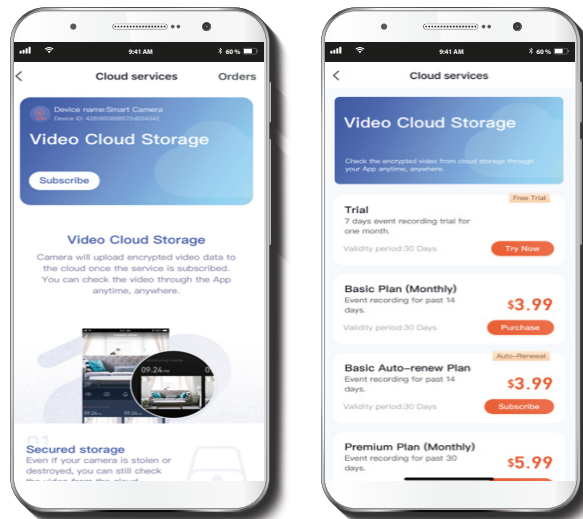

Cloud storage: Provides the option to purchase a selection of cloud storage services.


Offline notification

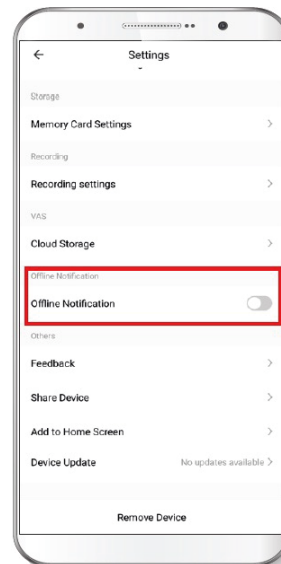

You can enable and disable this feature. When activated, the app will trigger a notification 30 minutes after the device goes offline due to a power outage or any other reason.


Feedback: Use this feature to let us know of any issues you may find setting up the product.

Share device

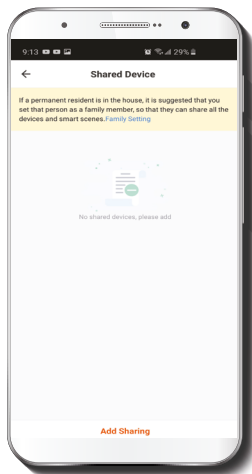

Use this feature to give friends or relatives access to your smart camera. After clicking on Share device, tap Add sharing. Then enter the e-mail address of your friend. Tap Done. With this, the newly added users will have access to your smart camera.

Note: Family or friends will need their own Nexxt Home account to access the device.

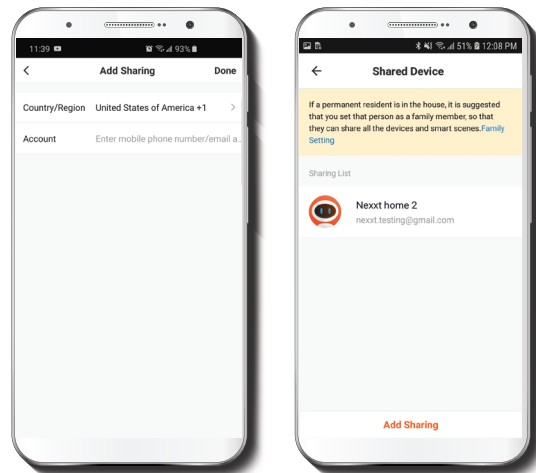

To remove a user on iOS, slide the name to the left. On Android, press and hold the name of the person you wish to delete. When the pop-up box comes up, select Delete. A Notification confirming that you no longer want to share the device with the selected user will be displayed. Tap Confirm to permanently remove the user.

Add home screen: This feature adds a shortcut of the device to the main screen on your phone.

Device update: This feature allows you to see a record of updates we perform on our firmware.

Remove device: Use this feature to unpair the device from your Nexxt Home account.



FCC ID: X4YHACOF10

Nexxt® is a registered trademark. All rights reserved. Amazon, Alexa, and all related logos are trademarks of Amazon.com, Inc. or its affiliates. Google, Android™, and Google Play are trademarks of Google LLC. SD™ and microSD™ are trademarks owned by SD-3C, LLC. USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum. Wi-Fi® is a registered trademark of Wi-Fi Alliance®. All other trademarks and brand names are the property of their respective owners. Any mention of such is intended for identification purposes only, and therefore shall not be construed as a claim to any rights pertaining to, endorsement or sponsorship by, or affiliation with, those brands. Made in China.

Guía del usuario

Gracias por adquirir nuestra **cámara inteligente Wi-Fi® para exteriores** de Nexxt Home. Nos complace contribuir a hacer su vida más fácil y segura, y de brindar tranquilidad a toda la familia en casa.

Descripción del producto


Vista frontal




Vista inferior




Vista lateral

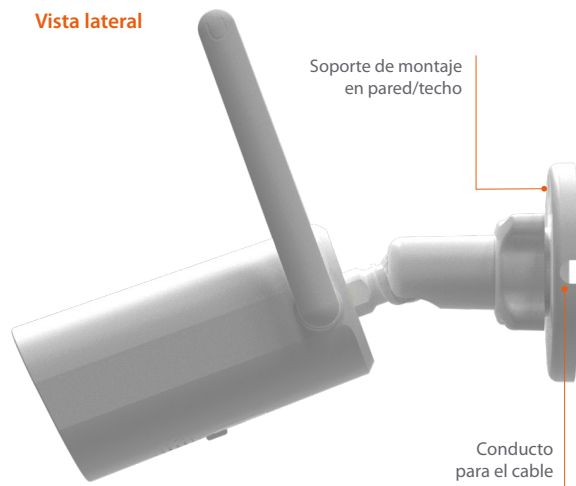


Vista posterior (desmontada)

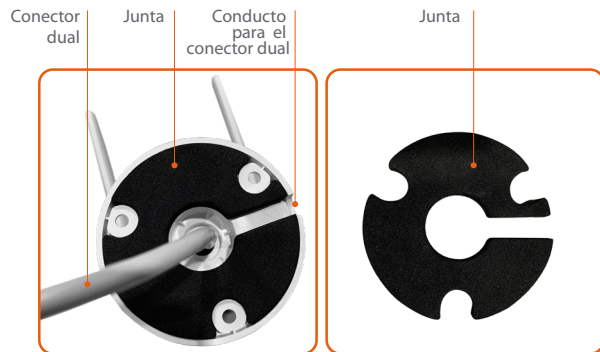


Conector dual

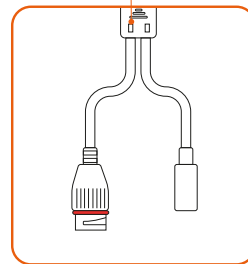



Puerto de datos RJ45

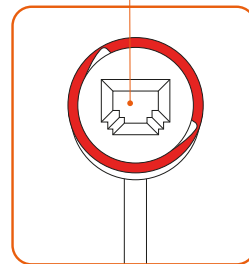

Puerto de datos RJ45

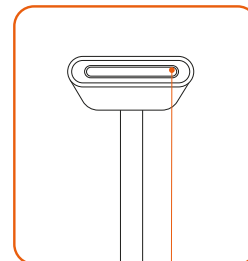

Puerto de alimentación USB-C®

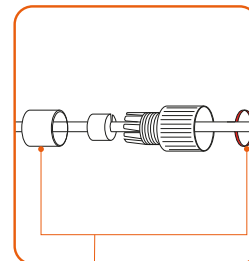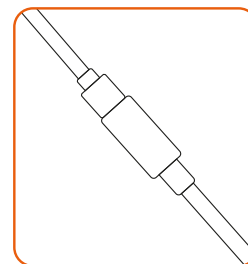

Set de impermeabilización (Cubierta para la conexión RJ45)

Puerto de alimentación USB-C®

Contenido del empaque

- Cámara Wi-Fi inteligente con soporte de montaje en pared/techo y conector dual (puerto de alimentación USB-C® + puerto de datos RJ45) integrados
- Cable de alimentación USB-C®
- Adaptador de corriente y su protector de goma
- Kit de impermeabilización para la conexión RJ45
- Junta
- Tornillos de pared (x3)
- Anclajes de pared (x 3)
- Guía de inicio rápido

Cómo suministrar energía a la cámara y conectarla a la red inalámbrica.

Esta cámara Wi-Fi inteligente con cable viene con un conector dual integrado con dos puertos, cada uno con una función diferente:

Alimentación	Tipo de conector	Tipo de conexión a Internet
Puerto de alimentación USB-C® PD	Cable de alimentación USB-C®	Para alimentar de energía a la cámara.
Puerto de datos RJ45	Cable UTP con terminación RJ45 *	Opcionalmente, permite conectar el dispositivo a una LAN habilitada para Ethernet con el fin de mejorar el acceso a Internet y aumentar la transferencia de datos de alta velocidad cuando la cámara está demasiado lejos del router Wi-Fi.

Cómo insertar la tarjeta microSD™

La cámara Wi-Fi incorpora una ranura para ubicada en la parte inferior de la unidad, que admite una tarjeta microSD™ de hasta 128 GB.

Una vez que inserte la tarjeta de memoria, la cámara comenzará a grabar y almacenar videos en ella de forma automática. Este tipo de tarjeta normalmente almacenará aproximadamente un mes de grabaciones de vídeo.

Paso 1: Levante con cuidado la cubierta de goma que protege el compartimento en la parte inferior de la cámara.



Paso 2: Inserte la tarjeta microSD™. Asegúrese de insertarla en la dirección correcta dentro de la ranura.

Paso 3: Vuelva a colocar la tapa empujándola hacia abajo con el pulgar hasta que cierre herméticamente el compartimento.

Nota: No completar el paso 3 puede provocar daños por filtración de agua en el dispositivo.


* No se incluye el cable UTP con terminación RJ45.

Instalación de la aplicación Nexxt Home

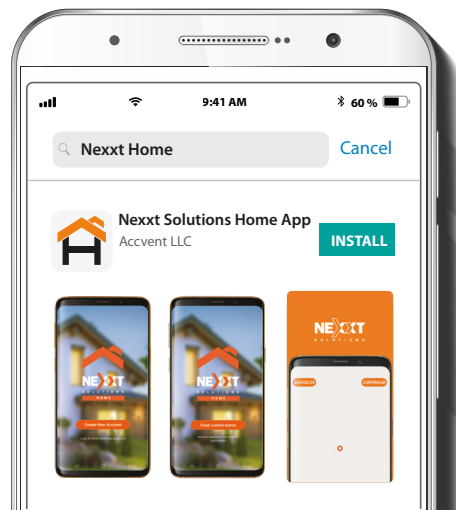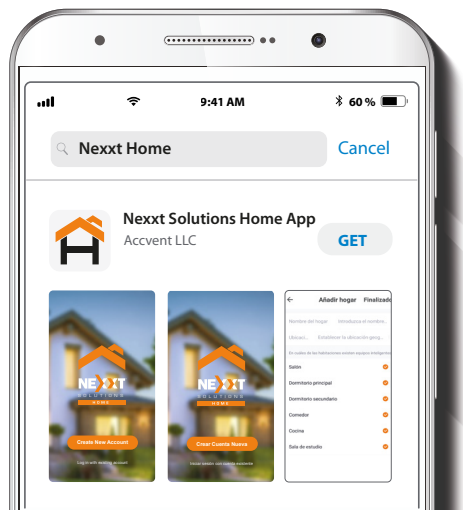

Descarga la aplicación Nexxt Home desde Google Play o Apple App Store. Luego sigue los siguientes pasos.


Paso 1

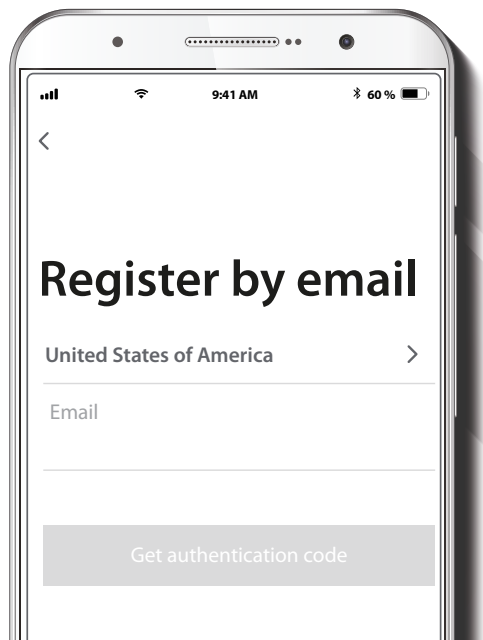

Smartphone screen showing the 'Register by email' screen. The status bar at the top displays signal strength, Wi-Fi, 9:41 AM, and 60% battery. The screen has a back arrow in the top left. The main heading is 'Register by email'. Below it is a dropdown menu for 'United States of America' with a right arrow. Underneath is an 'Email' input field. At the bottom is a grey button labeled 'Get authentication code'.

Ingresa el código de verificación que recibiste.


Paso 2

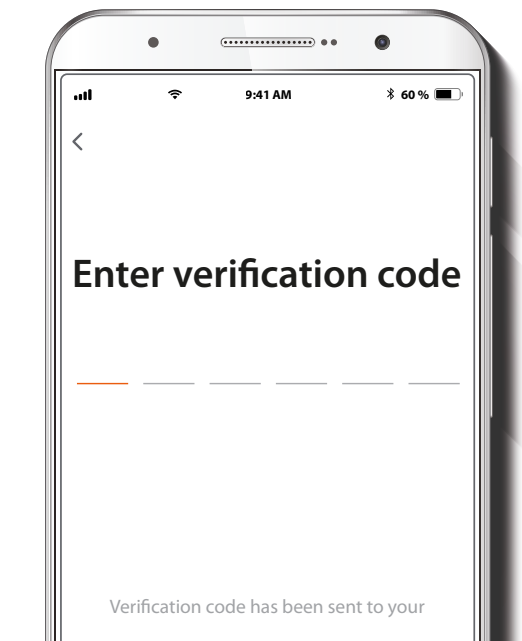

Smartphone screen showing the 'Enter verification code' screen. The status bar at the top displays signal strength, Wi-Fi, 9:41 AM, and 60% battery. The screen has a back arrow in the top left. The main heading is 'Enter verification code'. Below it is a five-digit input field with dashed lines and an orange cursor on the first digit. At the bottom, it says 'Verification code has been sent to your'.


Ingresa el código de verificación que recibiste.

Paso 3

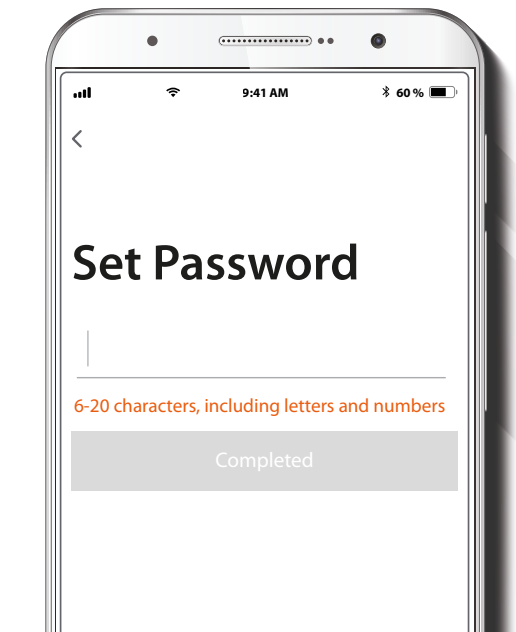

Crea una contraseña y presiona Completo a continuación.


Paso 4

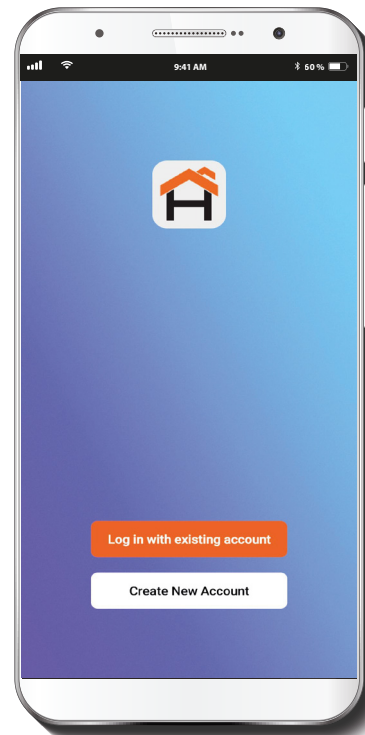

Tu cuenta de Nexxt Home se ha creado correctamente.


Agregar un dispositivo a su cuenta Nexxt Home

Paso 1

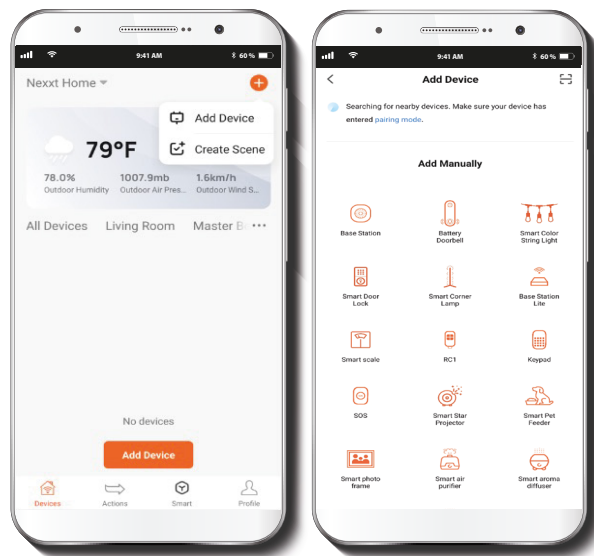


Selecciona "Agregar dispositivo" o el ícono +, y a continuación el ícono de tu cámara inteligente.

Paso 2

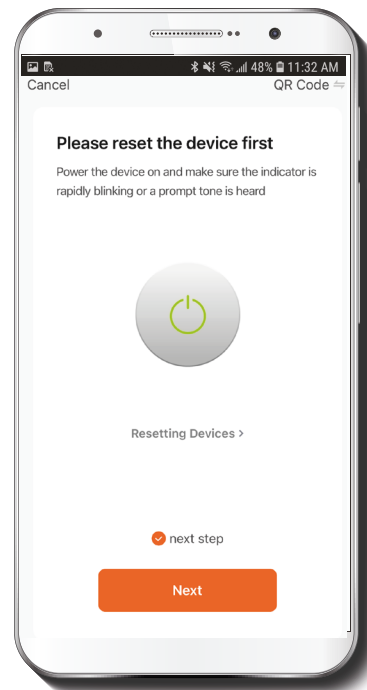


Después de hacer clic en el ícono de la cámara inteligente, verás esta página. Haz clic en "Siguiente".

Paso 3

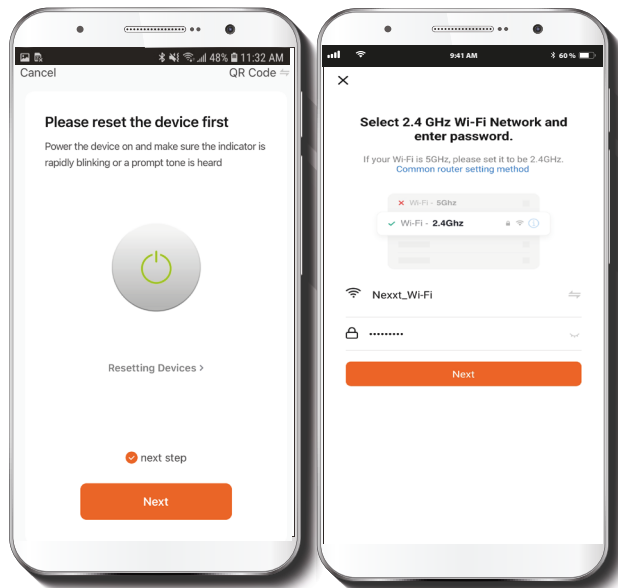

Debes conectarte a una red **Wi-Fi de 2,4 GHz**. Ingresas tu contraseña de red. Cerciórate de utilizar la clave correcta, de lo contrario el dispositivo no se conectará.


Paso 4

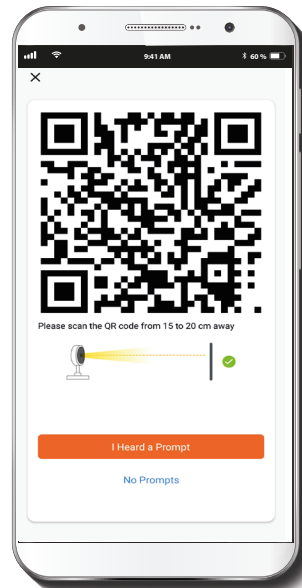


Escanea el código QR desde tu dispositivo móvil con la cámara inteligente. Una vez que escuches el tono, haz clic en el botón **Escuché la señal**.

Si tienes algún problema, reinicia la cámara. Si una cuenta registrada agrega la cámara a través de la aplicación, se impedirá que otro usuario configure esa misma cámara en una cuenta diferente, a menos que le sea otorgado el permiso a través de la opción **Acceso compartido**.

Paso 5

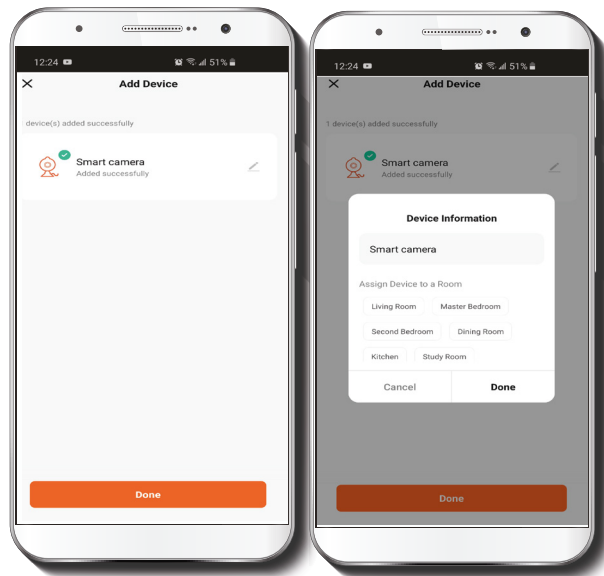

Funciones de la cámara

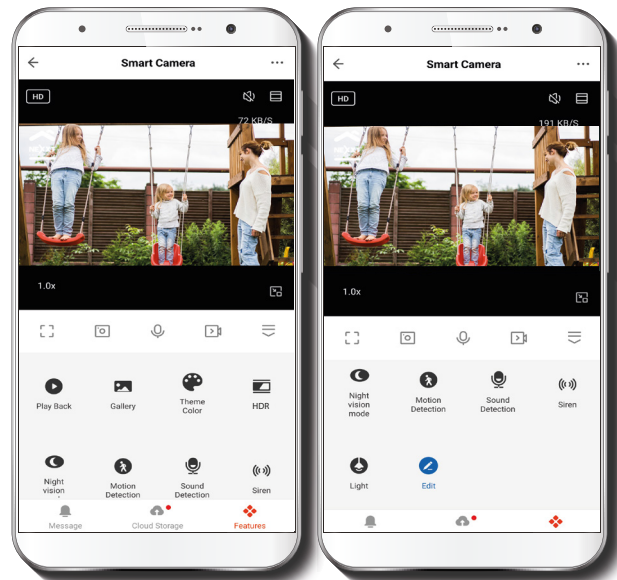

Si el emparejamiento es exitoso, se mostrará en la pantalla la notificación **Dispositivo agregado exitosamente**. Haz clic en el ícono de lápiz para cambiar el nombre de la cámara y luego selecciona Guardar para almacenar su configuración.

Estas son las opciones que encontrarás en la interfaz principal de tu cámara inteligente:



Cambia a la vista de pantalla completa de la transmisión en vivo de la cámara



Captura de pantalla. Tome una fotografía de lo que aparece en la pantalla de la cámara.



Permite la comunicación de voz bidireccional a través de la cámara.



Comienza a grabar un video.



Menú desplegable



Reproducción: Si hay una microSD™ instalada, puede utilizar la función de reproducción para ver grabaciones.



Galería: Presenta una lista de todos los videos y fotos grabados y almacenados localmente.



Esquema de color: Permite personalizar la apariencia de la interfaz cambiando al modo claro o al modo oscuro. Se recomienda este último para ahorrar batería.



HDR: La tecnología de alto rango dinámico mejora la calidad de las escenas optimizando las relaciones de brillo y contraste de la pantalla.



Modo nocturno: Enciende automáticamente la luz infrarroja para compensar condiciones de luz insuficiente.



Volumen del dispositivo: Controla el volumen del altavoz de la cámara durante las comunicaciones de audio bidireccionales entre el teléfono y la cámara.



Detección de movimiento: Activa y desactiva la función de detección de movimiento. Cambia la sensibilidad a baja, media o alta.



Sirena: Activa o desactiva la alarma..



Luz: Enciende y apaga la luz.



Editar: Configurar accesos directos para controlar otros dispositivos inteligentes compatibles.



Mensajes: Una forma rápida de ver la lista de notificaciones automáticas enviadas a su dispositivo móvil.




Almacenamiento en la nube: Le permite comprar un servicio de almacenamiento en la nube.



Funciones: Abre un menú con funciones adicionales de la cámara.

Configuración

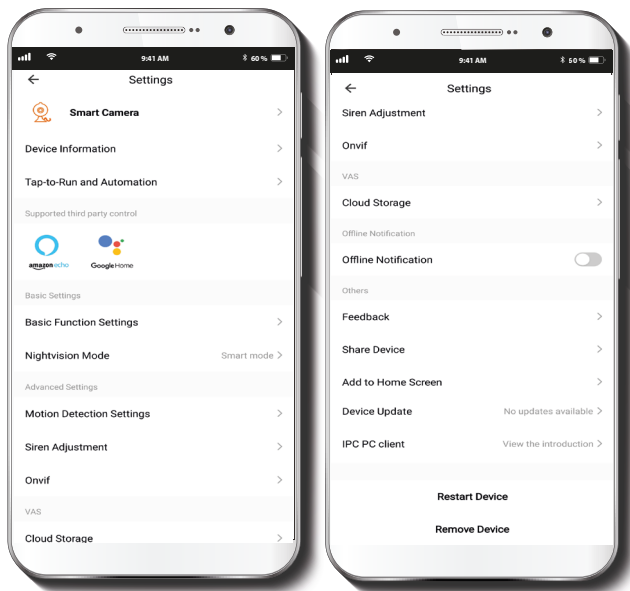


Nombre del dispositivo: Permite al usuario cambiar el nombre del dispositivo. Para cambiar el nombre predeterminado, haga clic en el nombre del dispositivo.

Información del dispositivo: Este menú mostrará información sobre la cámara.


Tocar para ejecutar y Automatización: Vincula la cámara inteligente con otros productos inteligentes para controlarlos automáticamente mediante un comando personalizado.

Denominación del dispositivo

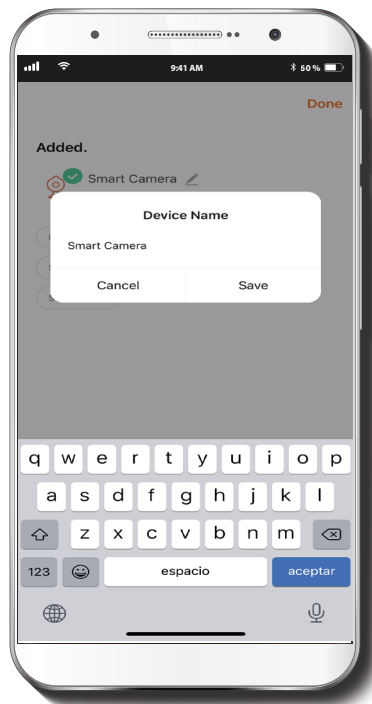


Le permite al usuario cambiar el nombre del dispositivo. Para utilizar una denominación distinta, haz clic en el nombre del dispositivo.

Información del dispositivo

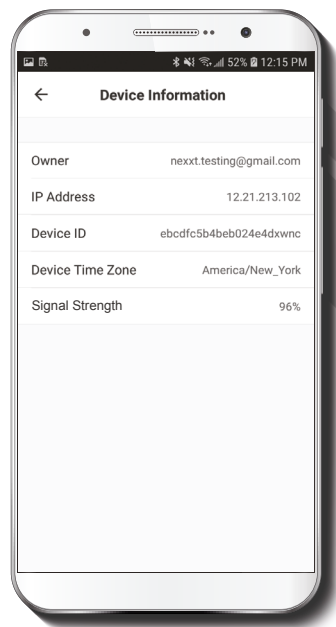

El actual menú exhibe la información relativa al producto.

Configuración de funciones básicas

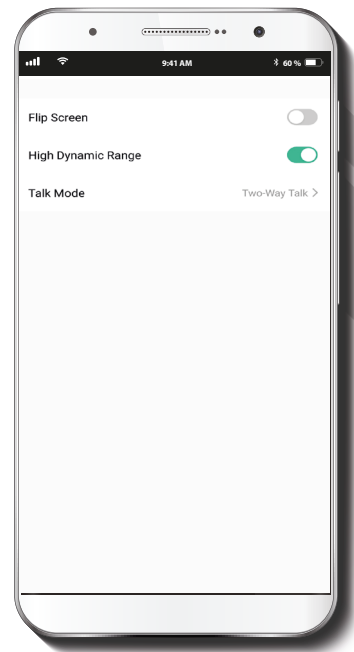


Voltear pantalla: Voltea la imagen 180 grados si la cámara está montada al revés.

Alto rango dinámico: Mejora la imagen renderizada por la cámara, con una gama más amplia de colores, blancos más brillantes y negros más profundos, lo que permite percibir más detalles en la pantalla.


Modo de conversación: Permite la conversación mediante transmisión de audio unidireccional o bidireccional.

Modo nocturno

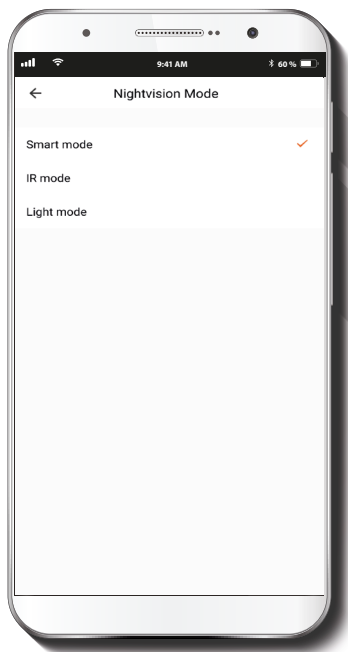


Seleccione los ajustes de configuración de visión nocturna entre los modos Inteligente, Infrarrojo y Luz.

Configuración de detección de movimiento

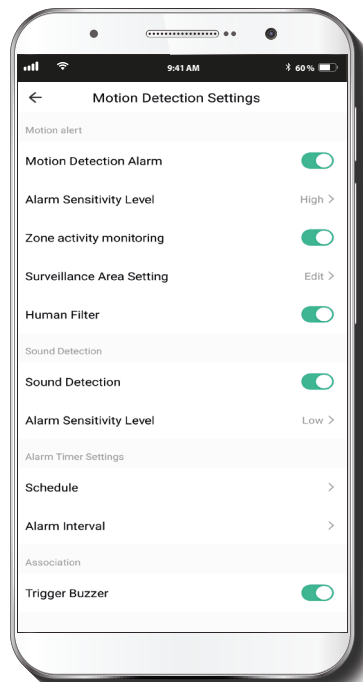


Active y desactive la alarma de detección de movimiento. Cambie la sensibilidad entre baja, media o alta. Active o desactive el filtro de detección de cuerpo humano.

Ajuste de sonido del dispositivo

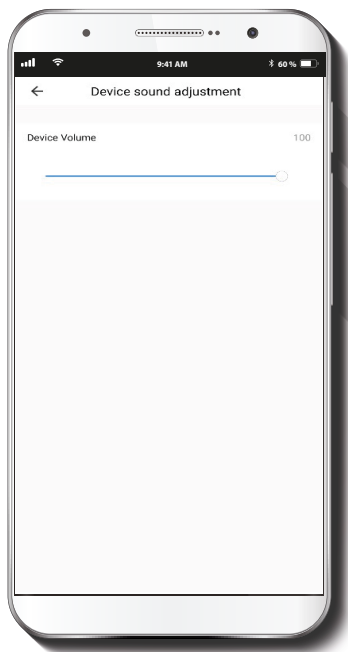


Configure el volumen del altavoz de la cámara para comunicaciones de audio bidireccionales entre el teléfono y la cámara.

ONVIF

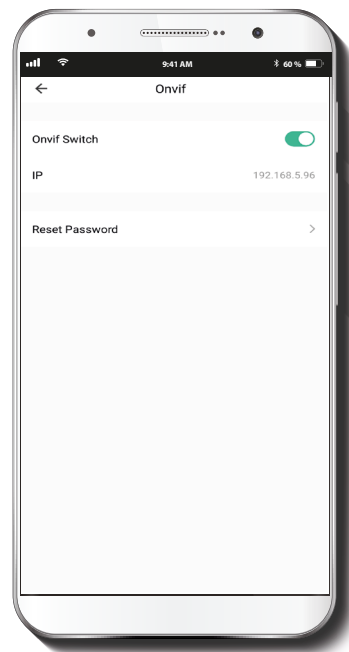

Active la función ONVIF para permitir que la cámara funcione y se comunique con dispositivos de múltiples fabricantes.

Configuración de la tarjeta de memoria

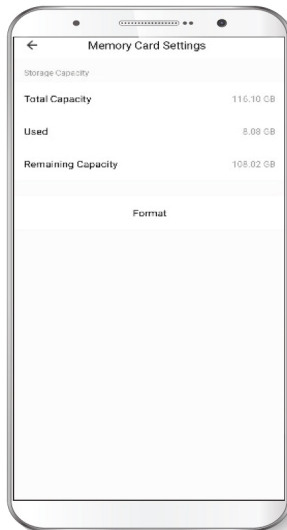

Si está utilizando una tarjeta de memoria, esta función le muestra las siguientes opciones:


Capacidad total: Muestra la capacidad de la tarjeta microSD

Usado: Muestra cuánta memoria se ha utilizado.

- Capacidad restante: Muestra cuánto espacio queda en la tarjeta microSD™.

Formatear: Esto formateará la tarjeta microSD™ que se utilizará en la cámara.

Configuración de la grabación

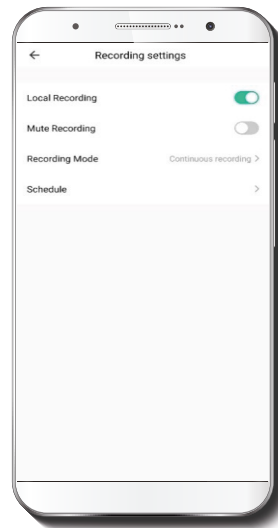

Esta característica le muestra las siguientes opciones:


Grabación local: Puede configurar la cámara para que grabe constantemente las 24 horas del día, los 7 días de la semana. La capacidad de grabación depende del tamaño de la tarjeta microSD™.

Silenciar grabación: Enciende o apaga el micrófono de la cámara mientras se graba.

Modo de grabación: Puede cambiar entre grabación de eventos y grabación continua.


Horario: Le permite programar cuándo activar o desactivar la grabación.

Almacenamiento en la nube

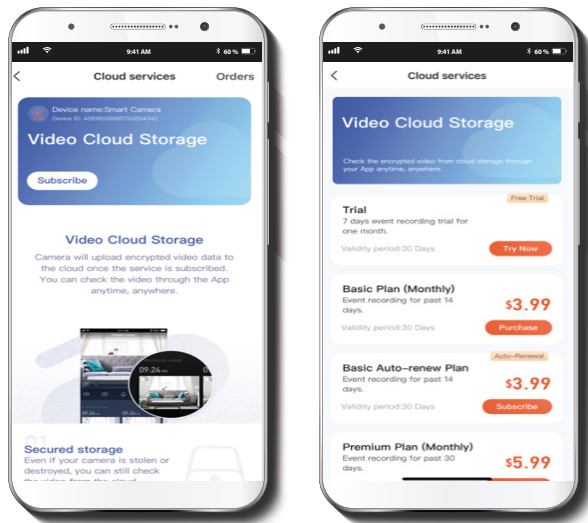

Acceda y comparta fotos y videos en cualquier momento y desde cualquier lugar comprando una selección de nuestros servicios de almacenamiento en la nube con un plan de suscripción opcional.


Notificación de desconexión

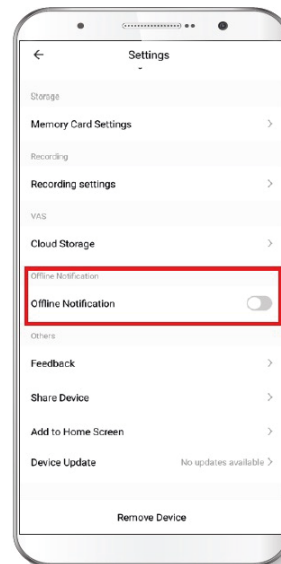

Puede habilitar y deshabilitar esta función. Al activarla la aplicación le enviará una notificación 30 minutos después de que el dispositivo haya permanecido desconectado debido a un corte de energía o cualquier otra razón.


Comentarios: Utilice esta función para informarnos sobre cualquier problema que pueda encontrar al configurar el producto.

Compartir dispositivo

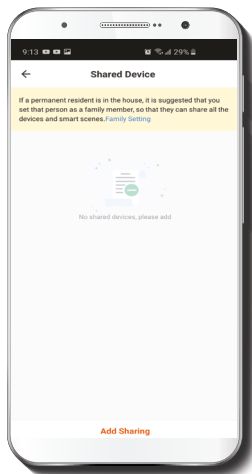

Utilice esta función para darles a amigos o familiares acceso a su cámara inteligente. Después de hacer clic en Compartir dispositivo, toque Agregar uso compartido. Luego ingrese la dirección de correo electrónico de su amigo. Toque Listo. Con esto, los usuarios recién agregados tendrán acceso a su cámara inteligente.

Nota: Los familiares o amigos necesitarán su propia cuenta Nexxt Home para acceder al dispositivo.

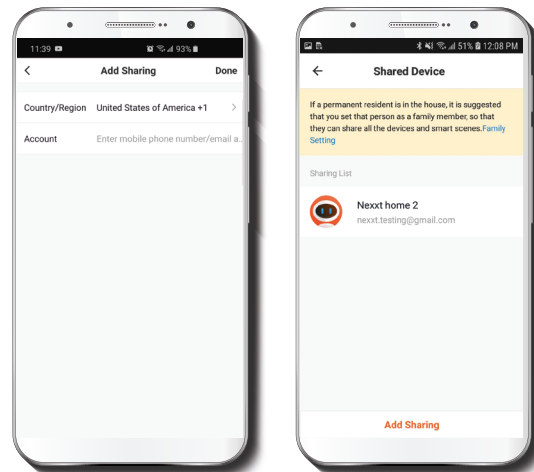

Para eliminar un usuario en iOS, deslice el nombre hacia la izquierda. En Android, mantenga presionado el nombre de la persona que desea eliminar. Cuando aparezca el cuadro emergente, seleccione Eliminar. Se mostrará una notificación confirmando que ya no desea compartir el dispositivo con el usuario seleccionado. Toque Confirmar para eliminar permanentemente al usuario.

Agregar pantalla de inicio: Esta función agrega un acceso directo del dispositivo a la pantalla principal de su teléfono.

Actualización del dispositivo: Esta función le permite ver un registro de las actualizaciones que realizamos en nuestro firmware.

Quitar dispositivo: Utilice esta función para desvincular el dispositivo de su cuenta Nexxt Home.



FCC ID: X4YHACOF10

Nexxt® es una marca registrada. Reservados todos los derechos. Amazon, Alexa y todos los logotipos relacionados son marcas comerciales de Amazon.com, Inc. o sus afiliados. Google, Android™ y Google Play son marcas comerciales de Google LLC. SD™ y microSD™ son marcas comerciales propiedad de SD-3C, LLC. USB Type-C® y USB-C® son marcas comerciales registradas de USB Implementers Forum. Wi-Fi® es una marca registrada de Wi-Fi Alliance®. Todas las demás marcas comerciales y nombres comerciales son propiedad de sus respectivos dueños. Cualquier mención de estas se hace únicamente por motivo de identificación y, por lo tanto, no constituye un reclamo de derechos, reconocimiento, respaldo, patrocinio o afiliación relacionados con esas marcas. Hecho en China.



Smart **Wi-Fi®** camera

Outdoor wired

NHC-OF10