Removable Rubber Grommet
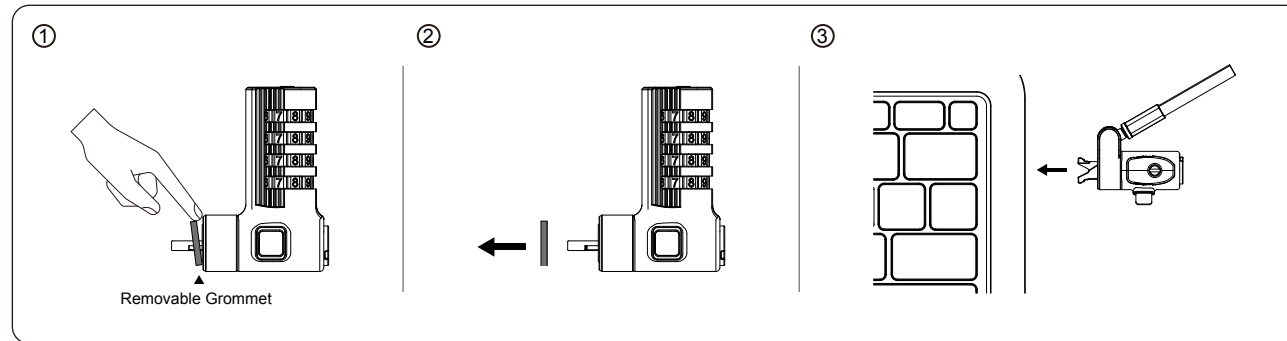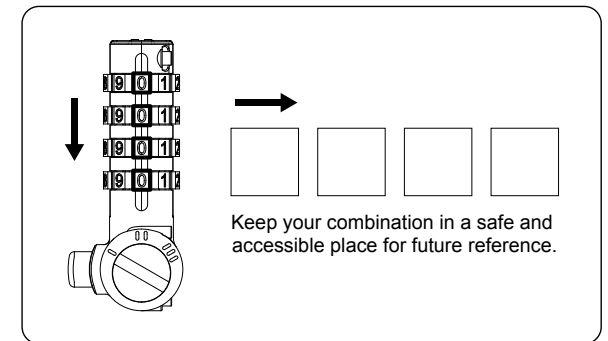
For computers that have a tighter security lock fit it is necessary to remove the grommet on the cable lock.
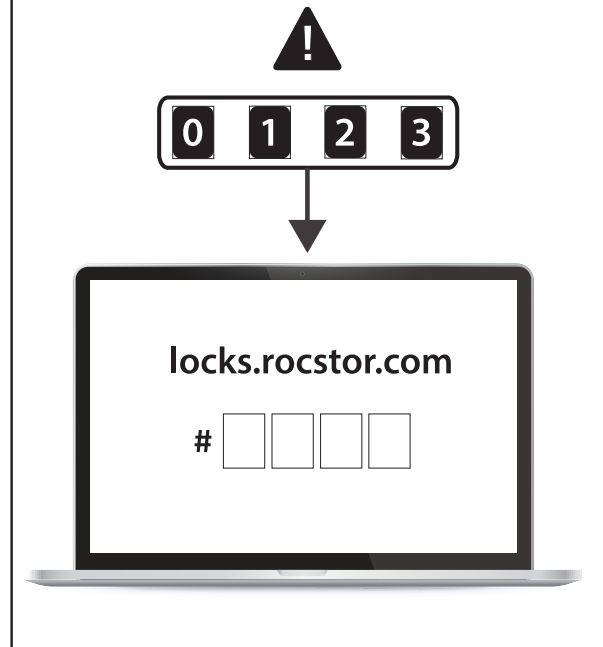
① ② ③

Removable Grommet

Technical Support
Technical support is available to all registered users of Rocstor products. Technical Support contact information can be found on www.rocstor.com

Telephone Support
There is no charge for technical support except long-distance charges where applicable. Please visit www.rocstor.com Monday to Friday 9:00 am to 6:00 pm Pacific Standard Time.

Technical Support
+1 (818) 727-7000 - Office
+1 (818) 875-0002 - Fax
support@rocstor.com

limited Two Year Warranty
Rocstor warrants this product against defects in material and workmanship for five years. Rocstor will supply, at its option, comparable new and rebuilt replacements for defective parts and will pay the labor charges to repair the product found to be defective. The dated bill of sale as evidence of the original purchase price along with the defective product is required.

Record Your Combination

Keep your combination in a safe and accessible place for future reference.

OR

Rocbolt Security Lock Register & Access
Enregistrement et accès au verrou de sécurité Rocbolt
Registro y acceso a la cerradura de seguridad Rocbolt

⚠️

0 1 2 3

locks.rocstor.com

#

Rocbolt Universal Switchable Built-in 3-IN-1 Combination Security Laptop Lock - 4-Digit Resettable Lock - For Standard K-Slot, Nano, and Noble Wedge Slots - 6.6 ft Steel 5mm Cable - TAA

Y1RB033-B1

Congratulations!

On your new Rocstor Rocbolt Universal Switchable Built-in 3-IN-1 Combination Security Laptop Lock - 4-Digit Resettable Lock - For Standard K-Slot, Nano, and Noble Wedge Slots - 5mm Carbon Steel Cable - 360-Degree Swivel Head Rotation - With 6.6 ft Heavy-duty Cable - TAA Compliant

Reset Combination

90°

1. Reset combination from 0-0-0-0.
2. Press down the Reset Button and turn 90° clockwise to set your own combination.
3. Turn the Reset Button 90° counterclockwise back to its original position.

Keep your combination in a safe and accessible place for future reference.

Locking Tip Adjustment

Use a small flathead screwdriver or similar tool to switch the knob.

Adjust the locking tip according to the lock slot specification of your device.

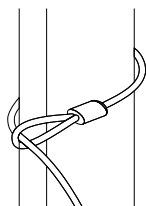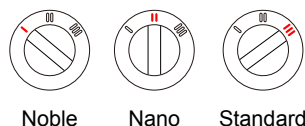| Noble Slot	Nano Slot	Standard Slot

⚠ The Knob can only be switched when the lock is unlock.

🔒 Lock

① Wrap your cable around an immovable object, by crossing the lock body, through the loop, on the opposite end of the cable.
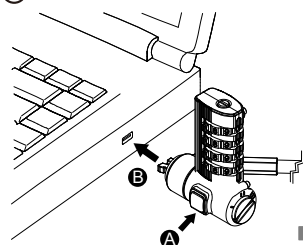
② Noble Nano Standard

You must adjust the locking tip **before** inserting the lock into your device.
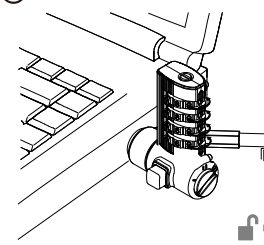
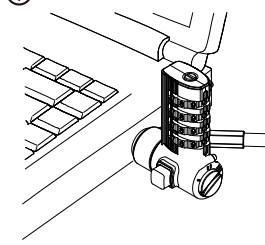Adjust the locking tip according to the lock slot specification of your device.

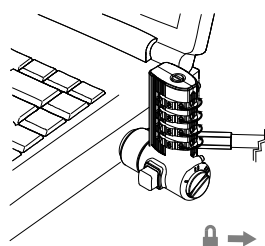③ Press the release button and insert the locking tip into the slot.

④ Scramble the dials to lock the device.
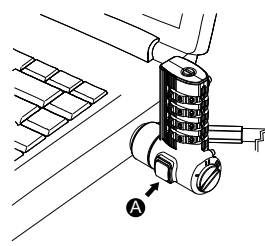
✓

🔓 Unlock

① Turn the dials to the combination you set.

② Press the release button to release the lock.

✓