



SC2 & SC2 Remote Control Manual

SC2

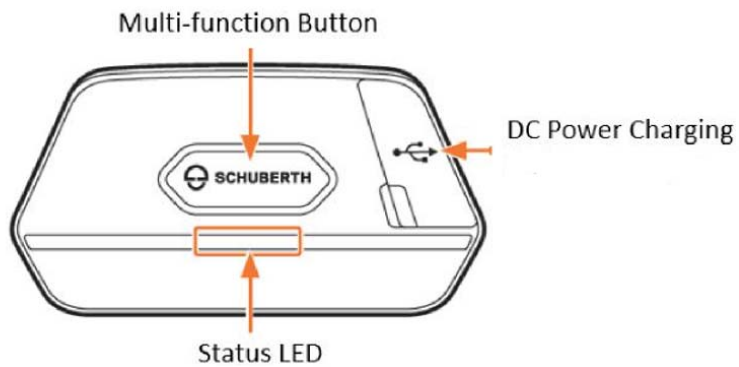

SC2 Remote Control

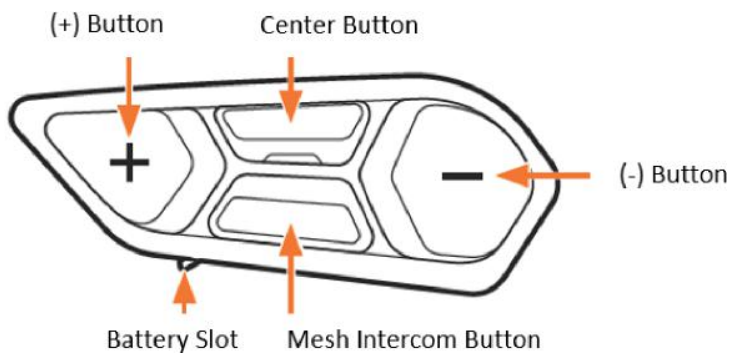

Charging

SC2

Red LED: Charging

Blue LED: Fully charged

Power On/Off

SC2

Press and hold the Multi-function Button for 1 second

SC2 Remote Control

Tap the Center Button


Note: The SC2 and the SC2 Remote Control come paired together. They will automatically connect to each other when the SC2 and the SC2 Remote Control are powered on.

Volume Adjustment

(+) Button - Increase the volume

(-) Button - Decrease the volume

Battery Check

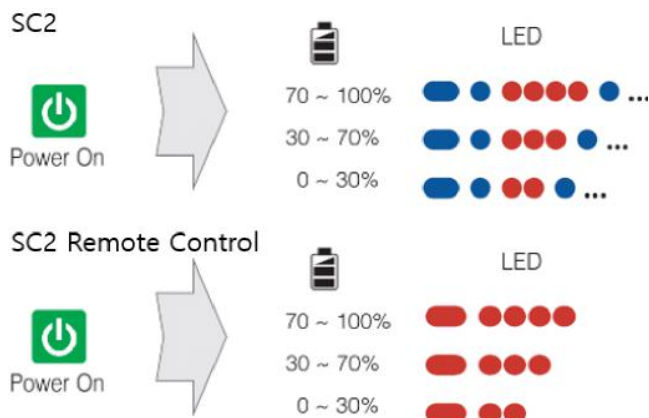

Phone, Music Pairing

1. Press the Center Button for 10 seconds.
2. Press the (+) Button to enter into Phone Pairing
3. Search for Bluetooth devices on your mobile phone. Select the **SC2** in the list of the devices detected on the mobile phone.
4. Enter 0000 for the PIN. Some mobile phones may not ask for the PIN.

Music Operation

Play or pause music: Press the Center Button for 1 second.

Track back: Press the (-) Button for 1 second.

Track forward: Press the (+) Button for 1 second.

Mobile Phone Call Making and Answering

Answering a call: Tap the Center Button

Ending a call: Press the Center Button for 2 seconds.

Voice dial: Press the Center Button for 3 seconds.

Speed dial: Press the (+) Button for 3 seconds.

Rejecting a call: Press the (+) Button for 2 seconds.

Intercom

Intercom Pairing

1. Press and hold the Center Button of two headsets for 5 seconds until red LEDs of both units start to flash rapidly.
2. The SC2 will automatically pair with a Sena headset

Intercom Start/End : Tap the Center Button

Mesh Intercom

Mesh Intercom On/Off : Tap the Mesh Button

Radio On/Off

Turn on the FM radio: Press the (-) Button for 1 second.

Turn off the FM radio: Press the (-) Button for 1 second.

Radio Scan Up FM Band

Start scanning: Press (+) Button for 1 second.

Stop scanning: Press (+) Button for 1 second.

Radio Seek Stations

Seek up stations: Double tap the (+) Button.

Seek down stations: Double tap the (-) Button.

Setting

Configuration Menu: Press the Center Button for 10 seconds.

Troubleshooting

SC2 Factory Reset

If you want to restore the SC2 to factory default settings, press and hold the Multi-function Button for 12 seconds. The SC2 automatically restores the default settings and turns off.

SC2 Remote Control Factory Reset

If you want to restore the SC2 Remote Control to factory default settings, press and hold the (+) Button and (-) Button and Center Button for 1 second. The SC2 Remote Control automatically restores the default settings and turns off.

Certification and Safety Approvals FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antennae
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. The antenna used for this transmitter must not transmit simultaneously with any other antenna or transmitter, except in accordance with FCC multi-transmitter product procedures.

When equipped, the distance between antenna and one's head surface is 58mm.

FCC Caution

Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

Certification et homologation de sécurité Déclaration de conformité FCC

Cet appareil est en conformité avec la partie 15 des règles de la FCC. Son fonctionnement est soumis aux deux conditions suivantes :

- (1) Cet appareil ne doit pas créer d'interférences préjudiciables et
- (2) Cet appareil doit accepter toutes les interférences reçues, y compris celles qui pourraient entraver son bon fonctionnement. Cet équipement a été testé et jugé conforme aux limites pour un appareil numérique de classe B, conformément à la partie 15 des règles de la FCC. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet équipement génère et utilise de l'énergie radio fréquence et, s'il n'est pas installé et utilisé conformément aux instructions, il peut occasionner des interférences nuisibles au niveau des communications radios. Cependant, il n'existe aucune garantie que ces interférences ne se produiront pas dans une installation particulière. Si cet équipement génère des interférences nuisibles à la réception de la radio ou de la télévision (ce qu'il est possible de déterminer en mettant l'équipement hors tension, puis sous tension), l'utilisateur est invité à suivre une ou plusieurs des mesures suivantes pour corriger le problème des interférences en prenant l'une des mesures suivantes :

-Modifier l'emplacement ou l'orientation de l'antenne de réception.

-Éloigner l'appareil du récepteur.

-Brancher l'appareil sur une prise située sur un circuit différent de celui du récepteur.

-Consulter le revendeur ou un technicien expérimenté pour obtenir de l'aide.

Énoncé FCC sur l'exposition aux radiations RF

Cet équipement est conforme aux réglementations FCC d'exposition aux radiations définies pour un environnement non contrôlé. Les utilisateurs doivent respecter les instructions d'exploitation spécifiques pour répondre aux exigences de conformité sur l'exposition aux RF. L'antenne utilisée pour cet appareil ne doit pas fonctionner en même temps qu'une autre antenne ou émetteur, sauf s'il y a conformité avec les procédures FCC des produits multi-émetteurs.

Cet appareil est conforme à l'exigence d'exposition aux RF. Lorsque équipé, la distance entre l'antenne et la surface de la tête est de 40.5mm. L'EST étant commercialisé sans casque, il doit donc rester à une distance de 30mm de la surface de la tête.

Précautions FCC

Tout changement ou modification non expressément approuvé par la partie chargée de la mise en conformité peut annuler le droit de l'utilisateur à utiliser l'équipement.

Industry Canada(IC) Statement

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC RF Exposure Statement

Cet équipement est conforme aux limites d'exposition aux radiations de la FCC définies pour un environnement non contrôlé. Les utilisateurs finaux doivent suivre les instructions d'utilisation spécifiques pour satisfaire à la conformité d'exposition RF. L'antenne utilisée pour cet émetteur ne doit pas émettre simultanément avec d'autres antennes ou émetteurs, sauf en conformité avec les procédures FCC relatives aux produits multi-émetteurs.

Lorsque équipé, la distance entre l'antenne et la surface de la tête est de 58mm.